

ASSEMBLY INSTRUCTIONS

AR - ARLINGTON BED - KING SIZE

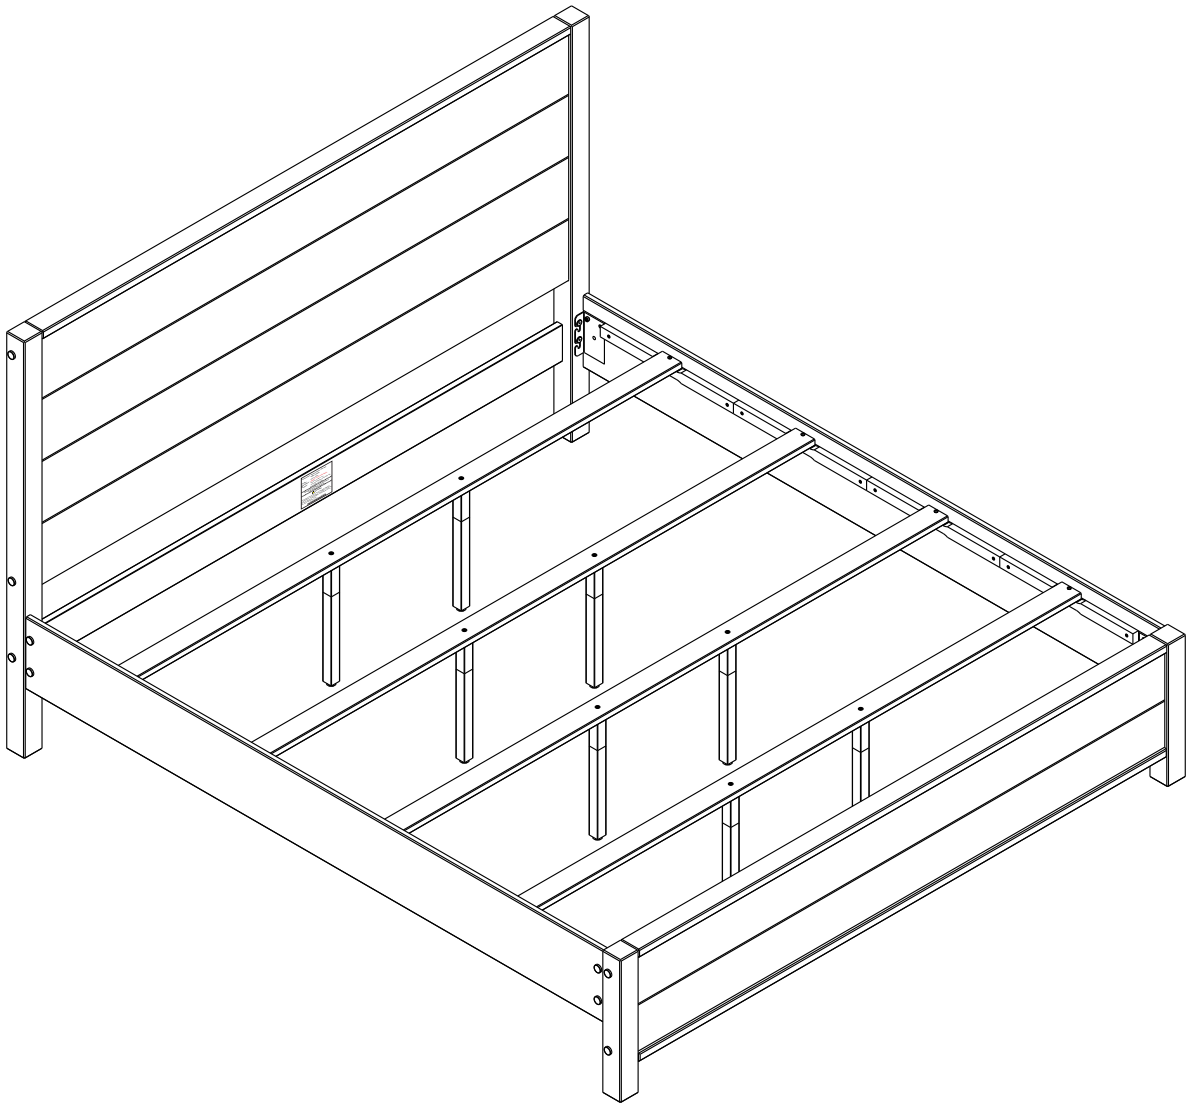




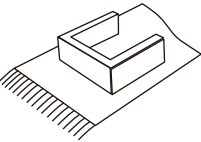

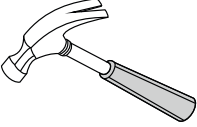
IMPORTANT NOTE:

- * Read and observe carefully all the assembly instructions before beginning assembly.
- * The assembly of the product must be done on a clean and flat surface. We suggest to use the packaging to cover the floor to avoid damages.
- * The screws must be tightened periodically.
- * Avoid contact with sharp objects.
- * Avoid banging pieces together.

PARTS INCLUDED






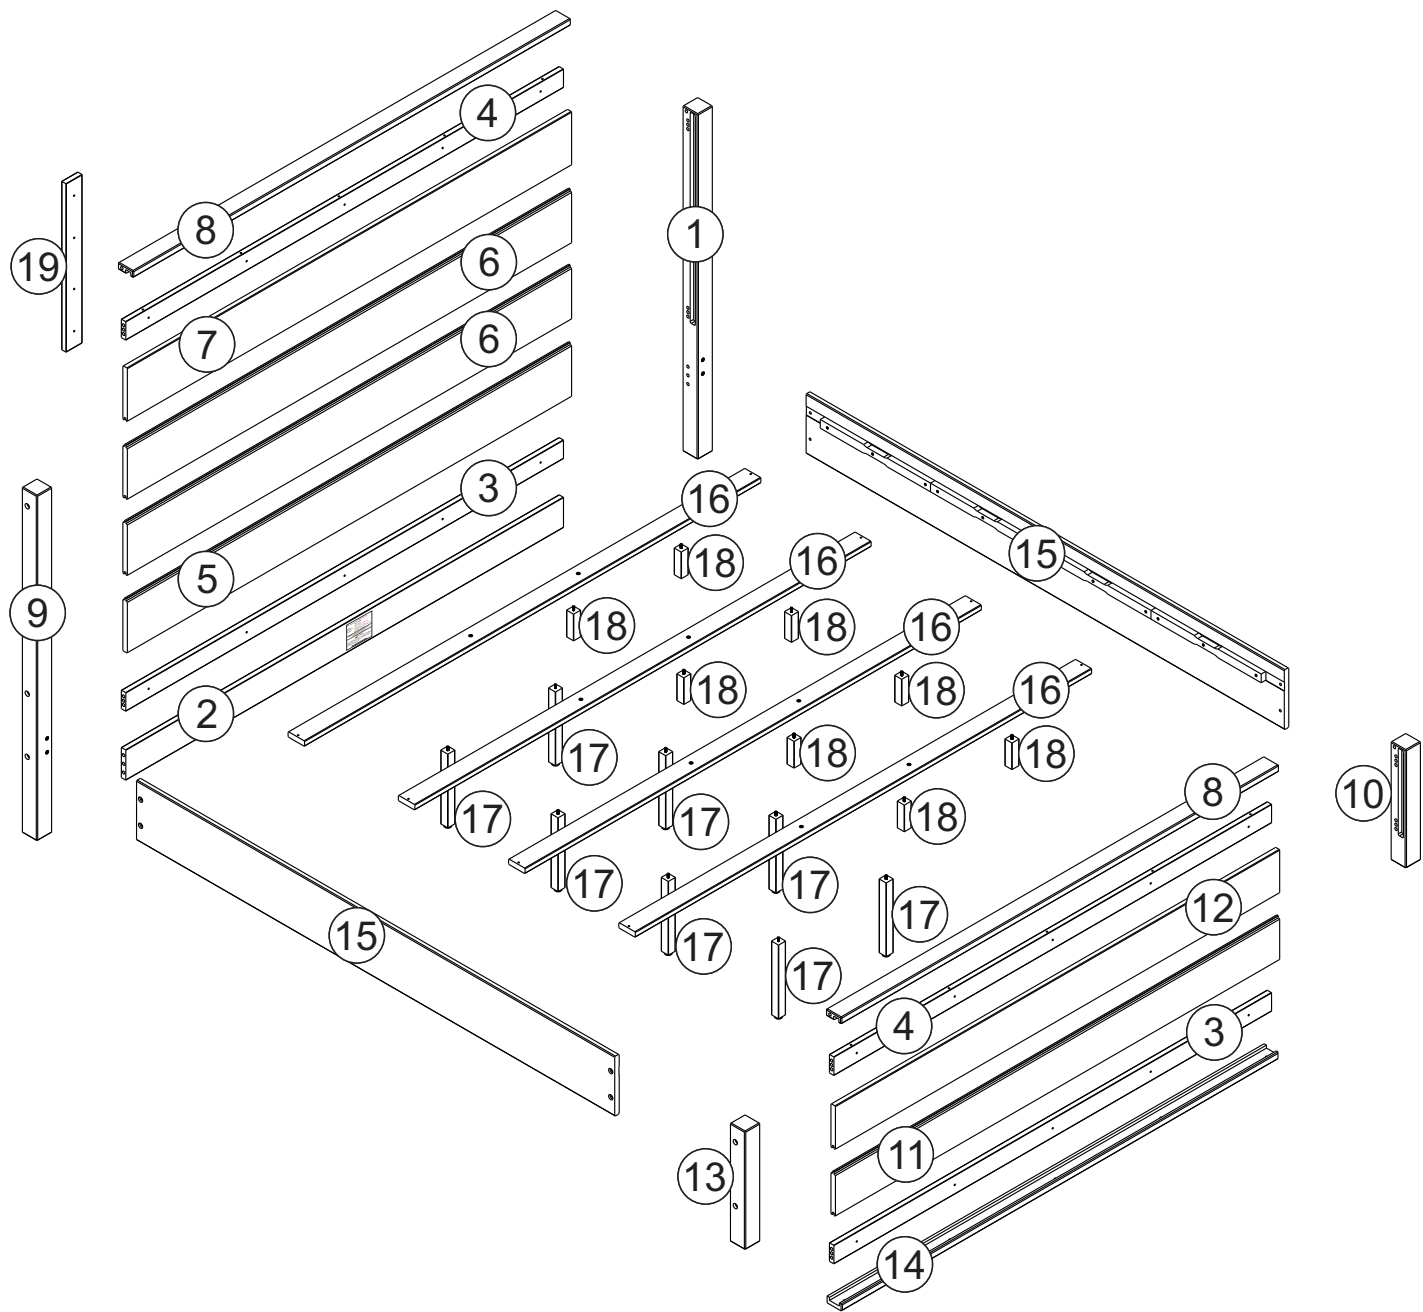




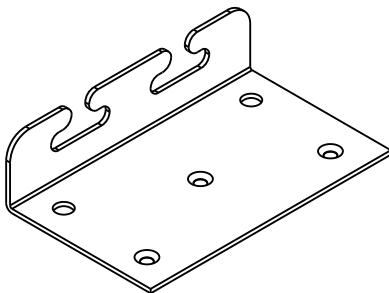

Please confirm all parts available before assembly.




Tools (not included)				
 01:10 Min Approximately	 02 Persons	 Clean surface	 Philips key	 Hammer

HARDWARE INCLUDED

Please confirm all hardware available before assembly.


Ref.		Qty.		Qty. SPARE
A	 Ø10 x 40 mm	24	+	02
B	 Ø1/4" x 100 mm	10	+	01
C	 Ø1/4" x 40 mm	08	+	01
D	 Ø1/4" x 20 mm	08	+	01
E	 Ø4,5 x 35 mm	47	+	02
F	 Ø3,5 x 16 mm	12	+	02
G		10	+	01
H		08	+	01
I		18	+	02
J		01	+	01
K		04		
L		01		

OPTION 01

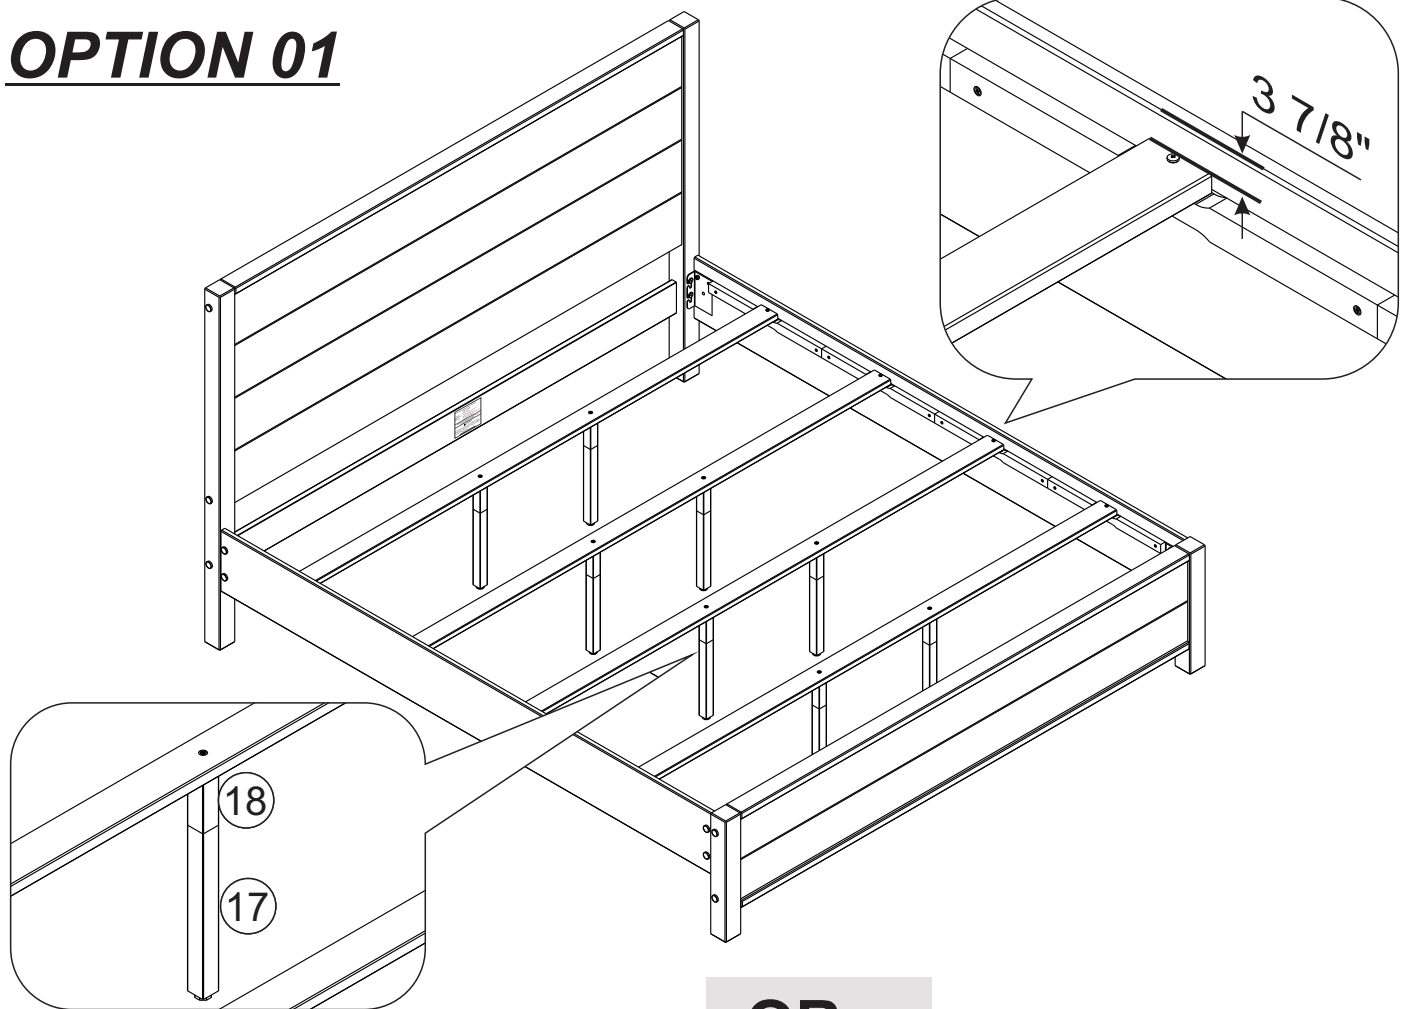



OR...

OPTION 02

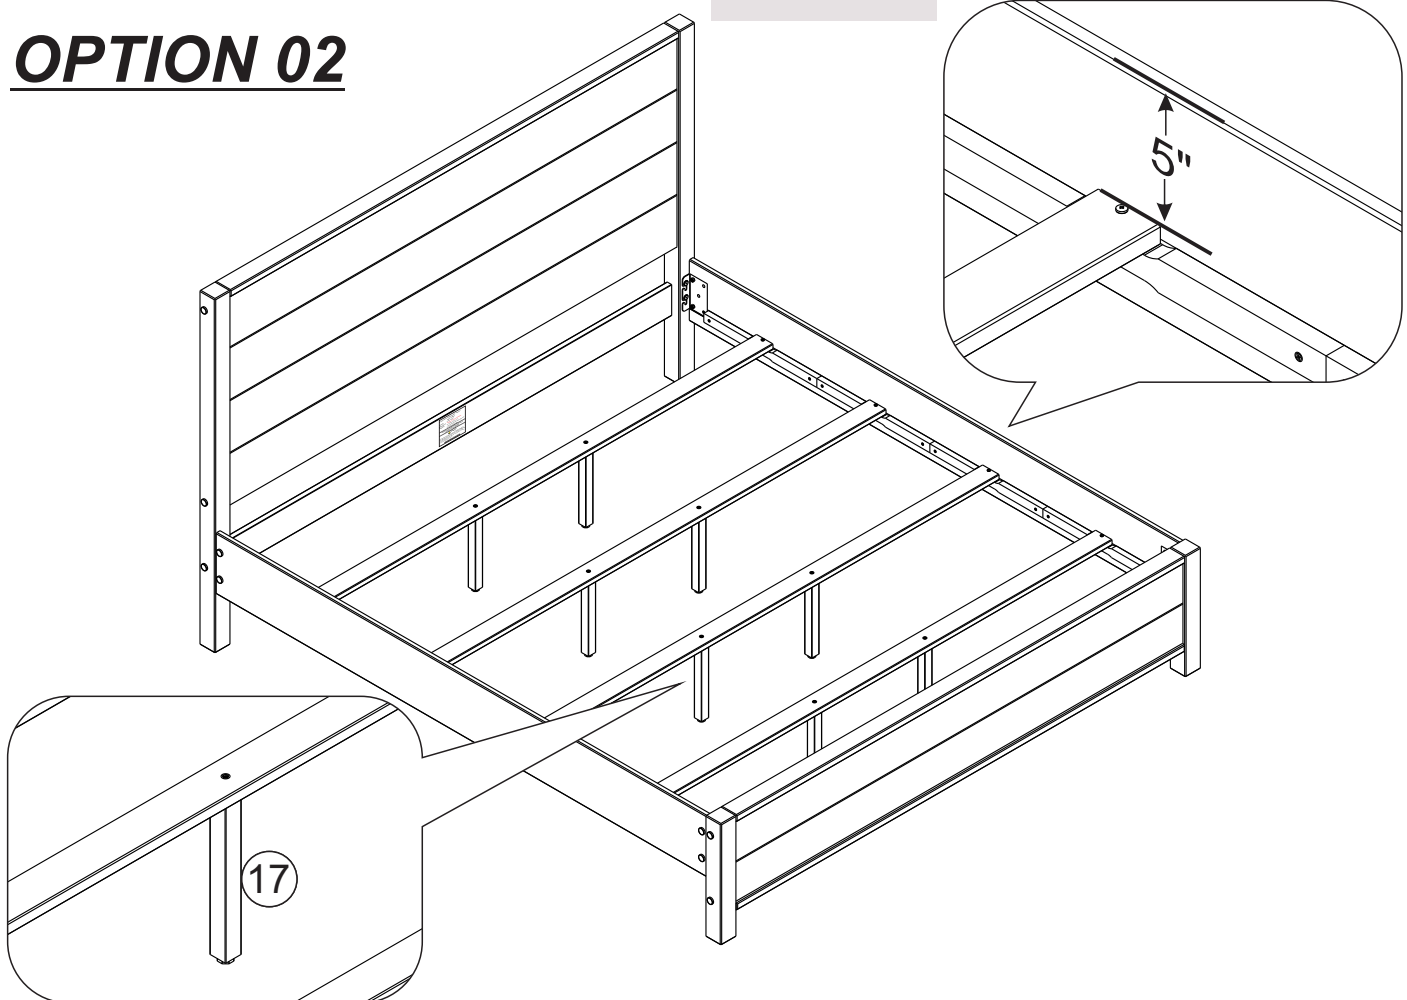


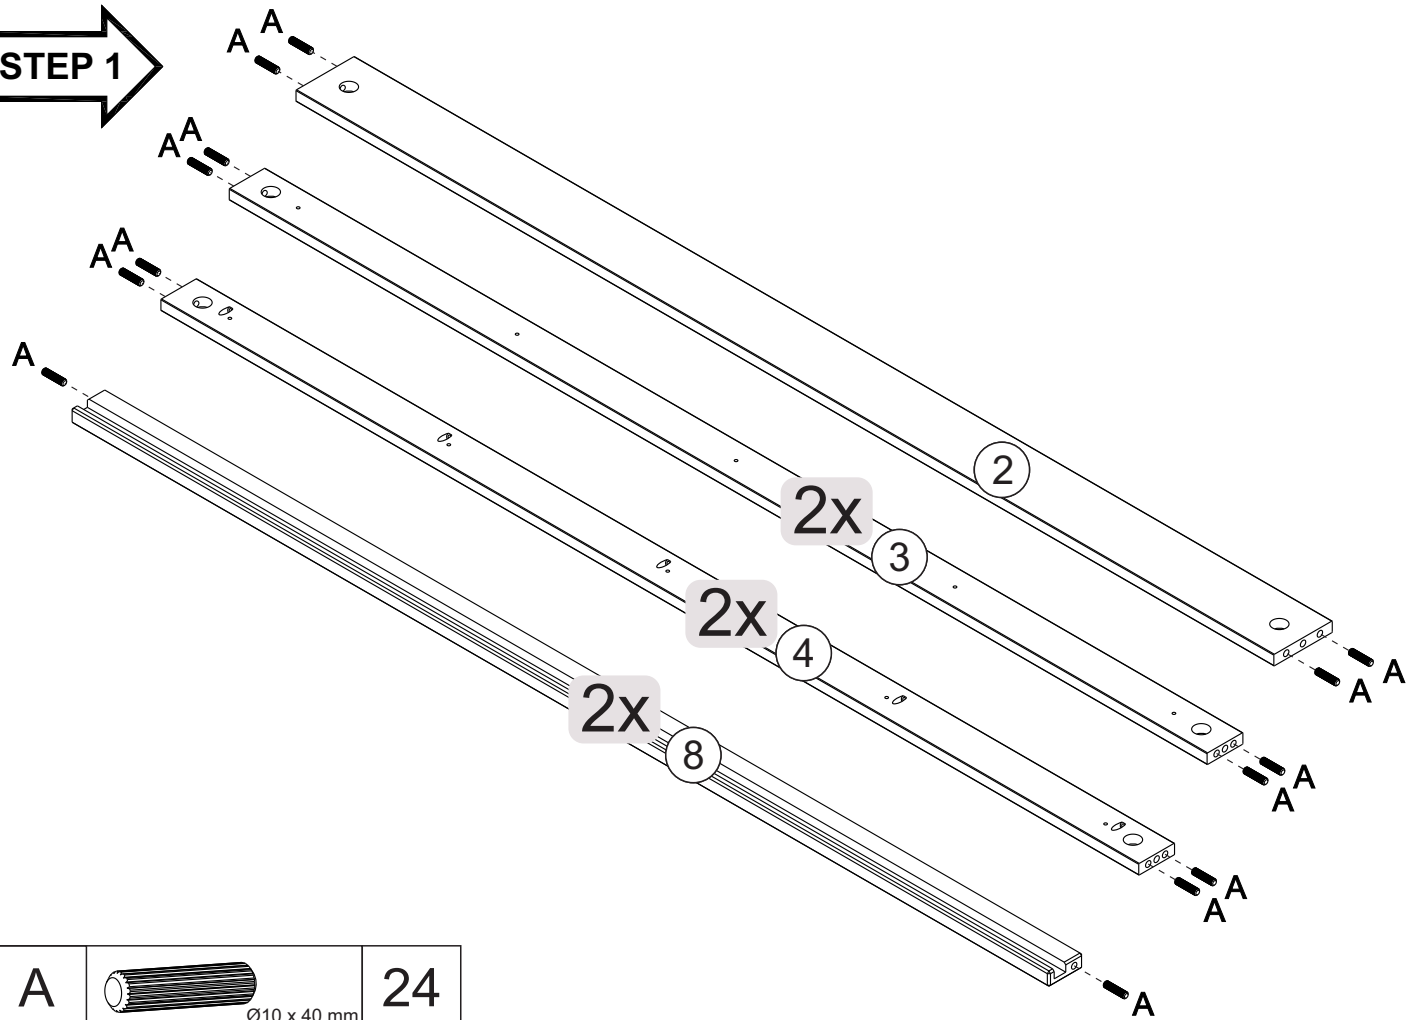



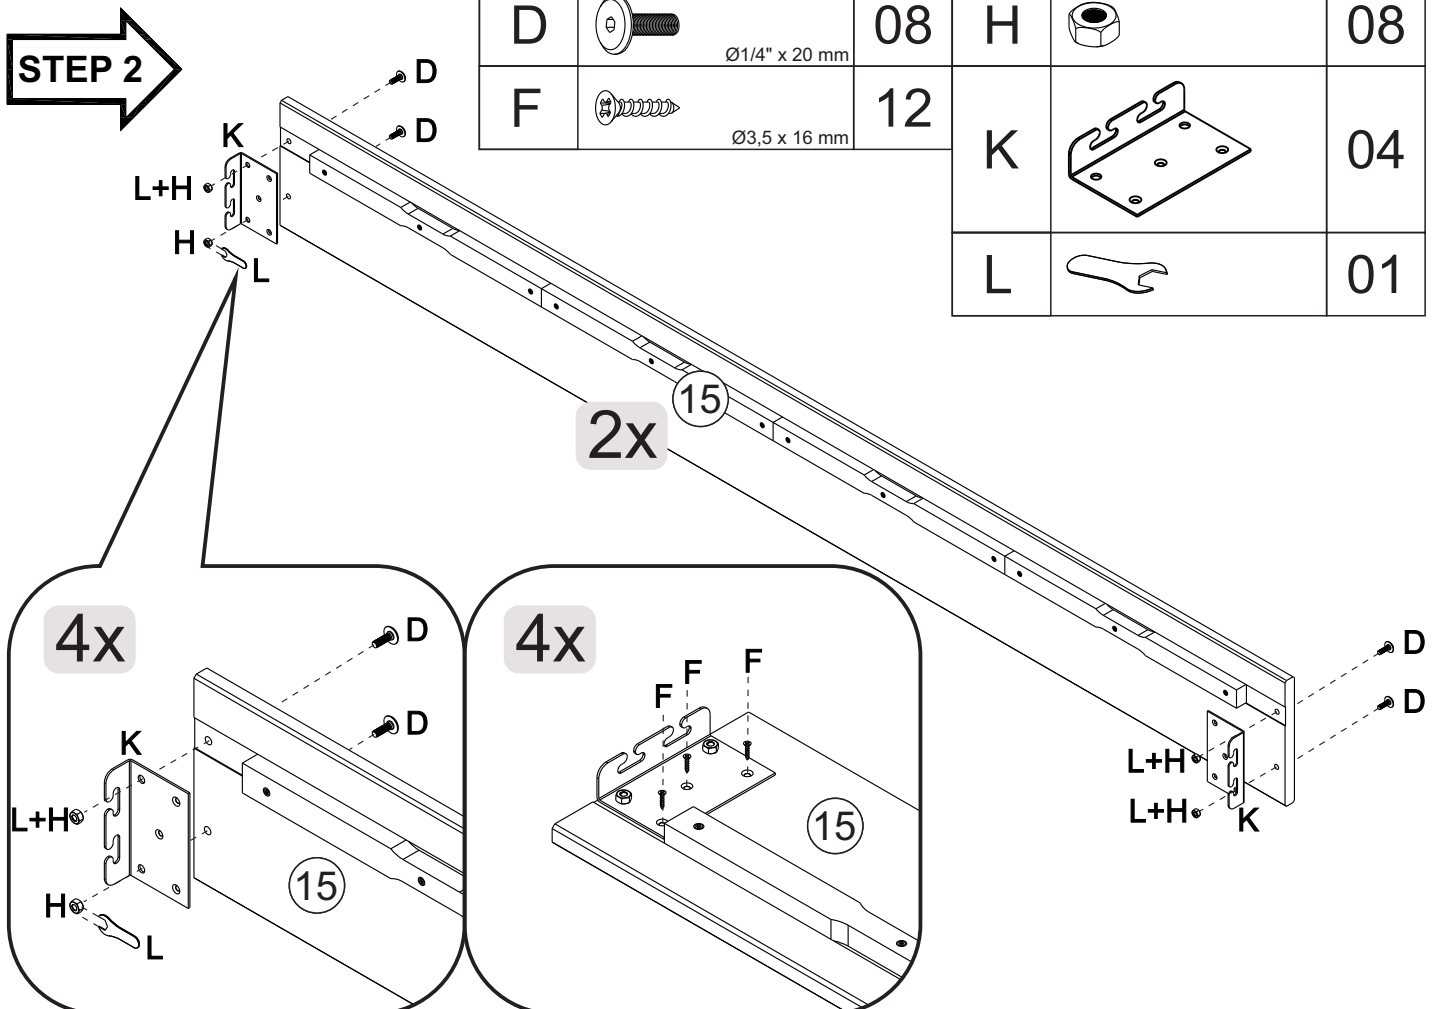
STEP 1





A		24
---	-------------------------------------------------------------------------------------	----



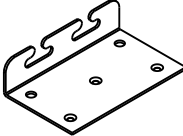STEP 2

D		08	H		08
F		12	K		04
			L		01


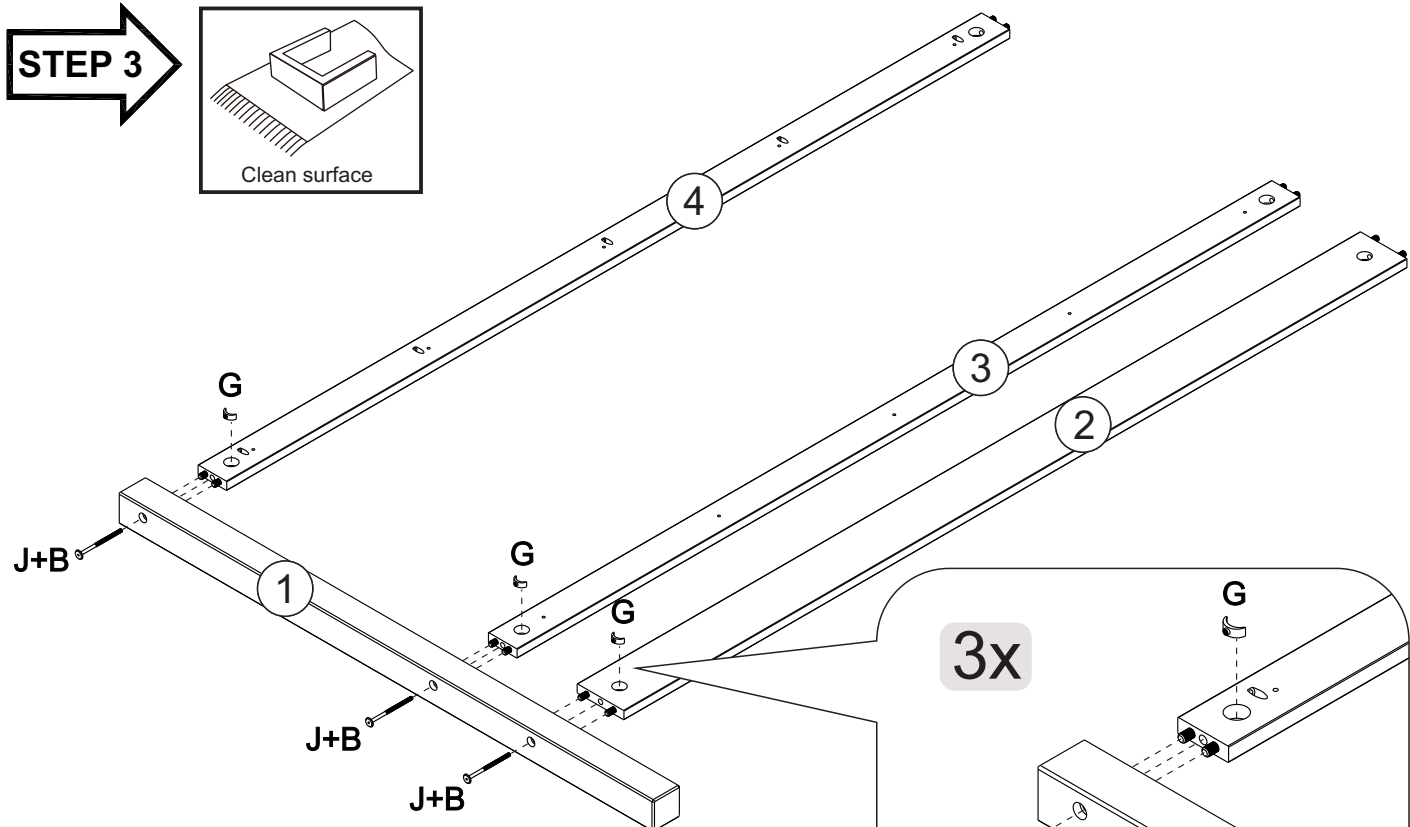
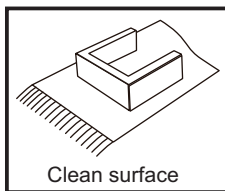


STEP 3



B	 Ø1/4" x 100 mm	03	<div>J+E</div>		
G		03			

STEP 4

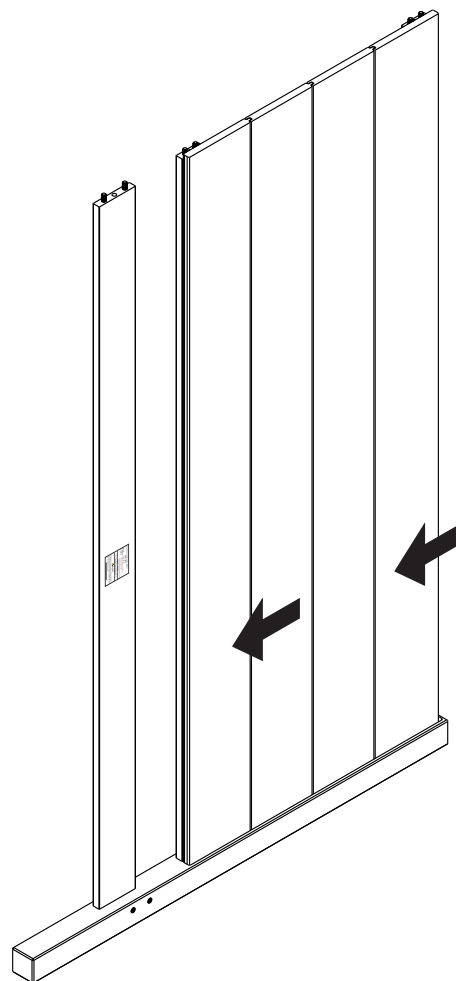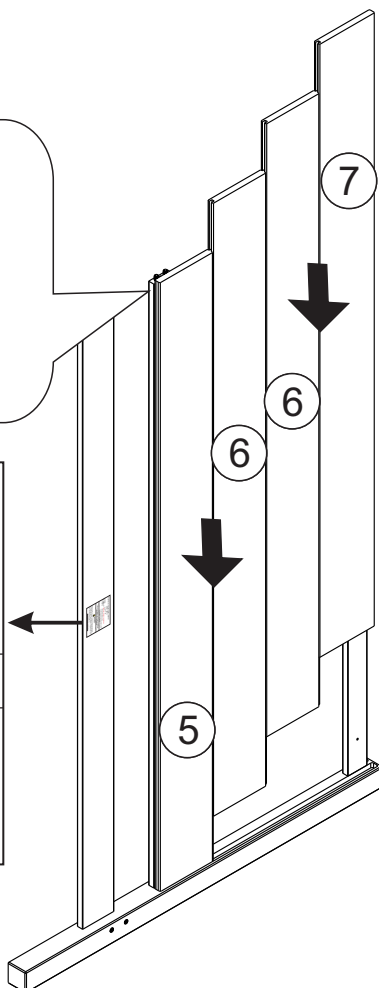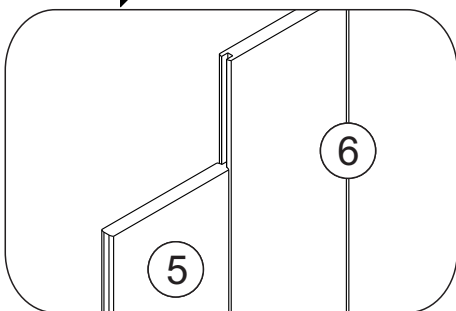

Product Name: ARLINGTON BED - KING SIZE
AR807 / AR809
Country: Made in Brazil
Mfg Date/Lot: 03/2022 - PO N° 01.20.2022-4
Company: Eco-Flex Furniture, LLC
 1031 East Mountain Street Bldg. 306
 Kernersville, NC 27284

California 93120 Phase 2 and TSCA Title VI
 Compliant for Formaldehyde.




WARNING:


This product can expose you to chemicals including formaldehyde, which is known to the State of California to cause cancer or birth defects or reproductive harm. For more information, go to:




www.p65warnings.ca.gov/furniture

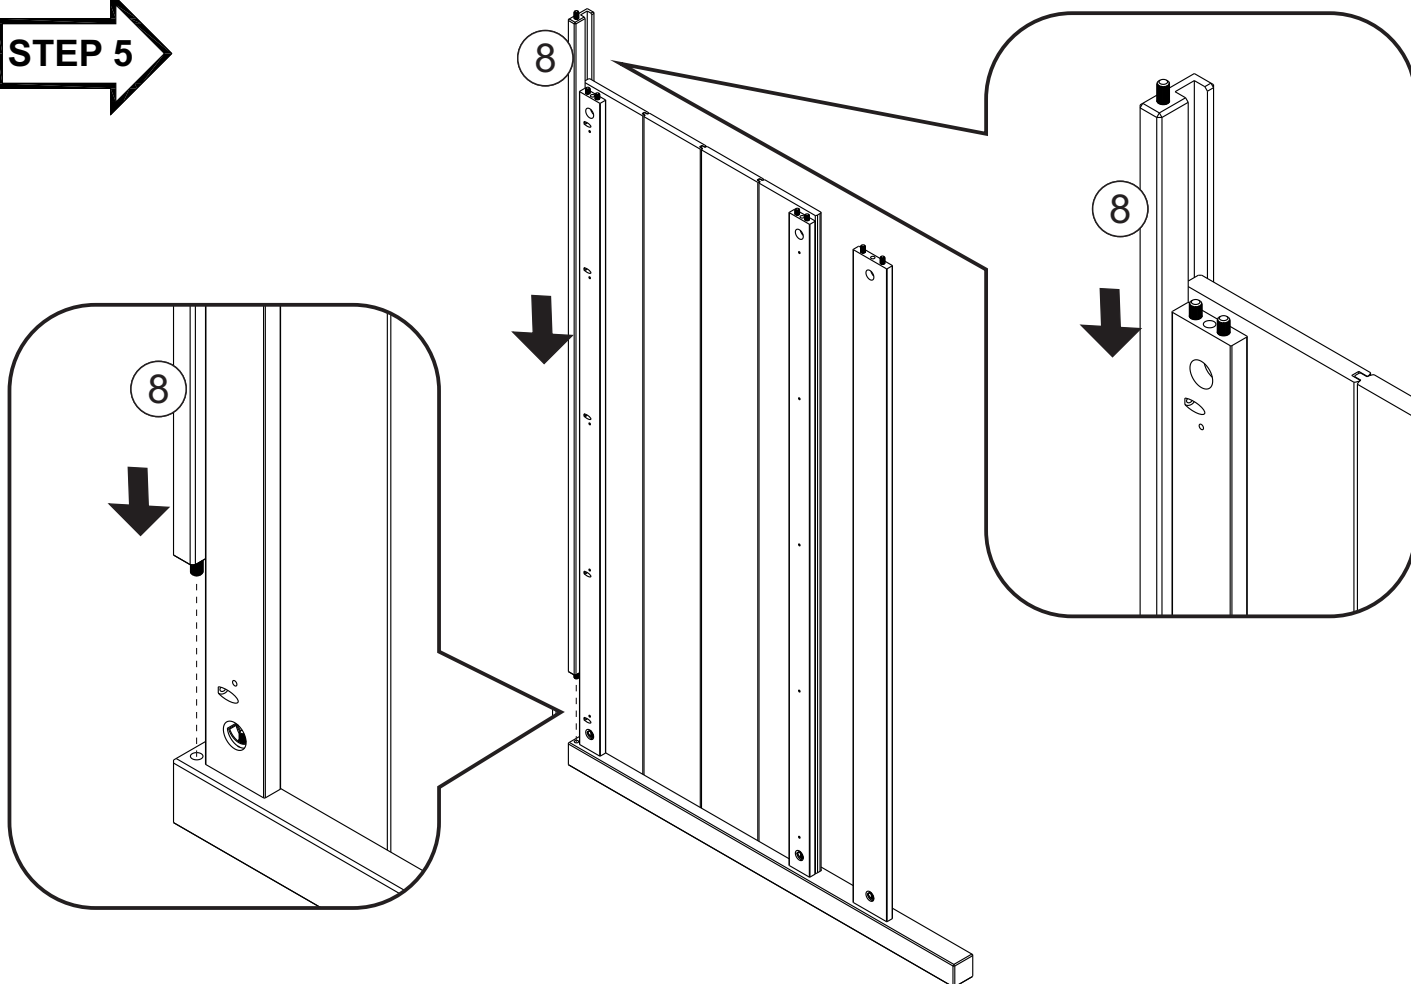STEP 5

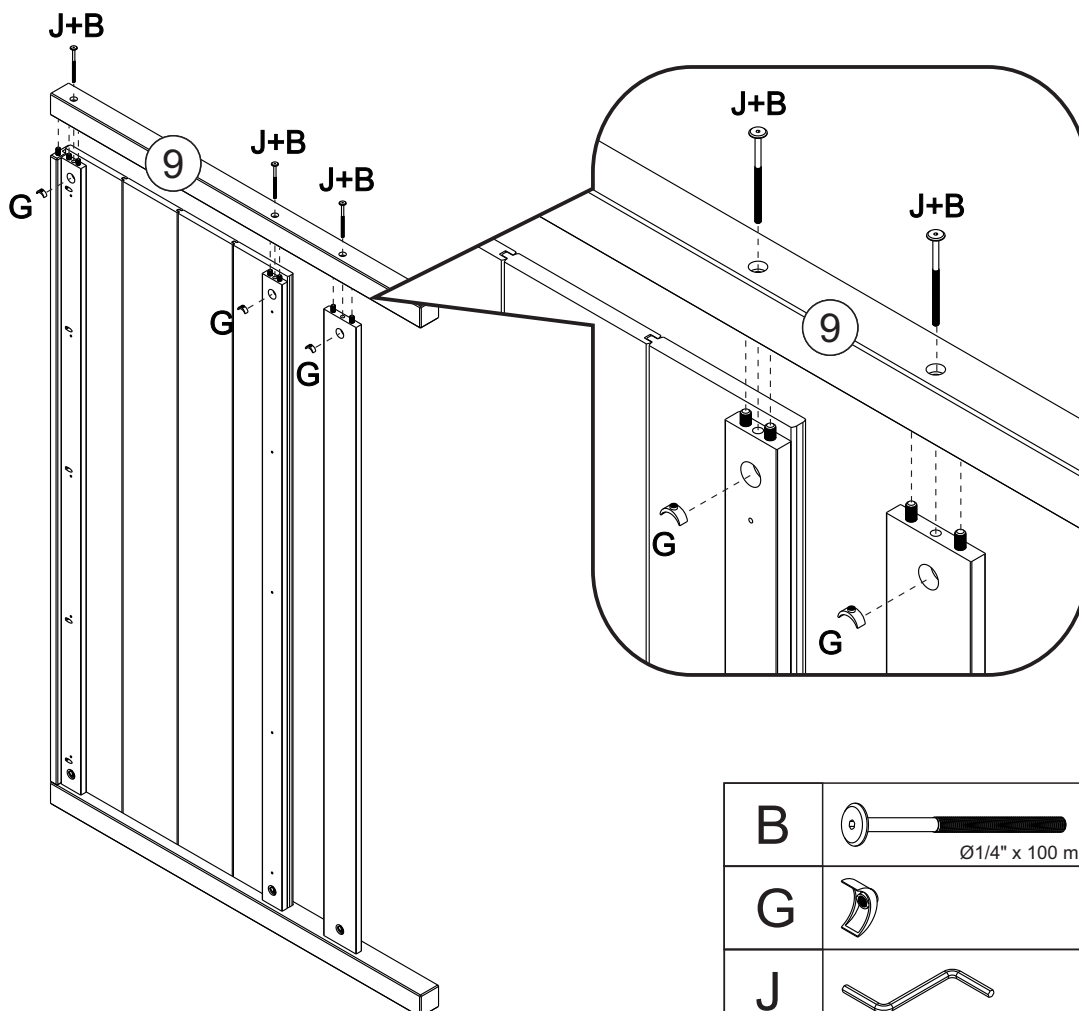



STEP 6




B	 Ø1/4" x 100 mm	03
G		03
J		02


STEP 7

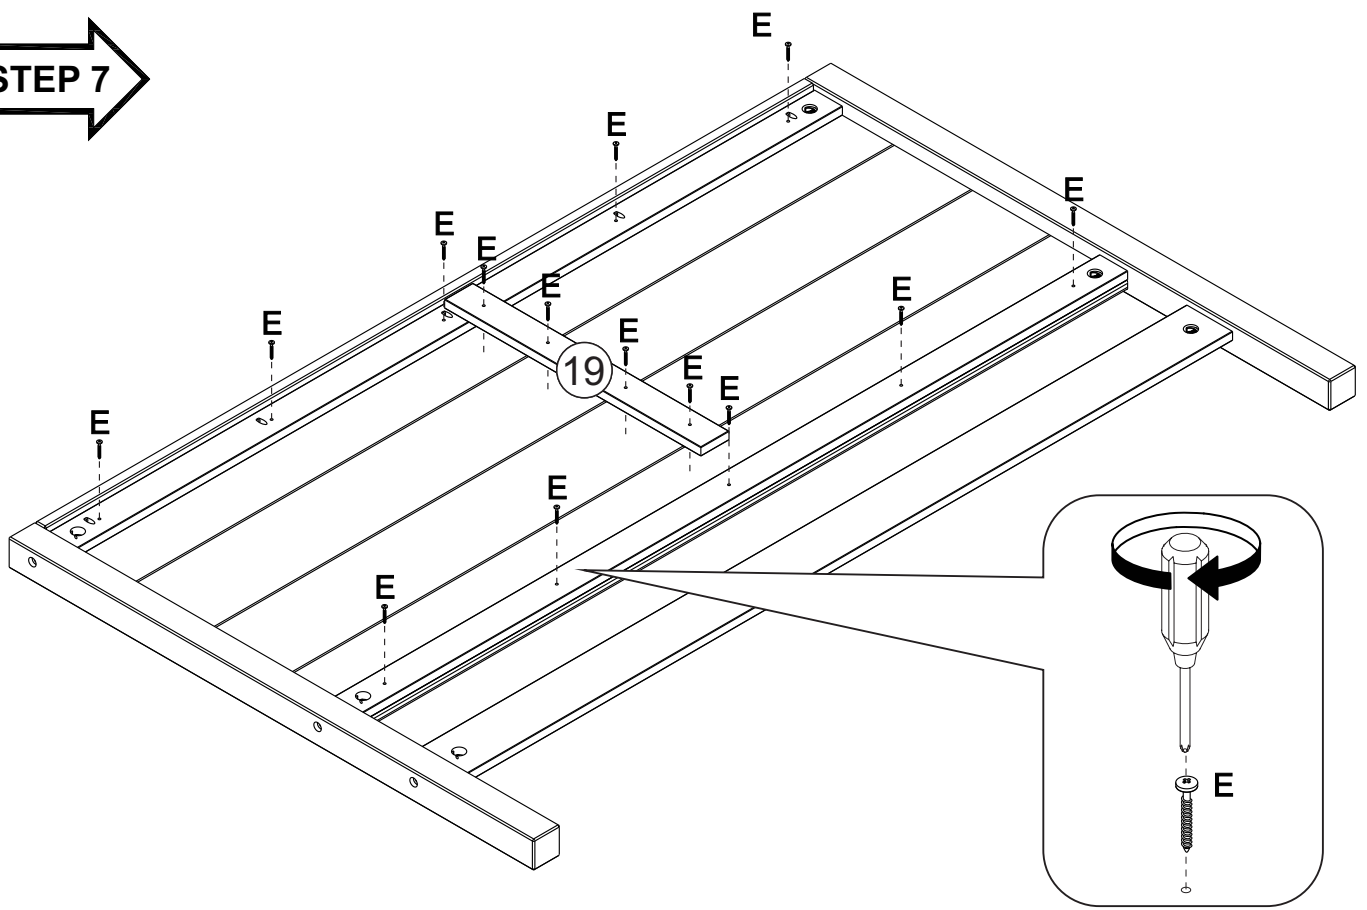

E		Ø4,5 x 35 mm	14
---	---------------------------------------------------------------------------------------	--------------	----


STEP 8

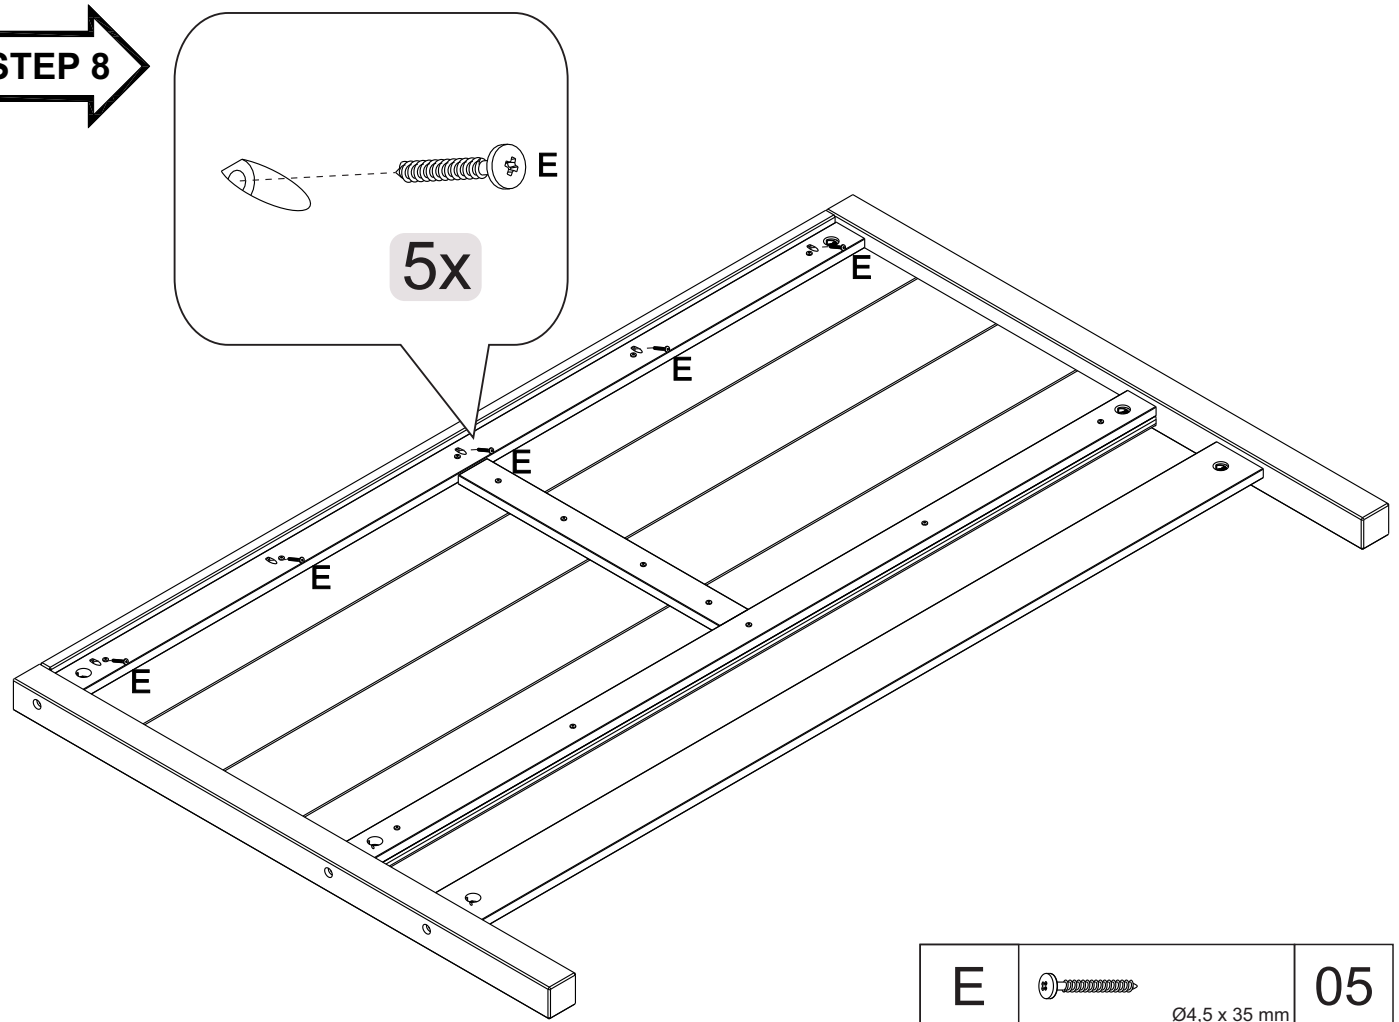



E		Ø4,5 x 35 mm	05
---	---------------------------------------------------------------------------------------	--------------	----


STEP 9

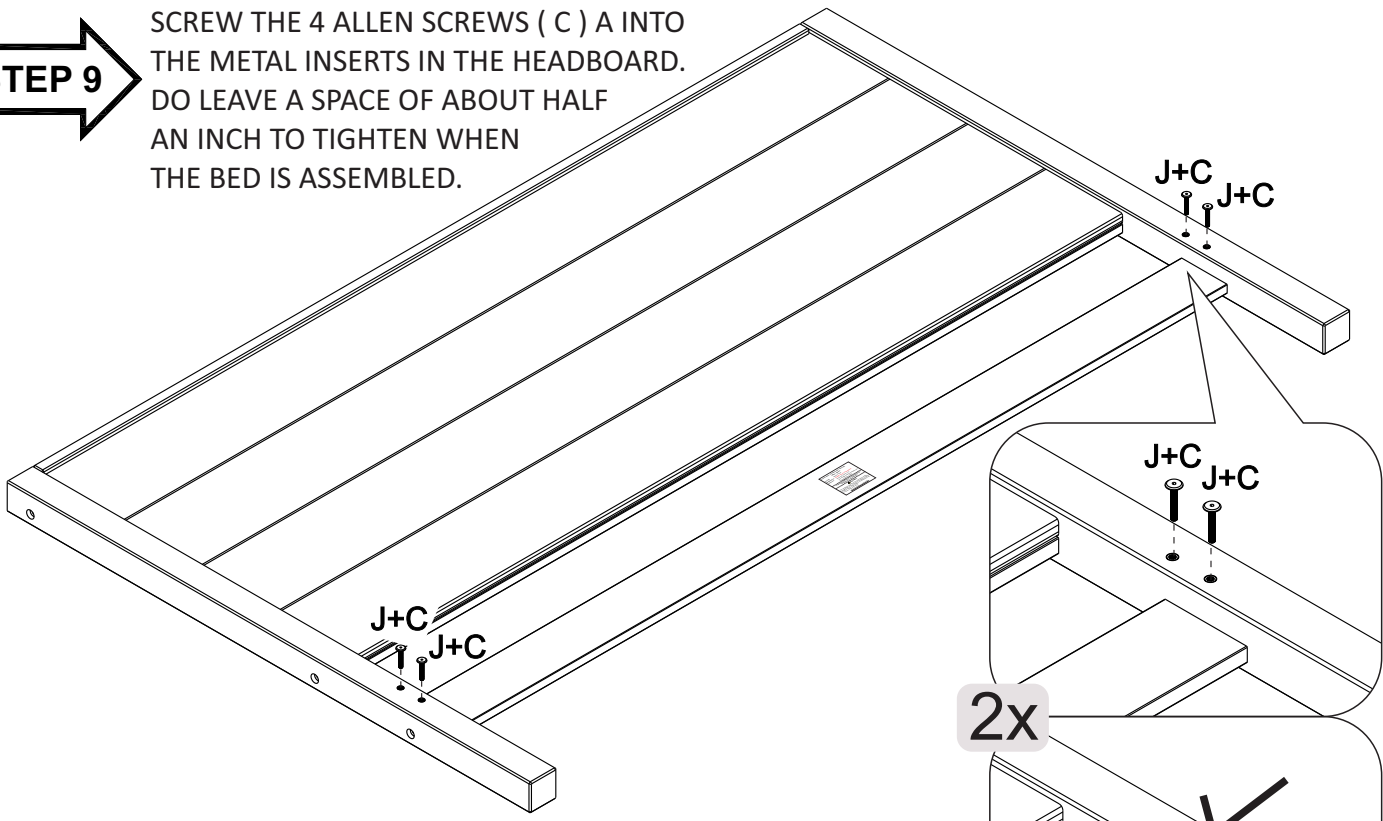


SCREW THE 4 ALLEN SCREWS (C) A INTO THE METAL INSERTS IN THE HEADBOARD. DO LEAVE A SPACE OF ABOUT HALF AN INCH TO TIGHTEN WHEN THE BED IS ASSEMBLED.




C	 Ø1/4" x 40 mm	04
J		02

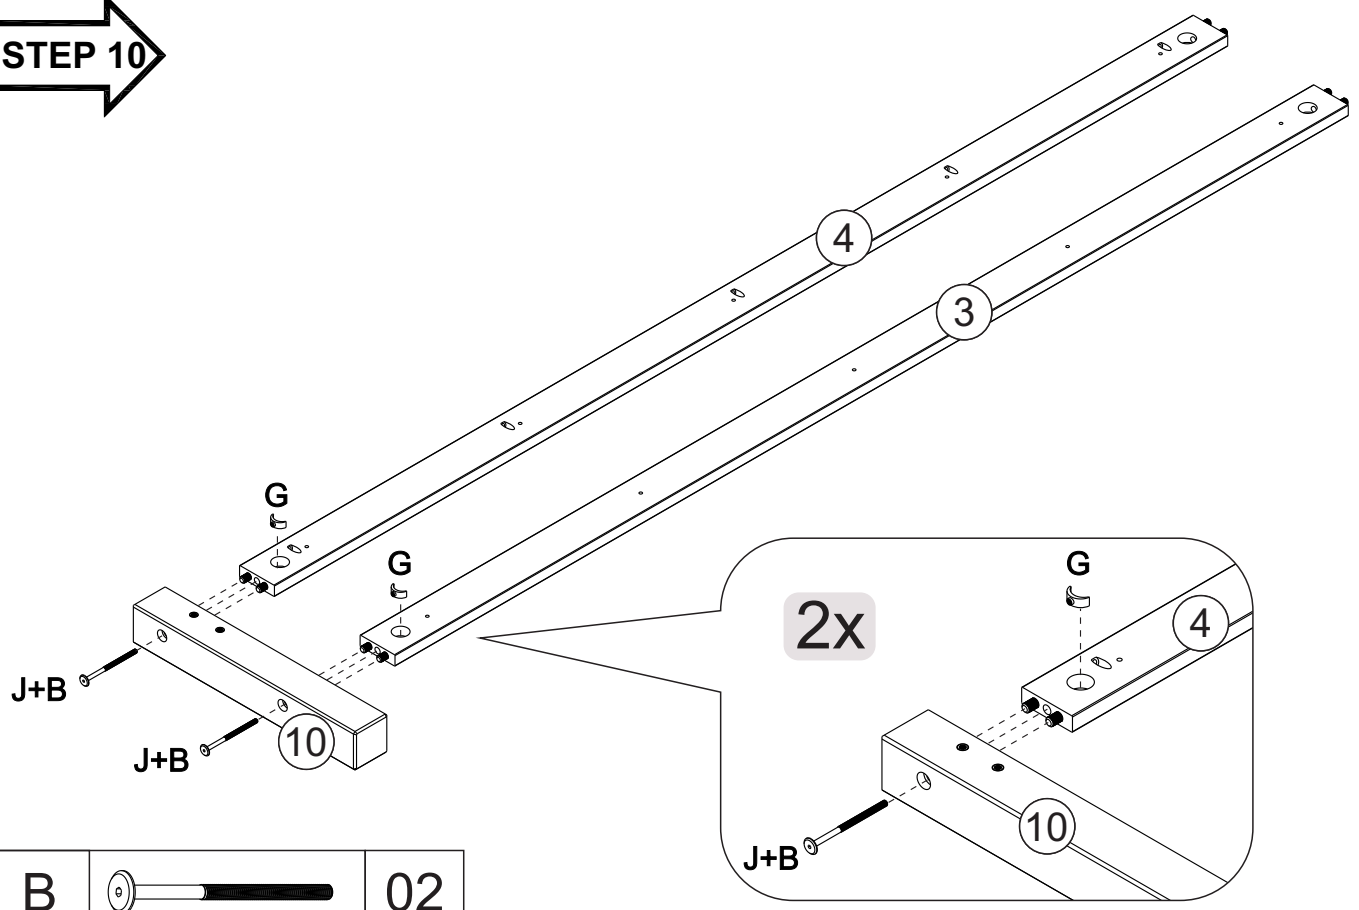STEP 10




B	 Ø1/4" x 100 mm	02
G		02
J		02


STEP 11

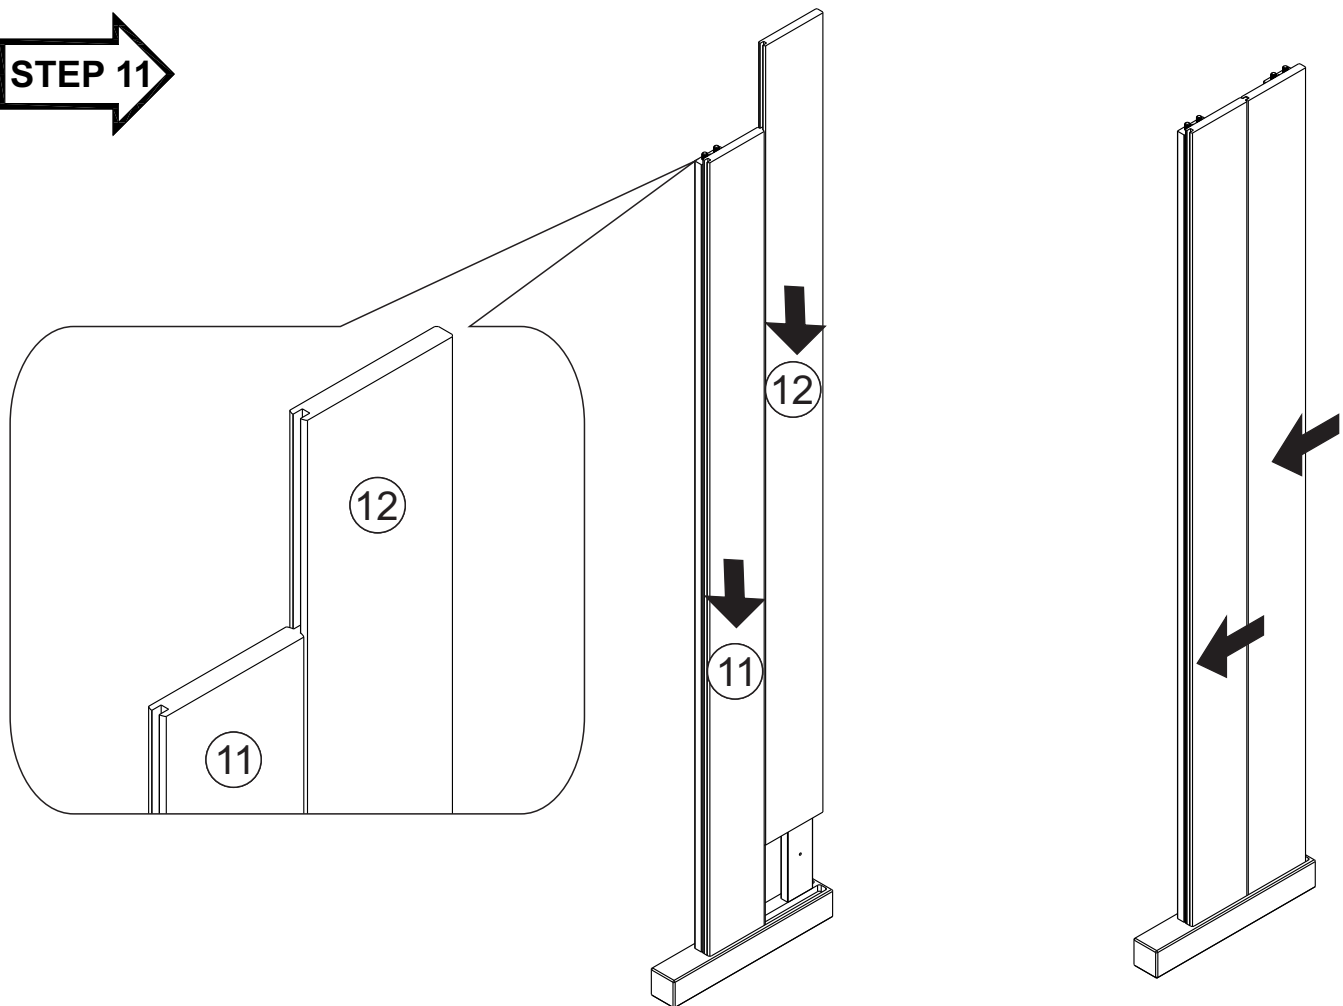


STEP 12

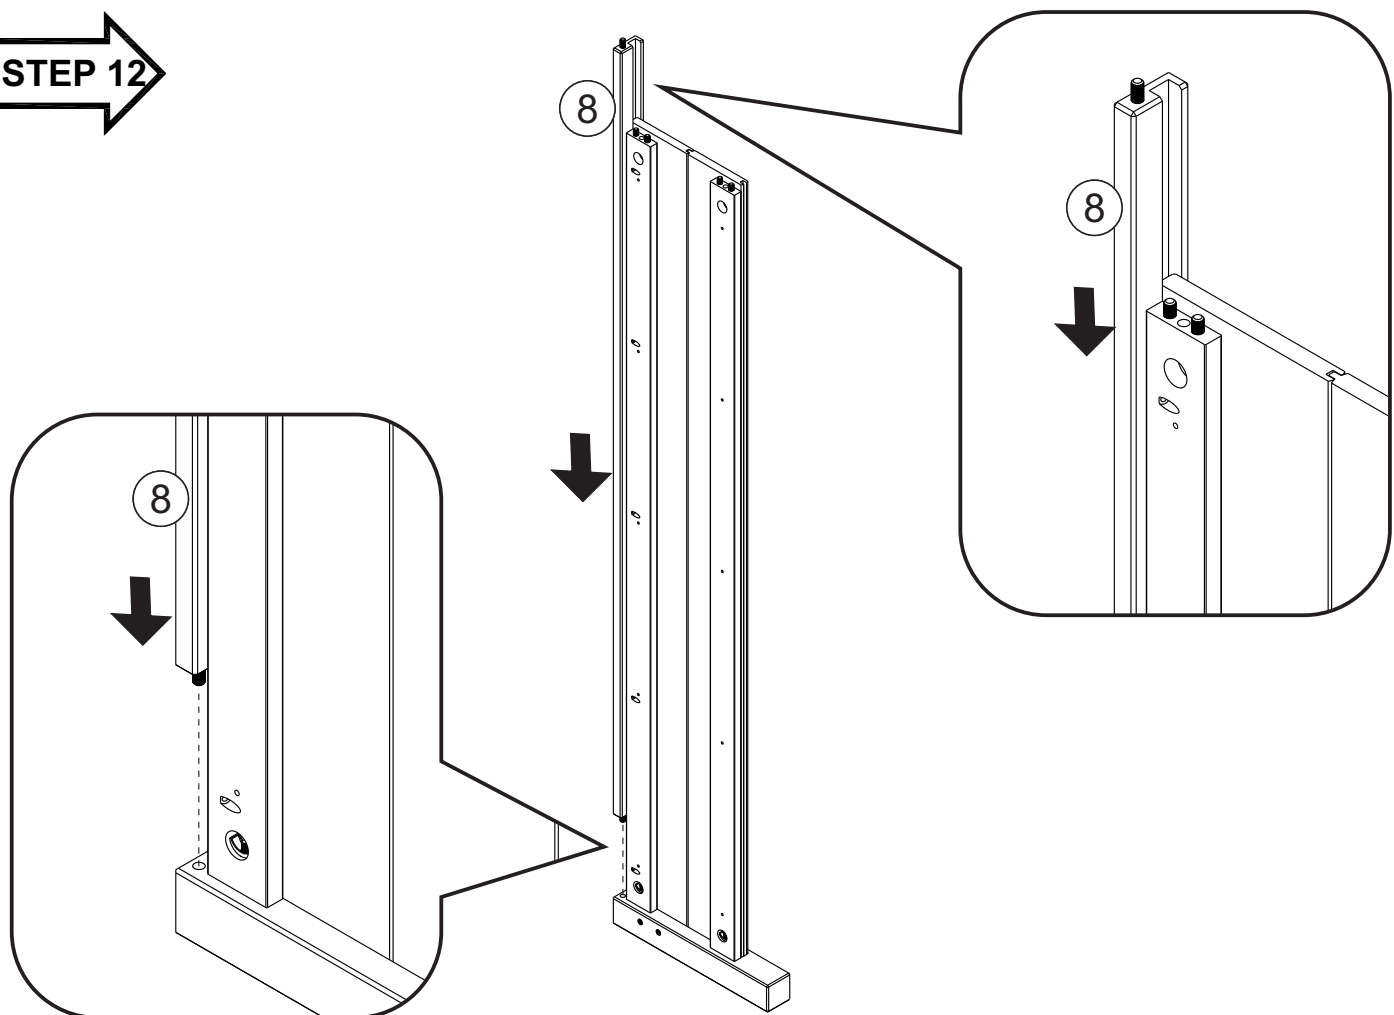


STEP 13

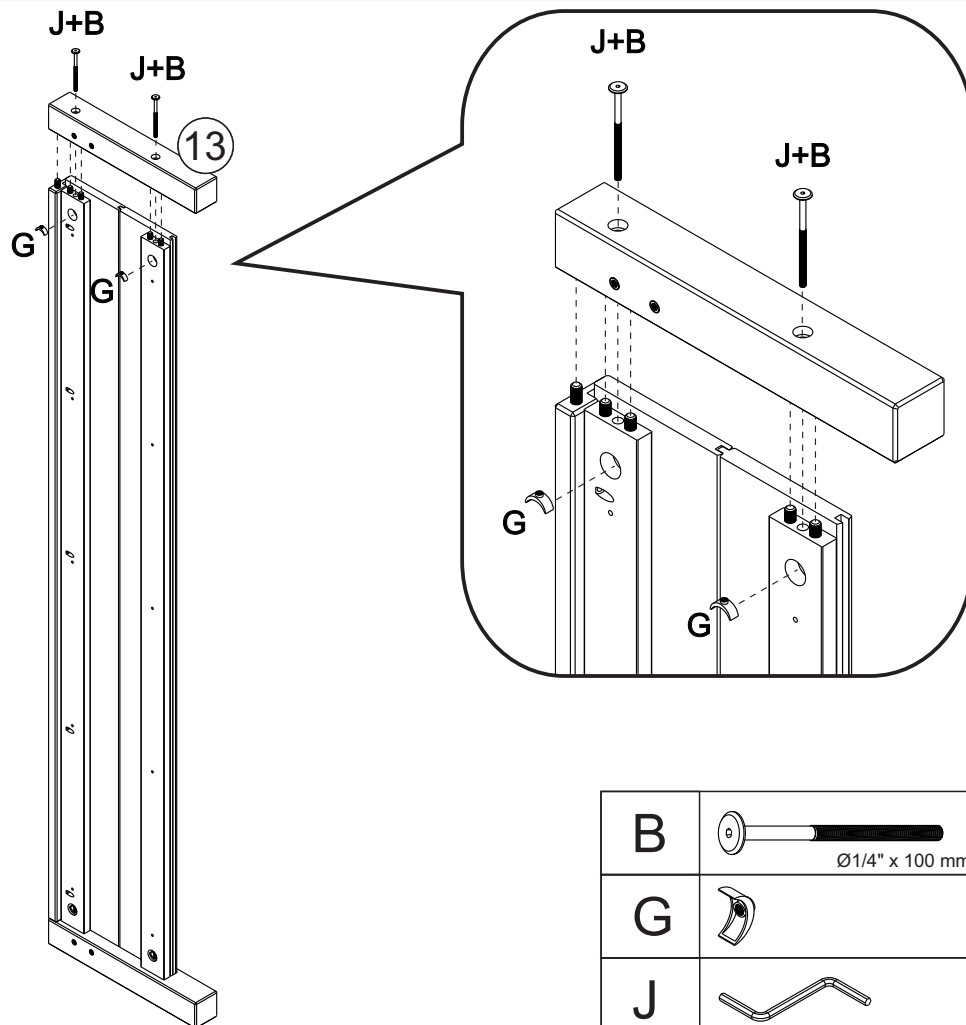


STEP 14

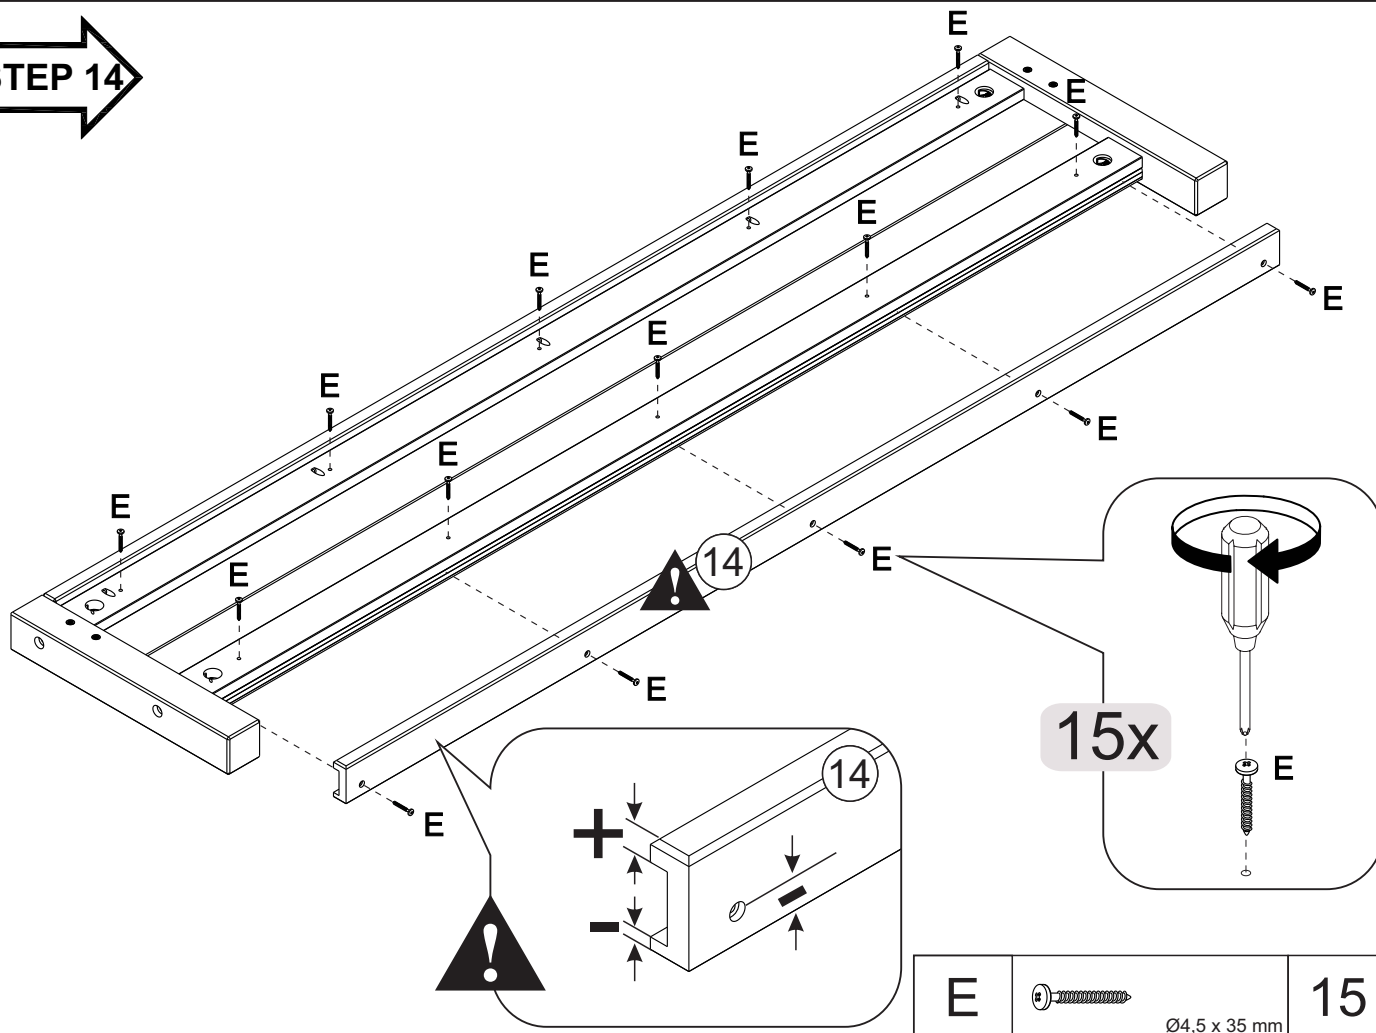


STEP 15

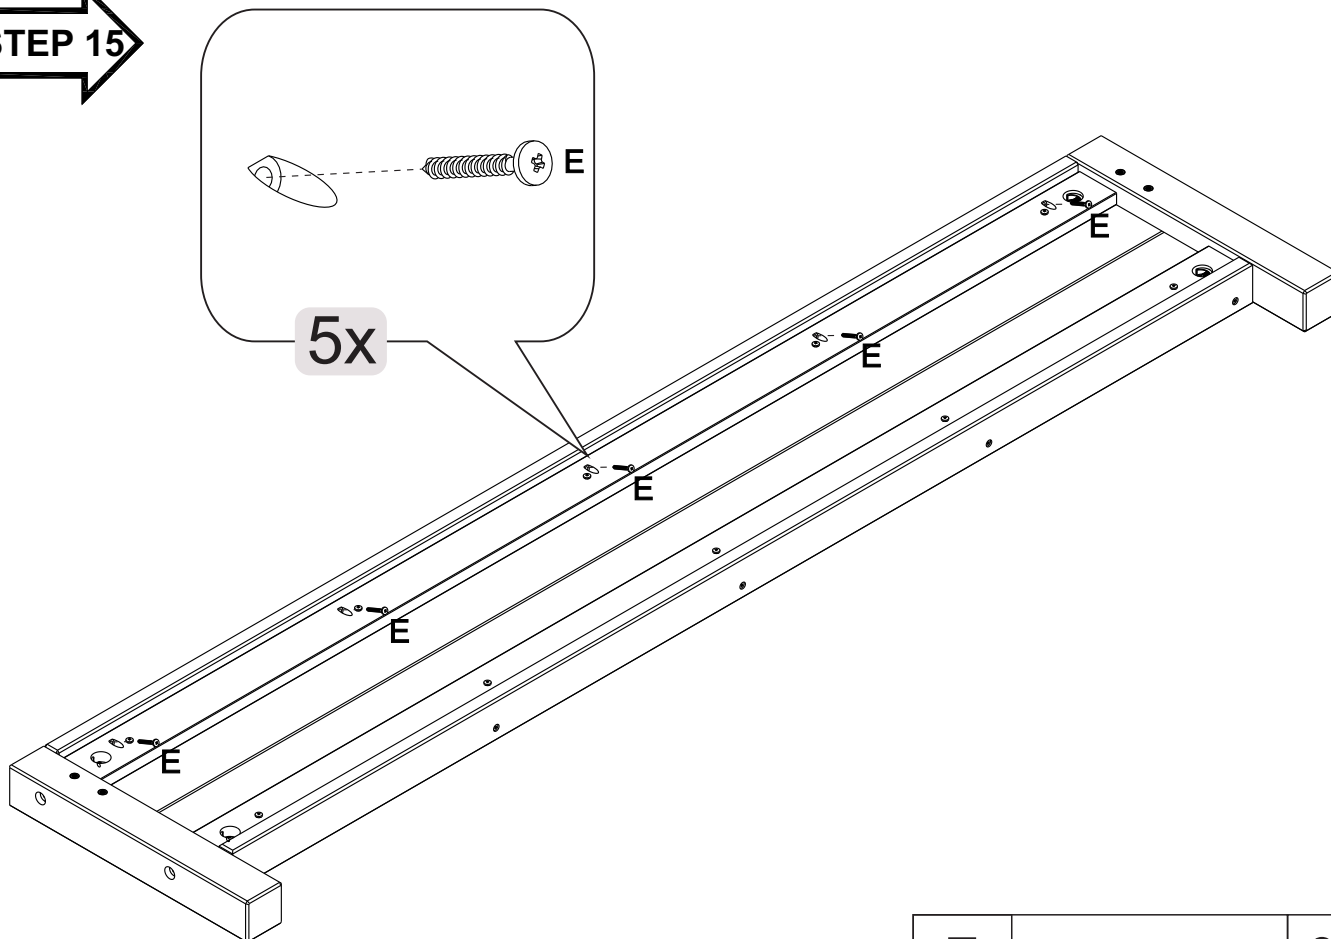



E		05
Ø4,5 x 35 mm		

STEP 16

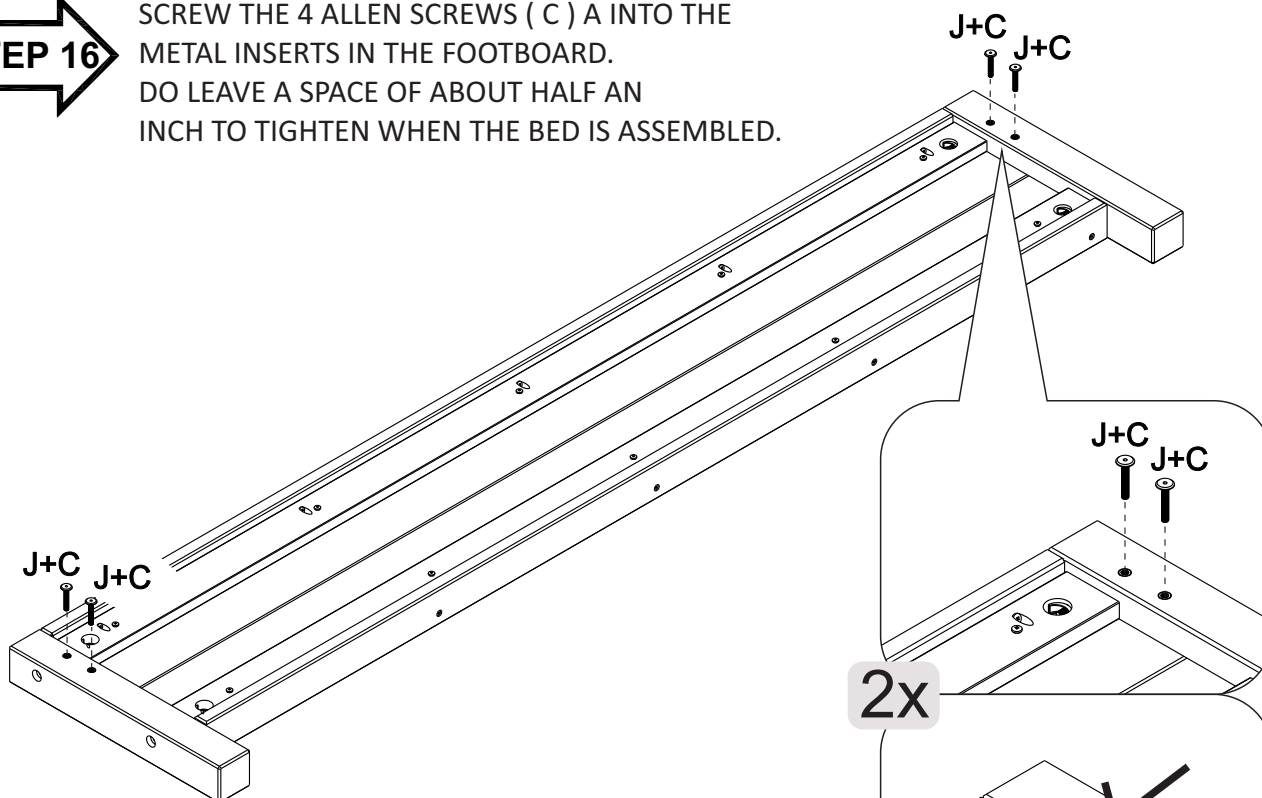
SCREW THE 4 ALLEN SCREWS (C) A INTO THE METAL INSERTS IN THE FOOTBOARD. DO LEAVE A SPACE OF ABOUT HALF AN INCH TO TIGHTEN WHEN THE BED IS ASSEMBLED.



C		04
Ø1/4" x 40 mm		
J		02

STEP 17


OPTION 01

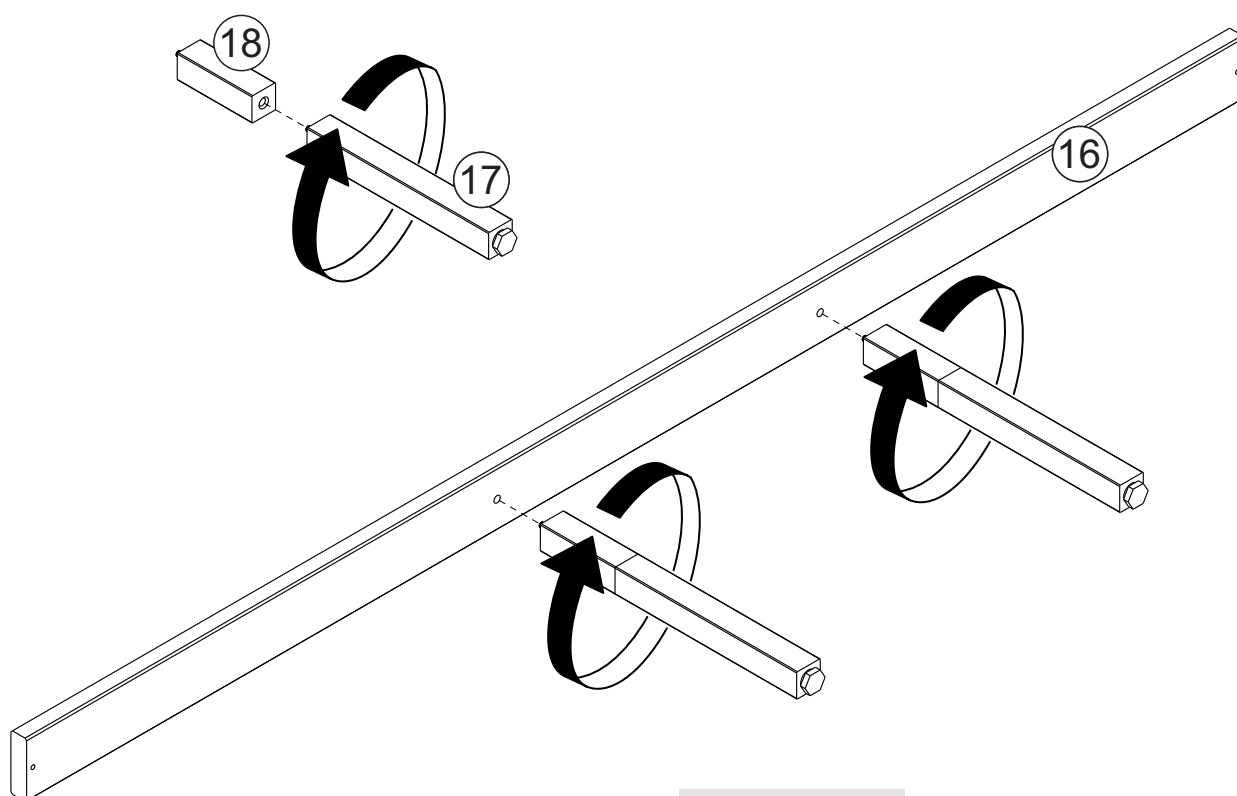


OR...

STEP 18

OPTION 02



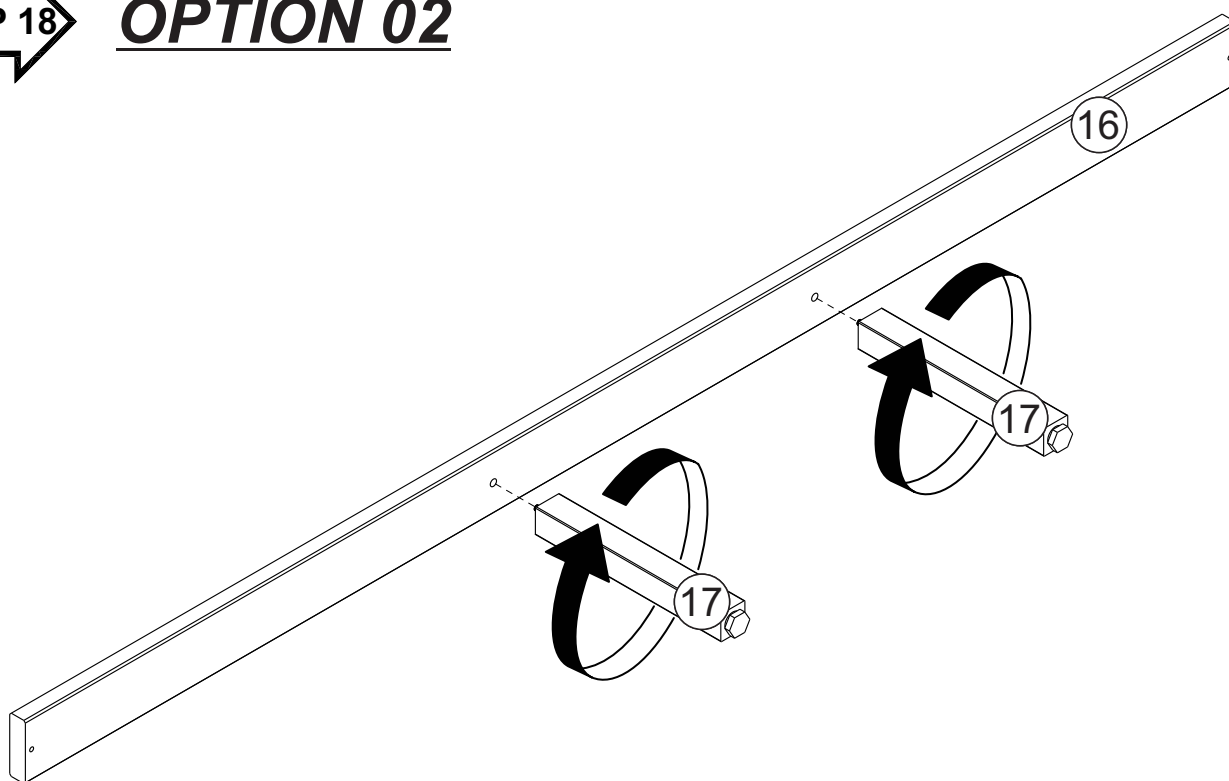


STEP 19

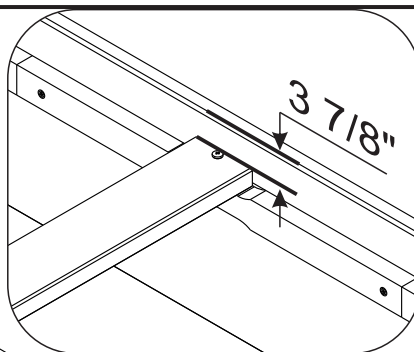


OPTION 01

HOOK BOTH SIDE RAILS ONTO THE SCREWS IN THE HEADBOARD, AND THEN ONTO THE SCREWS IN THE FOOTBOARD. MAKE SURE THE BED IS SQUARE.

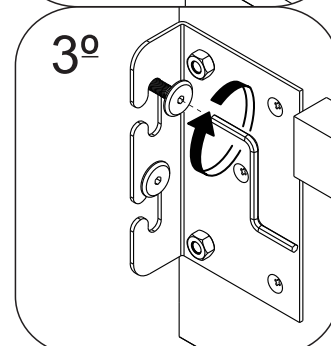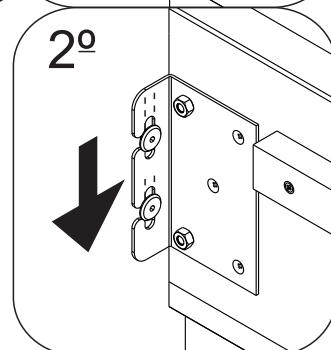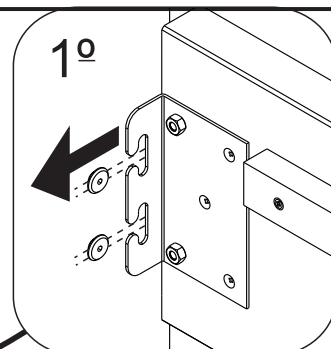




OR...

STEP 20

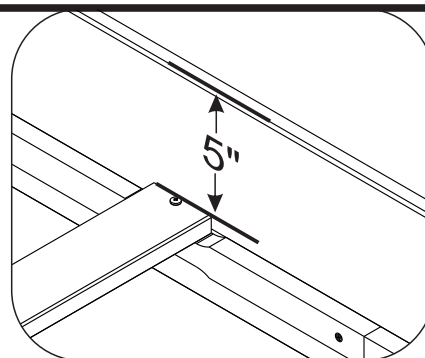




OPTION 02

HOOK BOTH SIDE RAILS ONTO THE SCREWS IN THE HEADBOARD, AND THEN ONTO THE SCREWS IN THE FOOTBOARD. MAKE SURE THE BED IS SQUARE.

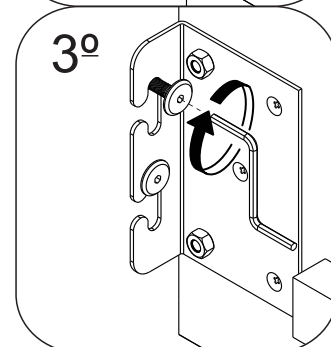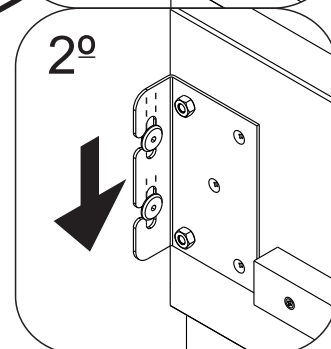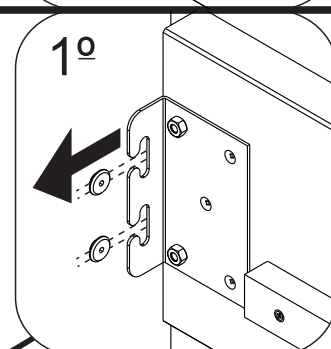


STEP 21

OPTION 01

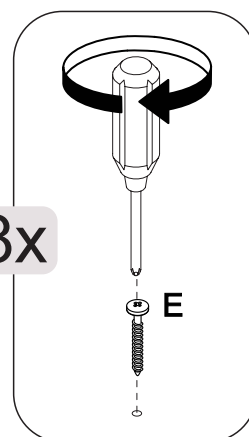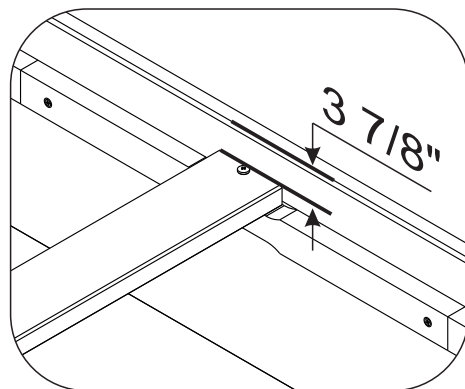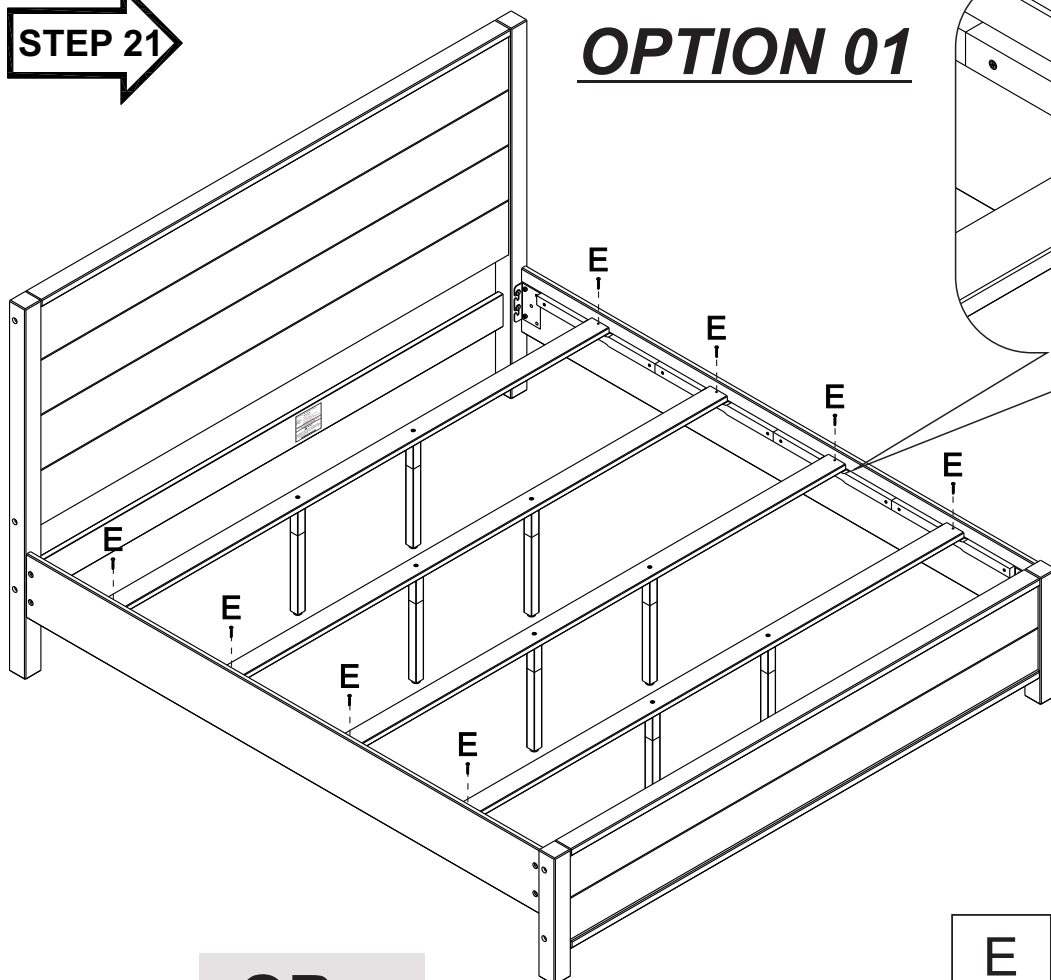




8x

E		08
Ø4,5 x 35 mm		


OR...

STEP 22

OPTION 02

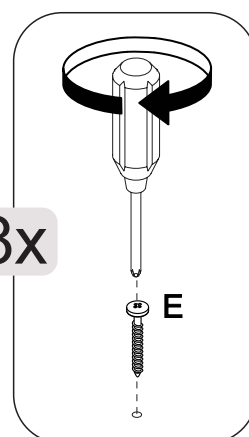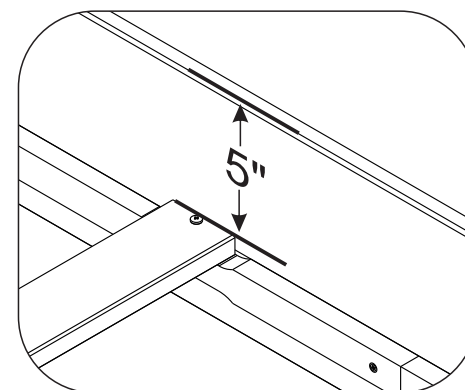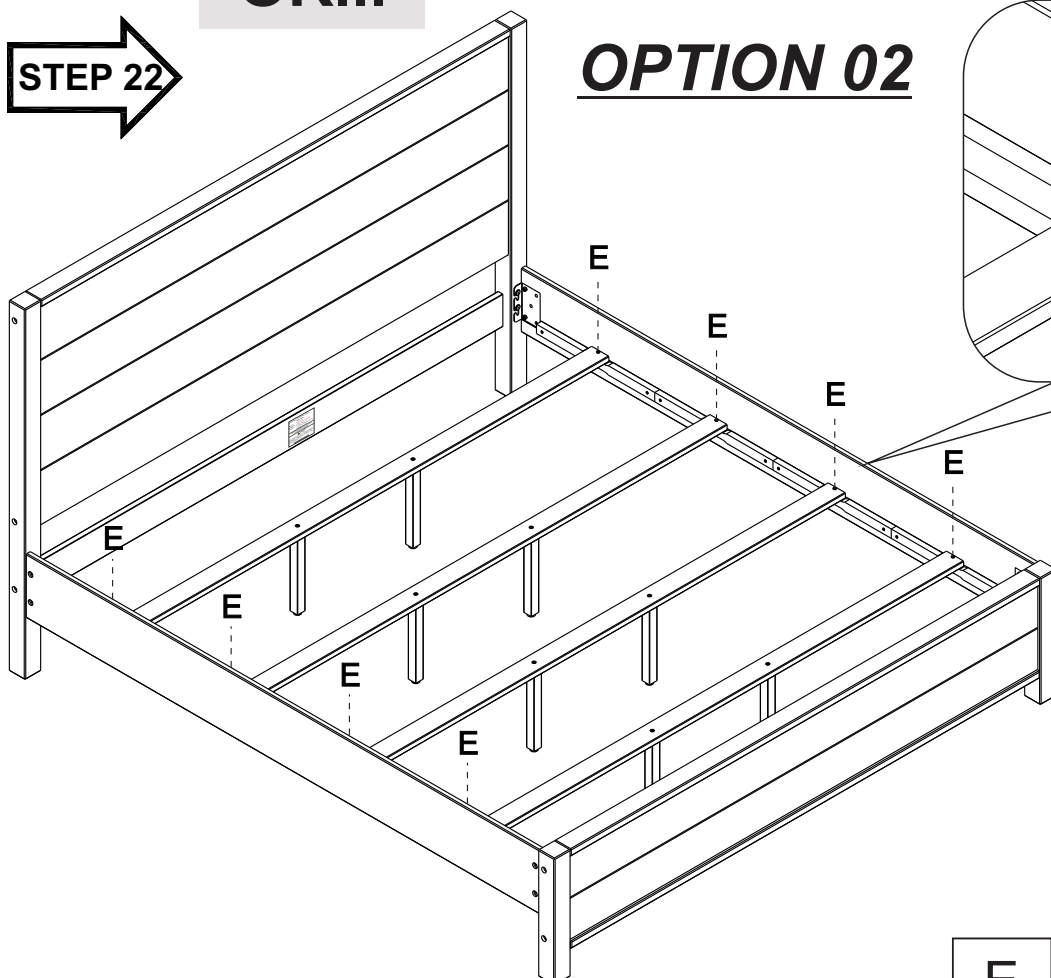


8x

E		08
Ø4,5 x 35 mm		

STEP 23

OPTION 01

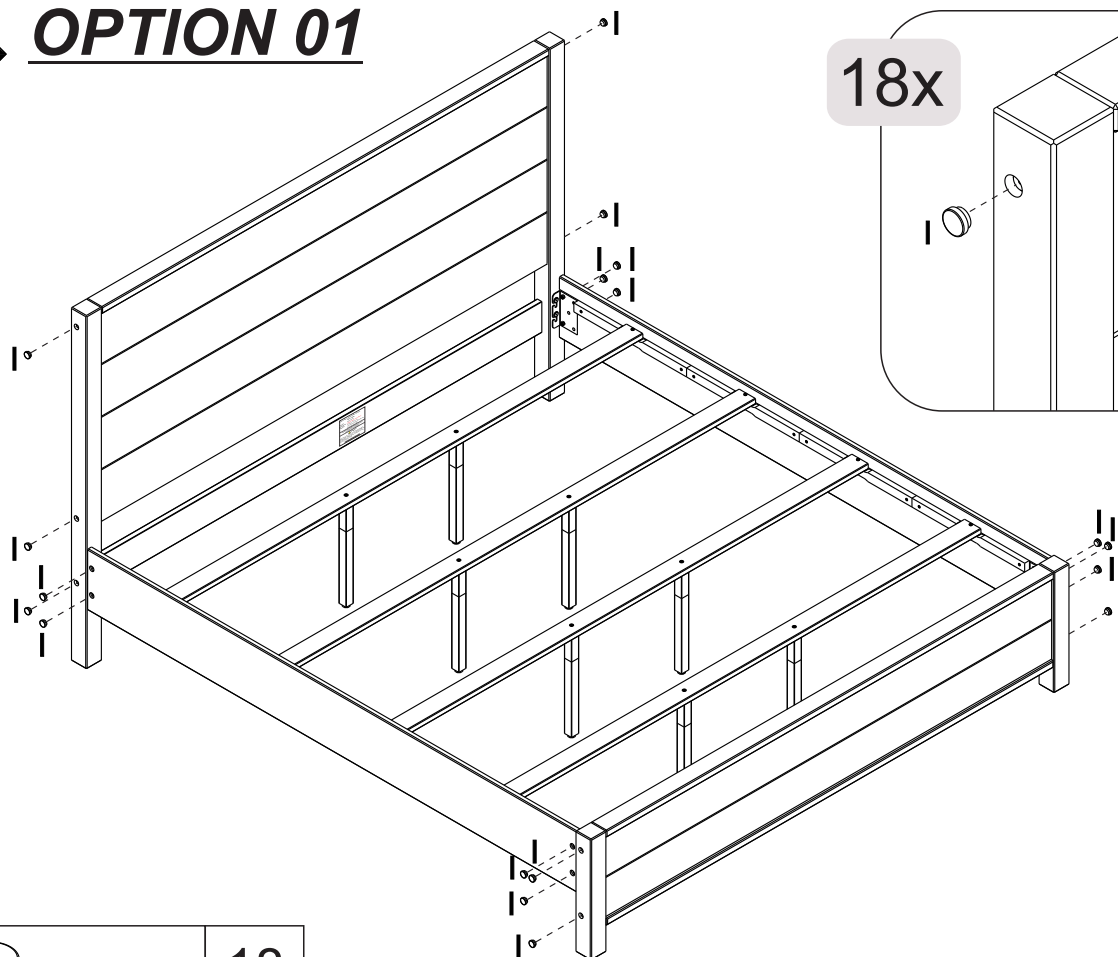



I		18
---	-------------------------------------------------------------------------------------	----

OR...

STEP 24

OPTION 02

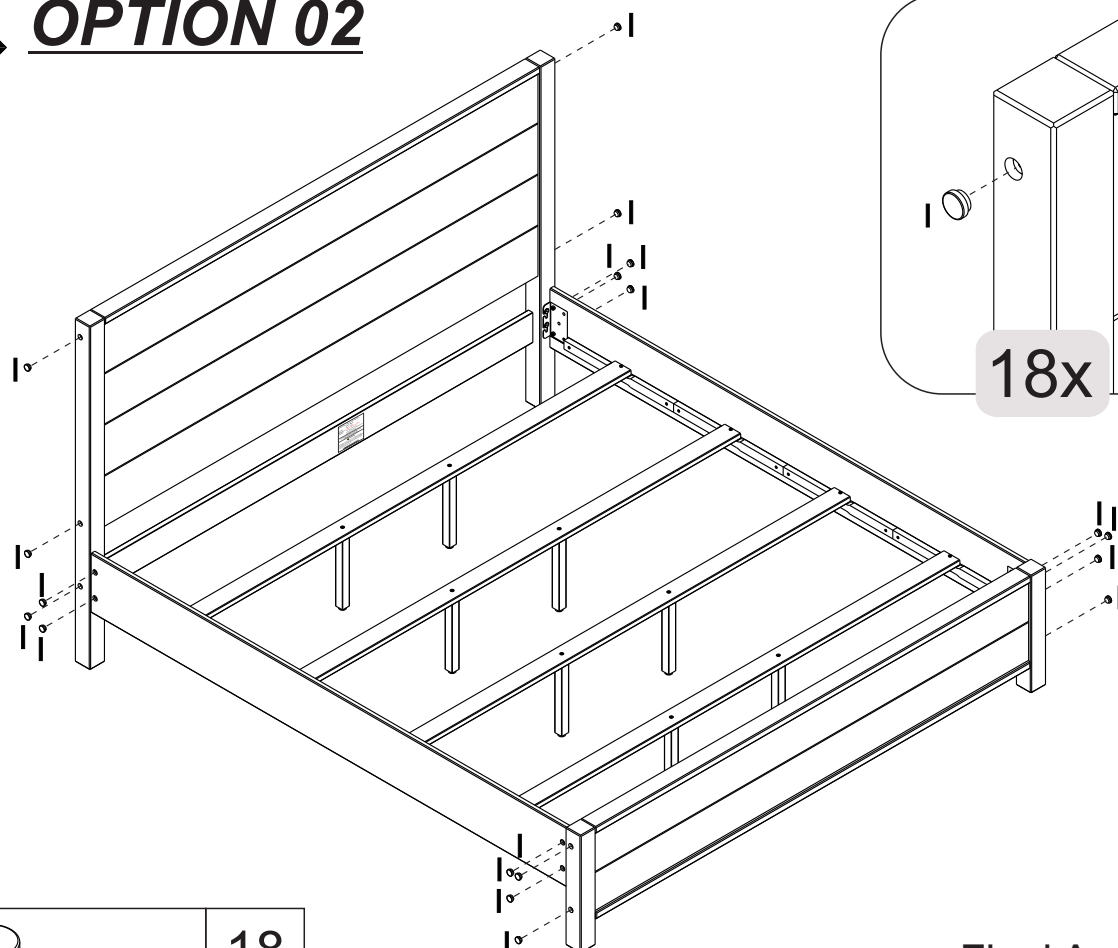

I		18
---	-------------------------------------------------------------------------------------	----

Final Assembly