


# ASSEMBLY INSTRUCTION






## DINING CHAIR

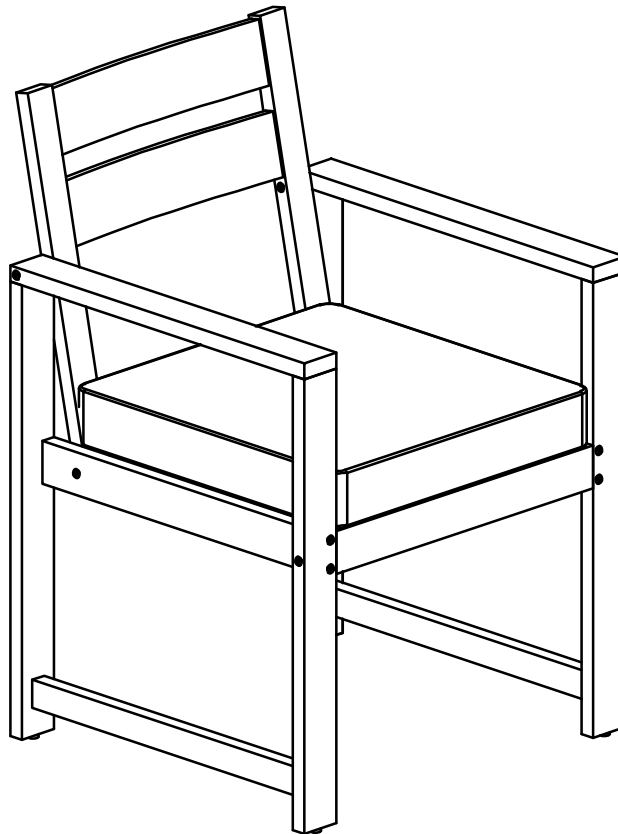

N715P251909


Please read all instructions carefully:

1. Have 2 adults on hand for assembly.
2. 50% Tighten before fixing all screws, Allen wrench is recommended instead of an electric drill.
3. Place the item on a flat ground to adjust and make sure it remains stable.
4. Tighten up all screws with tools gradually.
5. If the screws are not aligned with holes during assembly, please loosen all the other screws to 50% and continue the assembly process.
6. If the item is not stable, please loosen all the screws, adjust it on a flat ground and tighten up all screws again.
7. Note : If one or some screws are fully tightened during assembly, chances are the others will not be aligned with holes. In addition, all the holes are designed to be relatively larger to provide more space for the adjustment of the screws.

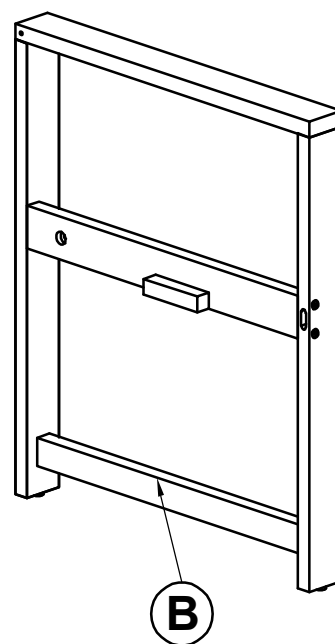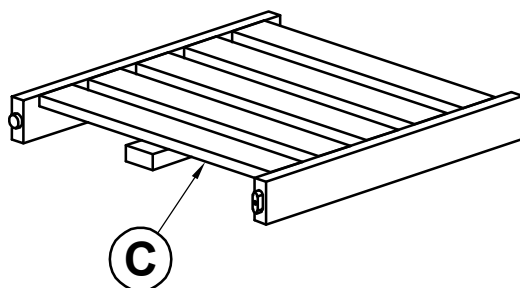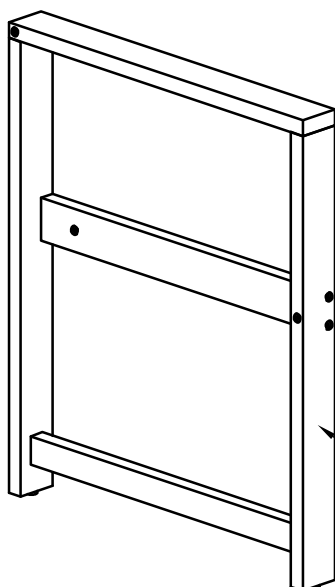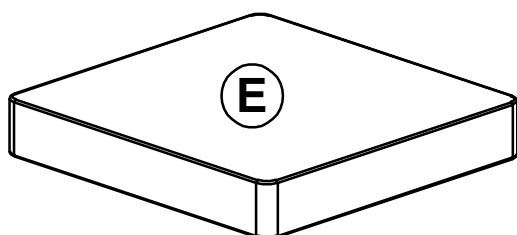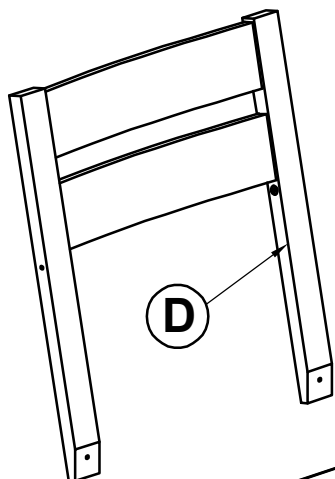


Part List :

A

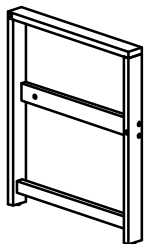


Left Leg Panel (1 pc)

B

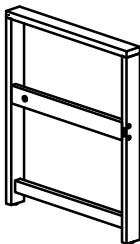


Right Leg Panel (1 pc)

C




Seat Panel (1 pc)

D

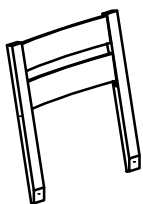

Backrest Panel (1 pc)


E

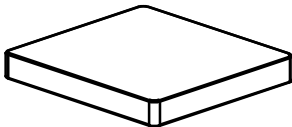

Seat Cushion (1 pc)

## Hardware list:

1



Allen Wrench (1 pc)

2



Screw Bolt M6x30(2 pcs)  
+ Extra 1 pc

3



Screw Bolt M6x60 (2 pcs)  
+ Extra 1 pc

4






Screw Bolt M6x90 (2 pcs)  
+ Extra 1 pc

5






Bolt M6x80 (2 pcs)  
+ Extra 1 pc



## STEP 1

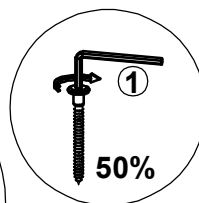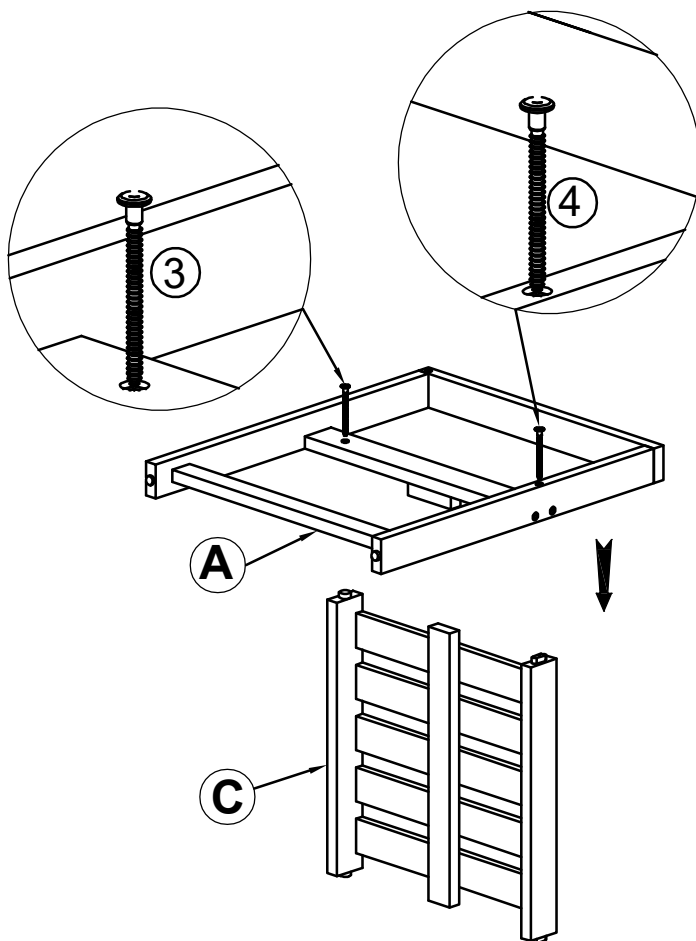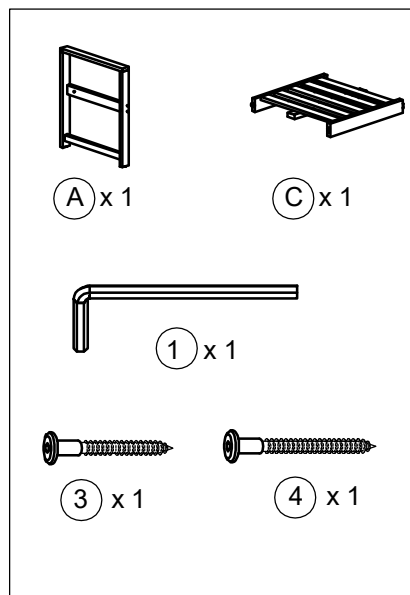


## STEP 2

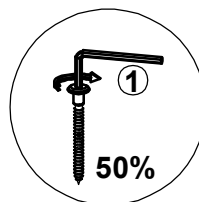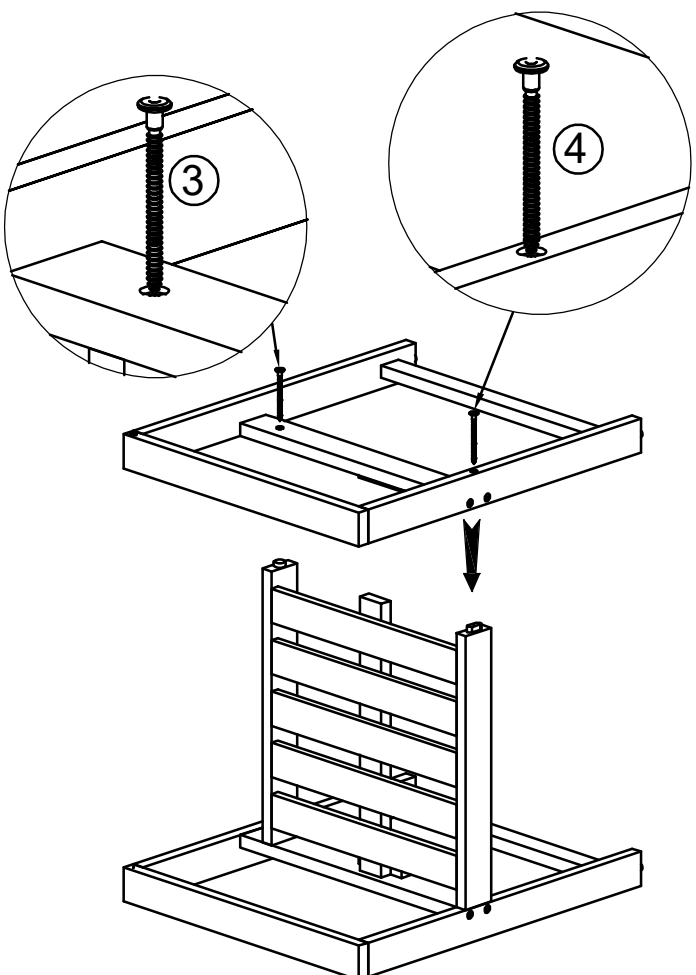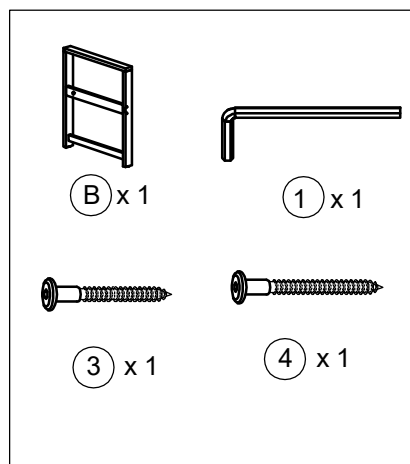



## STEP 3

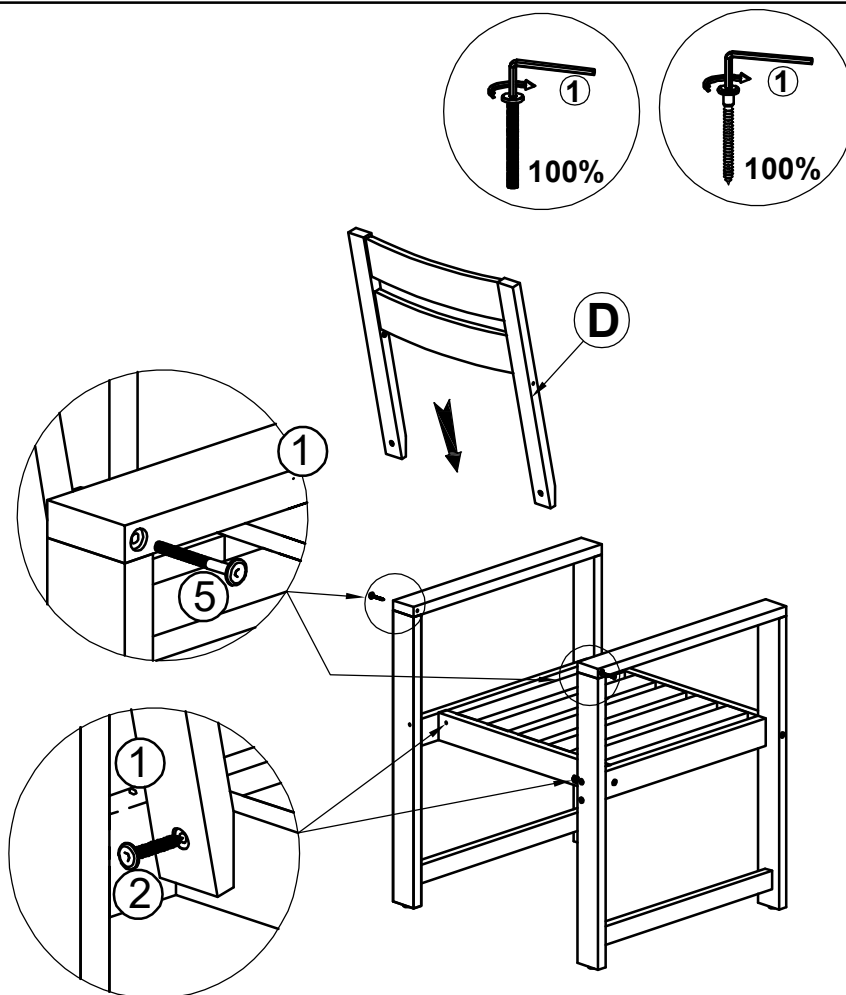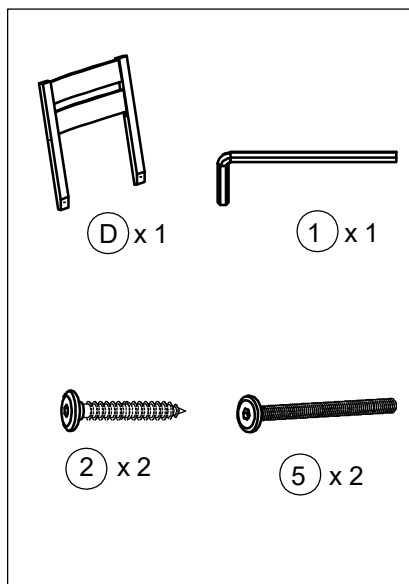



## STEP 4

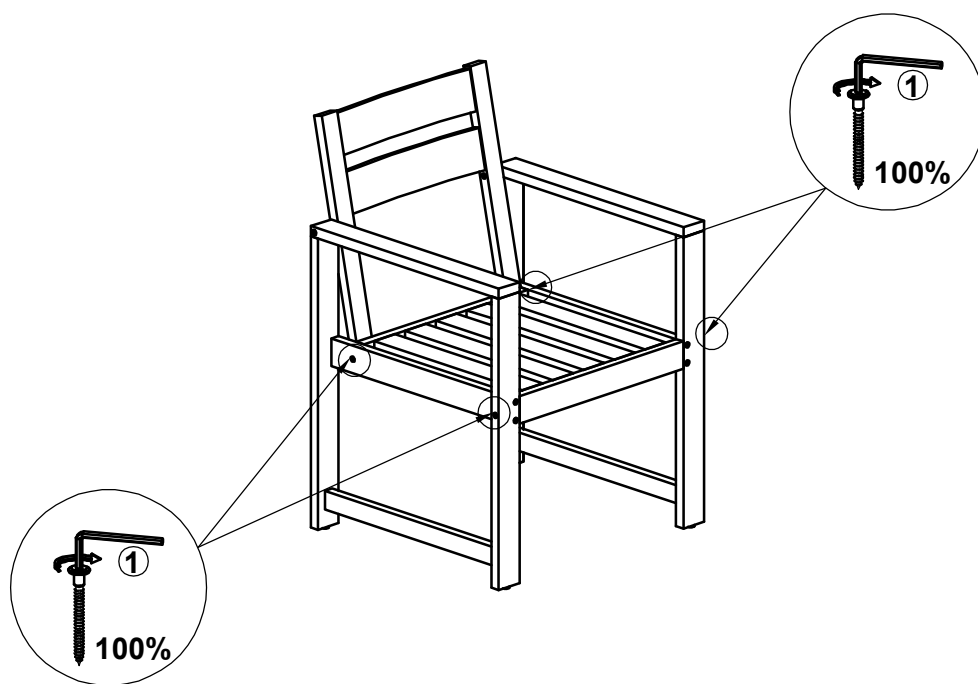

## STEP 5

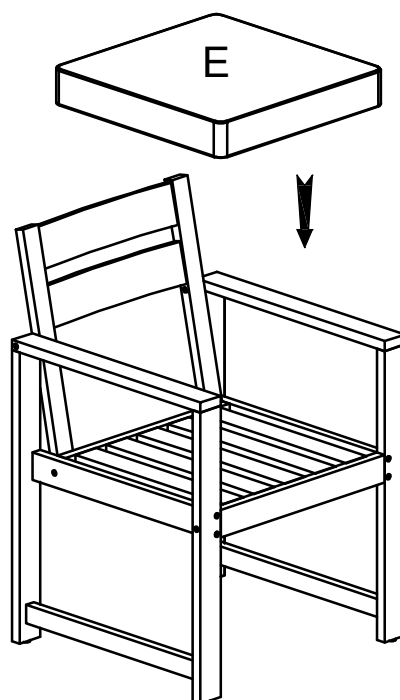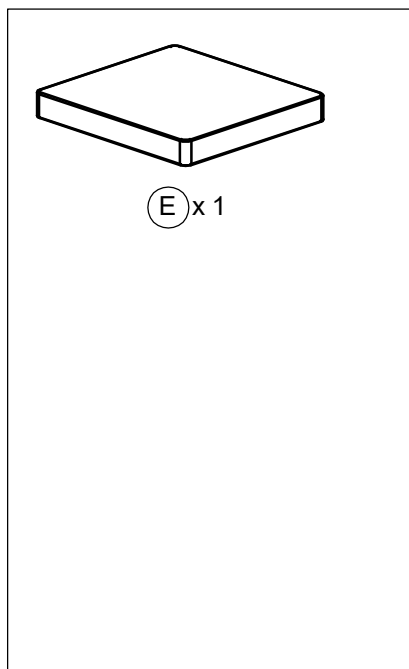


## STEP 6

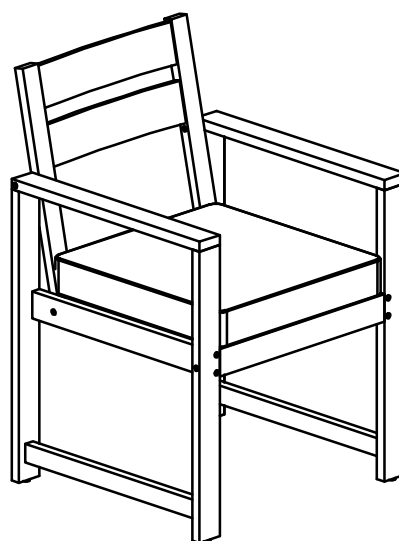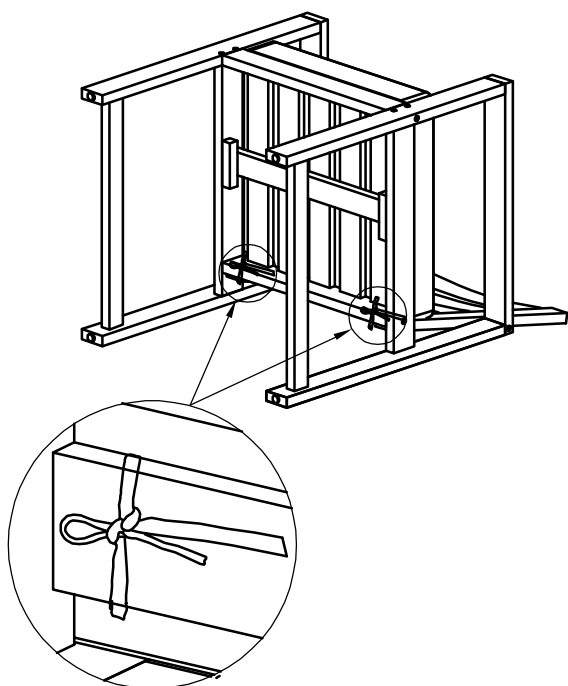

# ASSEMBLY INSTRUCTION






## DINING CHAIR

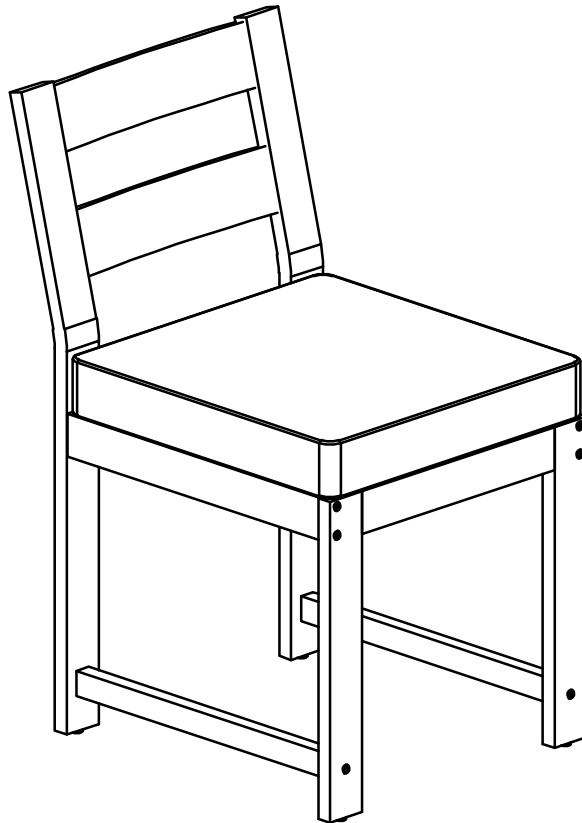

N715P251910

**Please read all instructions carefully:**

1. Have 2 adults on hand for assembly.
2. 50% Tighten before fixing all screws, Allen wrench is recommended instead of an electric drill.
3. Place the item on a flat ground to adjust and make sure it remains stable.
4. Tighten up all screws with tools gradually.
5. If the screws are not aligned with holes during assembly, please loosen all the other screws to 50% and continue the assembly process.
6. If the item is not stable, please loosen all the screws, adjust it on a flat ground and tighten up all screws again.
7. Note : If one or some screws are fully tightened during assembly, chances are the others will not be aligned with holes. In addition, all the holes are designed to be relatively larger to provide more space for the adjustment of the screws.

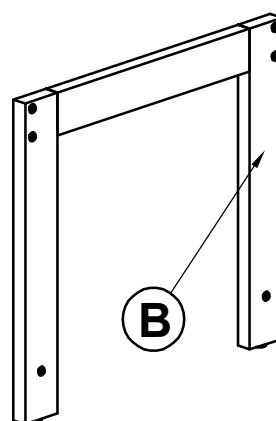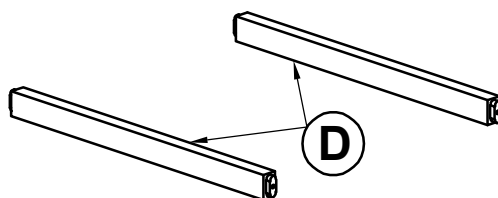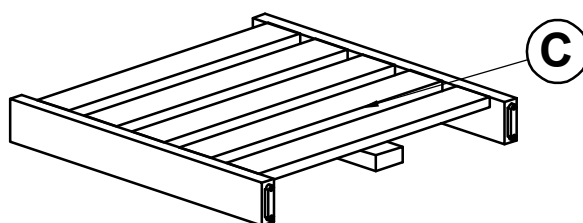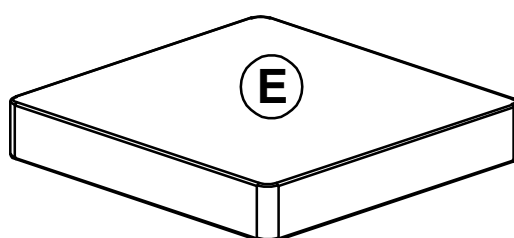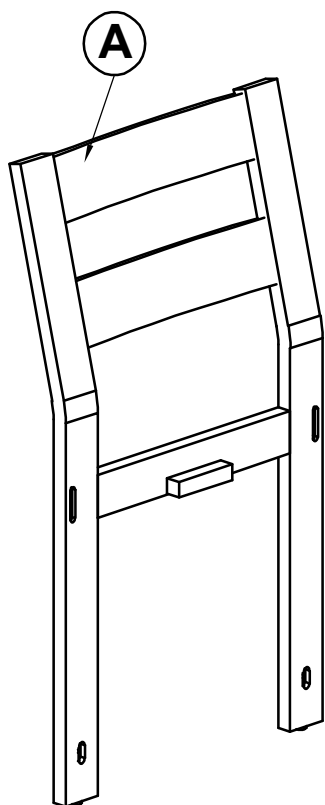


Part List :

A




Long legs Panel (1pc)

B

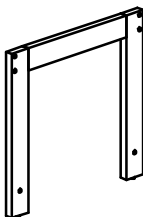


Short legs Panel (1pc)

C




Seat Panel (1 pc)

D



Support Bar (2pcs)


E

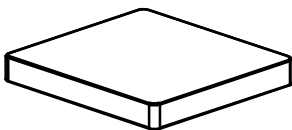

Seat Cushion (1 pc)

## Hardware list:

1





Allen Wrench (1 pc)

2





Screw Bolt M6x60(12pcs)  
+ Extra 1pc



## STEP 1

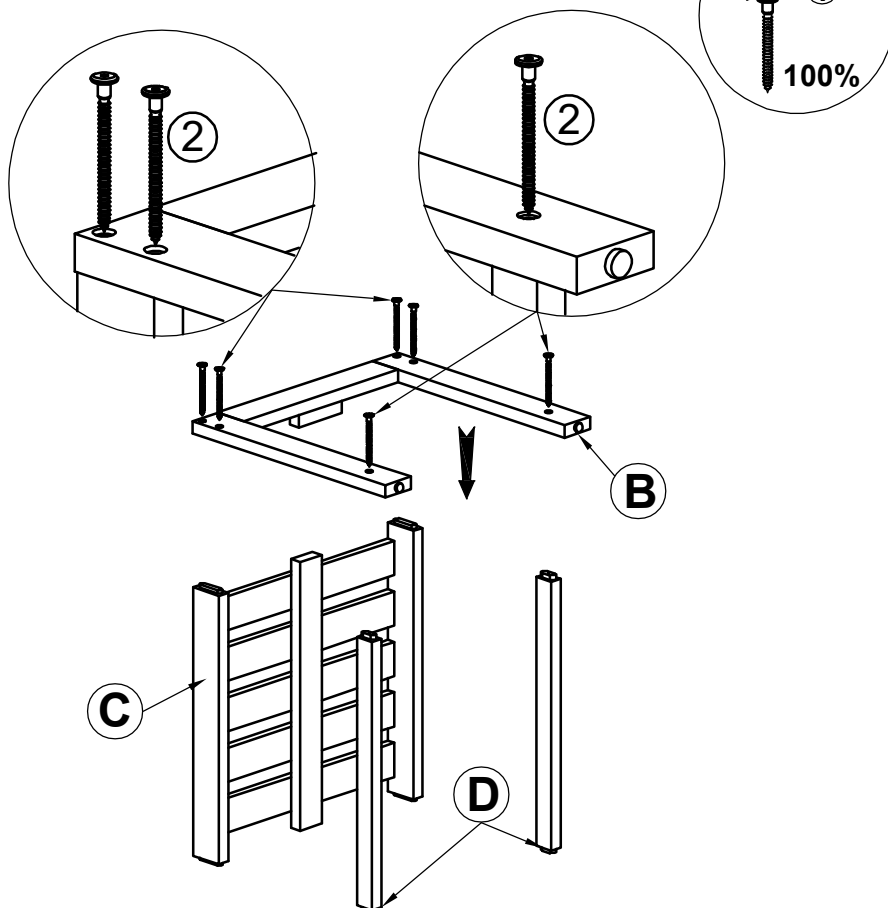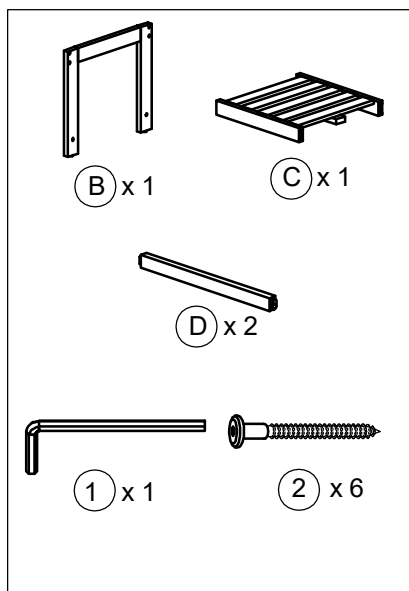


## STEP 2

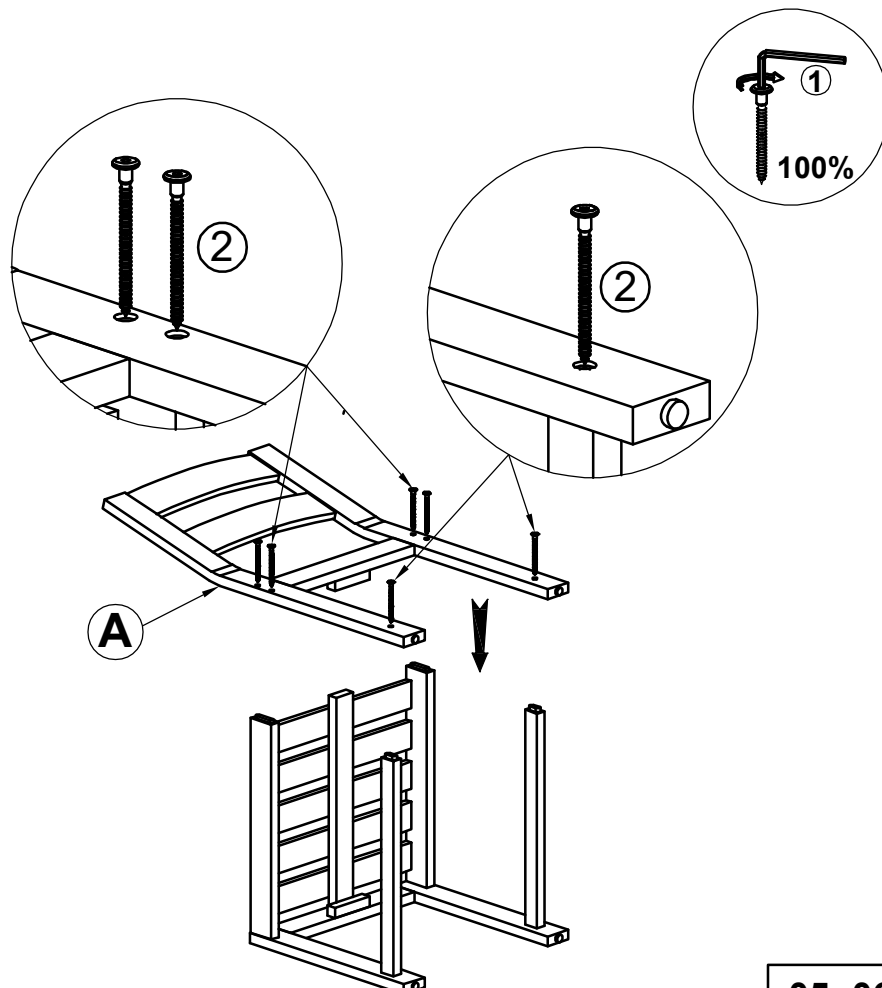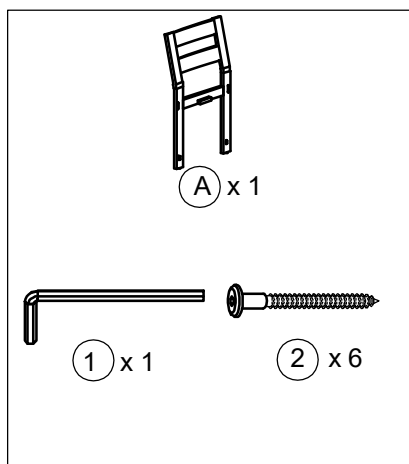

## STEP 3

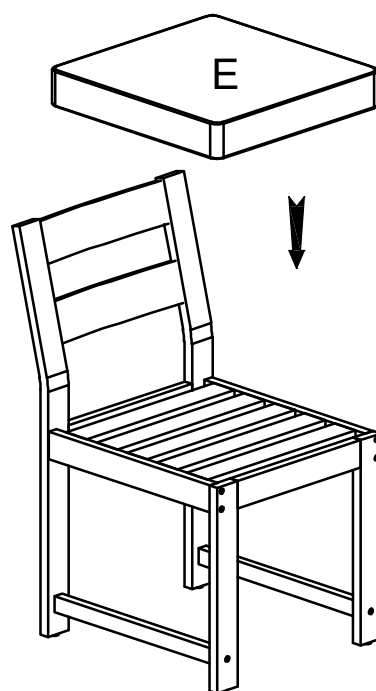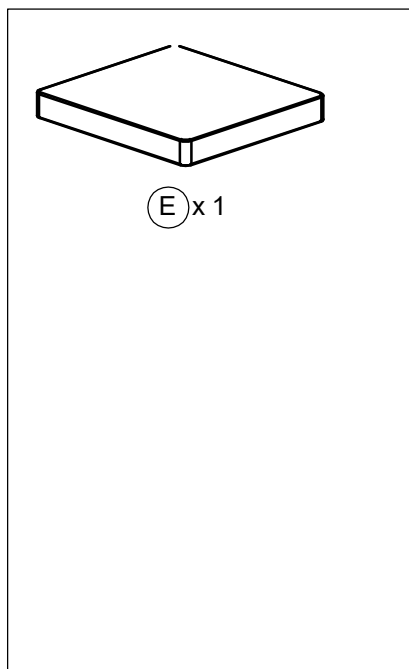


## STEP 4

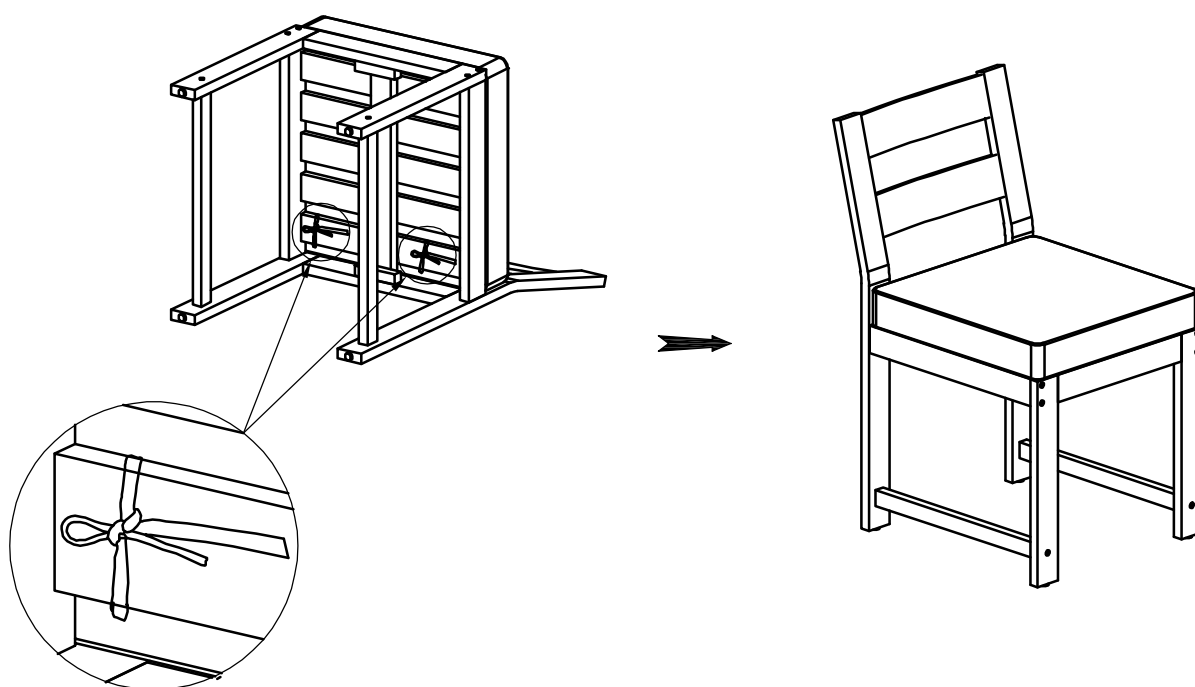

# ASSEMBLY INSTRUCTION


## DINING TABLE

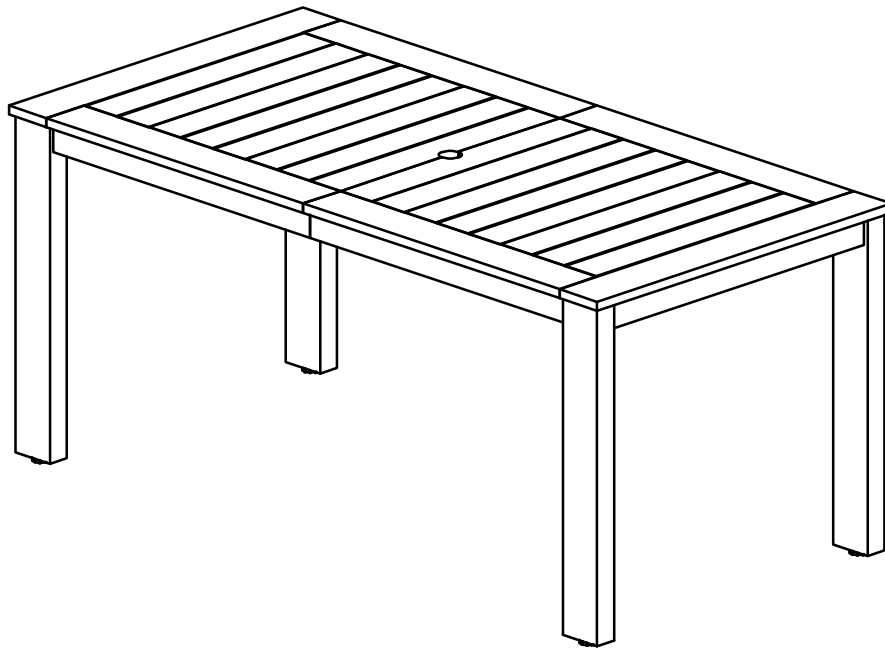




N715P251911

Please read all instructions carefully:




1. Have 2 adults on hand for assembly.
2. 50% Tighten before fixing all screws, Allen wrench is recommended instead of an electric drill.
3. Place the item on a flat ground to adjust and make sure it remains stable.
4. Tighten up all screws with tools gradually.
5. If the screws are not aligned with holes during assembly, please loosen all the other screws to 50% and continue the assembly process.
6. If the item is not stable, please loosen all the screws, adjust it on a flat ground and tighten up all screws again.
7. Note : If one or some screws are fully tightened during assembly, chances are the others will not be aligned with holes. In addition, all the holes are designed to be relatively larger to provide more space for the adjustment of the screws.

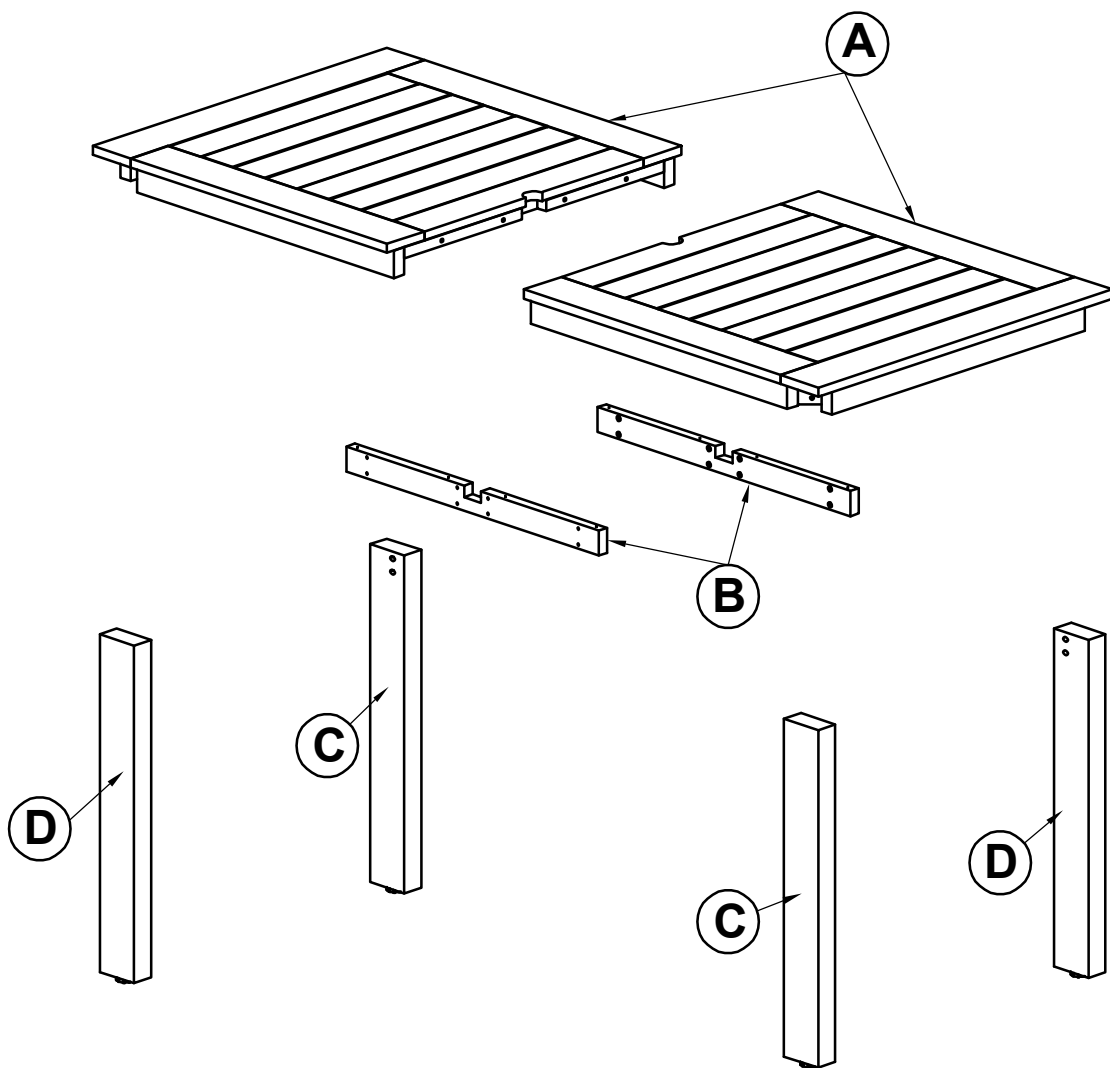



Part List :
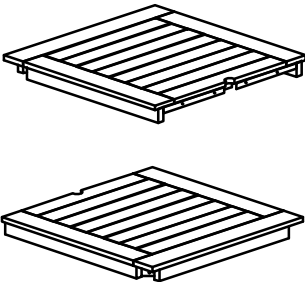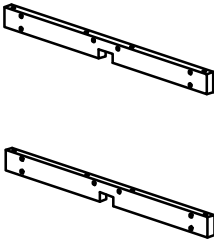
|                                                                                                                                                                                                                            |                                                                                                                                                                                                                                       |                                                                                                                                                                                                                                  |                                                                                                                                                                                                                                      |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <div data-bbox="113 212 186 280">A</div> <div data-bbox="161 304 467 584"></div> <div data-bbox="169 636 389 672">Table Top (2 pcs)</div> | <div data-bbox="515 212 590 280">B</div> <div data-bbox="587 336 802 573"></div> <div data-bbox="536 636 896 672">Table top connection (2 pcs)</div> | <div data-bbox="917 212 992 280">C</div> <div data-bbox="1002 356 1096 506"></div> <div data-bbox="968 636 1189 672">First Legs (2 pcs)</div> | <div data-bbox="1198 212 1273 280">D</div> <div data-bbox="1270 356 1380 506"></div> <div data-bbox="1214 636 1473 672">Second Legs (2 pcs)</div> |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|




## Hardware list:

|   |                                                                                     |    |                                                                                    |   |                                                                                    |   |                                                                                     |
|---|-------------------------------------------------------------------------------------|----|------------------------------------------------------------------------------------|---|------------------------------------------------------------------------------------|---|-------------------------------------------------------------------------------------|
| 1 |    | 2  |   | 3 |  | 4 |  |
|   | Allen Wrench (1 pc)                                                                 |    | Spanner Wrench (1pc)                                                               |   | Bolt M6x40 (12pcs)<br>+ Extra 1 pc                                                 |   | Bolt M6x60 (4pcs)<br>+ Extra 1 pc                                                   |
| 5 |    | 6  |   | 7 |   | 8 |  |
|   | Bolt M8x65 (8pcs)<br>+ Extra 1 pc                                                   |    | Screw Bolt M6x70 (8 pcs)<br>+ Extra 1 pc                                           |   | Flat Washer M8 (8 pcs)<br>+ Extra 1 pc                                             |   | Flat Washer M6 (20 pcs)<br>+ Extra 1 pc                                             |
| 9 |  | 10 |  |   |                                                                                    |   |                                                                                     |
|   | Nut M6 (4pcs)<br>+ Extra 1 pc                                                       |    | Warp Washer M6 (8 pcs)<br>+ Extra 1 pc                                             |   |                                                                                    |   |                                                                                     |



## STEP 1

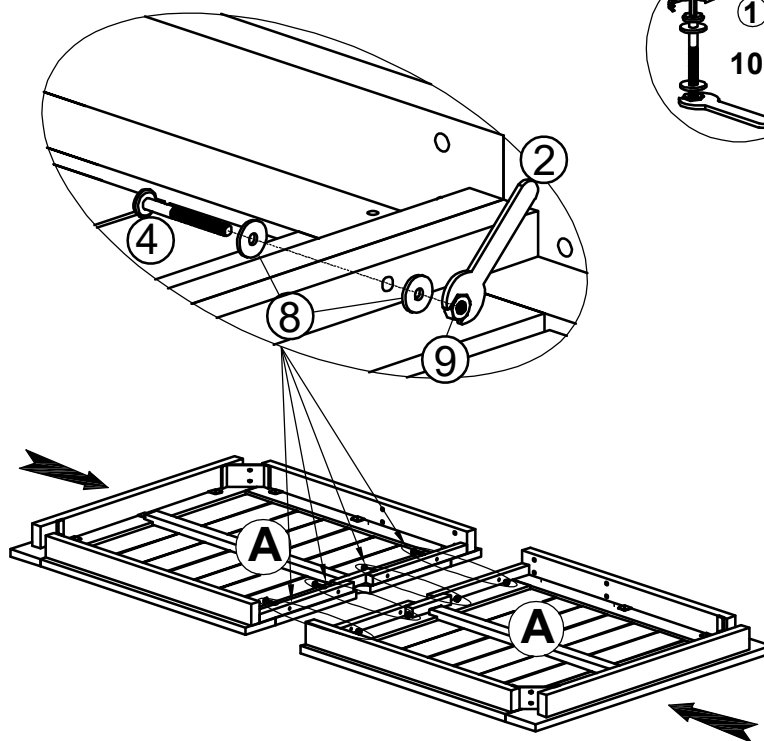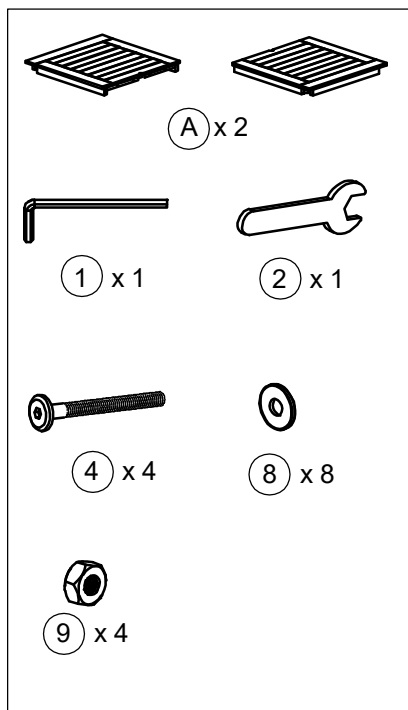



## STEP 2

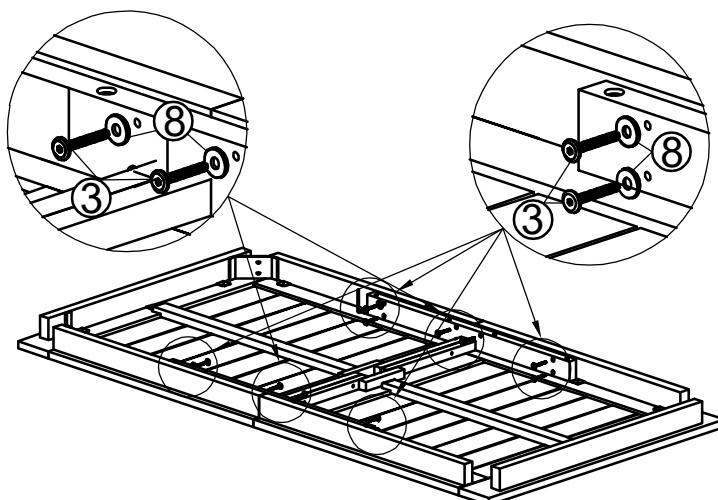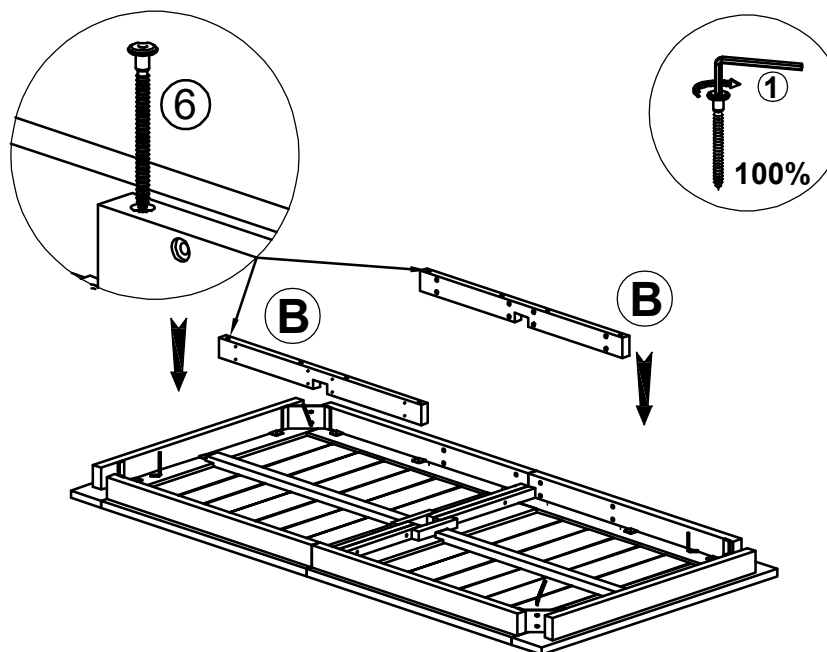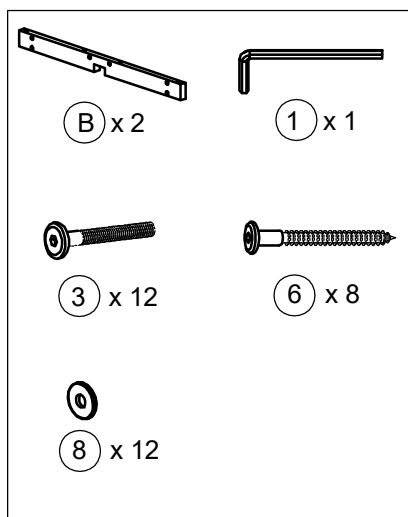


## STEP 3

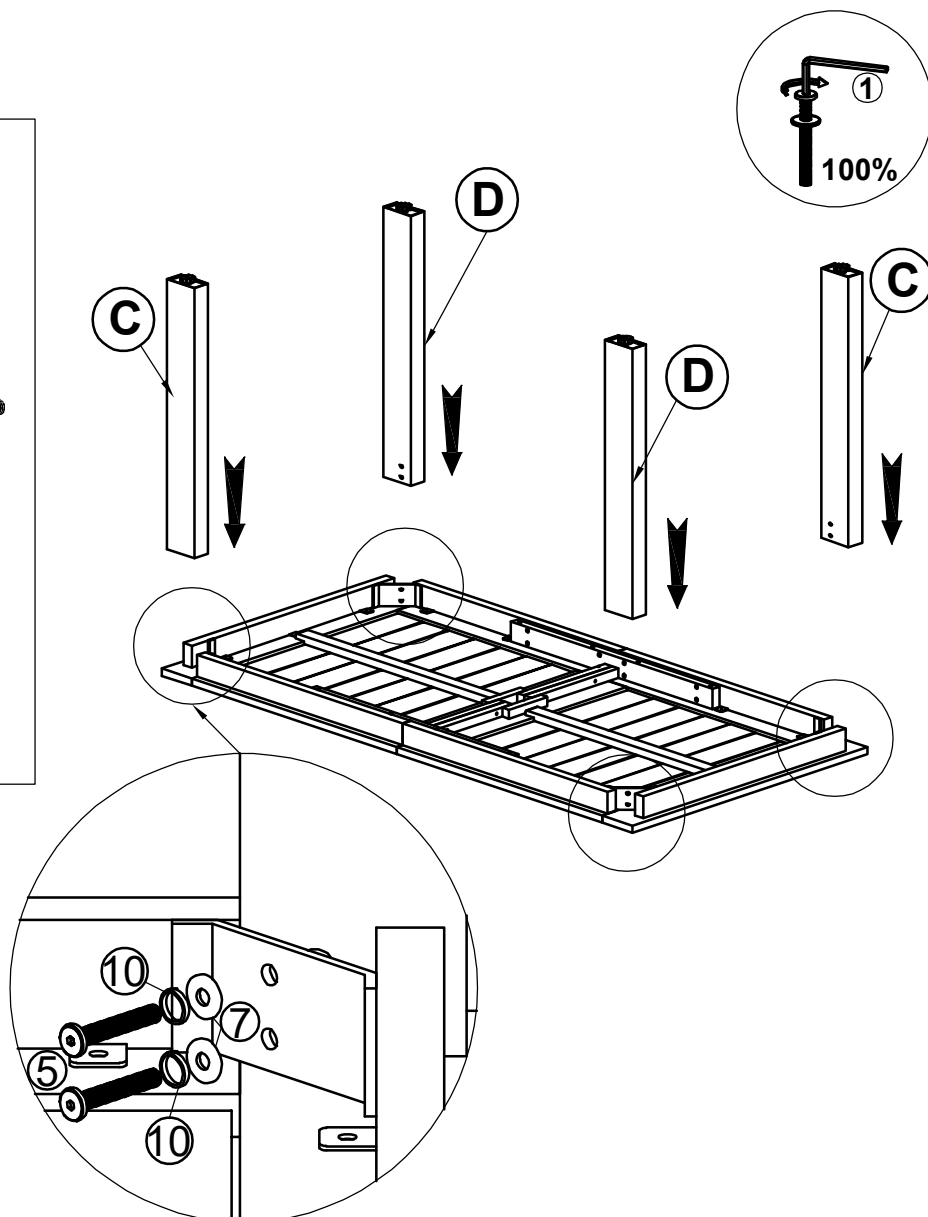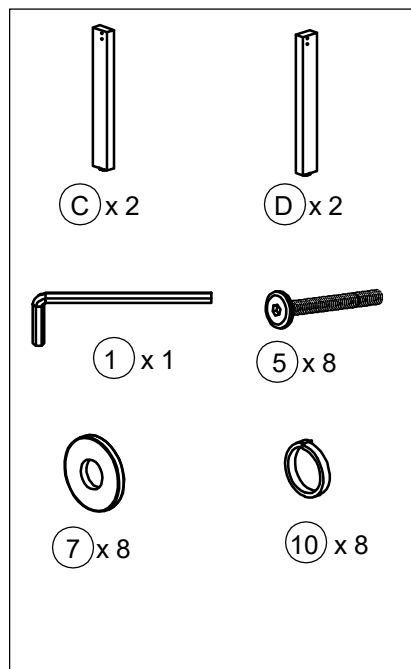

## STEP 4

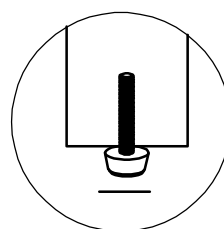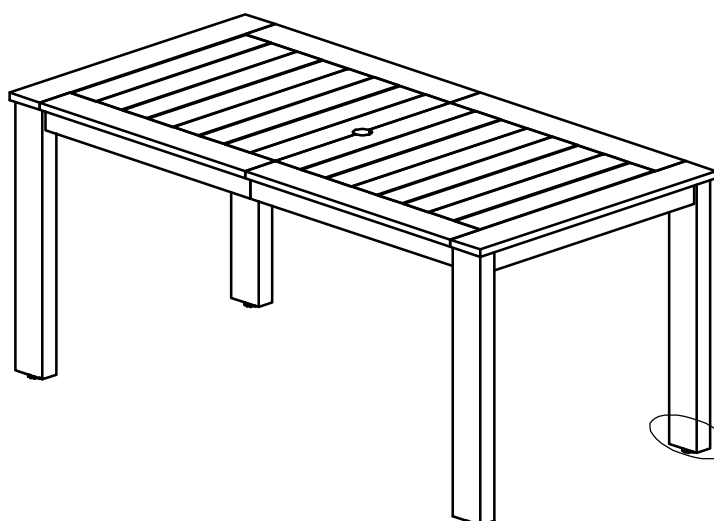

Adjust height for balance

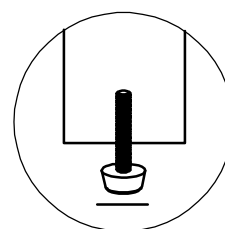

Adjust low for balance

Adjust Pre-installed