


1

BRAKET INSTALLATION

A) Position bracket 1.5" above the lower cross member of your Adjust-A-Gate™ and fasten to gate with provided self-tapping screws.



NOTE: Additional screws are for mounting latch (not included) that connects both gates

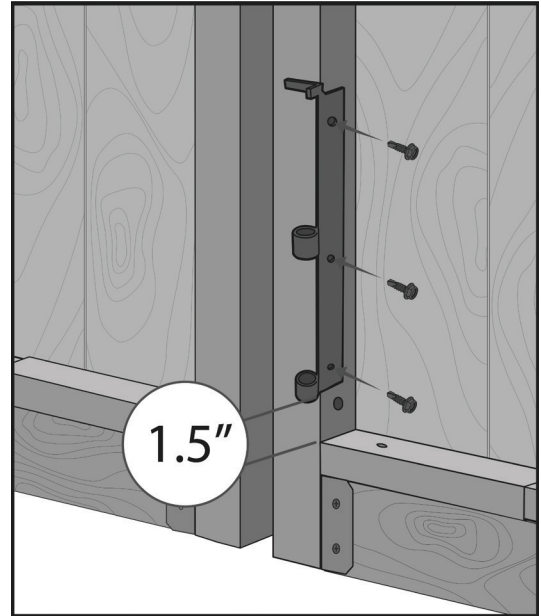


2

DROP ROD INSTALLATION

Insert drop rod from top, and feed down through the guides on bracket.

Create a 3/4" diameter hole in the ground to receive the cane bolt when it's in the closed or down position. If the hole is being made in loose material such as dirt, gravel, etc. You may need to use a piece of PVC/other piping to line the hole to keep it clear.

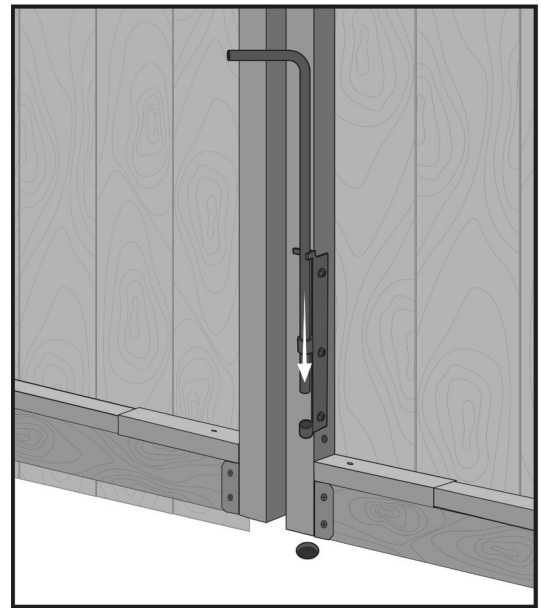

TOOLS REQUIRED



Phillips & Flat
Screwdriver



Power Drill with
5/16 Nut Driver



**JEWETT
CAMERON**
FENCE

(800) 955-2879 (503) 647-0110 info@jewettcameron.com jewettcameronfence.com