



FENCE SCREEN INSTALLATION STEPS


PLAN & MEASURE OUT

in front of the fence.

• Start by unfolding the screen and lay

Either side of the screen will work.


FENCE

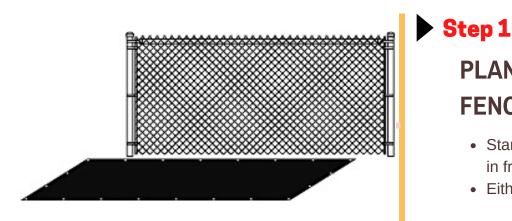


Step 2

USE UV ZIP TIES OR HOG RINGS

- Start from one top corner, either left or right
- Attach the fence top rail through the top corner grommet.

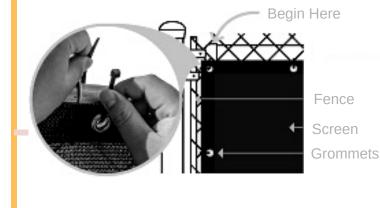

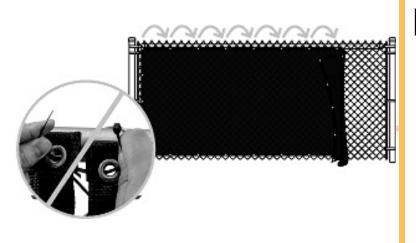


Step 3 **CONTINUE ACROSS**

- Complete securing each top grommet to the fence. Be sure to pull the material tightly across and evenly pulling to stretch the material for a wrinkle-free installation.
- If using multiple sections, do not connect the screens together yet, but only secure to the fence.



CONTINUE ON THE SIDES

- Attach the side grommets to the fence going in sequence. Be sure to stretch and pull for a wrinkle-free installation.
- Pull material tightly and secure bottom grommets to the fence.
- YOU ARE DONE!

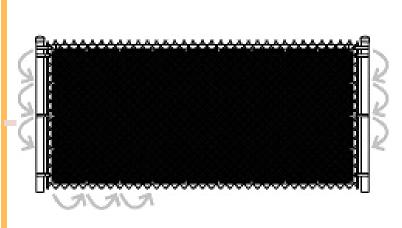

CONTACT US IF YOU HAVE ADDITIONAL QUESTIONS

(909) 360-8565 www.ncsna.com