


7. Parts Breakdown

FIGURE 7

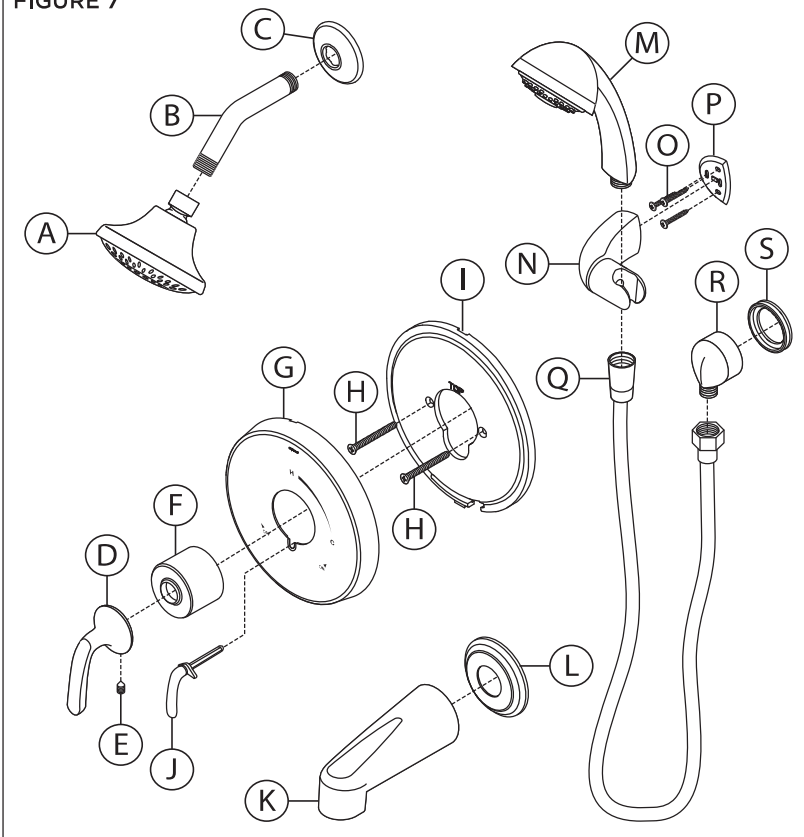

*Order in-line vacuum breaker (EF-109) for hand shower systems without dual checks.

Replacement Parts		
Item	Description	Part Number
A	Showerhead	552SH
B	Shower Arm Flange	300S
C	Shower Handle Set Screw	RTS-006
D	Dome Cover	T-19
E	Shower Escutcheon Screws	T-631A-NS-K002
F	Shower Escutcheon Mounting Plate	
G	Diverter/Volume Control Handle	
H	Tub Spout Escutcheon	552TS
I	Hand Shower	552W
J	Wall Cradle Screws	EF-106
K	Wall Cradle Mounting Plate	
L	60" Hose	
M	Wall Elbow Escutcheon	RO-004
N	60" Hose	RO-005
O	Wall Elbow Escutcheon	RO-004
P	Wall Elbow Escutcheon	RO-004
Q	60" Hose	RO-005
R	Wall Elbow Escutcheon	RO-004
S	Wall Elbow Escutcheon	RO-004

Notes:

- 1) Append appropriate suffix for premium finish.
- 2) Append appropriate flow rate to showerhead or hand shower for low flow.
- 3) Apply a bead of silicone around the perimeter of all shower trim installed flush to the finished wall. Leave opening on bottom of escutcheons for weep hole.
- 4) Apply plumber tape to all threaded connections.