


IMPORTANT INSTRUCTIONS AND OPERATING MANUAL

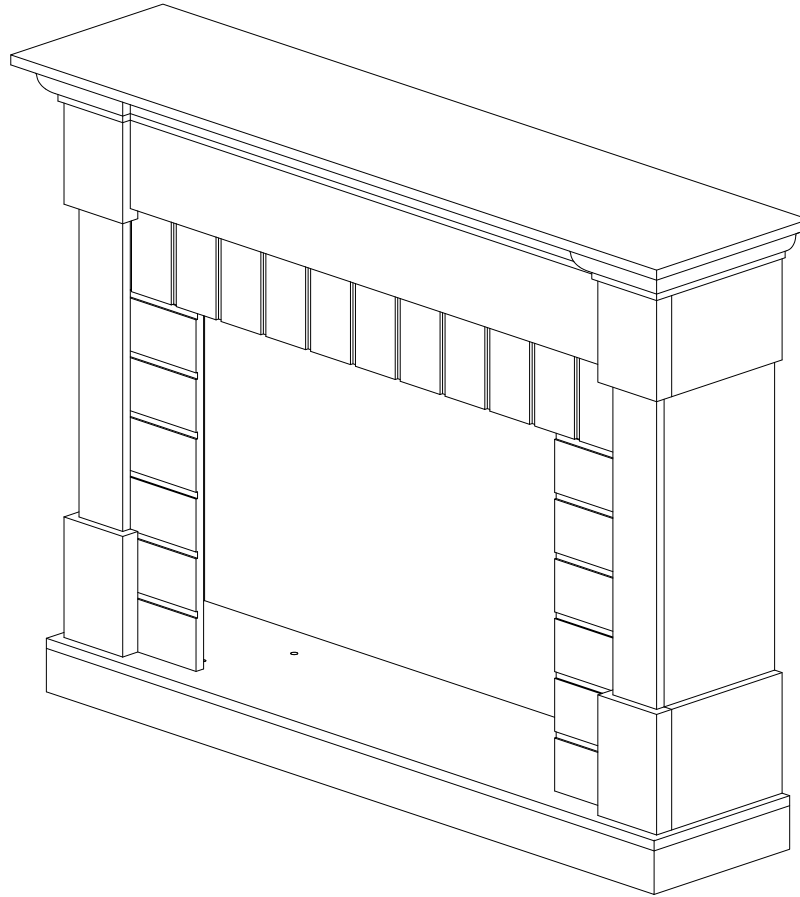


M0128 ELECTRIC FIREPLACE

THIS INSTRUCTION BOOKLET CONTAINS IMPORTANT SAFETY INFORMATION. PLEASE READ AND KEEP FOR FUTURE REFERENCE.

Do Not Return This Product!
Contact our customer service team for help first.
Call: 213-4467172 or 661-4358826
Monday - Sunday 8:30 am -5:30 pm P.S.T
ROWAN ELECTRIC APPLIANCE LLC
750S. Valley View Avenue, San Bernardino, CA 92408

WARNING

- Unit can tip over causing severe injury.
- Anchor unit to study on wall (if instructed to).
- Do Not allow children to climb on unit.
- Put heavy items on lower shelves or drawers.

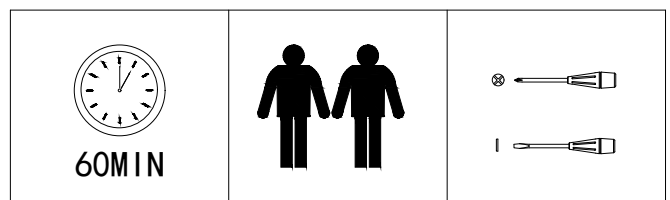

Contact Us !

DO NOT RETURN THIS PRODUCT!

Contact our friendly customer service team first for help.

Call: 213-4467172 or 661-4358826

(8:30 am - 5:30 pm P.S.T)

DATED PROOF OF PURCHASE REQUIRED FOR WARRANTY SERVICE.

[Helpful Hints]

**PEOPLE NEEDED FOR ASSEMBLY: 2
ESTIMATED ASSEMBLY TIME: 1 HOUR**

-Open your item in the area you plan to keep it to avoid excessive heavy lifting.



-Identify, sort and count the parts before attempting assembly.



-Make sure to always face the point on the top of the Cam Lock towards the outer edge.



-Use all the nails provided for the back panel and spread them out equally.



-Back panel must be used to make sure your unit is sturdy.




-Do NOT use harsh chemicals or abrasive cleaners on this item.


-Never push, pull, or drag your furniture.





PARTS LIST

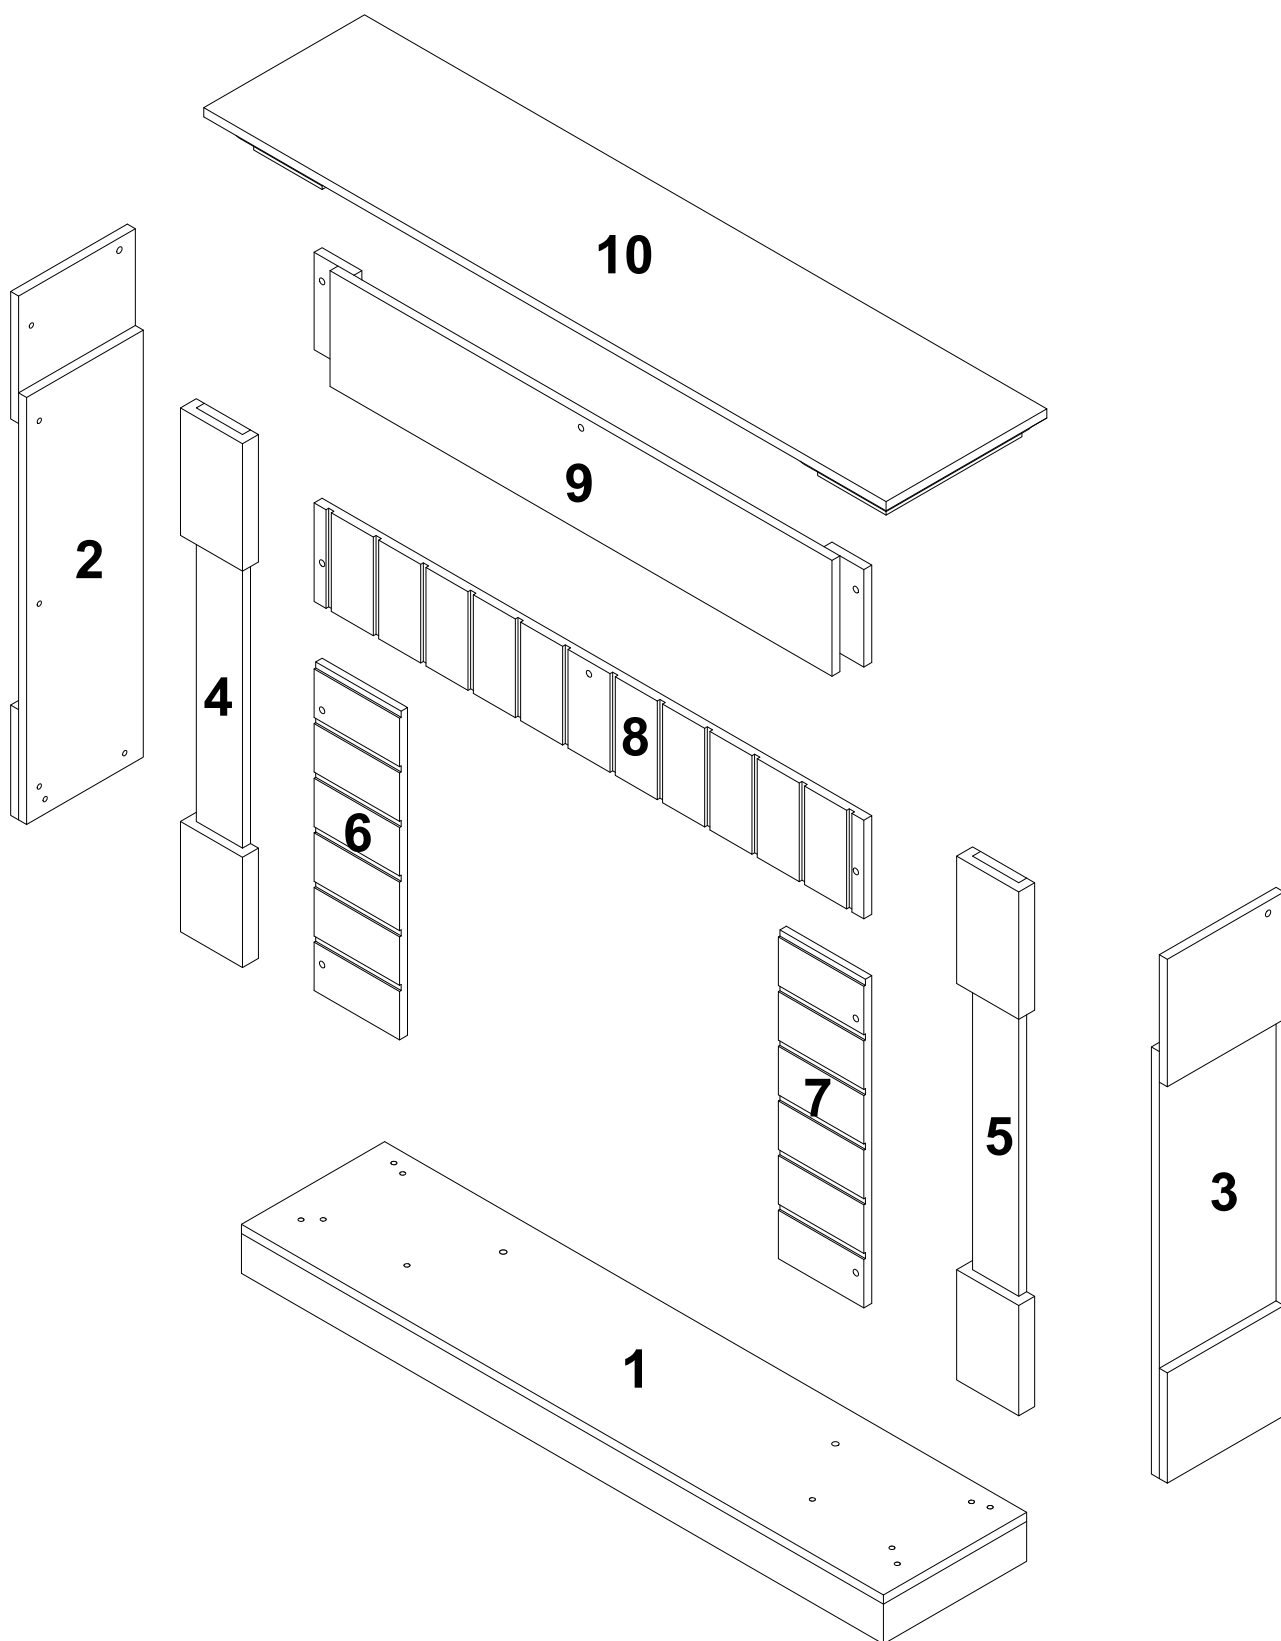




HARDWARE LIST

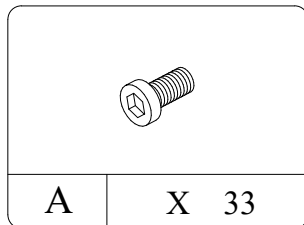





Ø6 x12mm

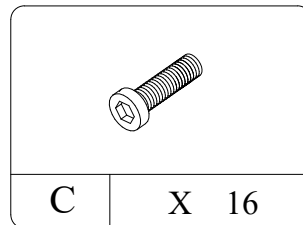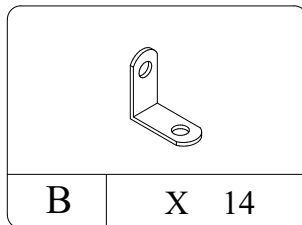

Ø6 x 28mm

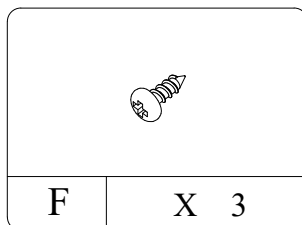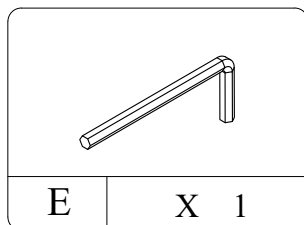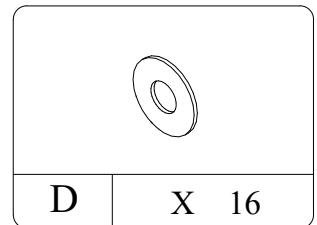


Ø4 x12mm

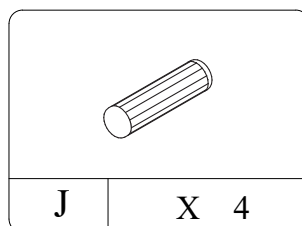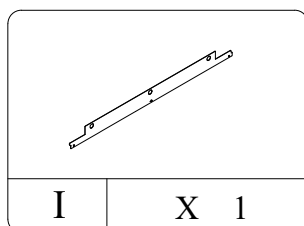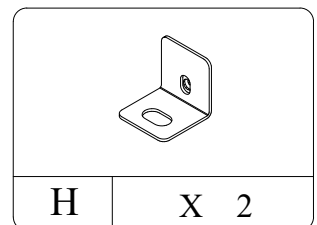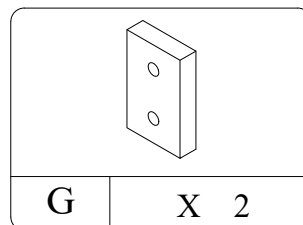

Ø8 x 30mm

DIMENSIONS

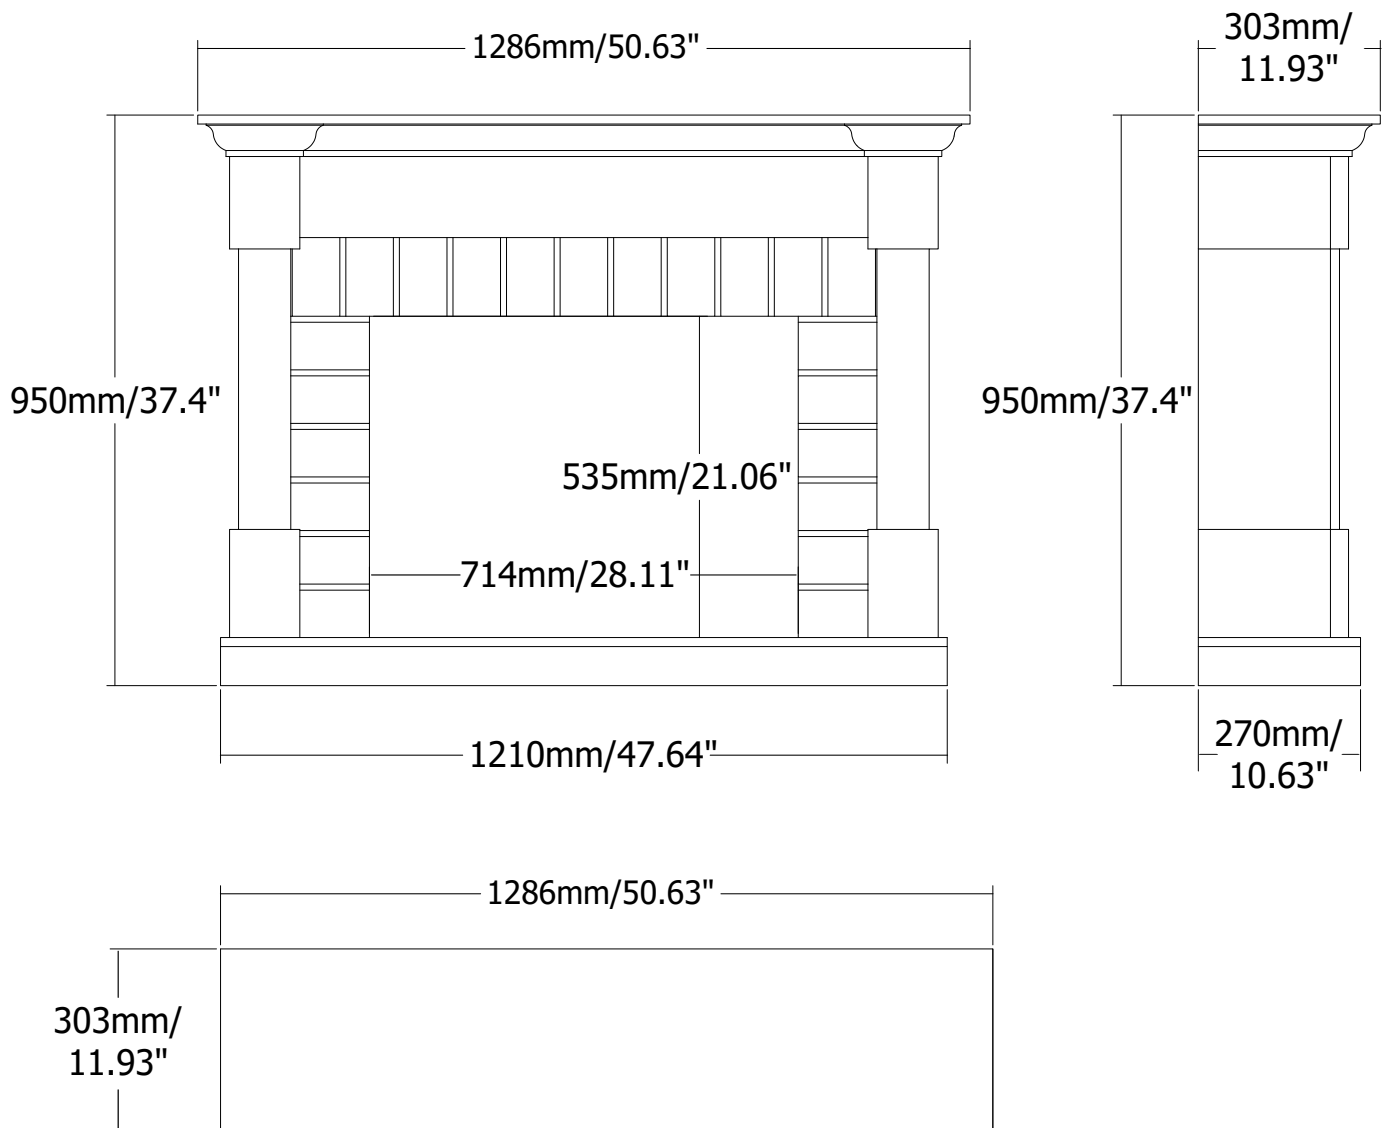


ASSEMBLY



Before installing this fireplace, please read the following steps carefully.

STEP 1:

Join panels (2)+(4), (3)+(5) by securing screws (A) via L-brackets (B) with the allen wrench (E) provided.

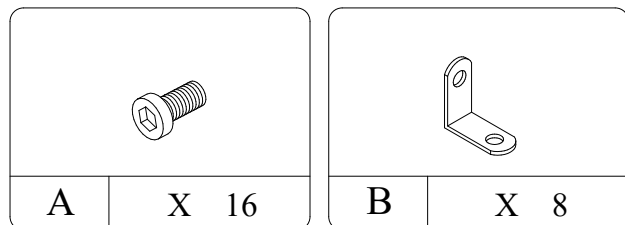


Ø6 x12mm

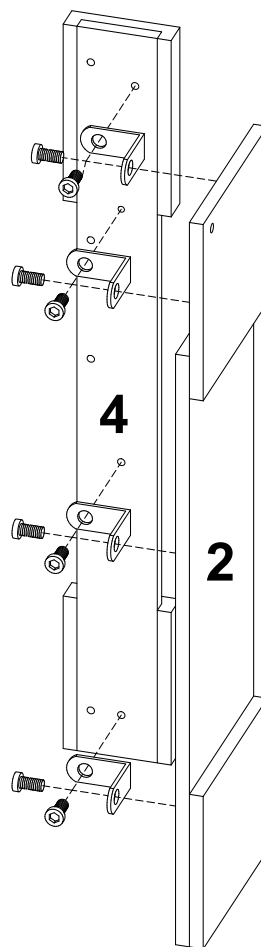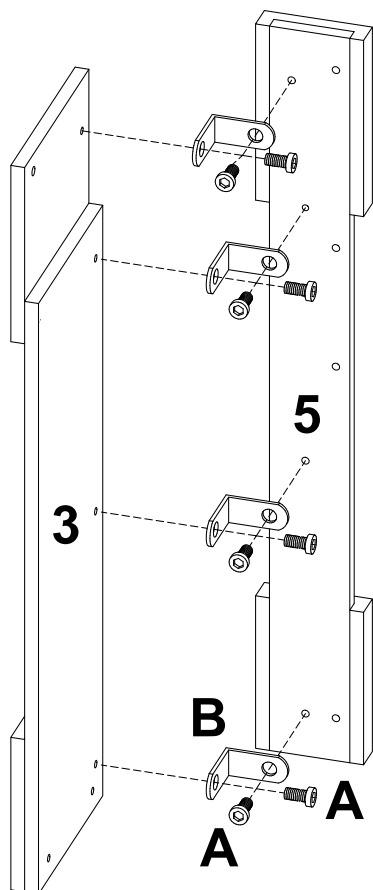


STEP 2:

Join the panel (1) by inserting dowels (J).

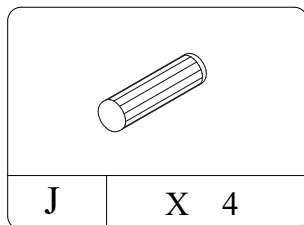


Ø8 x30mm

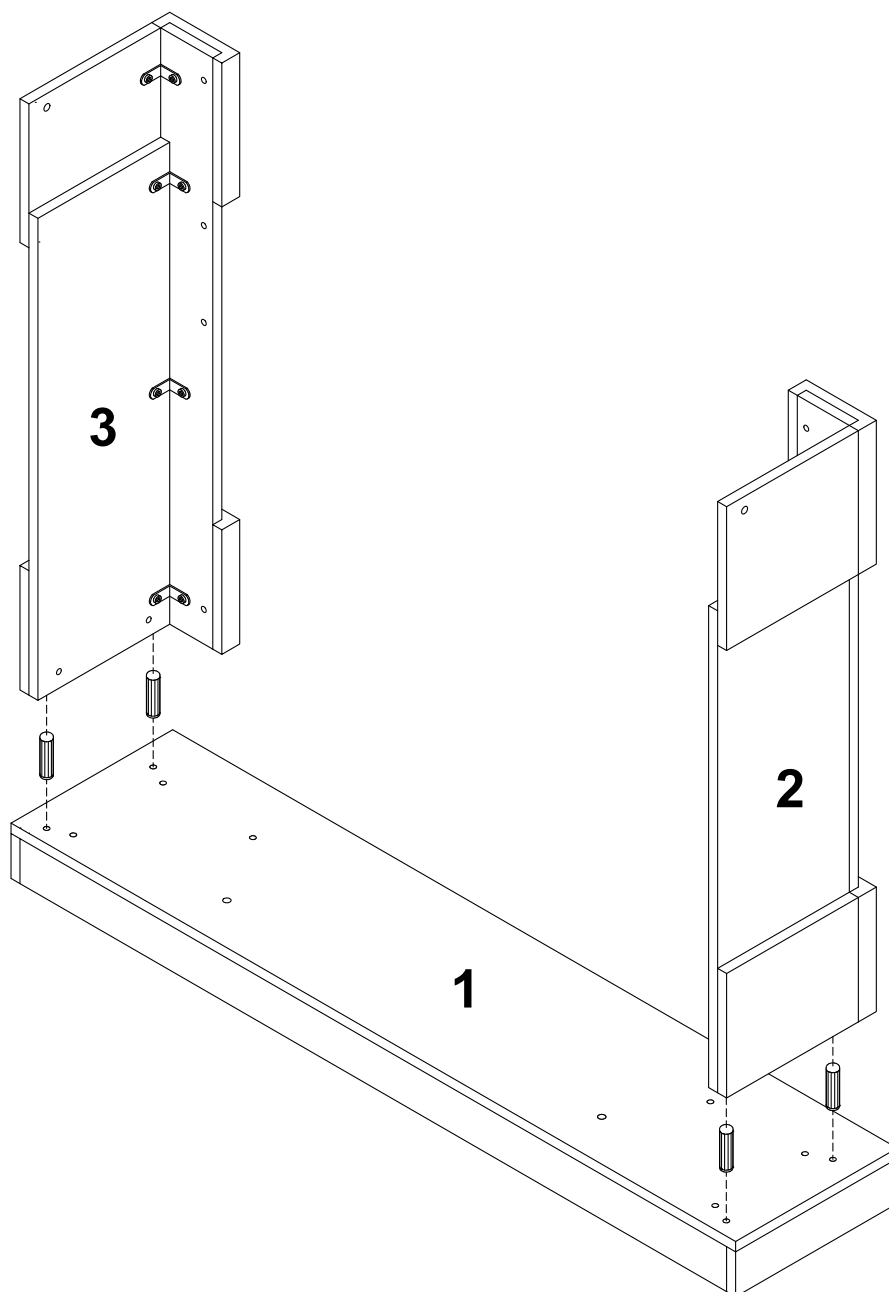


STEP 3:

Lock them by securing screws (A) via L-brackets (B) with the allen wrench (E) provided.

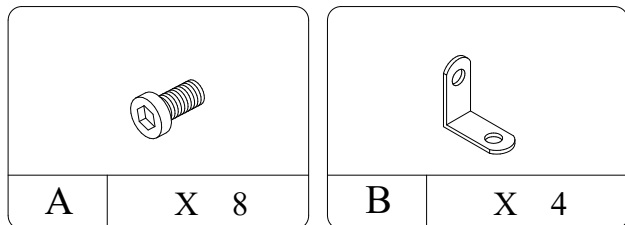


Ø6 x12mm

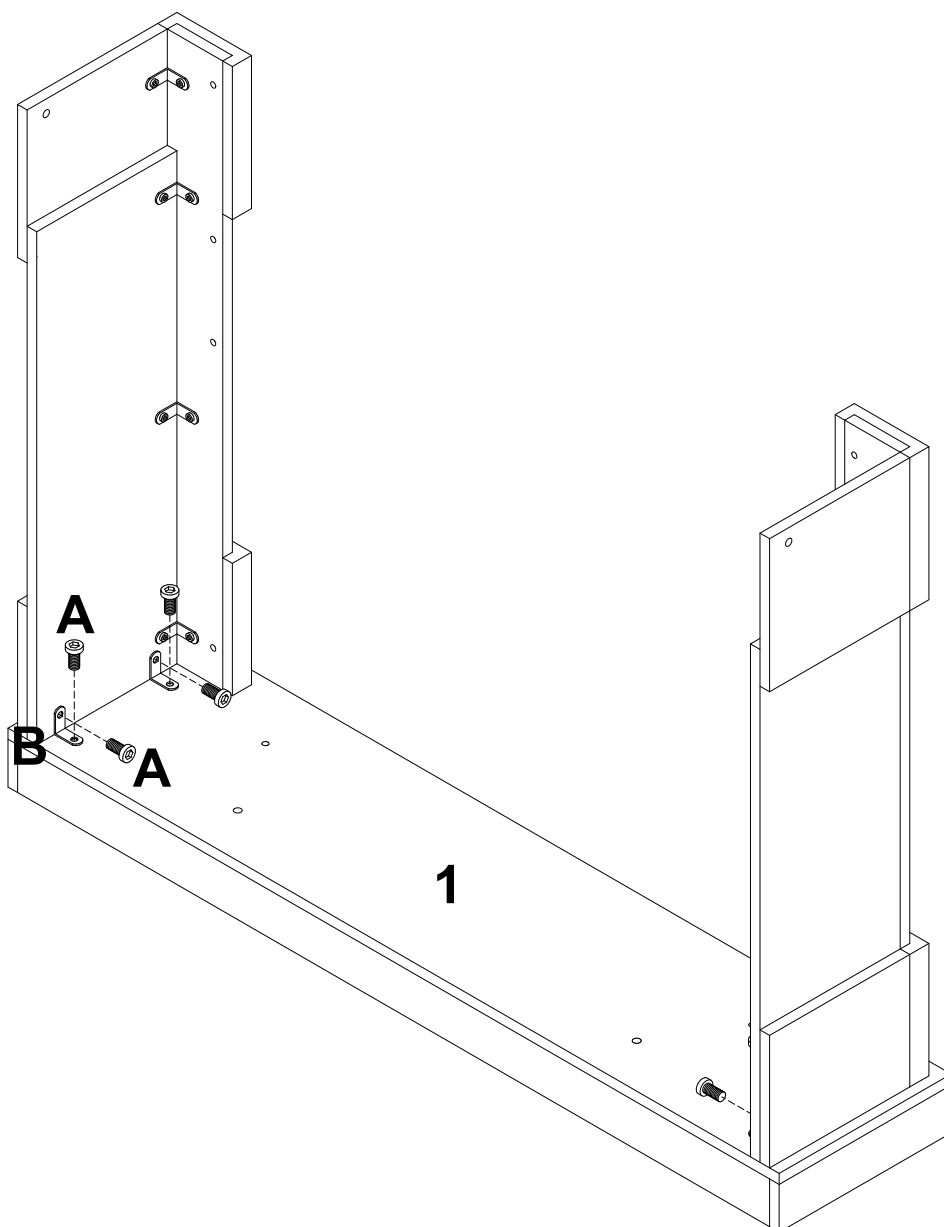


STEP 4:

Join panels (6)+(7) by securing screws (C) via washers(D) with the allen wrench (E) provided.

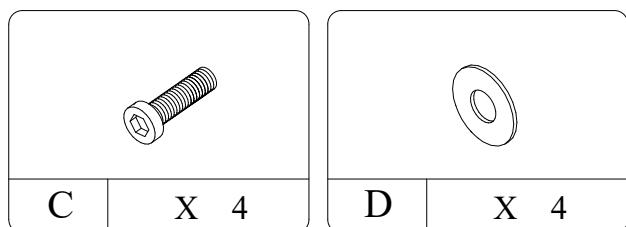


Ø6 x 28mm

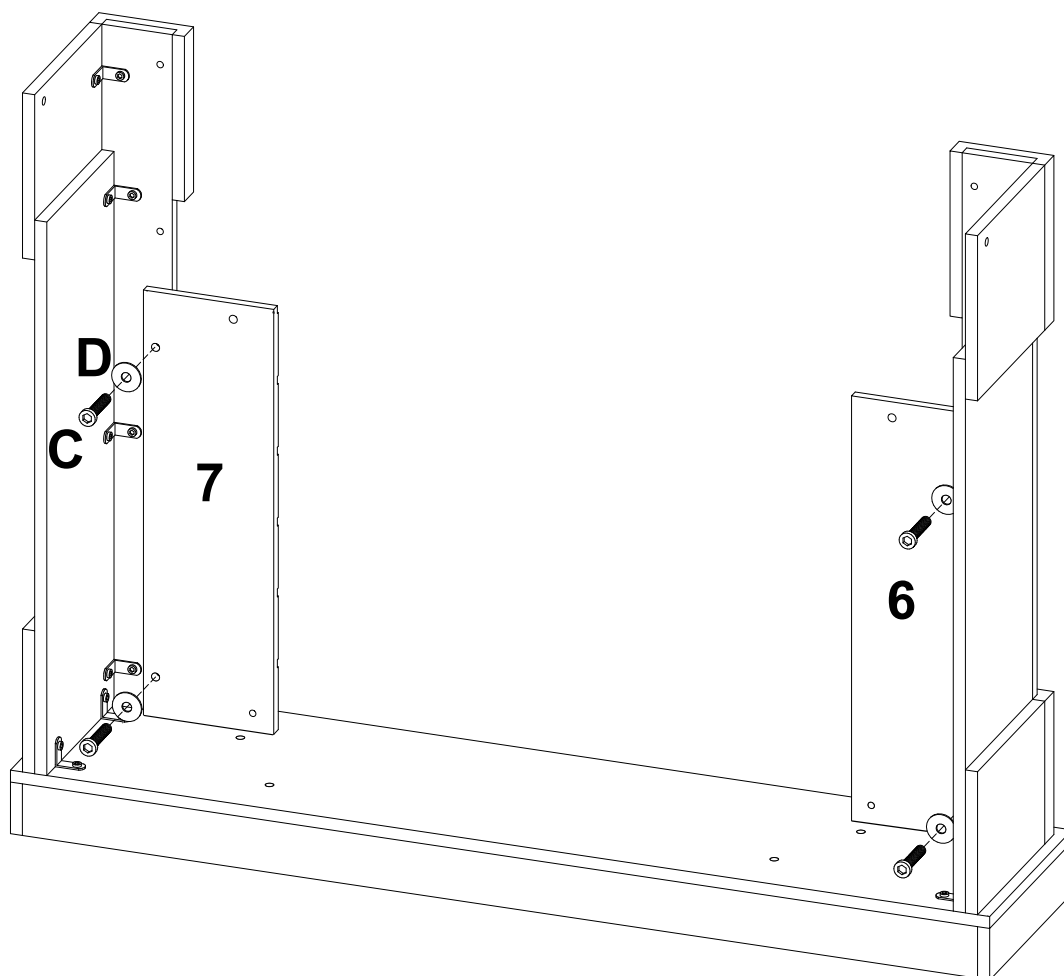


STEP 5:

Fix panels (6)+(7) to the base panel by securing screws (A) via L-brackets (B), with the allen wrench (E) provided.

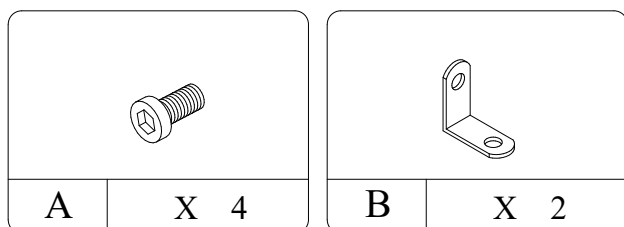


Ø6 x 12mm

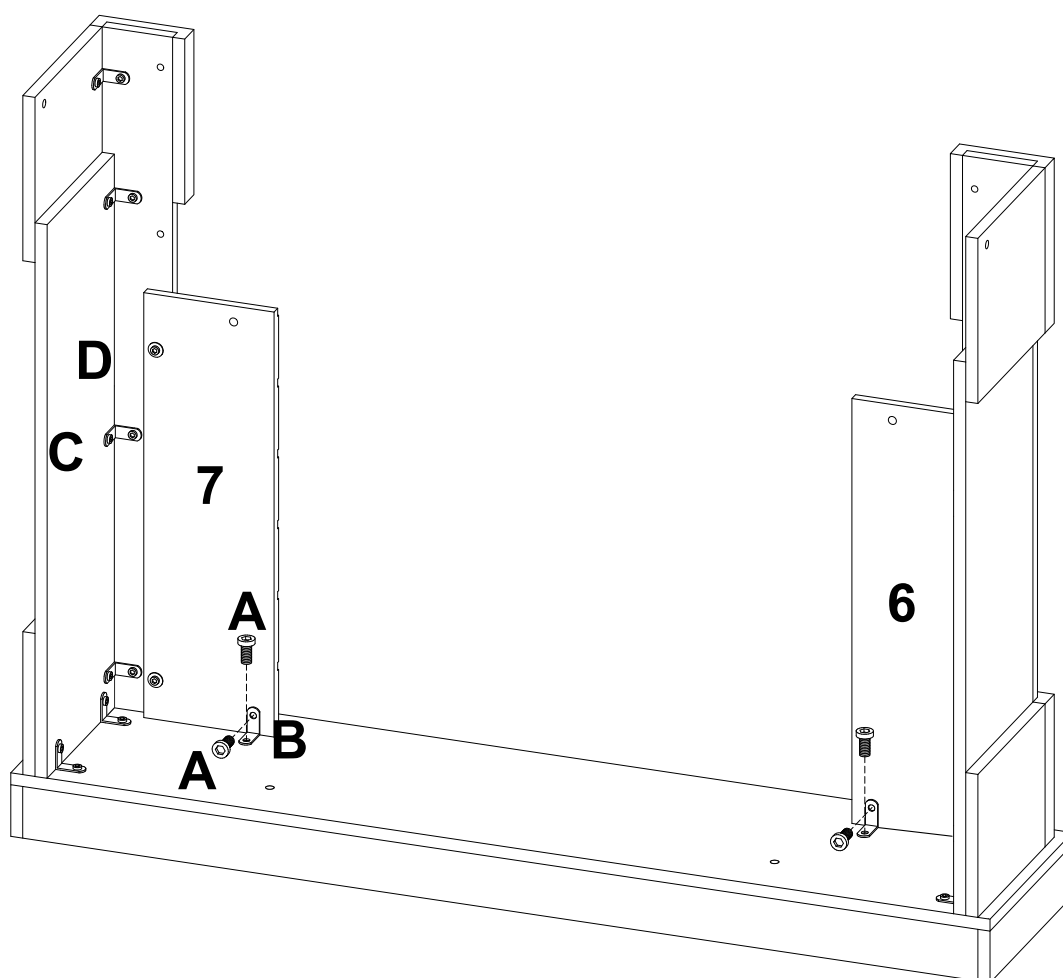


STEP 6:

Join the panel (8) by securing screws (C) via washers(D) with the allen wrench (E) provided.

Fix the panel (8) to left and right surrounds by securing screws (C) via washers(D) and MDF blocks(G) with the allen wrench (E) provided.

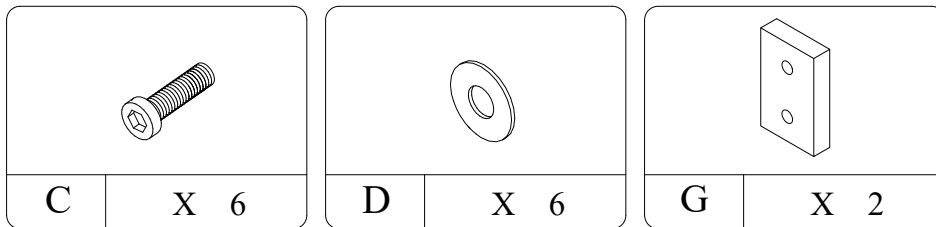


Ø6 x 28mm

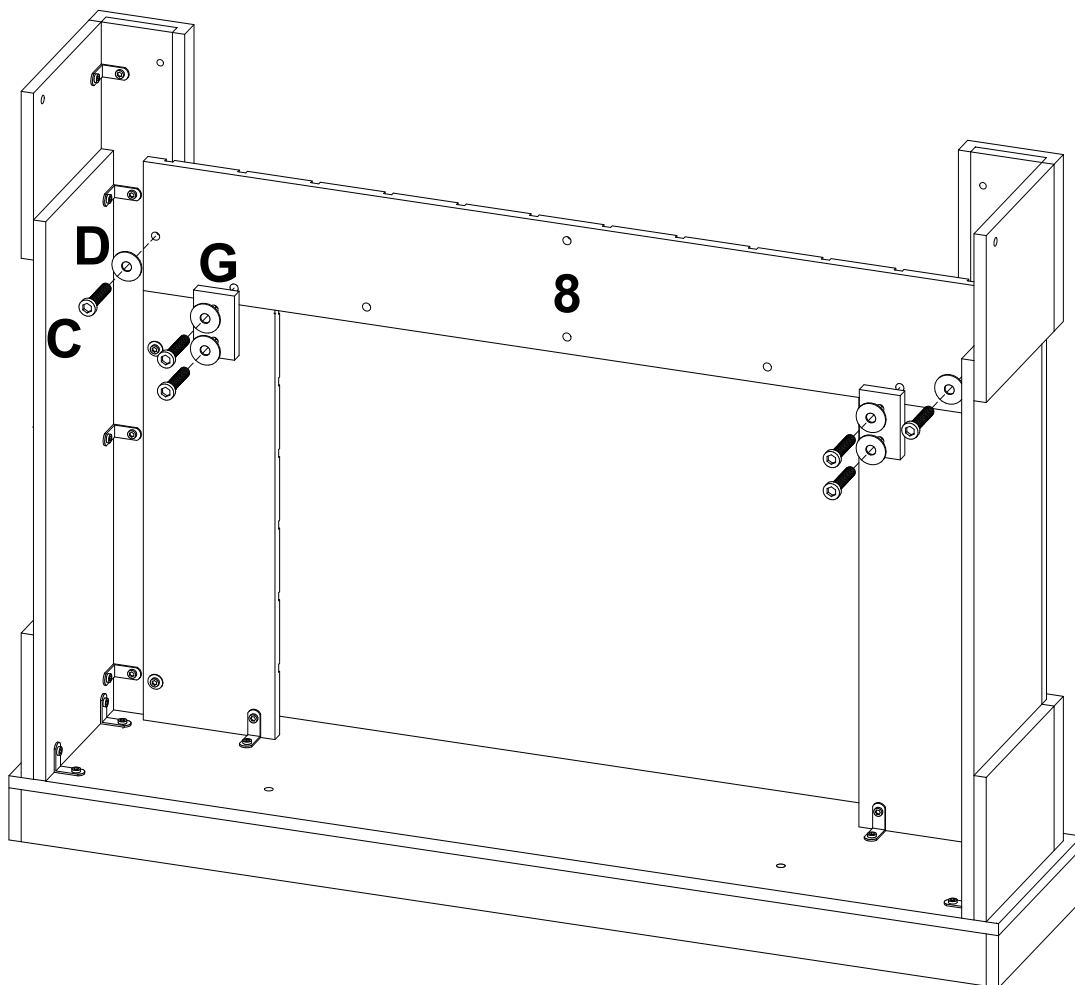


STEP 7:

Join the panel (9) by securing screws (C) via washers(D) with the allen wrench (E) provided.


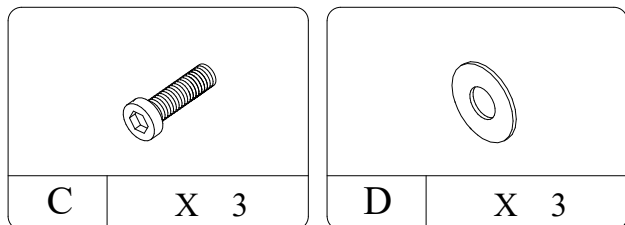


Ø6 x 28mm

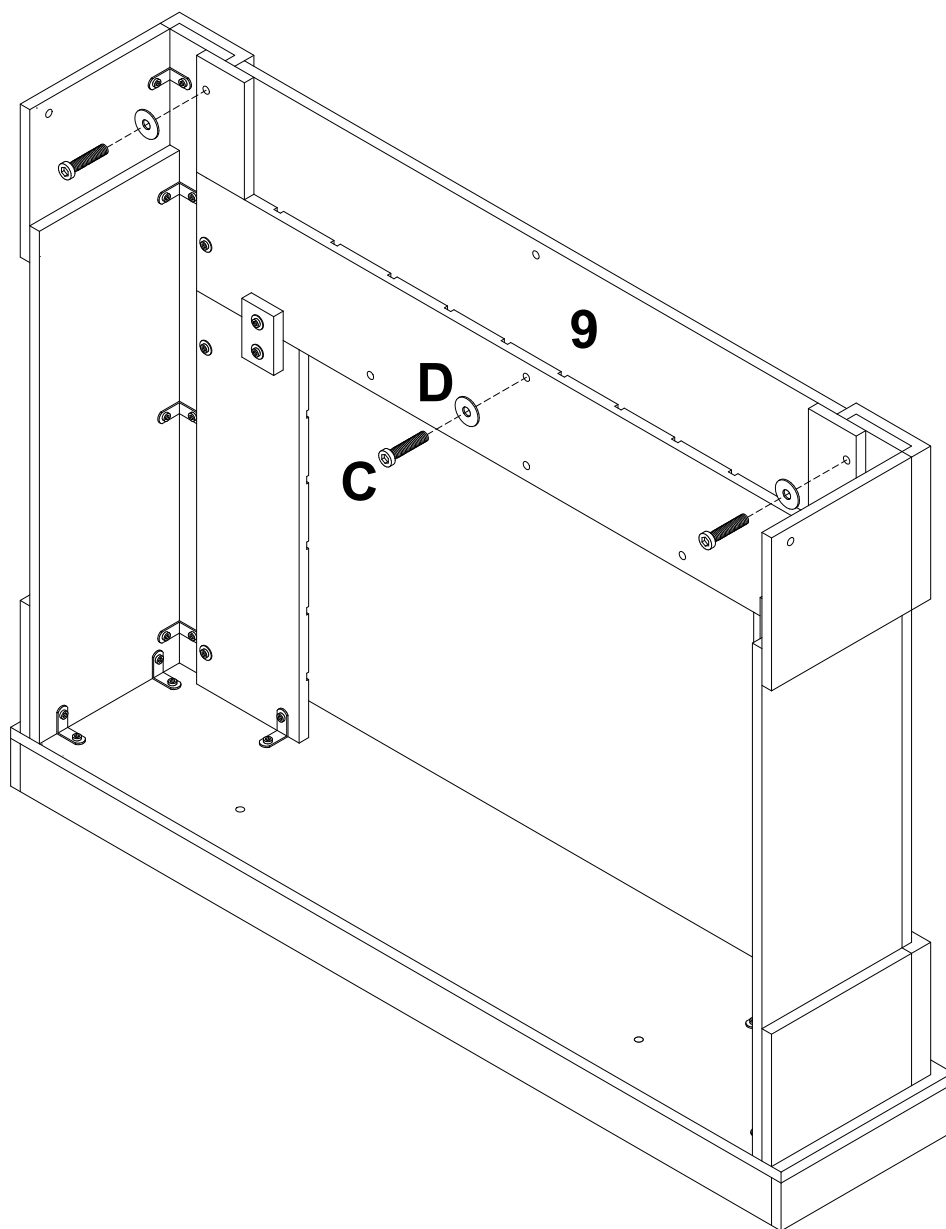


STEP 8:

Join the panel (10) by securing screws (C) via washers(D) with the allen wrench (E) provided.

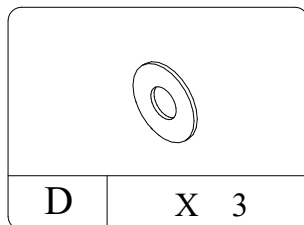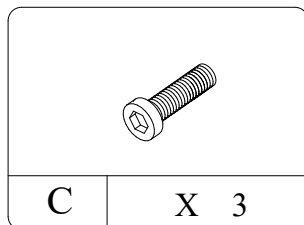


Ø6 x 28mm

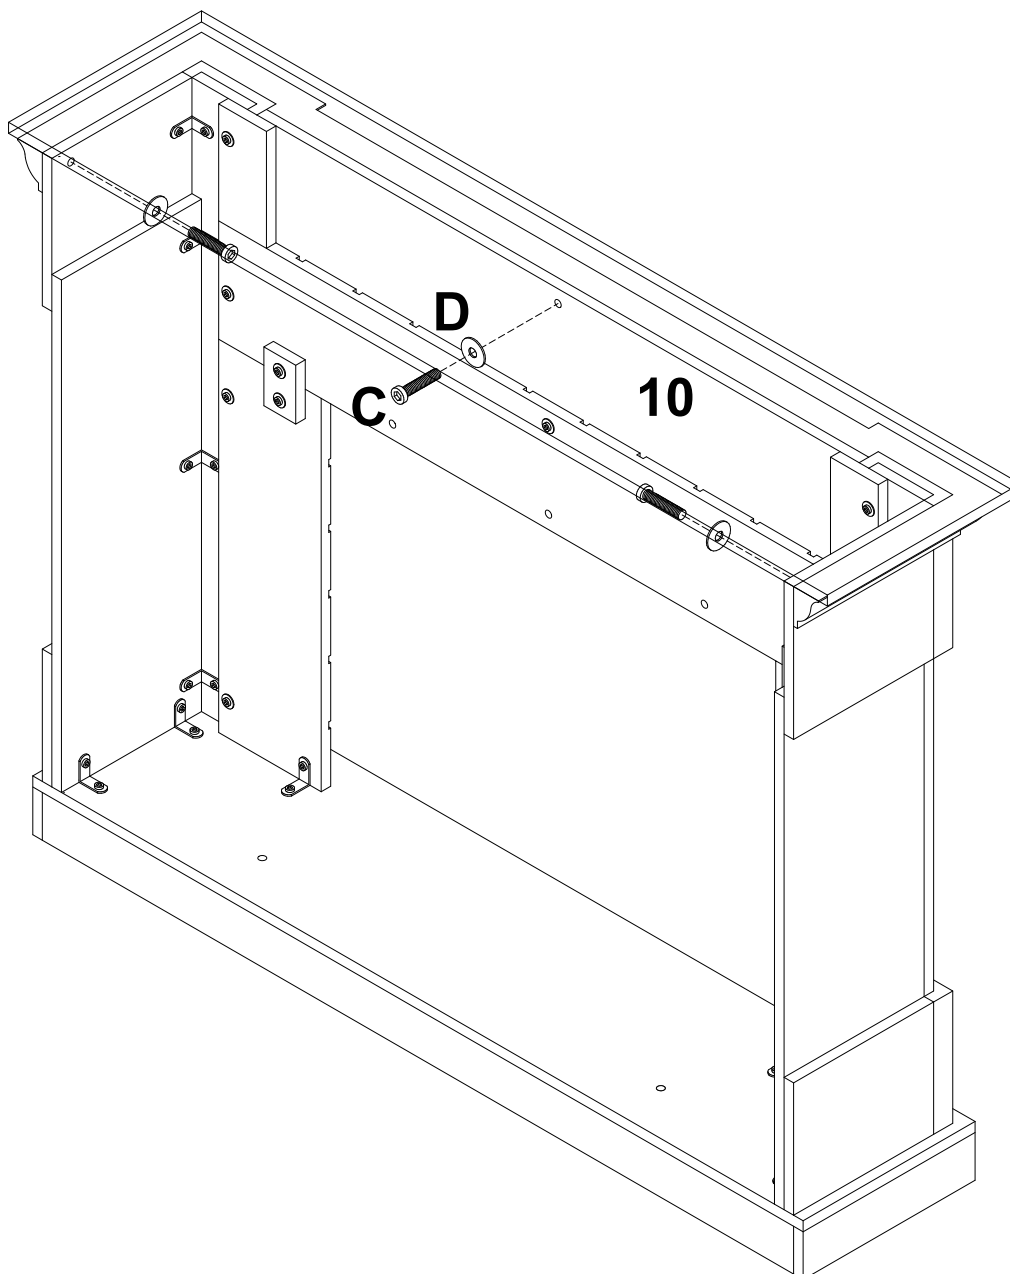


STEP 9:

Remove 2 qty screws (F) on the bottom-left and bottom-right of the firebox.

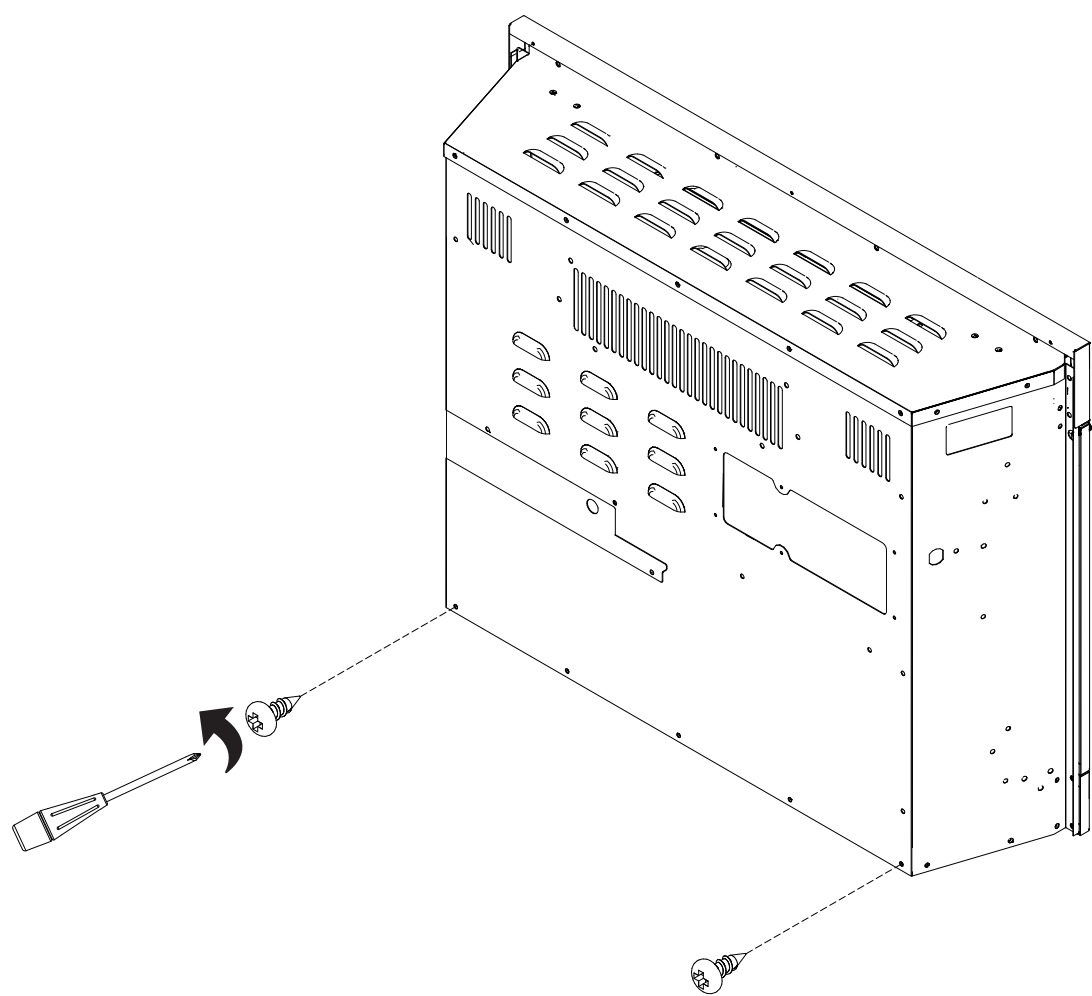


STEP 10:

Join the metal strip (I) and L-brackets (H) by securing screws (F) with the screw driver.

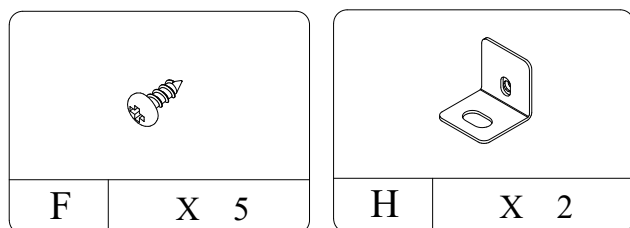


Ø4 x12mm

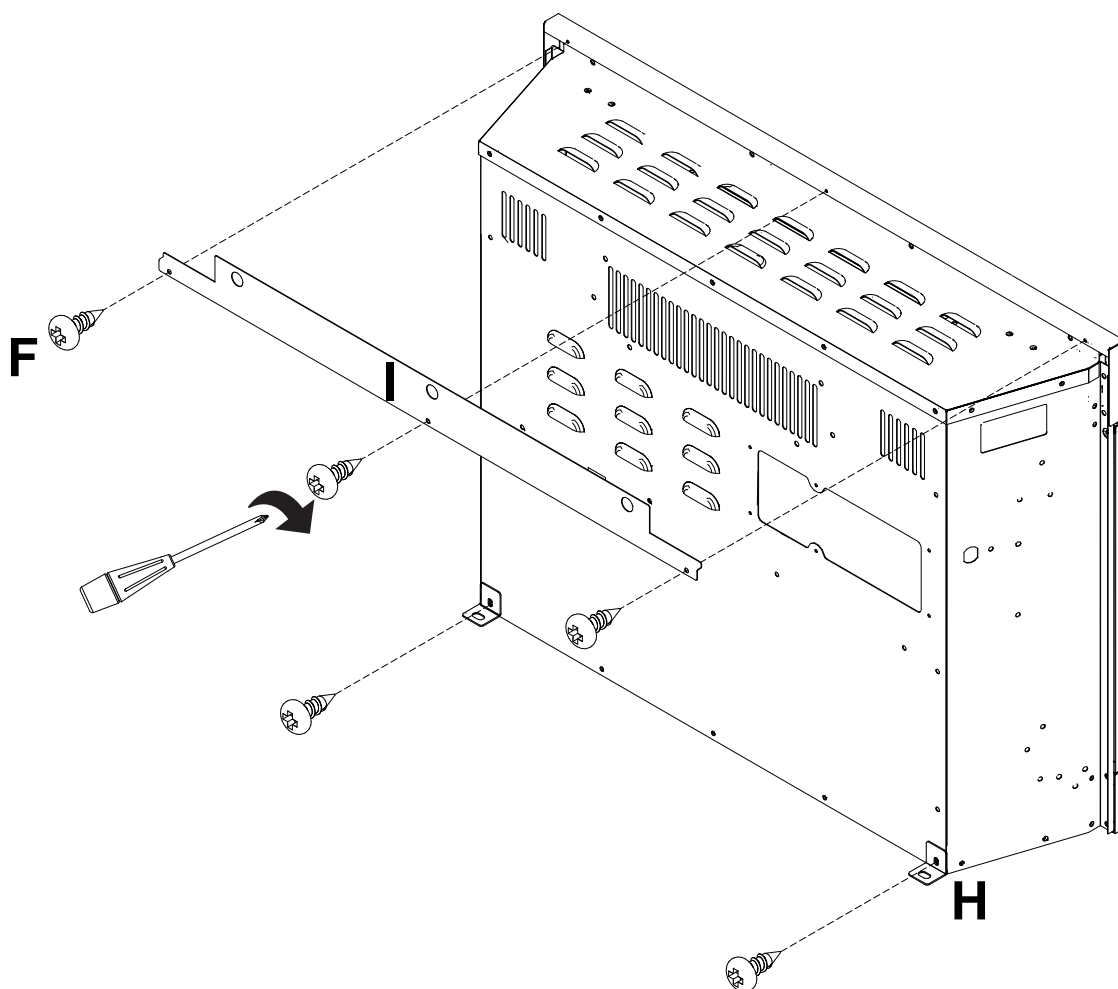


STEP 11:

Install the firebox by securing screws (A) via the metal strip (I) and L-bracket (H) with the allen wrench provided.

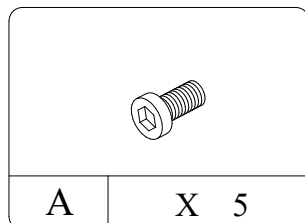

Ø6 x 12mm

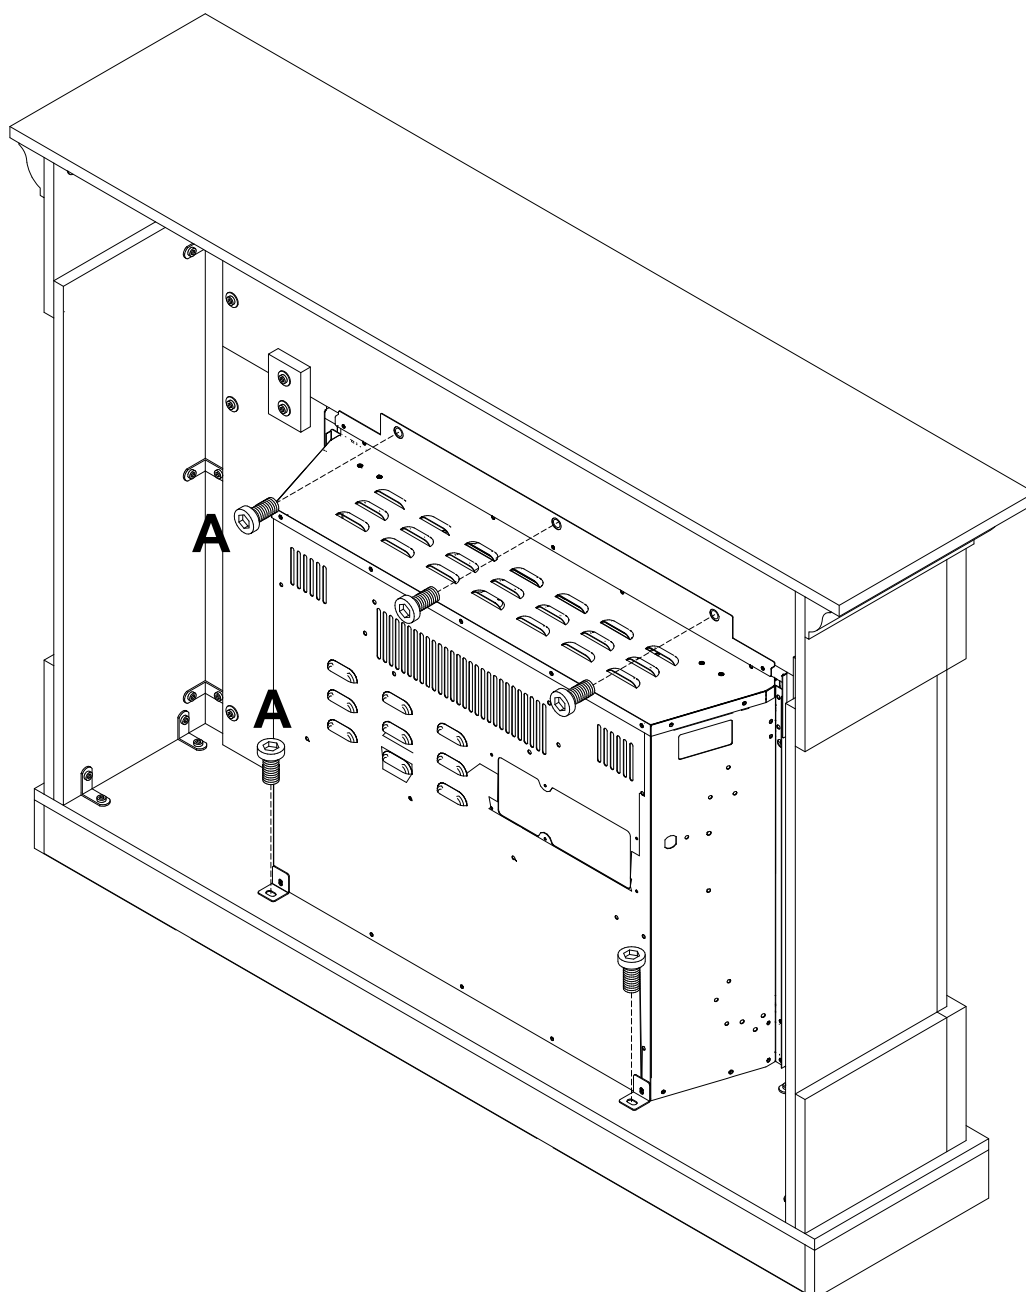

Thank you for purchasing this product! If you have any questions about the product, such as missing parts, damaged products, product assembling, and operation, please contact us via customer service number: **213-4467172 or 661-4358826.**

IMPORTANT

Please call our customer service department for any consulting:

213-4467172

661-4358826

(8:30am - 5:30pm P.S.T.)

DATED PROOF OF PURCHASE IS REQUIRED FOR WARRANTY SERVICE.

AVIS

Veuillez appeler le service à la clientèle pour toutes questions au:

213-4467172

661-4358826

(8:30am - 5:30pm P.S.T.)

PREUVE D'ACHAT ORIGINALE REQUISE POUR SERVICE DE GARANTIE.

IMPORTANTE

Sólo hay que llamar nuestro departamento de servicio al cliente en caso de tener preguntas o inquietudes:

213-4467172

661-4358826

(8:30am - 5:30pm P.S.T.)

SE REQUIERE PRUEBA DE COMPRA CON FECHA PARA SERVICIO BAJO GARANTÍA.

Address: ROWAN ELECTRIC APPLIANCE LLC
750S. Valley View Avenue, San Bernardino, CA 92408
Phone: 213-4467172 or 661-4358826