



MANHATTAN
COMFORT

888-230-2225
help@manhattancomfort.com



Bradley Corner Desk


Model # 229BMC6, 229BMC8, 229BMC9, 229BMC94



The indicated values consider static weights and evenly distributed over the parts.



INCLUDED IN THE PACKAGE

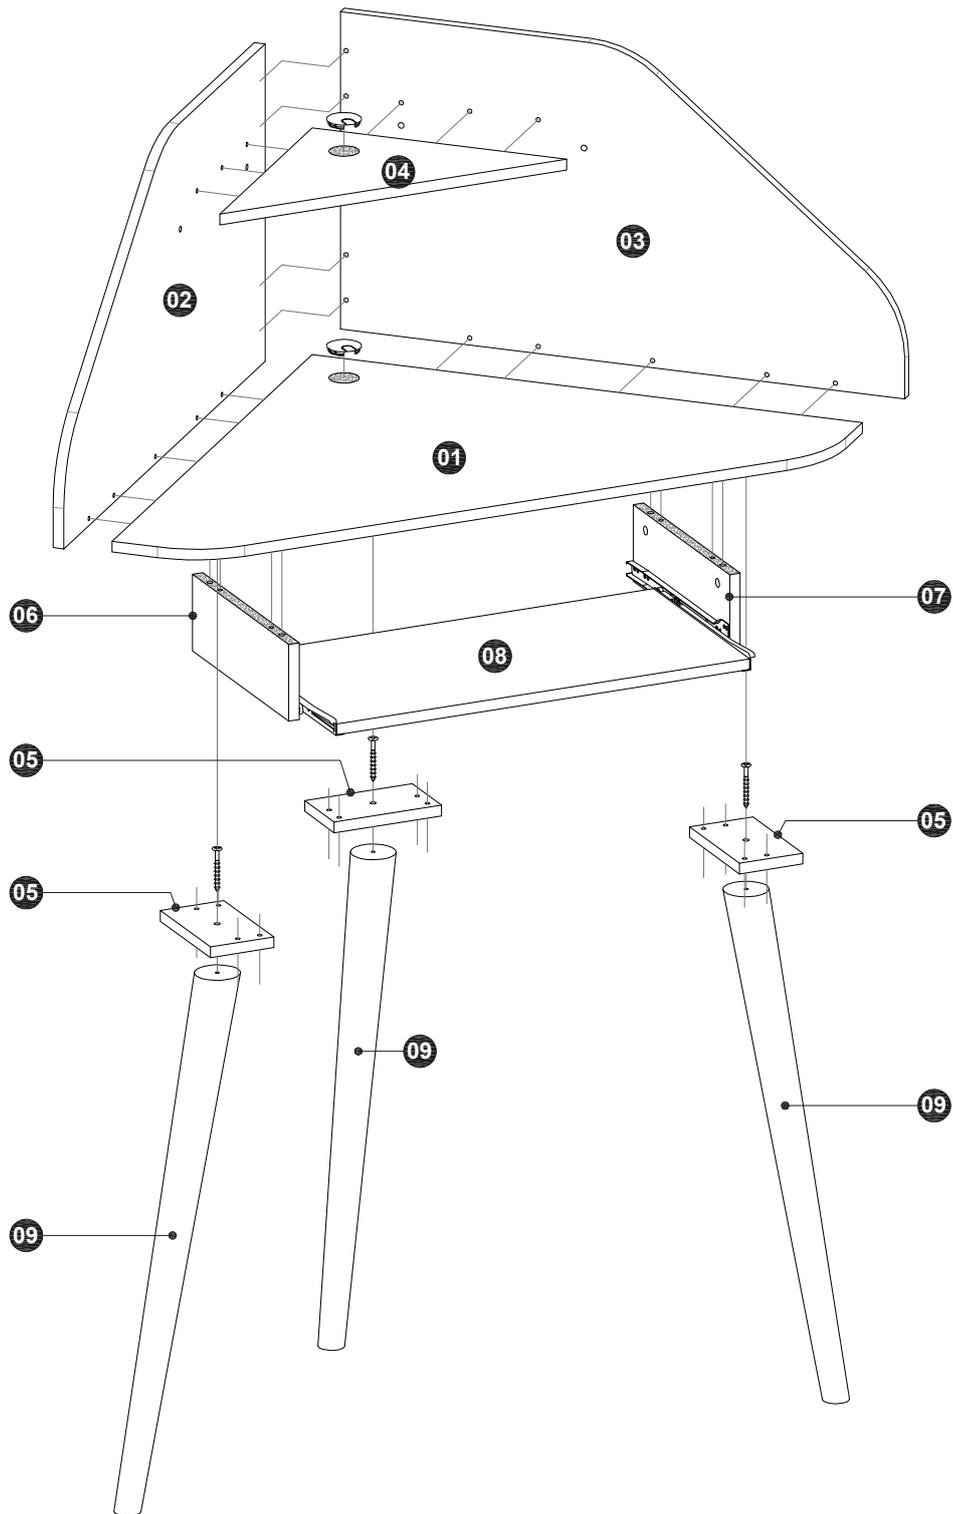

n.° ID	Parts Identification (Description)	Quantity
01	Top Panel	1
02	Left Side Panel	1
03	Right Side Panel	1
04	Upper Shelf	1
05	Support for fixing the feet	3
06	Left Side Support for keyboard	1
07	Right Side Support for keyboard	1
08	Base for keyboard	1
09	Wood Feet H740mm	3

TOOLS NEEDED

Falt head and phillips screwdriver.



Simple hammer.



Level indicator.




Electric drill and electric screwdriver with drill bit Ø1/2 inch and phillips tips.




! **IMPORTANT!** Two people are recommended to assemble and install this product.

INCLUDED IN THE HARDWARE

A 3x

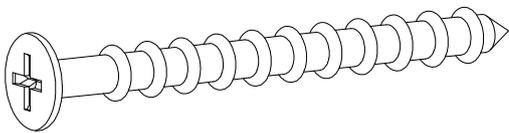

B 2x

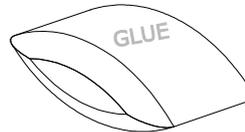

C 15x




D 3x




E 14x




F 10x

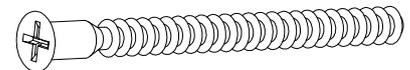

G 4x

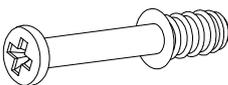


H 4x

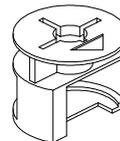


I 22x



J 2x

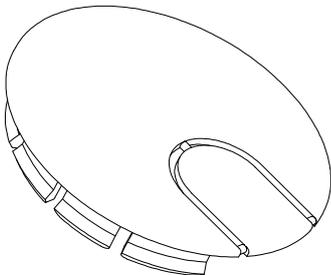


K 2x

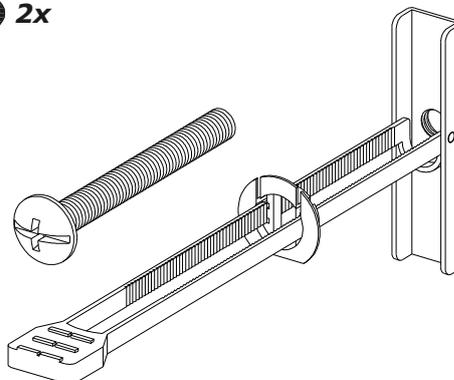

L 2x




STEP 1

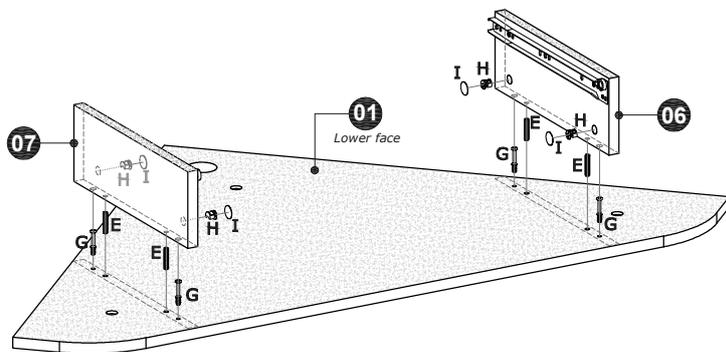


- Fix the Left Side Support (06) and Right Side Support (07) in the lower face of the Top Panel (01) with dowels (E) and cam lock hardware (G+H).
- At the end the fixation, apply the adhesive covers (I) on the drums (H).

STEP 2

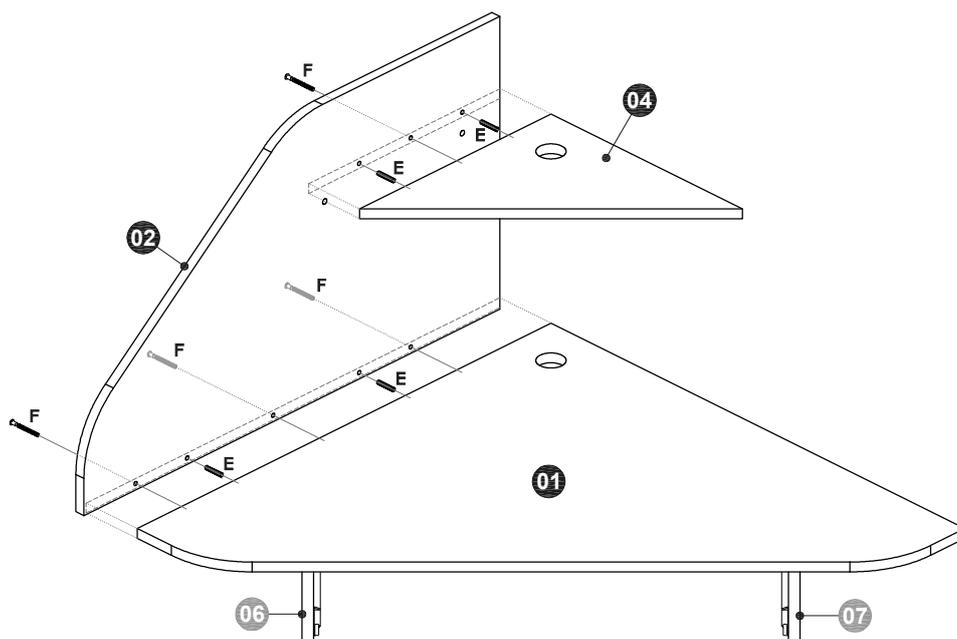

- Connect the Left Side Panel (02) into the Top Panel (01) with dowels (E) and bolts (F).
- Connect the Upper Shelf (04) into the Left Side Panel (02) with dowels (E) and bolt (F).


STEP 3

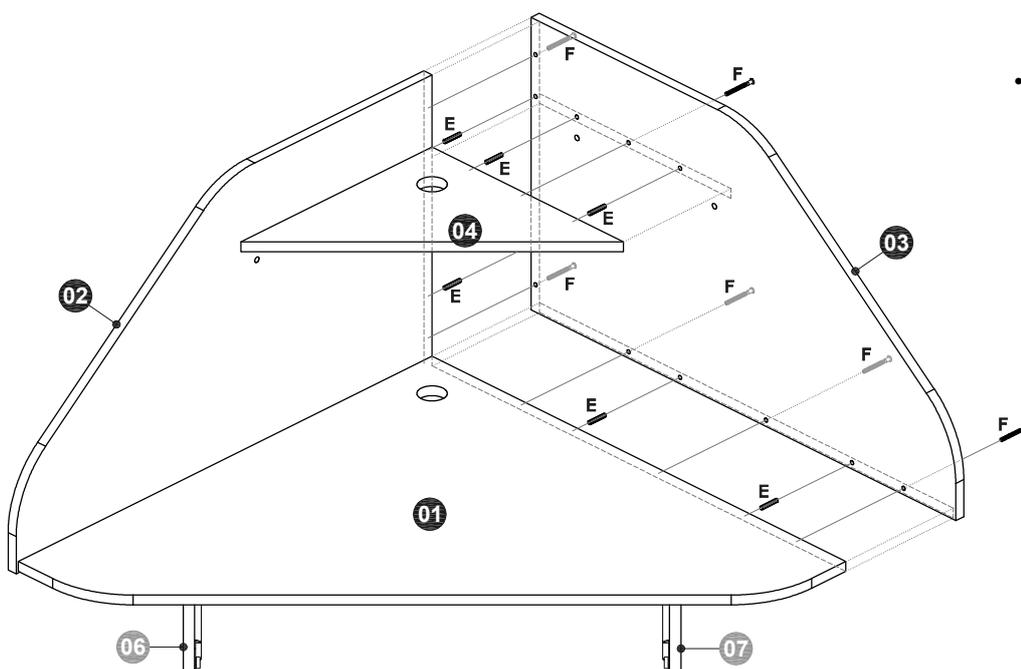


- Connect the Right Side Panel (03) into the Top Panel (01), the Left Side Panel (02) and the Upper Shelf (04) with dowels (E) and bolts (F).

! To assemble the table with feet, see steps 4 and 5.
 To assemble the drop table fixed to wall corner, see steps 6 and 7.

STEP 4

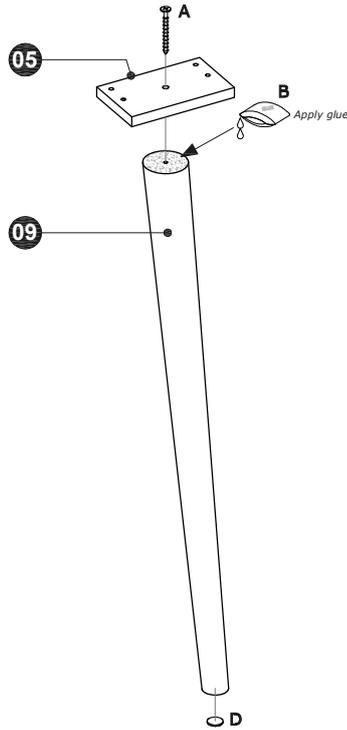


DETAIL 1:
 POSICIONING THE FOOT (09) IN SUPPORT (05)

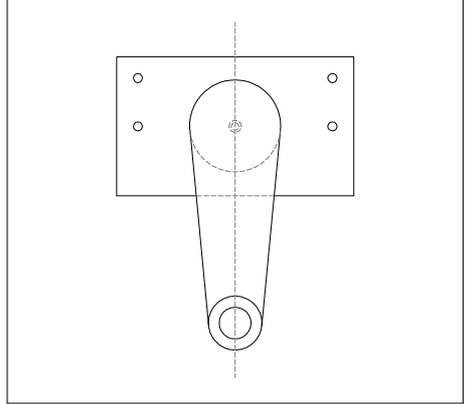


- Fixing the Feet (09) in the Supports (05): apply glue (B) to the upper end of the foot and fix with bolt (A).
- Apply the protective felt (D) in the lower end of the feet (09).

STEP 5

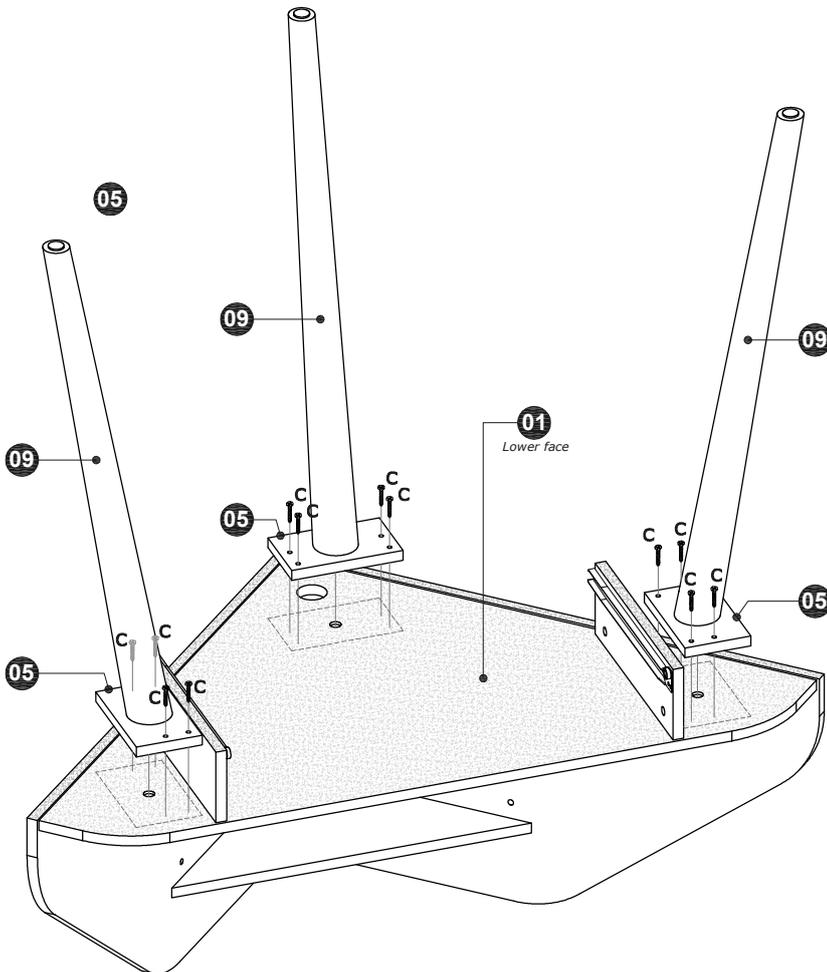


DETAIL 2 - LOWER VIEW
 FEET POSITION UNDER THE TABLE TOP

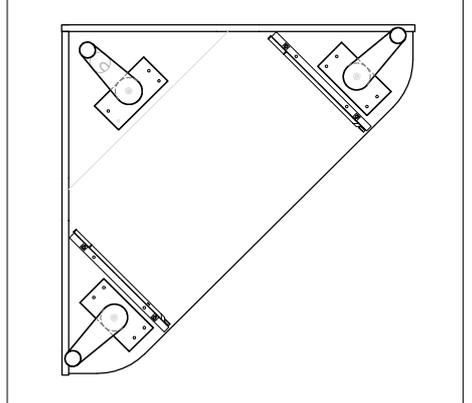


- With the feet (09) already fixed in the supports (05), position them correctly on the underside of the table top (as shown in the DETAIL 2) and fix them with bolts (C).
- Install the Base for keyboard (08), fitting it so that the metallic slides slide smoothly (see DETAIL 3, below).

DETAIL 3
 INSTALLING THE BASE FOR KEYBOARD (08)

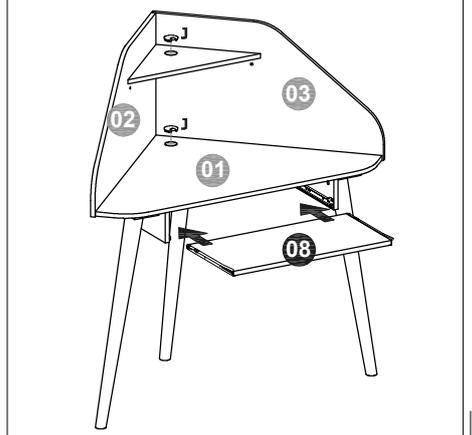


STEP 6

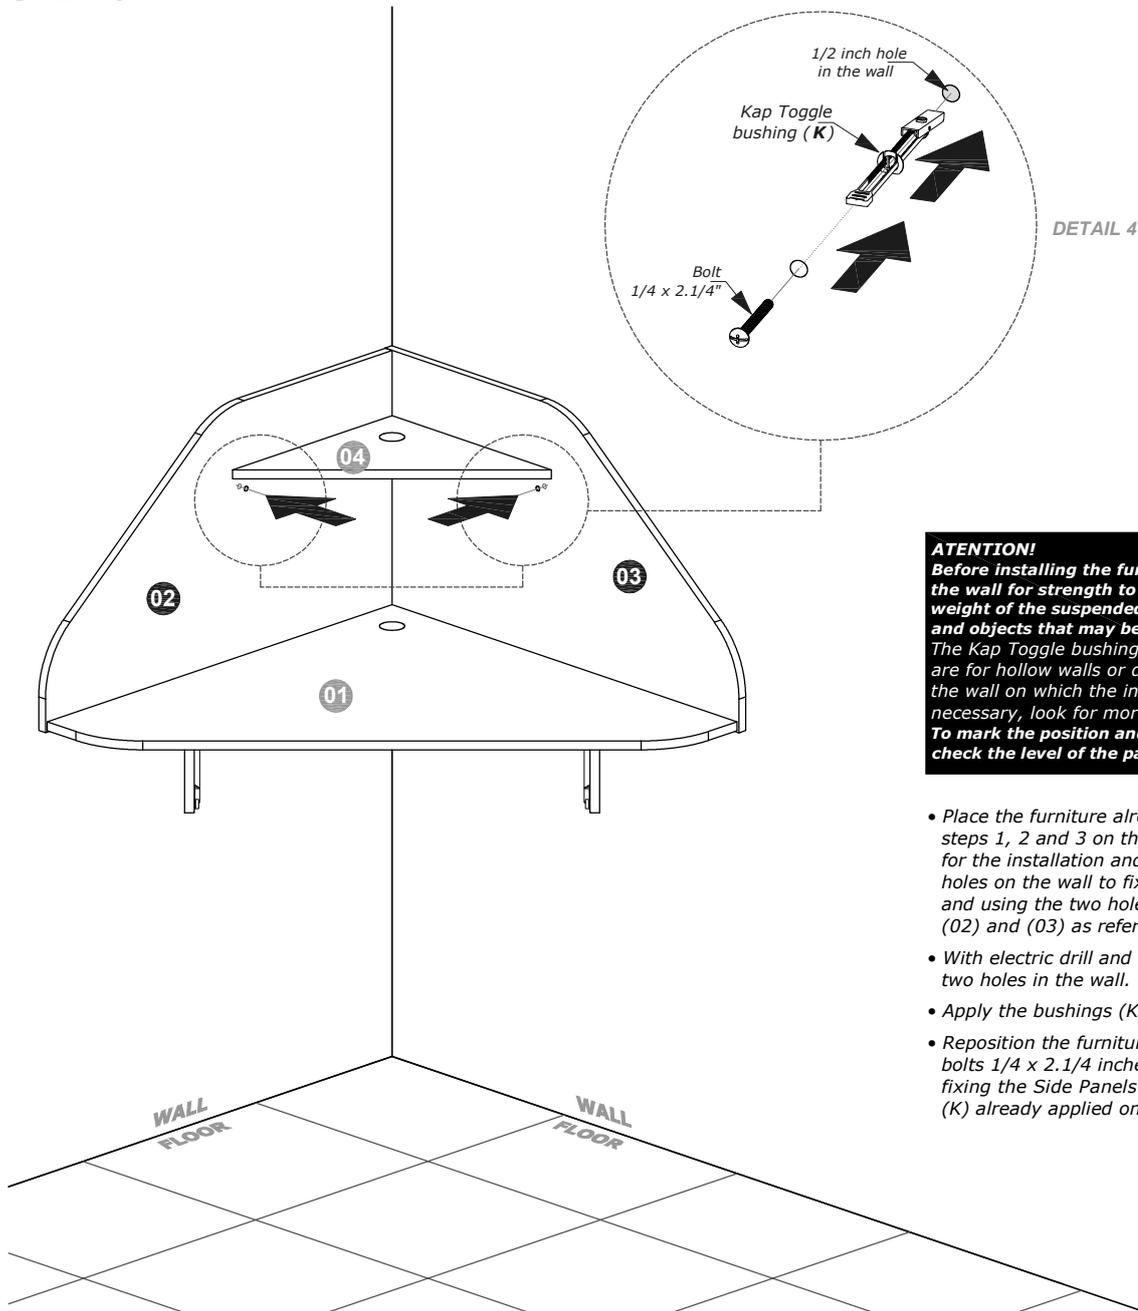

ATTENTION!
 Before installing the furniture, check the conditions of the wall for strength to properly support and anchor the weight of the suspended furniture, including equipments and objects that may be installed on the shelves. The Kap Toggle bushings (K) supplied with the product are for hollow walls or dry wall type. Check the type of the wall on which the installation will be made and, if necessary, look for more suitable bushings or devices. To mark the position and fix the furniture on the wall, check the level of the parts.

- Place the furniture already assembled according to steps 1, 2 and 3 on the site and at the desired height for the installation and mark the position of the two holes on the wall to fixation, as shown in the drawing and using the two holes indicated in the side panels (02) and (03) as reference.
- With electric drill and drill bit $\varnothing 1/2$ inch, make the two holes in the wall.
- Apply the bushings (K) into the two holes in the wall.
- Reposition the furniture in the place and apply the bolts $1/4 \times 2.1/4$ inches as shown in the drawing, for fixing the Side Panels (02) and (03) at the bushings (K) already applied on the wall.

STEP 7

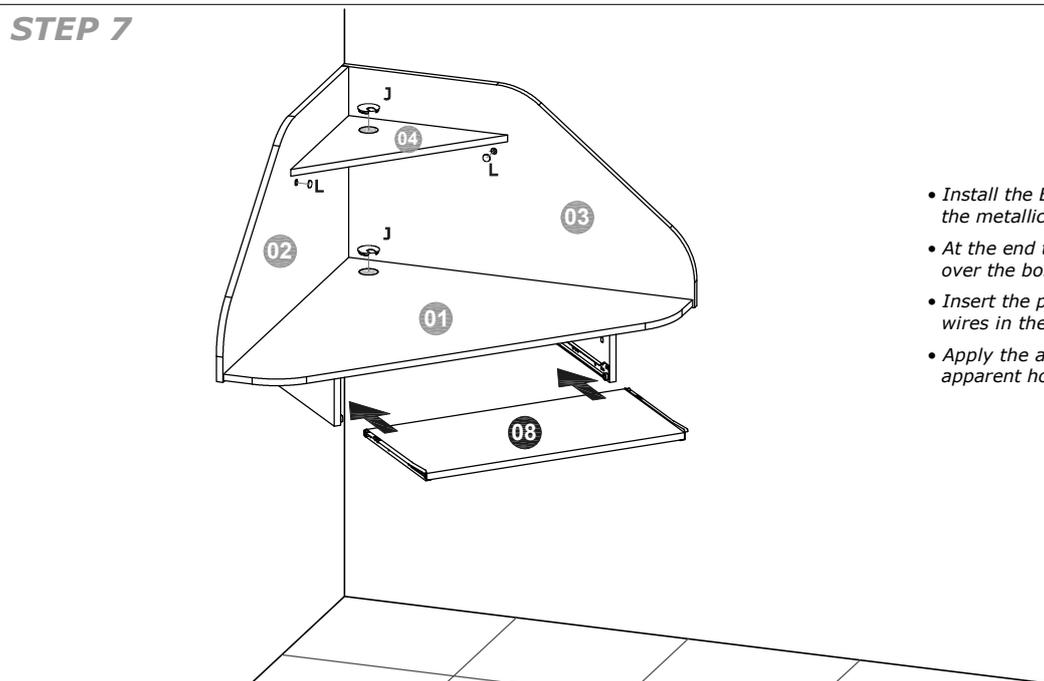

- Install the Base for keyboard (08), fitting it so that the metallic slides slide smoothly.
- At the end the fixation, apply the plastic covers (L) over the bolts used for fixation on the wall.
- Insert the plastic covers (J) into the holes for pass wires in the Top Panel (01) and in the Shelf (04).
- Apply the adhesive covers (I) on the remaining apparent holes and bolts.