


Assembly Instructions

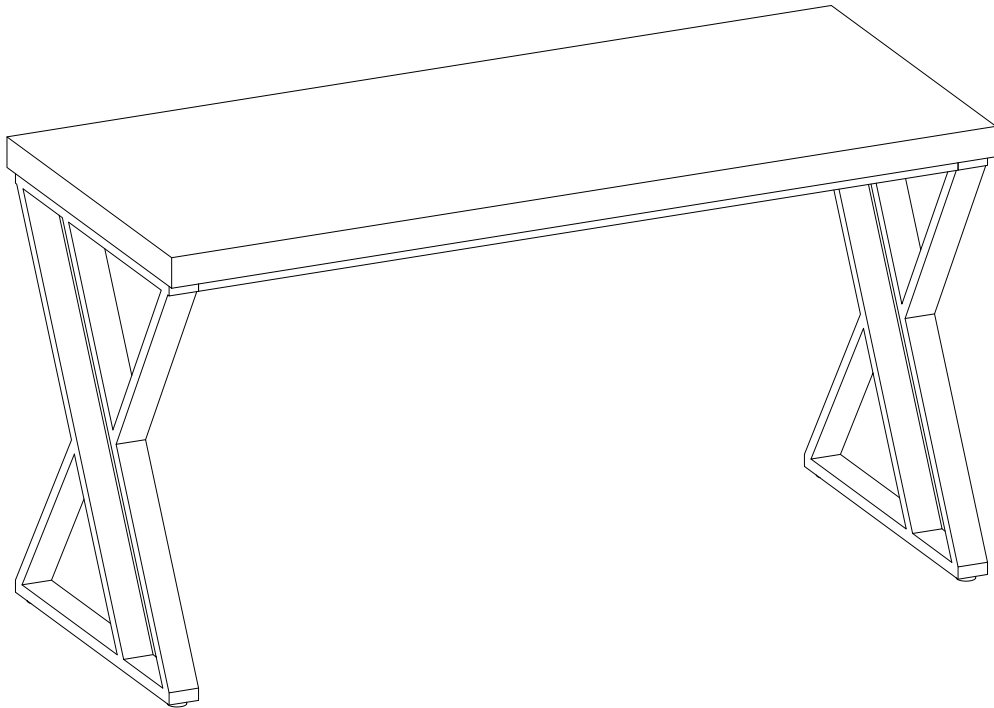

Computer Table

Model No.

HOGA-U0002/HOGA-U0154

HOGA-U0206/HOGA-U0212

Contact Us




We're here to help you.



Your satisfaction is our top priority. If you encounter any issues with this product, such as missing or damaged parts, we're here to help. Please retain the original packaging and take photos of the packaging and the product, then contact us as soon as possible.


Warm Tips

1. Carefully read these instructions and keep them for future reference.
2. Check the parts list and confirm everything's there before starting assembly.
3. When assembling, put all parts on a soft, smooth surface like a carpet to avoid scratches.
4. Don't fully tighten screws until all parts are confirmed in place to avoid misalignment.

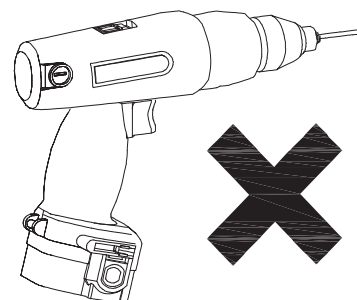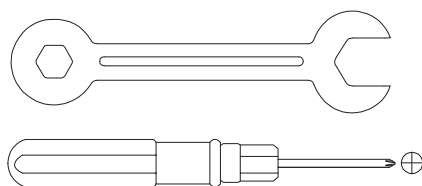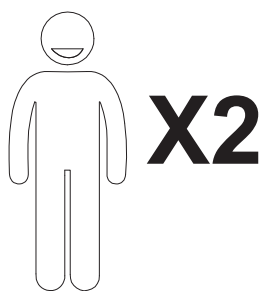



We recommend using hand tools for assembly.


If an electric screwdriver is used, reduce power and torque to avoid damage to the product.

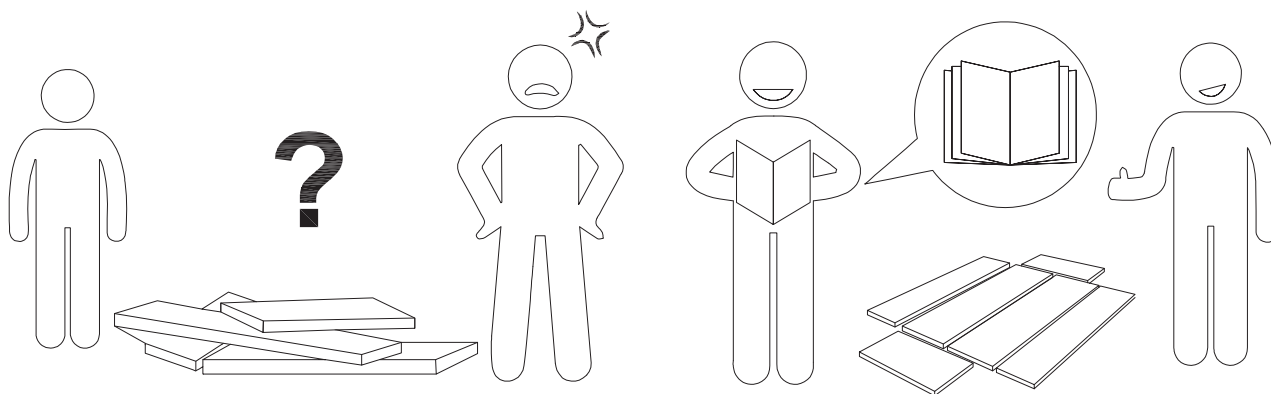

AVOID SCRATCHES

In order to avoid scratching, this furniture should be assembled on a soft surface, such as a rug.

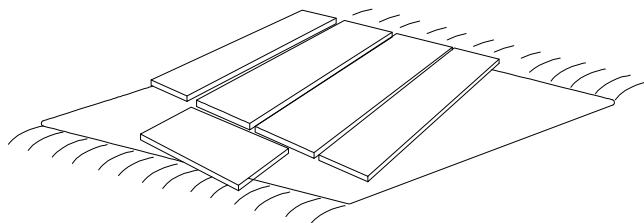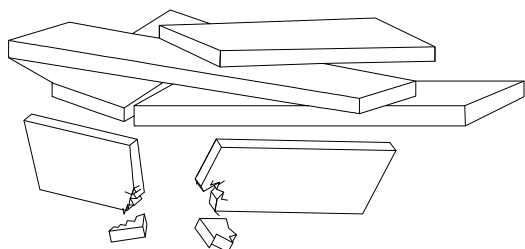


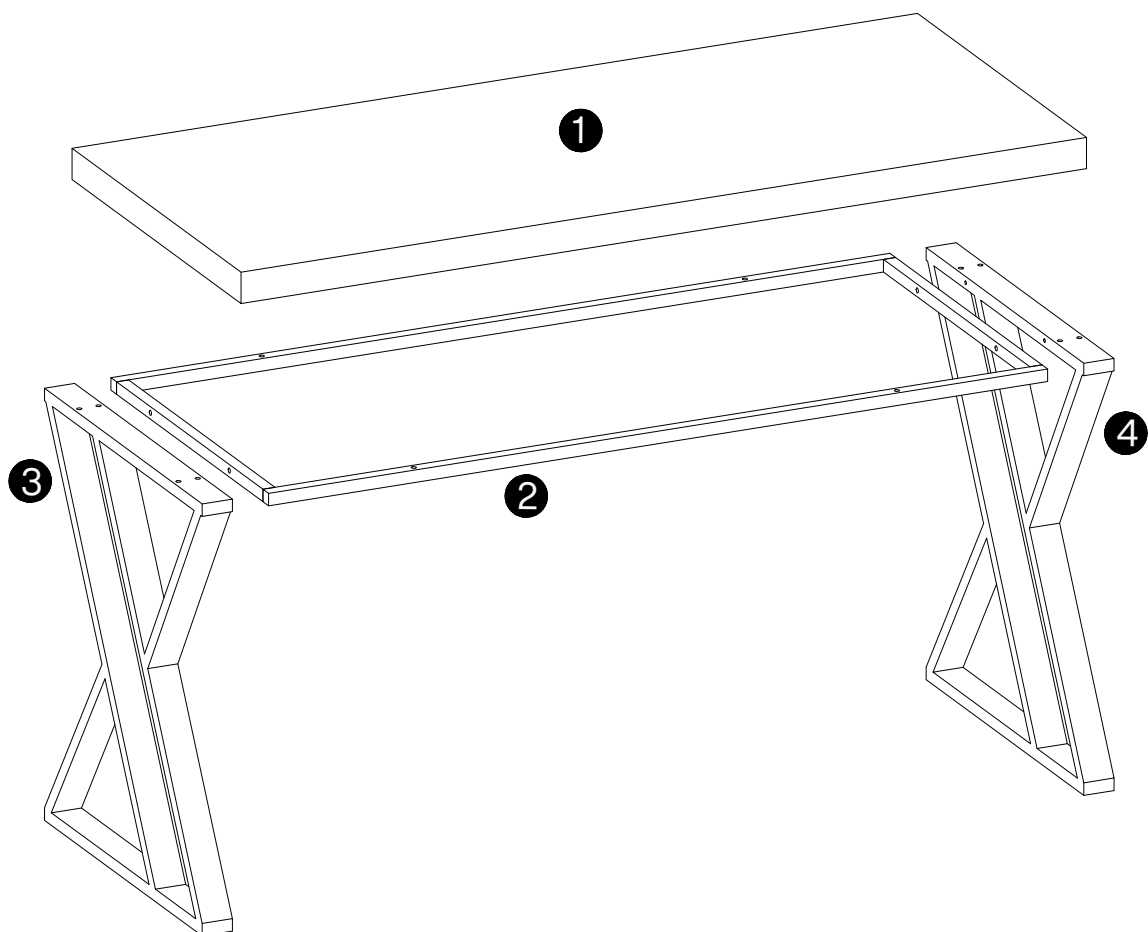


⚠ Caution

Make sure all parts are included. Most board parts are labeled or stamped on the raw edge. Contact us for a free replacement if you encounter any damaged or missing parts.


Parts List

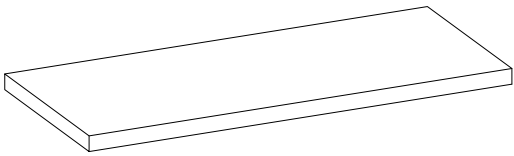


❶ 1pc

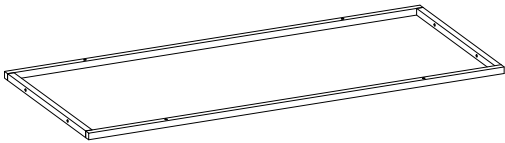

❷ 1pc


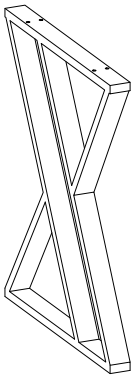



❸ 1pc

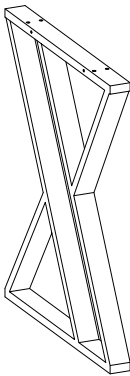

❹ 1pc


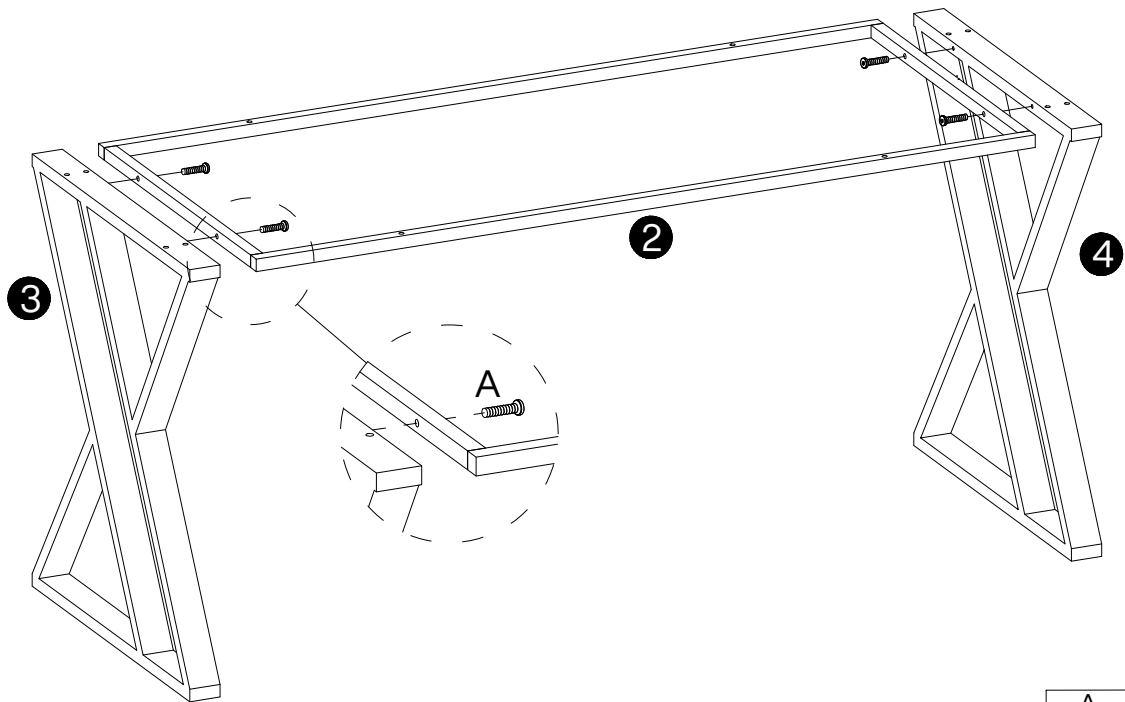
Hardware List


A	X16+1	B	X4	C	X1
					
M6X35 mm					

1

pre-drill 70%

70%


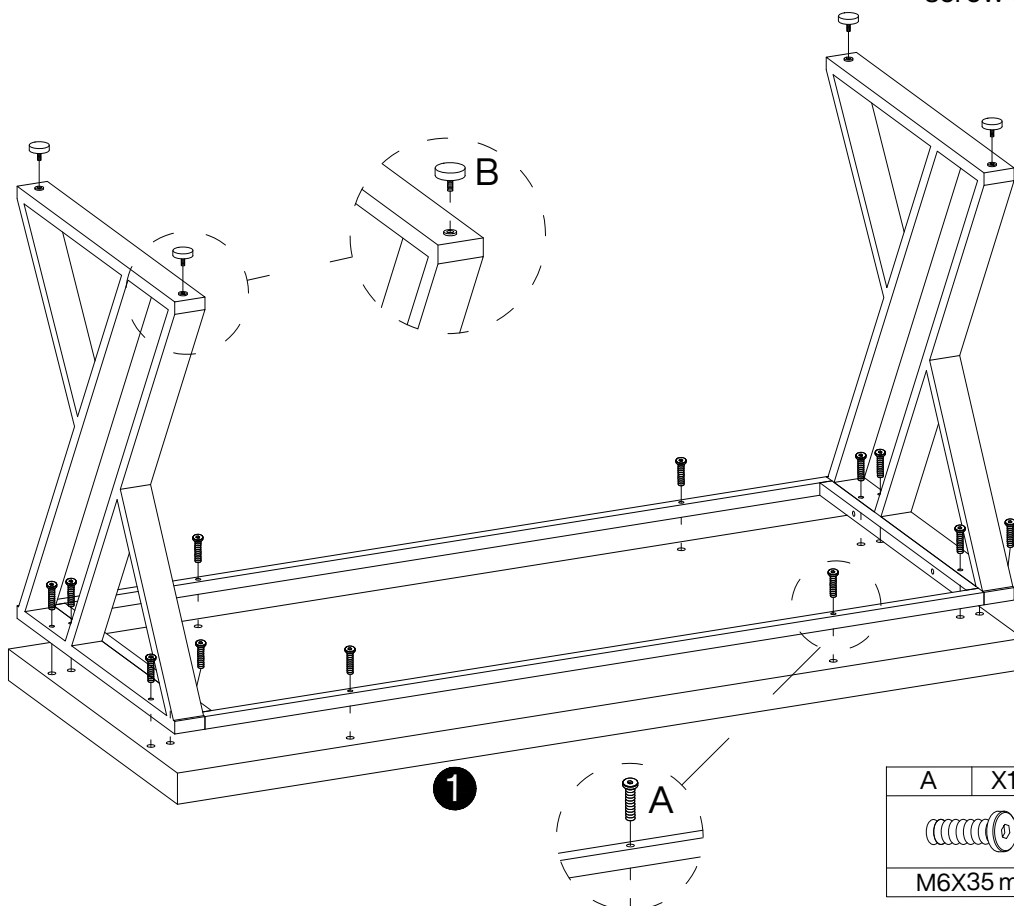





A	X4
	
M6X35 mm	

2

screw down

100%

A	X12	B	X4
			
M6X35 mm			

Thank you for your support!

