


1

Align spring stop position where door panel impacts the wall, drill a pilot hole, take mounting base off of spring stop by twisting apart, then secure with screw included.

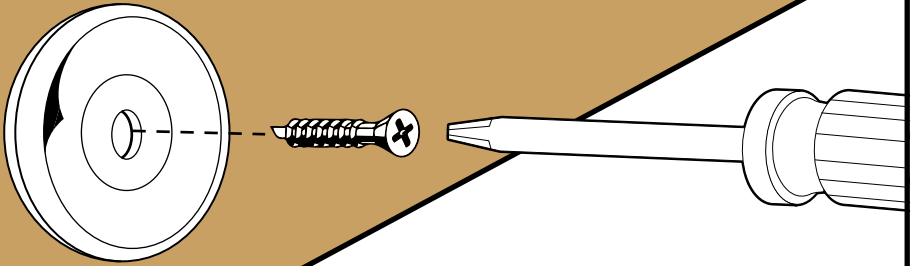

2

Reassemble spring to mounting base.

