

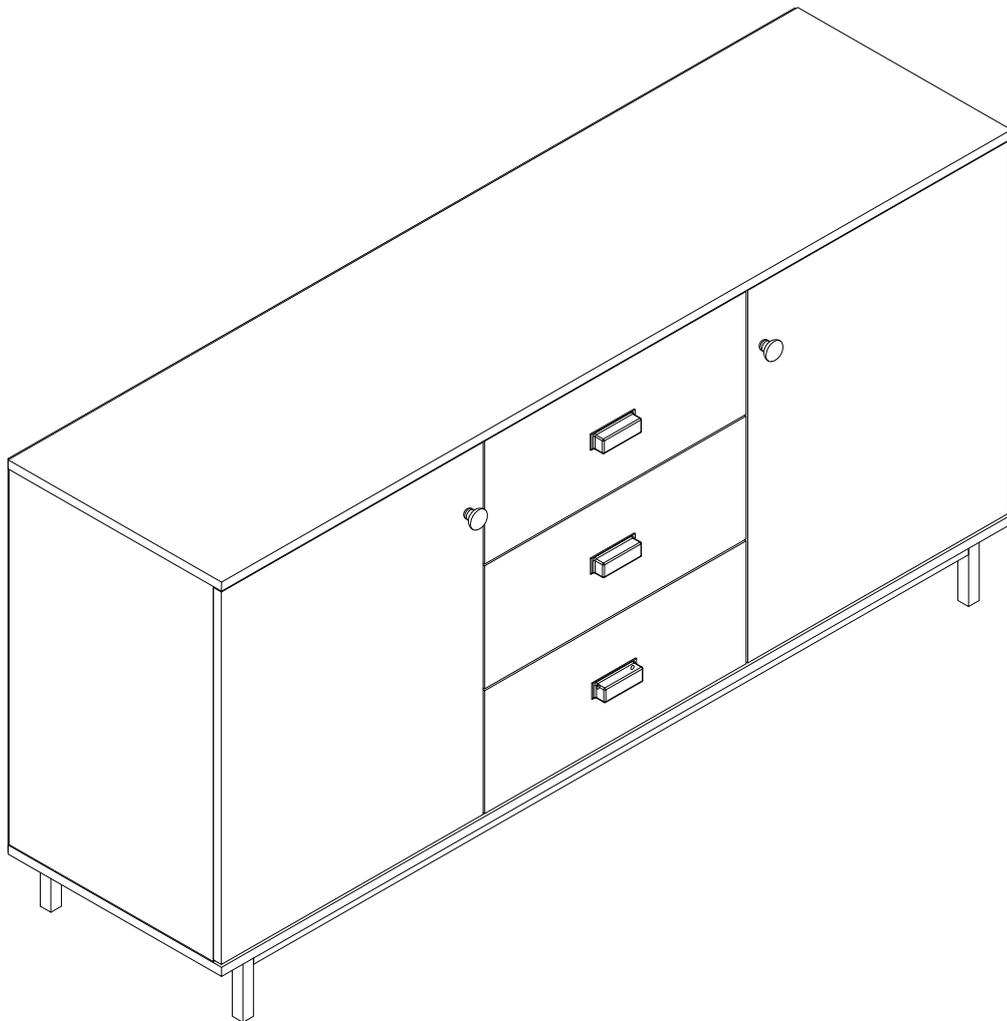
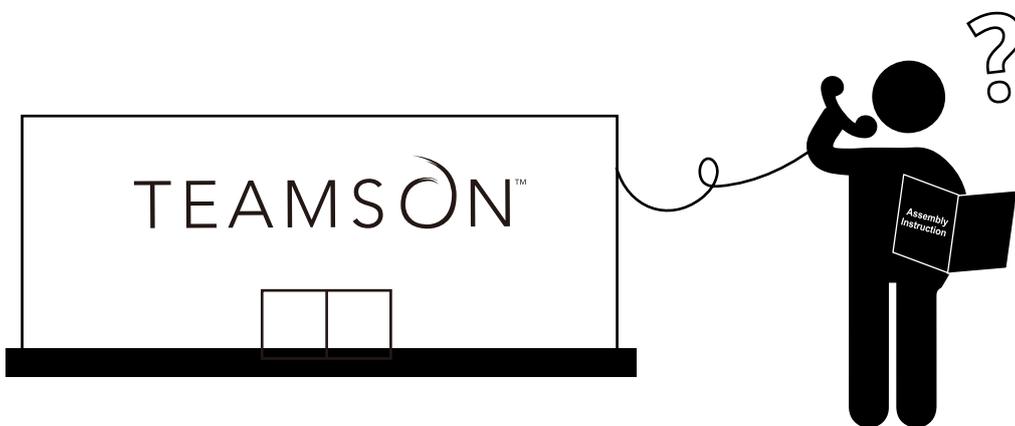


Versanora
Sideboard with 2 Doors and
3 Drawers Metal Legs and Handles

VNF00105

TIME SAVER!
3D Interactive Instruction

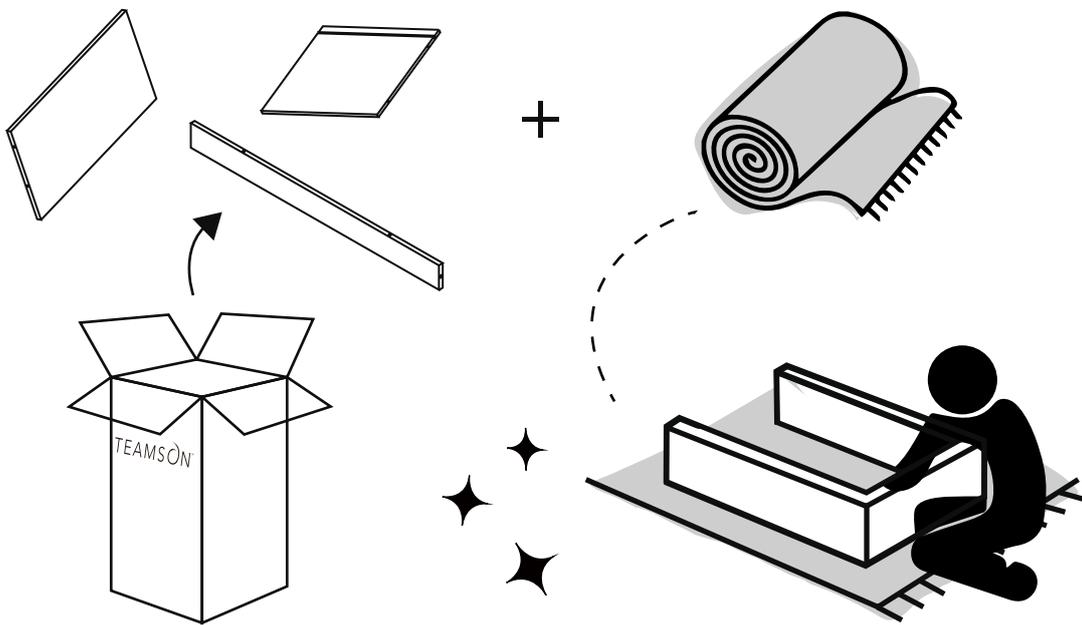

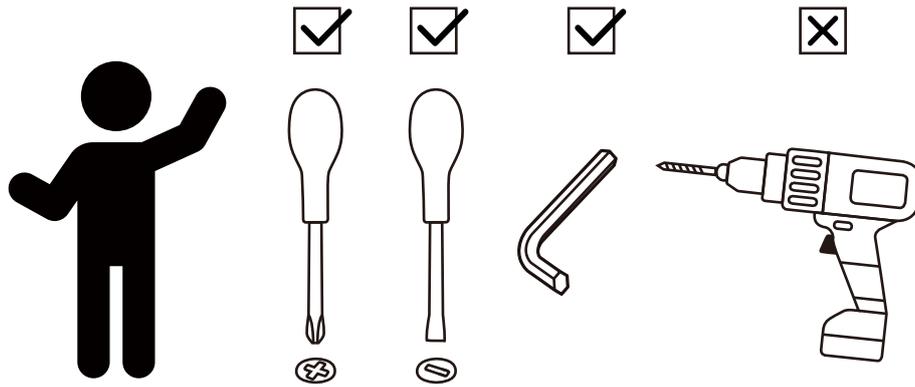

** Got questions? Please have your product code (on the first page of this instruction, e.g. TD-12345A) and the order number ready, give us a call or email us through our customer care support! We are always ready to assist you!

TEAMSON HOME



Warranty sign up

www.teamsonhome.com

Serving you well gives us great joy!

USA +1(800)935-3959

Mon - Fri 10:00am ~ 2:00pm EST

✉ support@teamson.com

EU/UK . . . +44(0)1952-916-050

Mon - Thu 9:00am ~ 5:00pm GMT

Friday 9:00am ~ 4:00pm GMT

✉ support@teamson.co.uk

ASIA . . . 深圳办公室:

+86(0755)8885-3558.分机号108

Mon - Sat 9:00am ~ 5:00pm GMT+8

✉ sales_ec@teamson.com

台北办公室:


+886(2)2556-6268

Mon - Fri 9:00am ~ 5:00pm GMT+8

✉ sales_ec@teamson.com

Thank you for choosing Teamson Home


Exploded Drawing

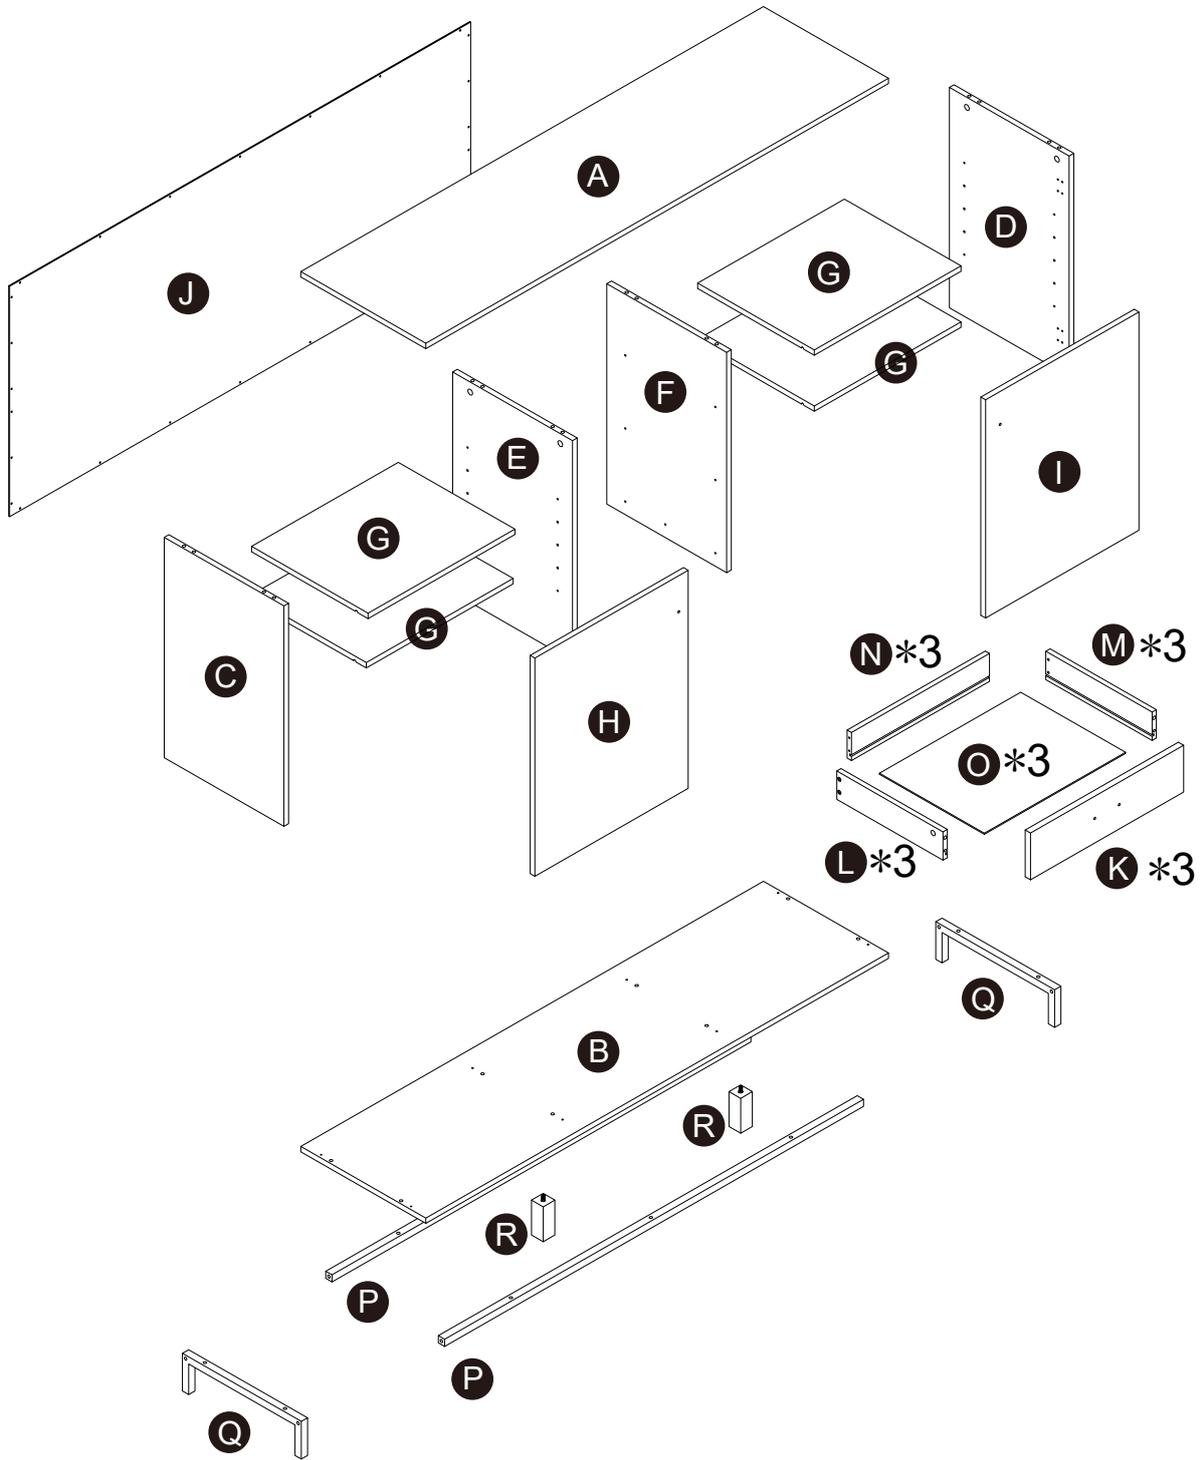

Questions?
Scan Here


Product Parts

A

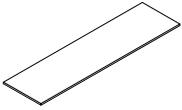

1 PC

B

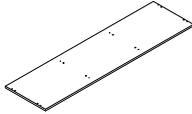


1 PC

C




1 PC

D

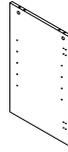

1 PC

E

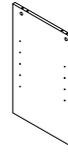


1 PC

F




1 PC

G

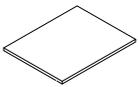


4 PCS

H

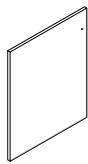


1 PC

I

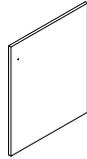


1 PC

J

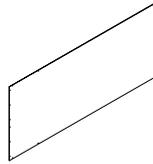


1 PC

K

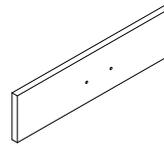


3 PCS

L

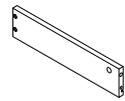


3 PCS

M

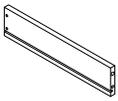


3 PCS

N

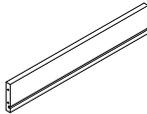


3 PCS

O

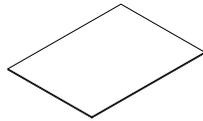


3 PCS

P

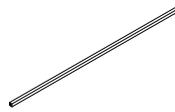

2 PCS

Q

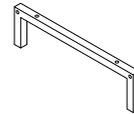

2 PCS

R



2 PCS



Questions?
Scan Here

⚠ Care Instructions

Dust surface with a dry soft cloth.


Do not use window cleaners or cleaning abrasives as they will scratch the surface and could damage the protective coating

⚠ WARNING

Small parts and sharp edges may be present prior to assembly.

Hardware

1

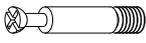

φ6*35mm

20+2 pcs

2



φ15*9mm

20+2 pcs


3



φ3.5*12mm

30+2 pcs


4

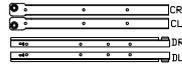

350mm

3 sets


5

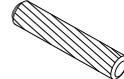

φ8*30mm

16+2 pcs

6

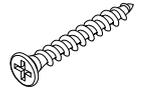

φ4*45mm

8+1 pcs

7



M6*40mm

4+1 pcs

8



M6*30mm

10+1 pcs

9



φ4mm

1 pc


10



φ3*12mm

26+2 pcs

11

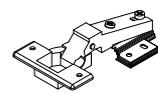

4 pcs


12



φ3.5*14mm


24+2 pcs

13

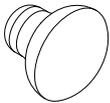

2 pcs

14

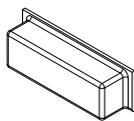

3 pcs

15



M4*16mm

8+1 pcs

16



φ5*16mm

16+2 pcs

17



φ4*35mm

12+1 pcs

18





1 set



Questions?
Scan Here

Step 1

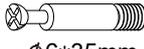
1  20 pcs
Ø6*35mm

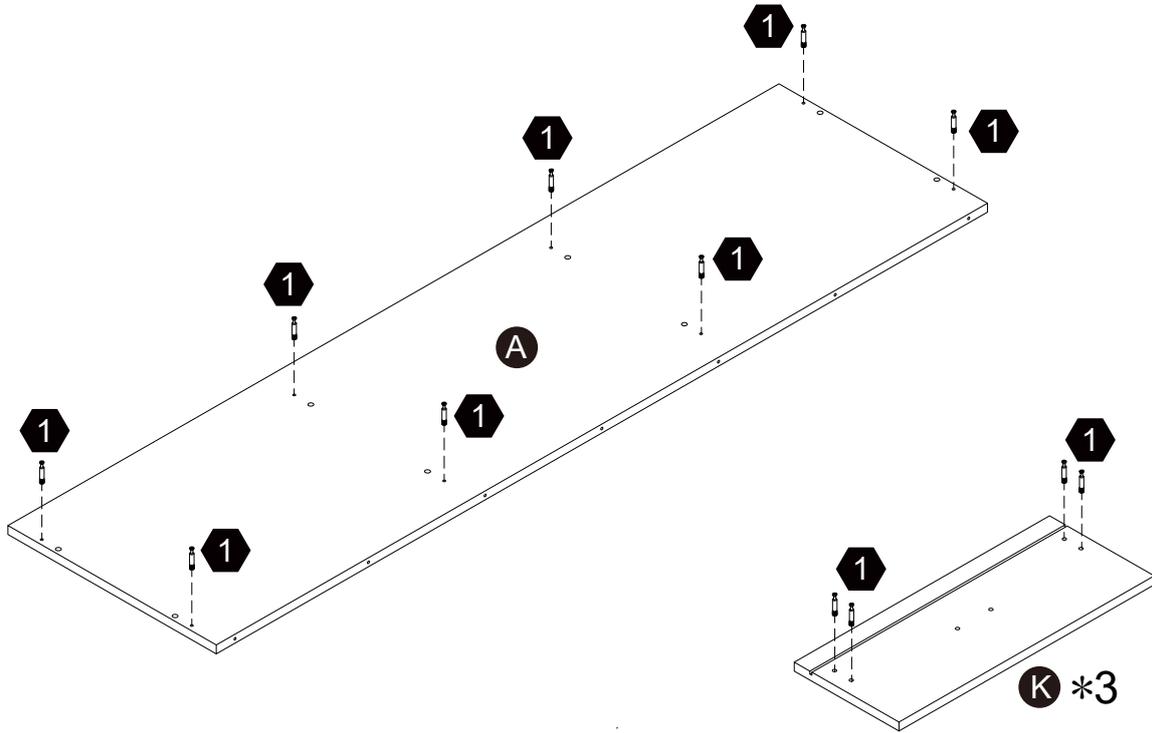

Step 2

3  9 pcs
Ø3.5*12mm

4  CL 3 pcs

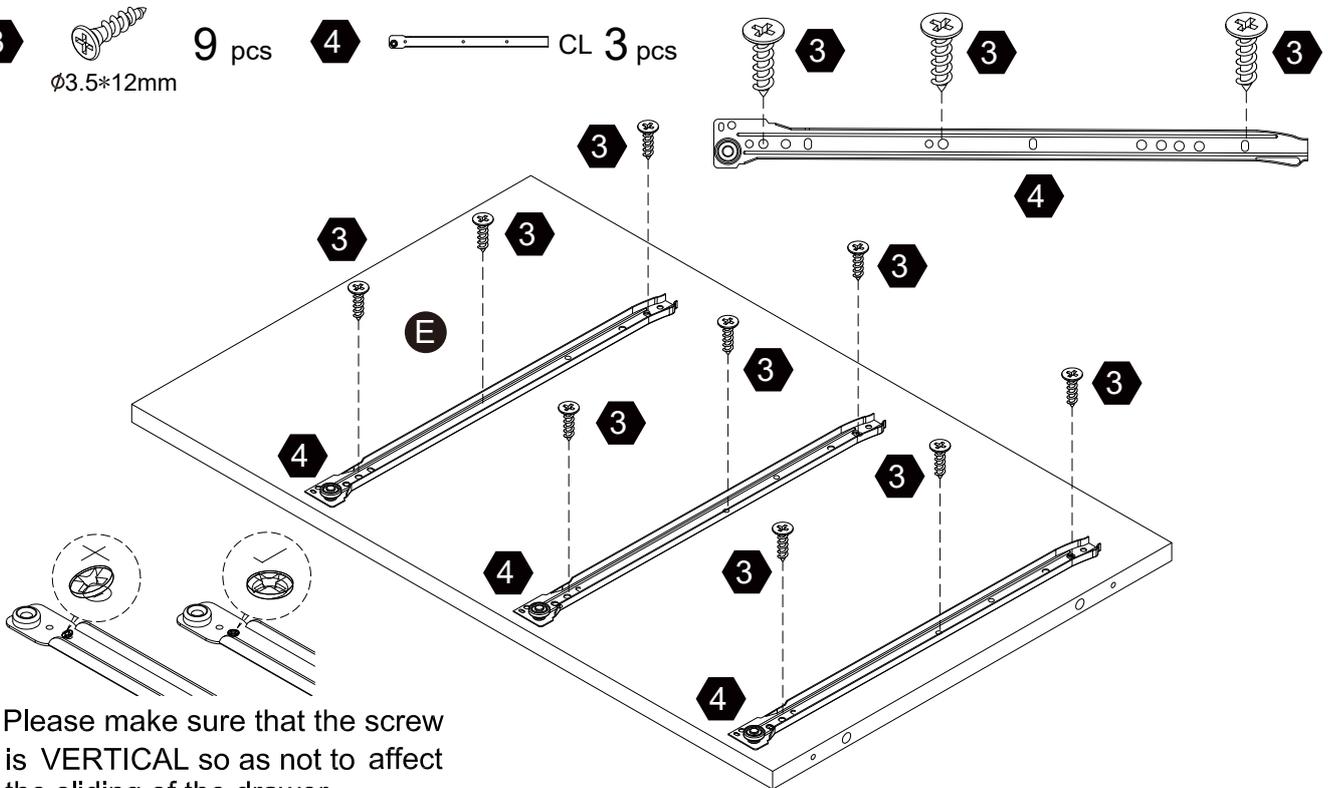


Please make sure that the screw is VERTICAL so as not to affect the sliding of the drawer.




Questions?
Scan Here

Step 3

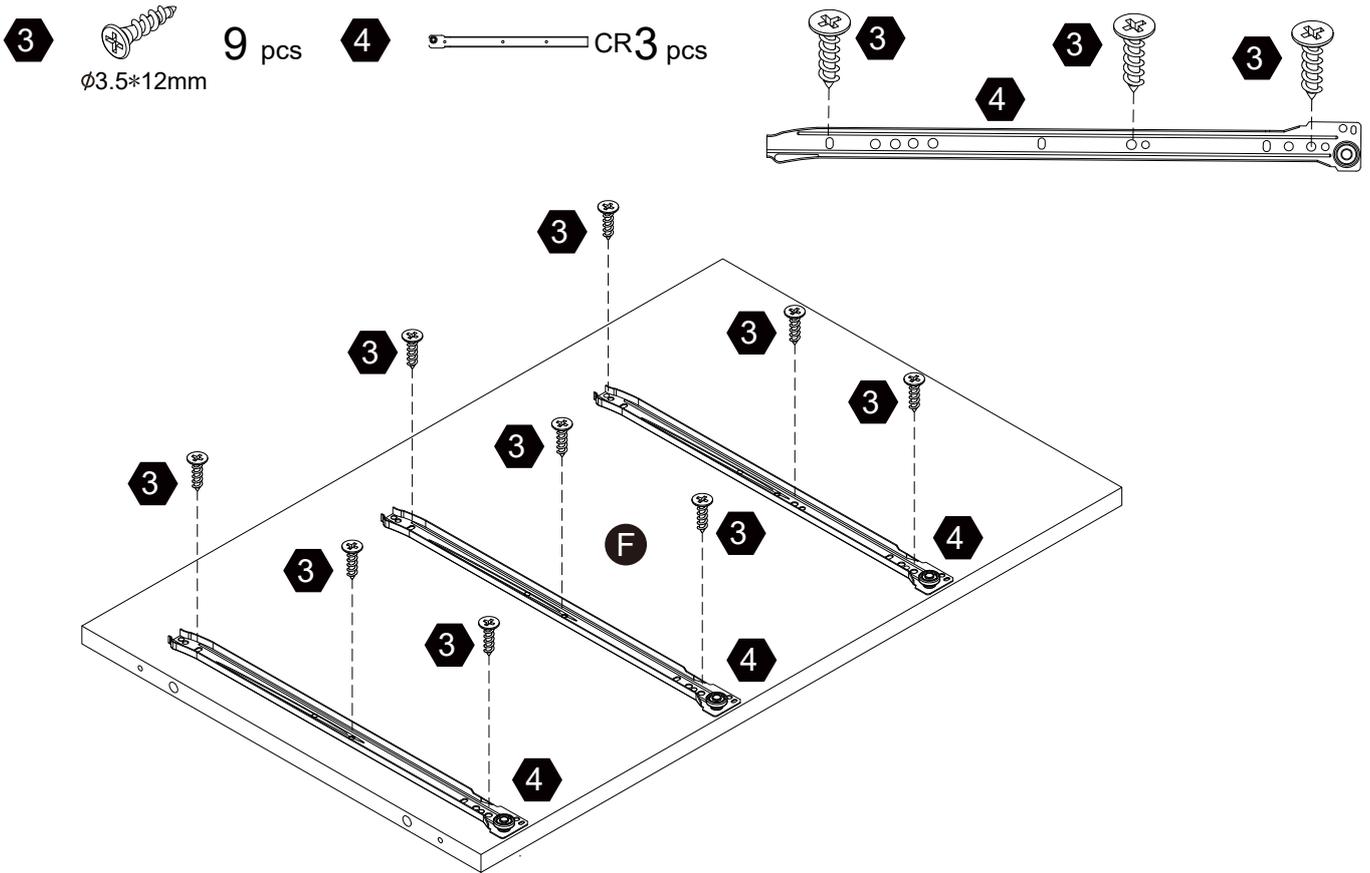


Step 4

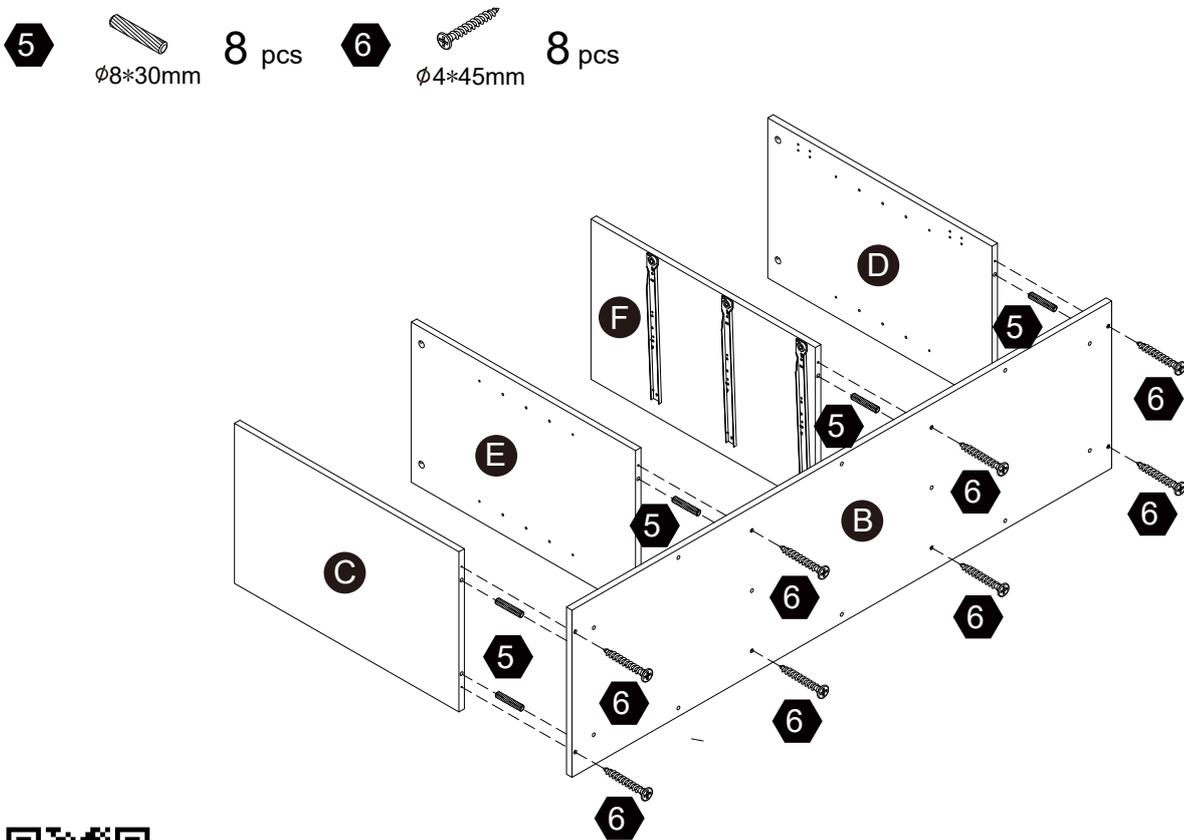

Questions?
Scan Here


Step 5

2  $\phi 15 \times 9 \text{mm}$ 8 pcs **5**  $\phi 8 \times 30 \text{mm}$ 8 pcs

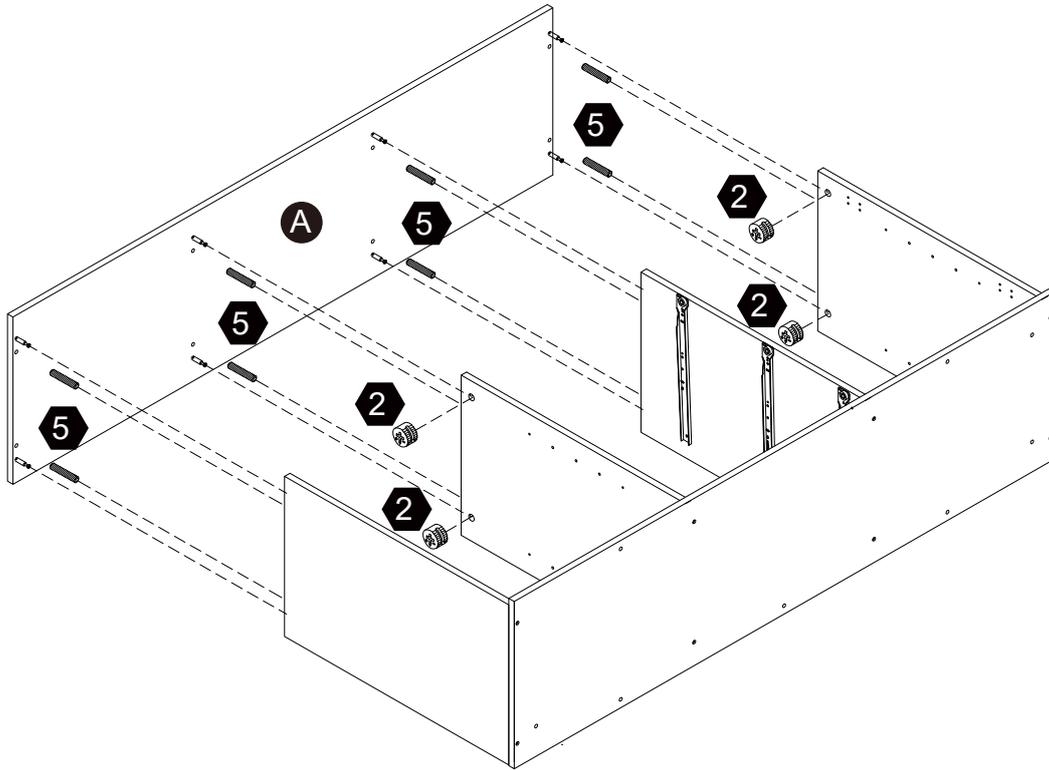

Step 6

7  M6x40mm 4 pcs **9**  $\phi 4 \text{mm}$ 1 pc

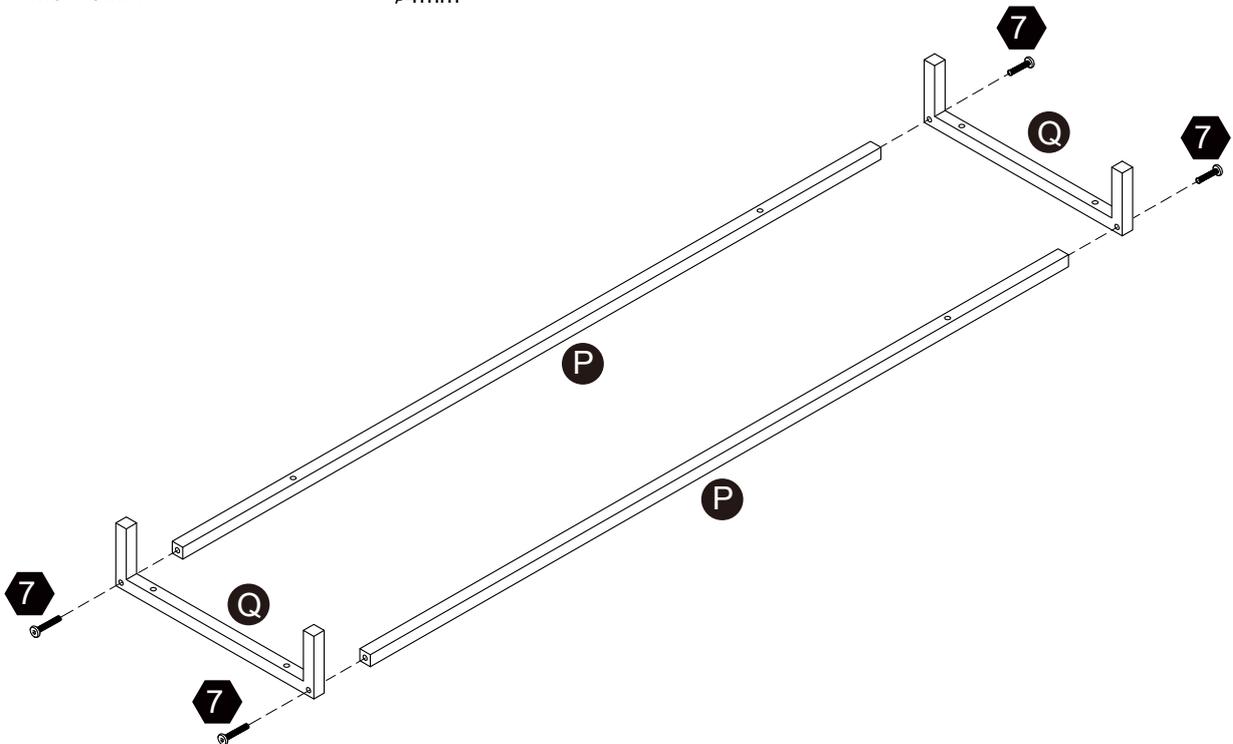

Questions?
Scan Here


Step 7

8


M6*30mm 10 pcs

9

∅4mm 1 pc

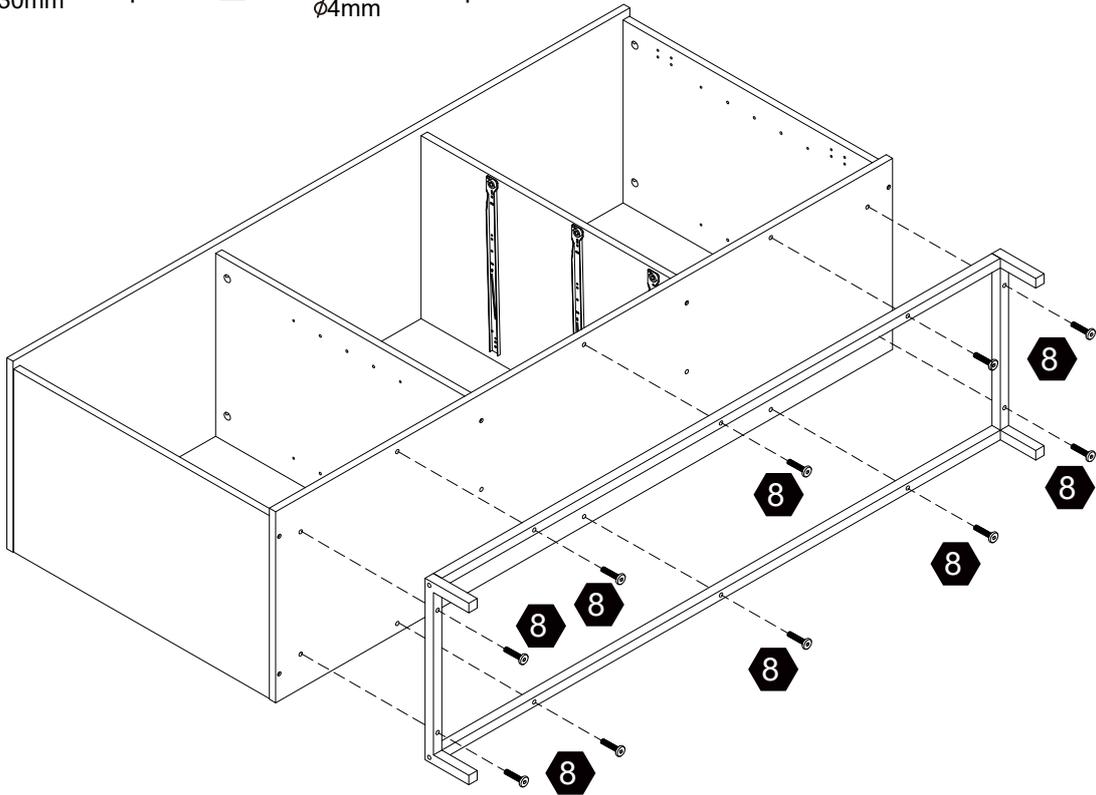


Step 8

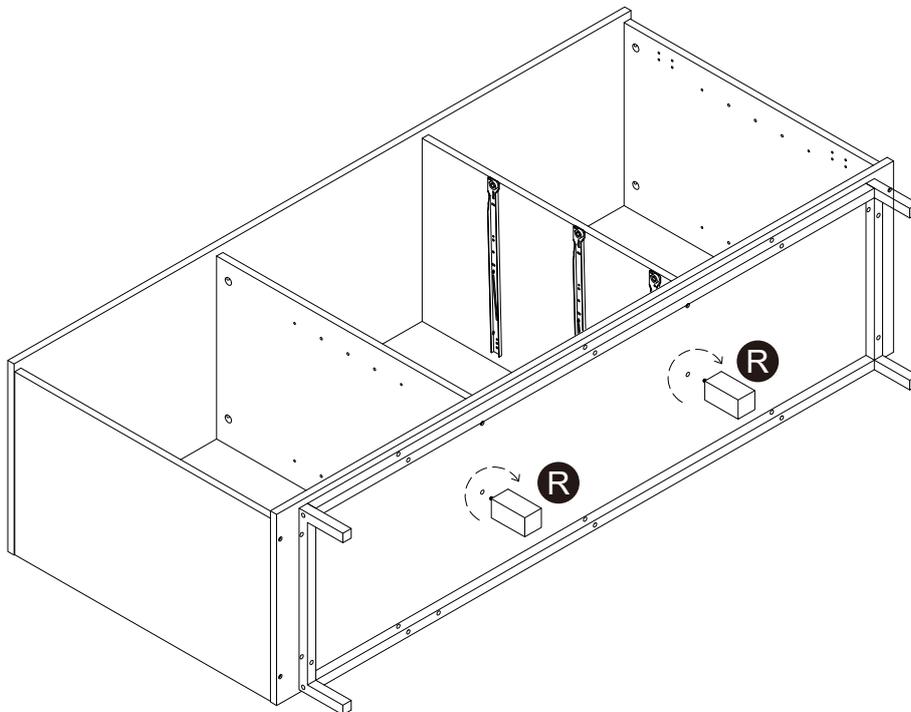

Questions?
Scan Here

Step 9

10  $\phi 3 \times 12 \text{mm}$ 26 pcs

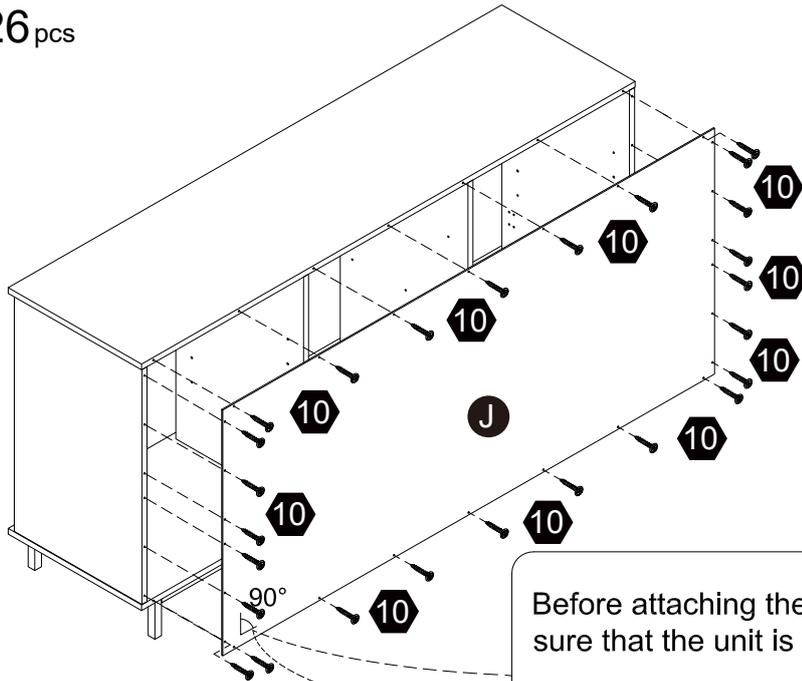


Before attaching the back panel, be sure that the unit is at 90°.

Antes de atar el panel trasero, asegúrese de que la unidad está a 90°.

Step 10


11  4 pcs **12**  $\phi 3.5 \times 14 \text{mm}$ 8 pcs

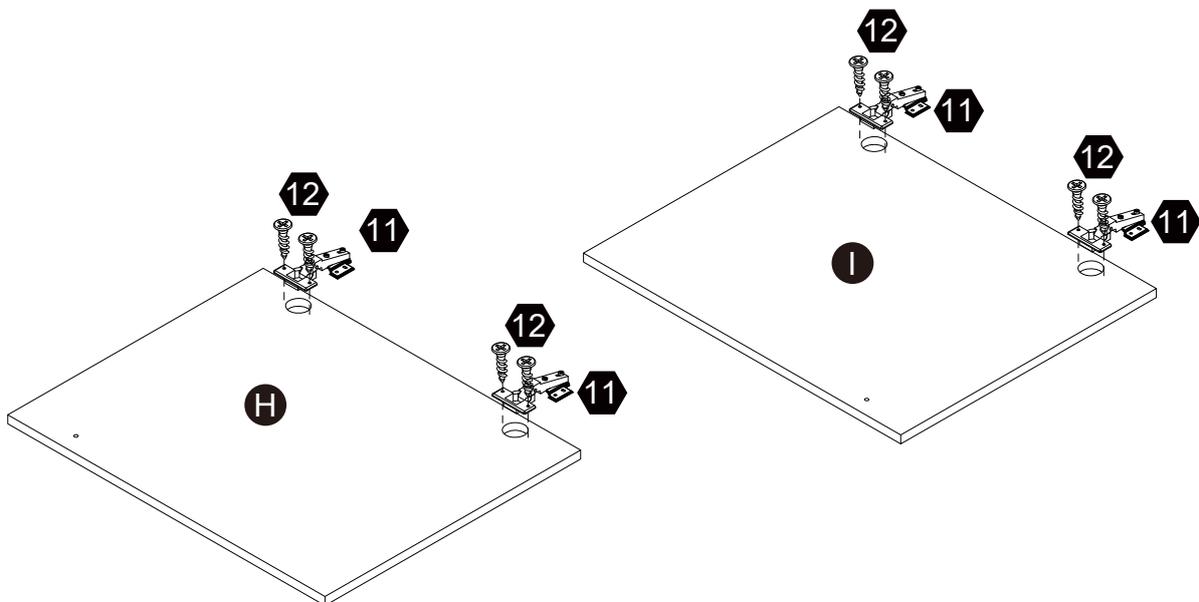

Questions?
Scan Here


Step 11

12  $\varnothing 3.5 \times 14 \text{mm}$ 16 pcs

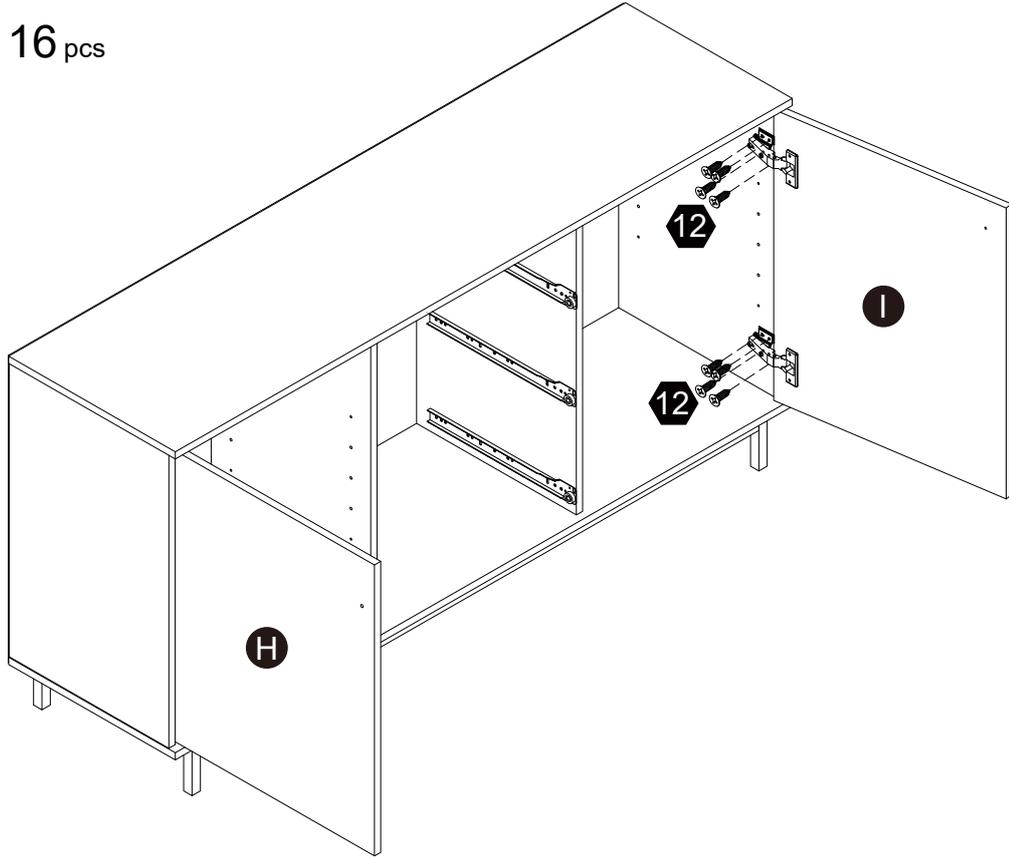

Step 12


13  2 pcs **15**  M4*16mm 2 pcs

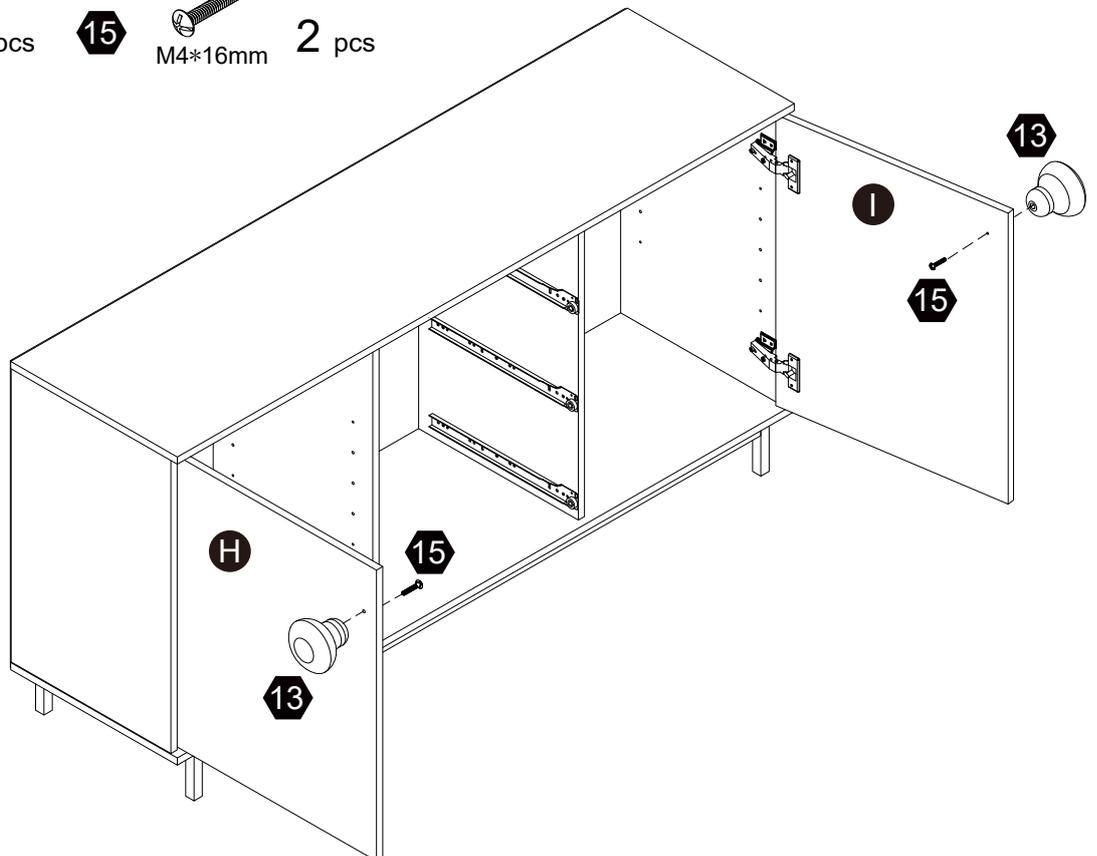

Questions?
Scan Here


Step 13

16  $\varnothing 5 \times 16 \text{mm}$ 16 pcs

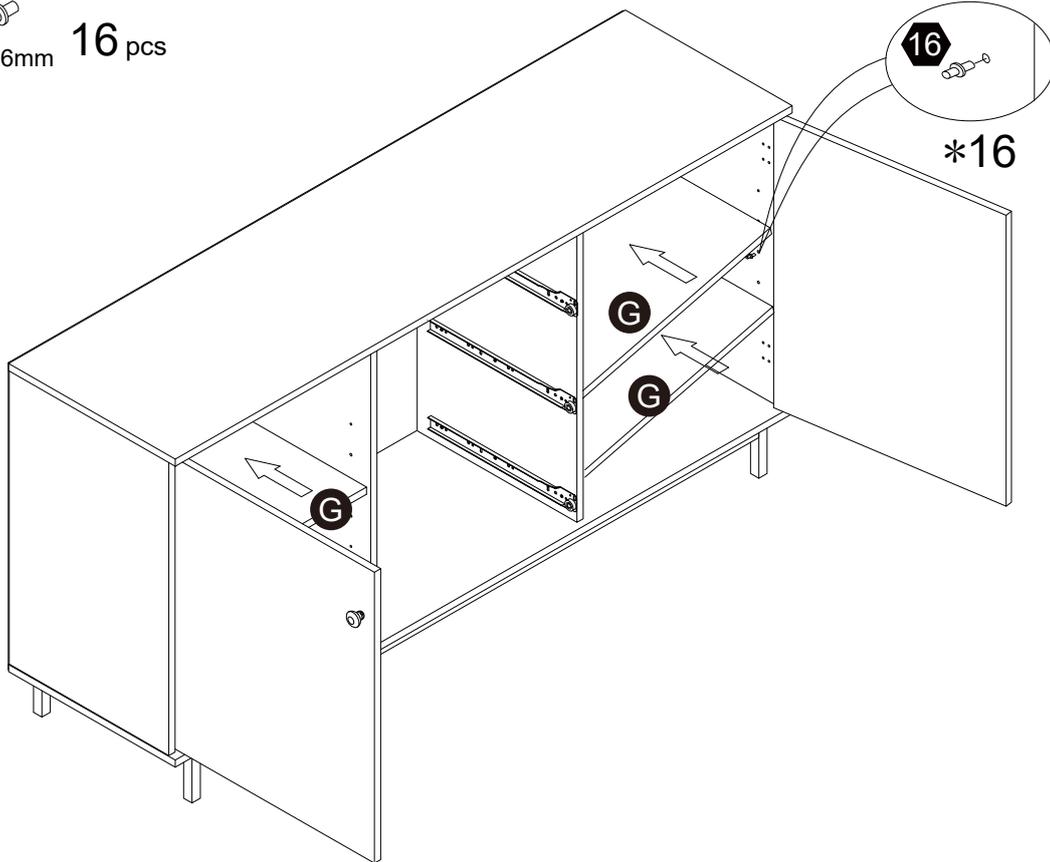

Step 14


2  $\varnothing 15 \times 9 \text{mm}$ 12 pcs **14**  3 pcs **15**  M4*16mm 6 pcs **17**  $\varnothing 4 \times 35 \text{mm}$ 12 pcs

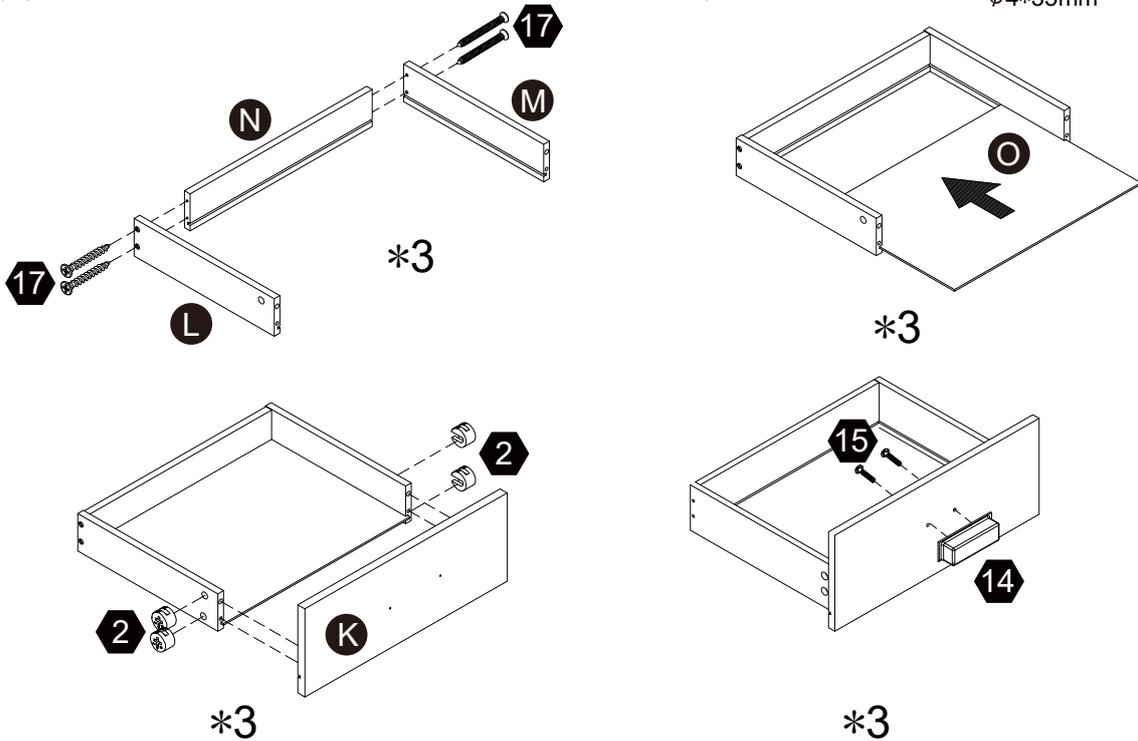


Questions?
Scan Here

Step 15

- 3  12 pcs $\varnothing 3.5 \times 12 \text{mm}$
- 4  3 sets

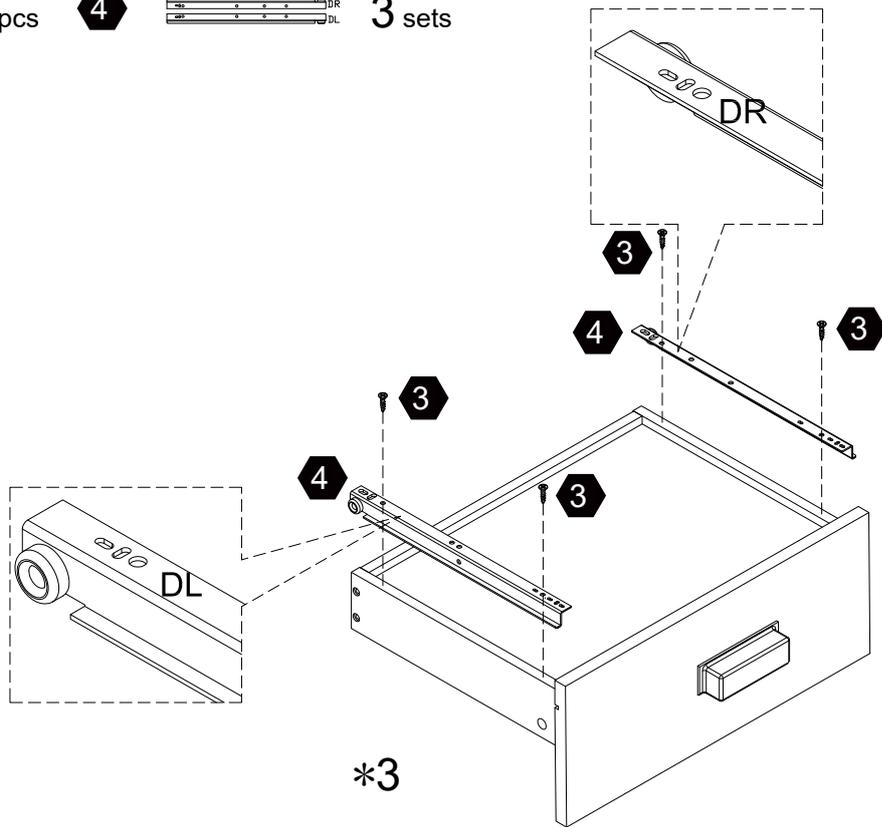

Step 16

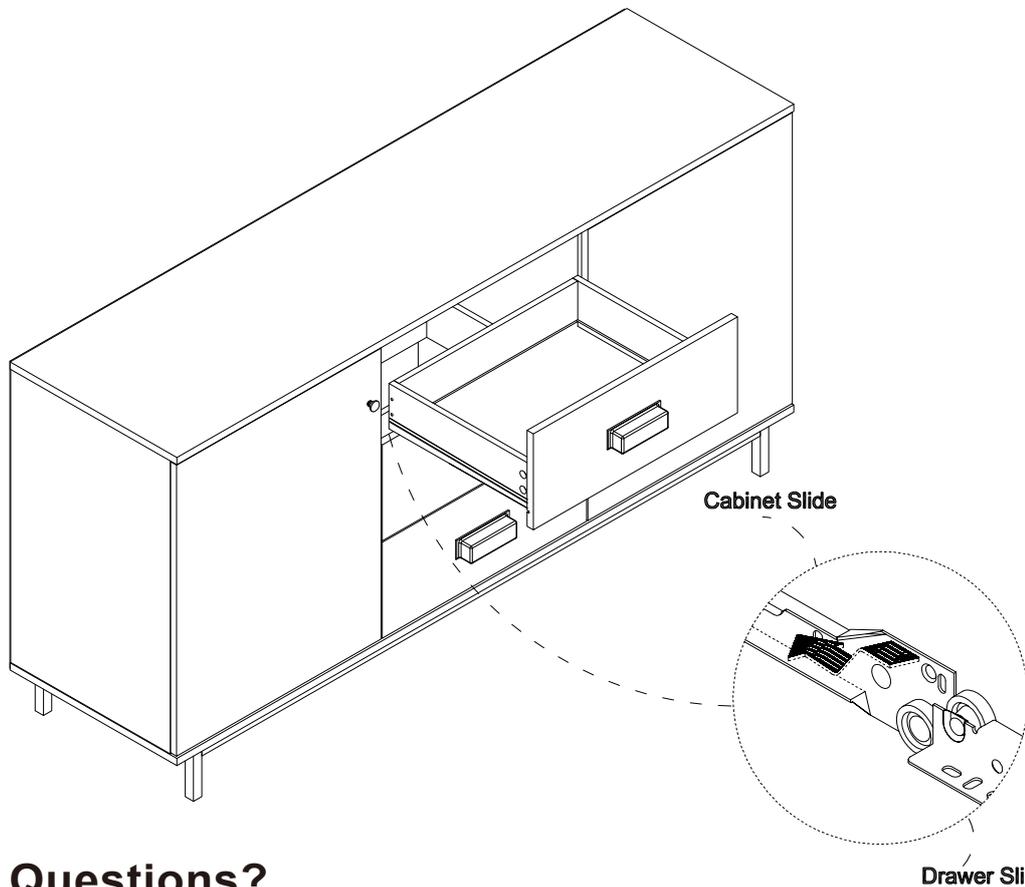

Questions?
Scan Here


Step 17

18



1 set

PART LIST	FIGURE	QUANTITY	DESCRIPTION
18.1		1PC	LONG SCREW (Dia.4mmX38mmL)
18.2		1PC	SHORT SCREW (Dia.4mmX19mmL)
18.3		2PC	METAL "L"BRACKET
18.4		1PC	PLASTIC ANCHOR
18.5		1PC	CABLE

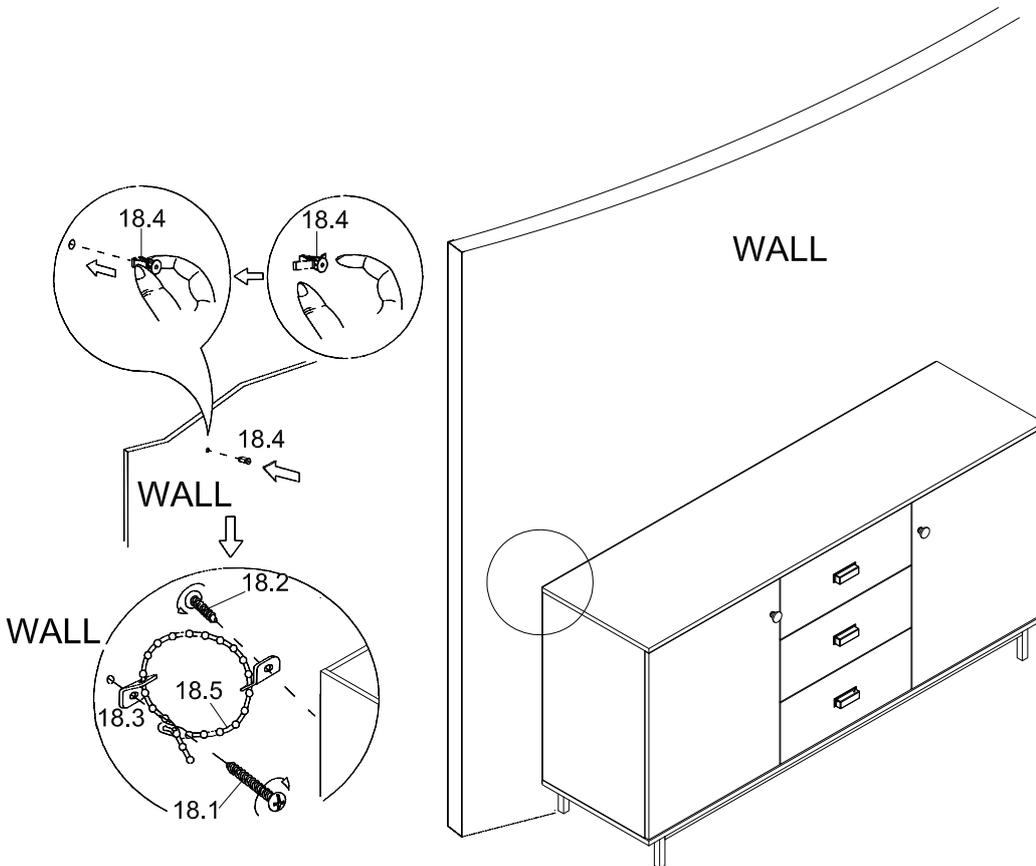

Follow the instructions printed on the plastic bag containing the tipping restraint hardware to attach the tip-over restraints to the unit and the wall.

NOTE: The tipping restraint hardware included is for drywall construction. It will be necessary to drill holes for the wall anchors. Depending upon your wall construction, different anchor hardware may be required. Please contact your local hardware store for assistance.



← **Questions?**
Scan Here