


INSTALLATION INSTRUCTIONS

CWSTR/CWSBR/TRC/BRC/TBC SERIES

TOOLS REQUIRED:

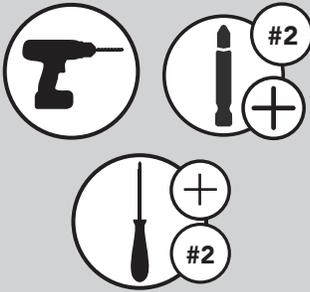

ESTIMATED ASSEMBLY TIME:

10 MIN


CARE AND MAINTENANCE:

Clean with a damp cloth and wipe parts dry.


NOTE:

Note: These units can be unassembled and flipped.


A. (CWSTR SERIES)

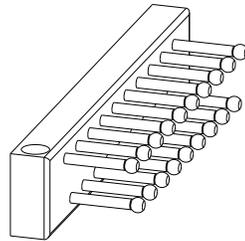


A. (CWSBR SERIES)

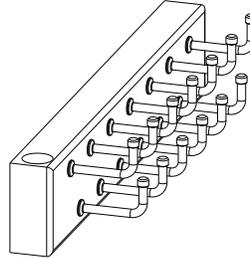


A. (TRC SERIES)

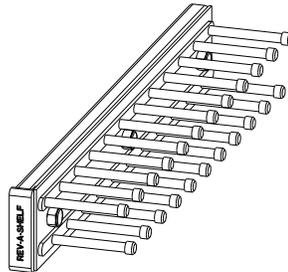

A. (BRC SERIES)

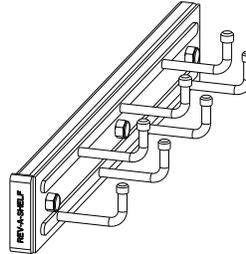


A. (TBC SERIES)

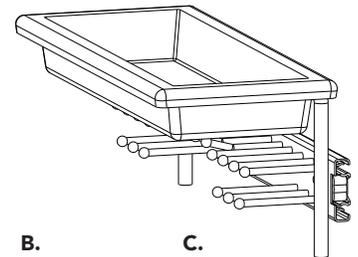


Parts List

No.	Description	Qty
A	Carriage	1
B	Euro Screw	2
C	Wood Screw	2-3

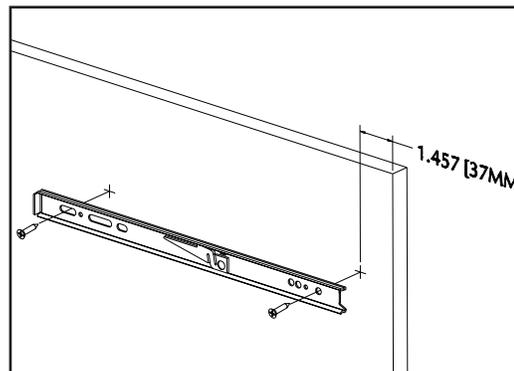

Use wood screws if no system holes are available.

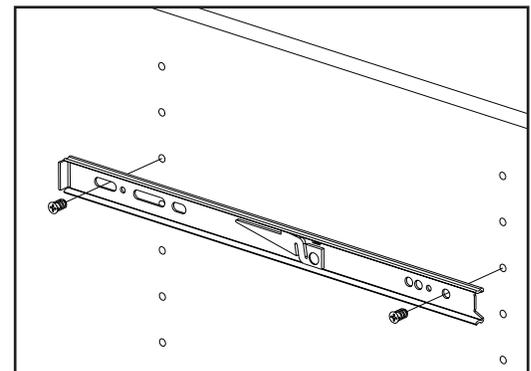

Use Euro screws if system holes are available.

