

ASSEMBLY INSTRUCTIONS

METAL GARDEN SHED

SKU: T-PS23-0406

BE
YOUR
LIFE BUILDER

www.patiowell.com



Patiowell
Metal Garden House
Installation Tutorial
<https://www.patiowell.com/pages/video-T-PS23-0406A>


 saleservice@patiowell.com

SITE PREPARATION


Level the ground surface.



Recommendation: Construct a wooden or concrete base as a foundation.

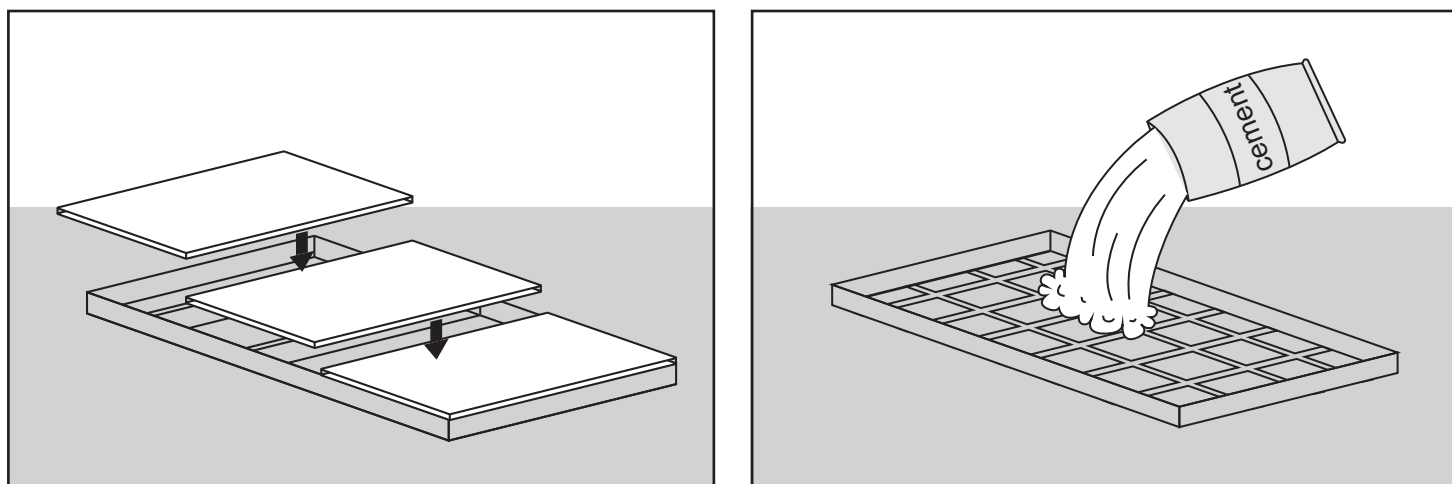

The external dimensions of the product :

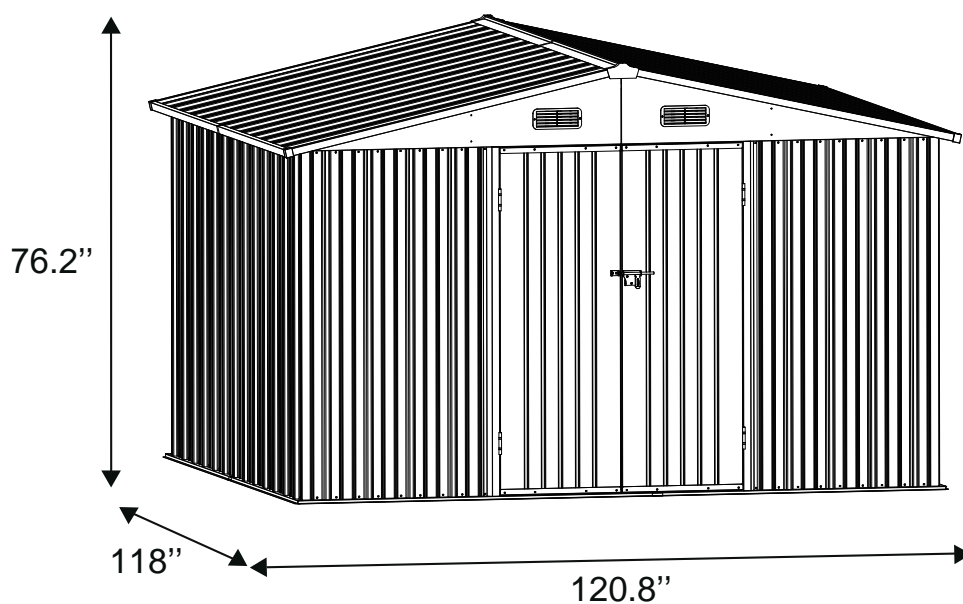

BEFORE STARTING ASSEMBLY






Remove all of the pieces from the 4 packages and spread them out on the ground. Before installation, please check the type and quantity of parts first.

It is recommended to use a clean work surface to spread the parts out and for pre-assembly steps. Review all instructions before you begin, continue to refer to instructions during assembly.

Be sure to follow all steps thoroughly.


Please prepare these components in advance at the beginning of each stage.

REQUIRED TOOLS

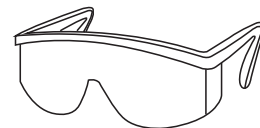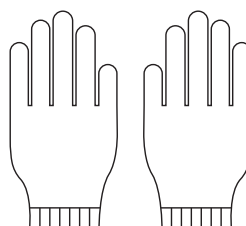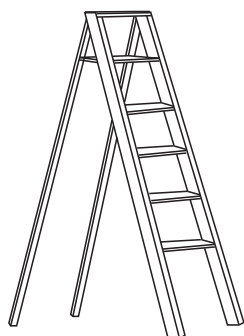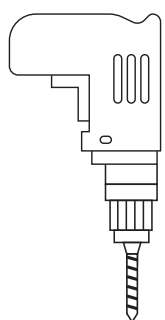

CAUTION

Some parts have steel edges. Please be careful when handling components. Always wear work gloves, eye protection and long sleeves when assembling or performing any maintenance on your shed. Do not attempt assembly on days with strong winds or low temperatures.






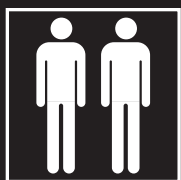


Requires two people and takes 2-3 hours for Installation.
Recommended to wear gloves to avoid scratches.
Please read the manual carefully before installation.












**DO NOT RETURN YOUR UNIT
TO THE STORE**

Contact us first
saleservice@patiowell.com

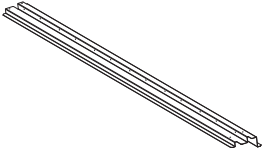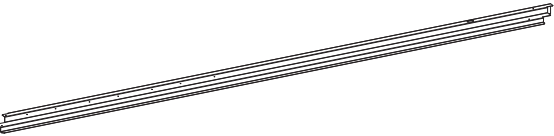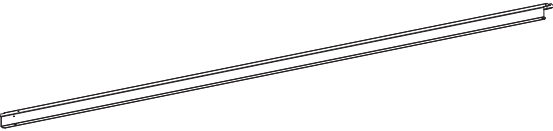



FOUNDATION

1 X2 	2 X2 
BS1L X1 	BS1 X1 
BS2L X1 	BS2 X1 

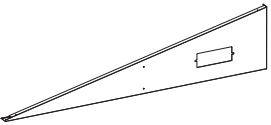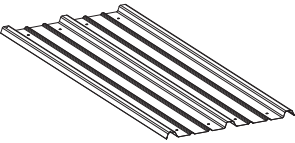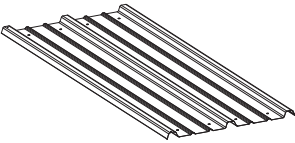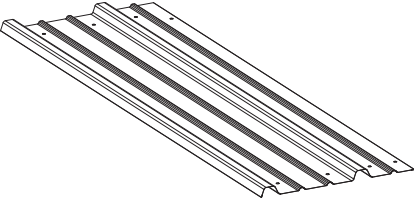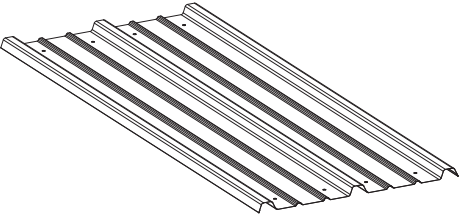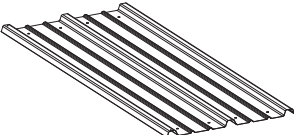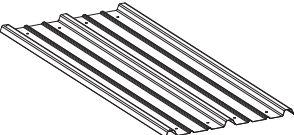




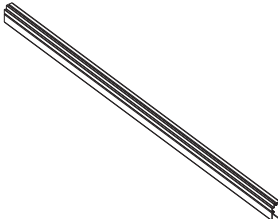


PLATES

W1A X22 	WS2A X4 	WS3A X2 	21L X2 
P3 X4 	P3A X4 	P1 X2 	21R X2 
P2 X2 	P4 X2 	P5 X2 	













PLATES

			
DLA X1	DLB X1	DRB X1	DRA X1






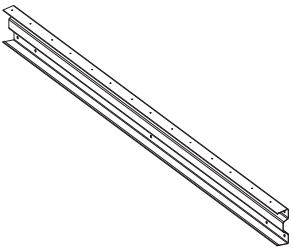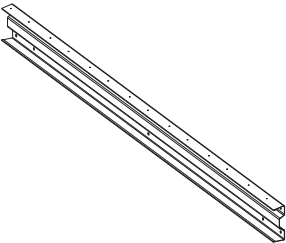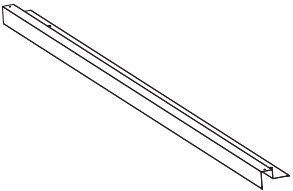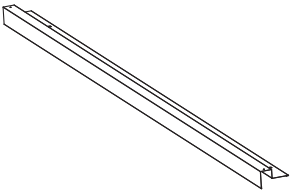

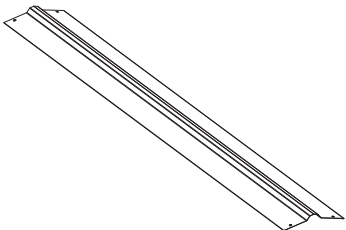



STRIPS

		 DX2 X4
ULA X1	UR1 X1	 7 X1
 8 X1	 9 X4	
 10L X1	 10R X1	


















STRIPS

 <p>13 X4</p>		 <p>14 X4</p>	
 <p>15 X2</p>		 <p>16 X2</p>	
 <p>17 X2</p>		 <p>18 X2</p>	
 <p>19 X2</p>		 <p>20 X4</p>	 <p>GS X2</p>
 <p>C5 X4</p>	 <p>C4LX2</p>	 <p>C4R X2</p>	


STANDARD

			
DG X1	DF X1	DC X2	DH X4
			
C2 X4	GF X4	GR X2	GE X2
			
GC X4	S1 X120	V2 X418	

SCREW


   <p>F1(X519) M4*10</p>	    <p>F2(X52) M4*10</p>
   <p>F3(X32) M5*12</p>	    <p>F4(X5) M6*10</p>
   <p>For GC F5(X4) M4*16</p>	

CONTENTS

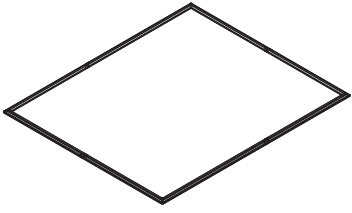


Bottom frame

10-12
(page)

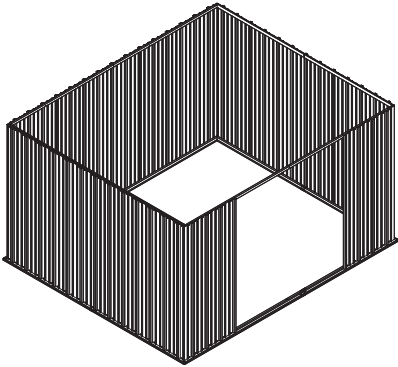


Wall

12-20
(page)

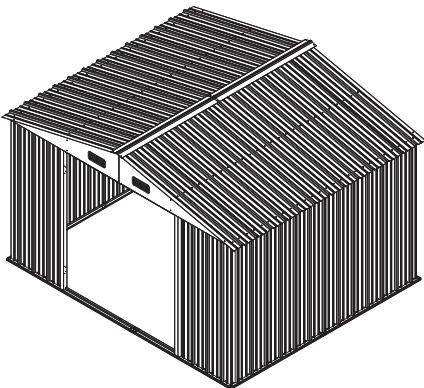

Roof

21-30
(page)

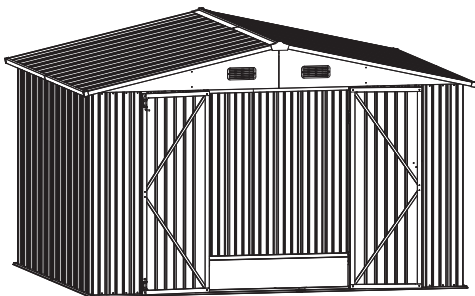


Door

31-37
(page)



ATTENTION

For this step only, To ensure a better understanding and installation experience, please **Scan The QR Code** next to it to watch a video tutorial that will assist you in completing the installation.

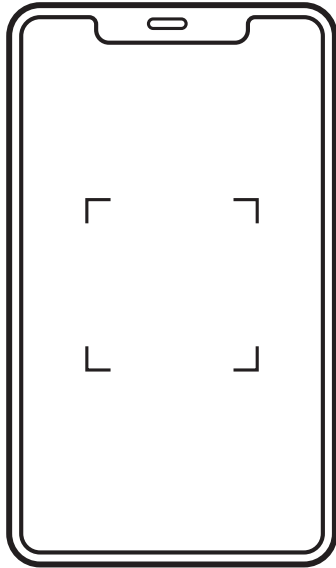


<https://www.patiowell.com/pages/video-t-ps22-0096-8?step1>


STEP 1

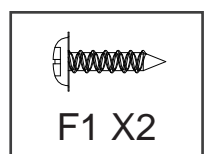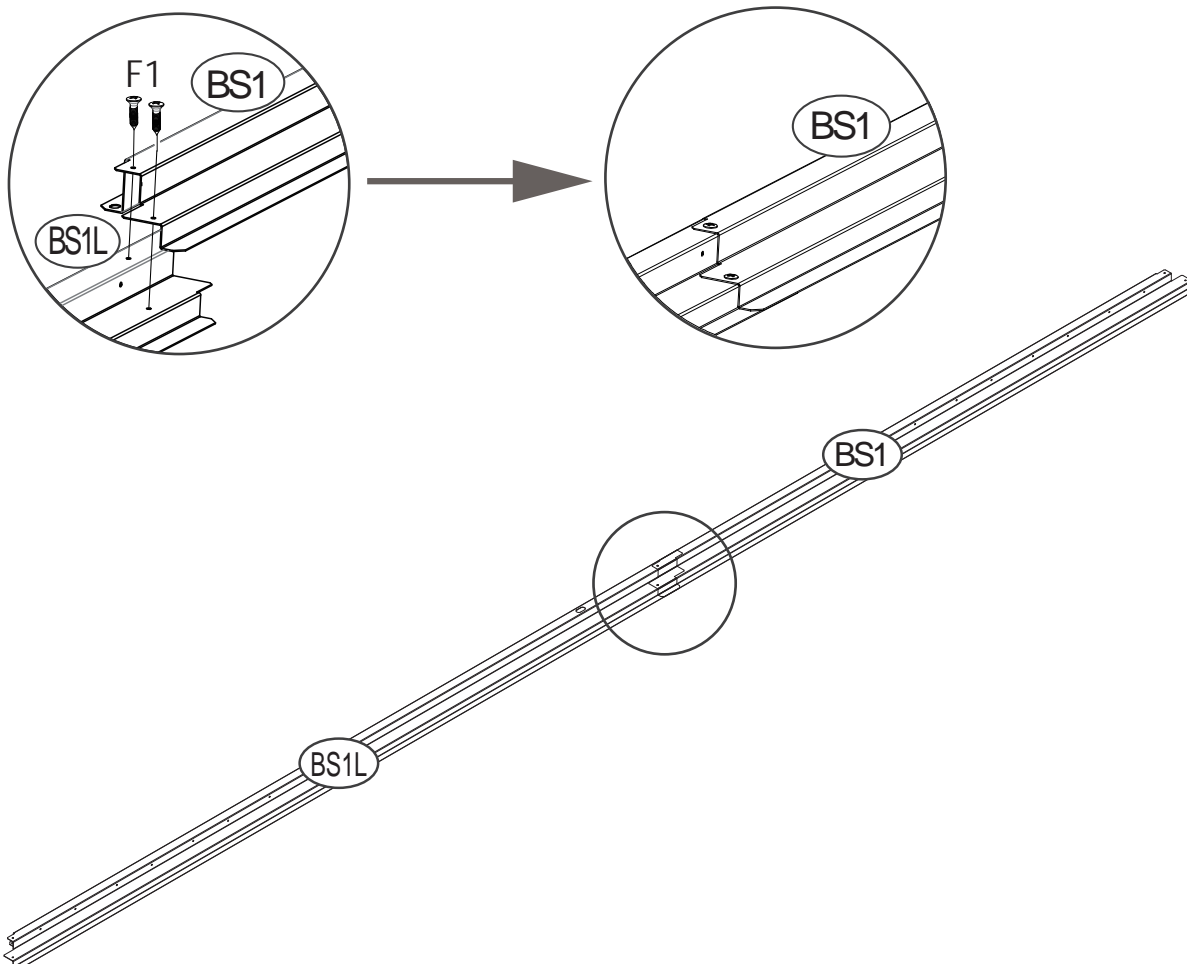


STEP 2

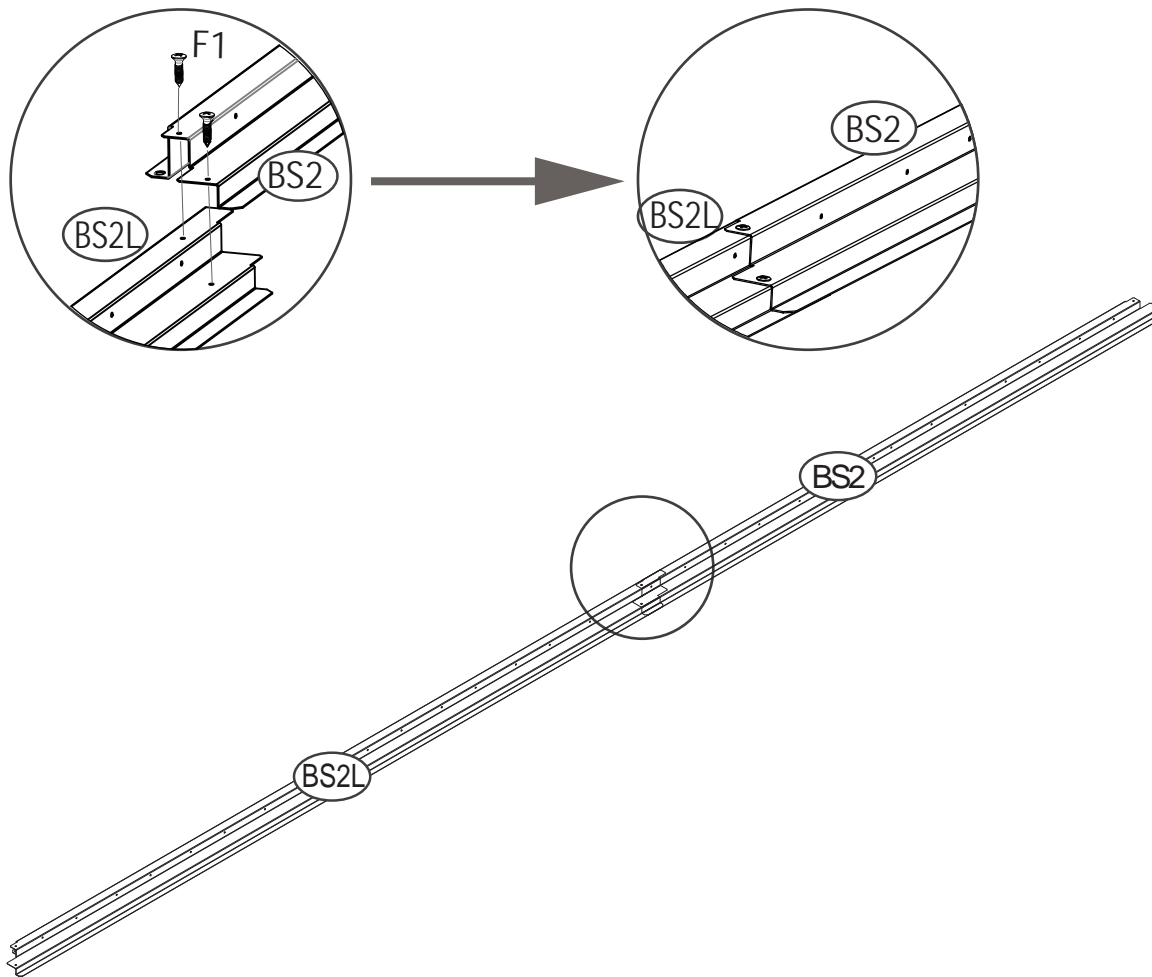

STEP 3

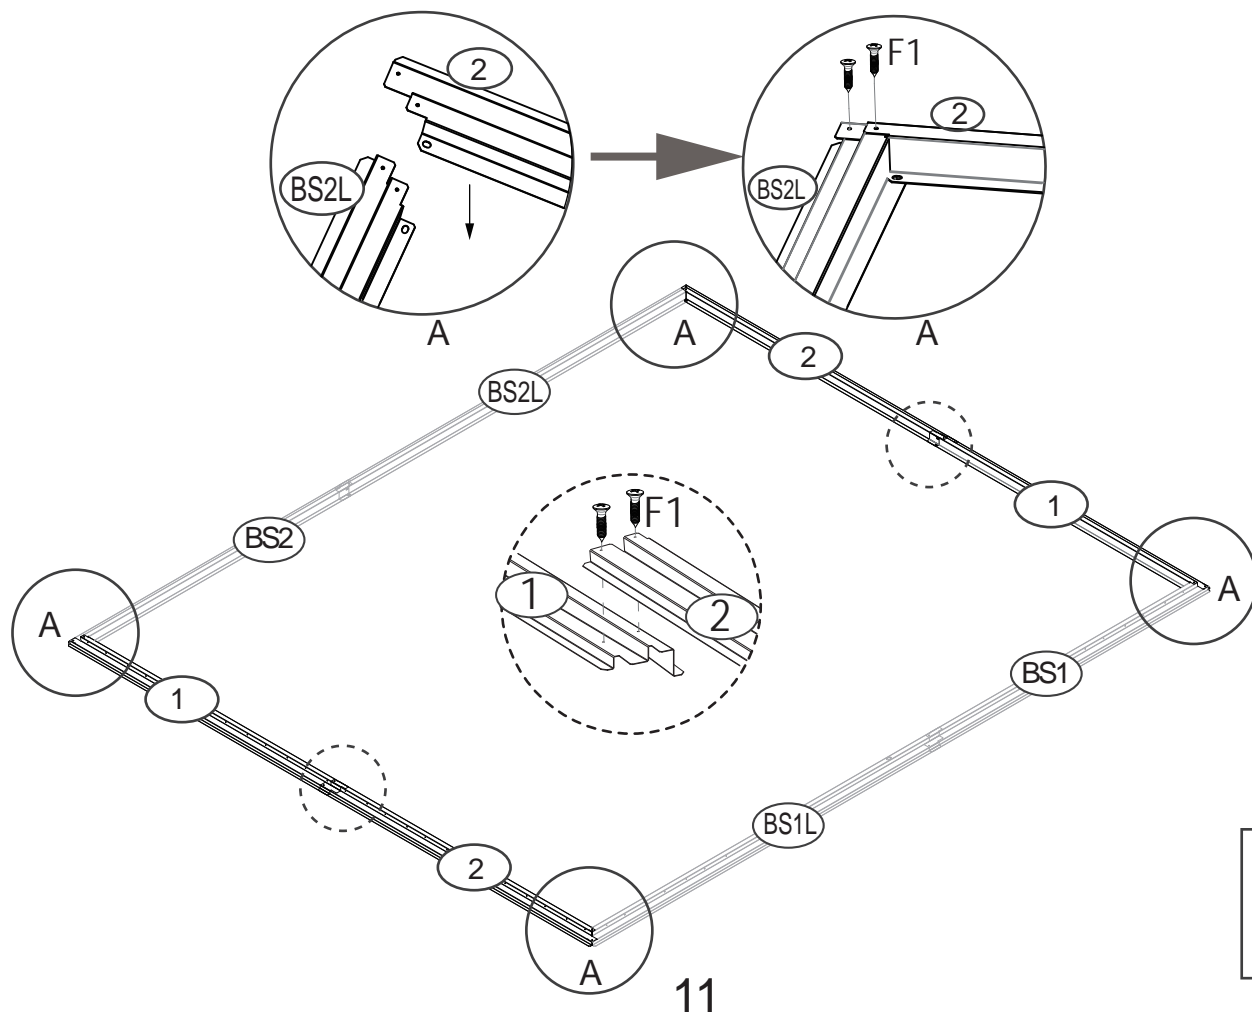


STEP 4

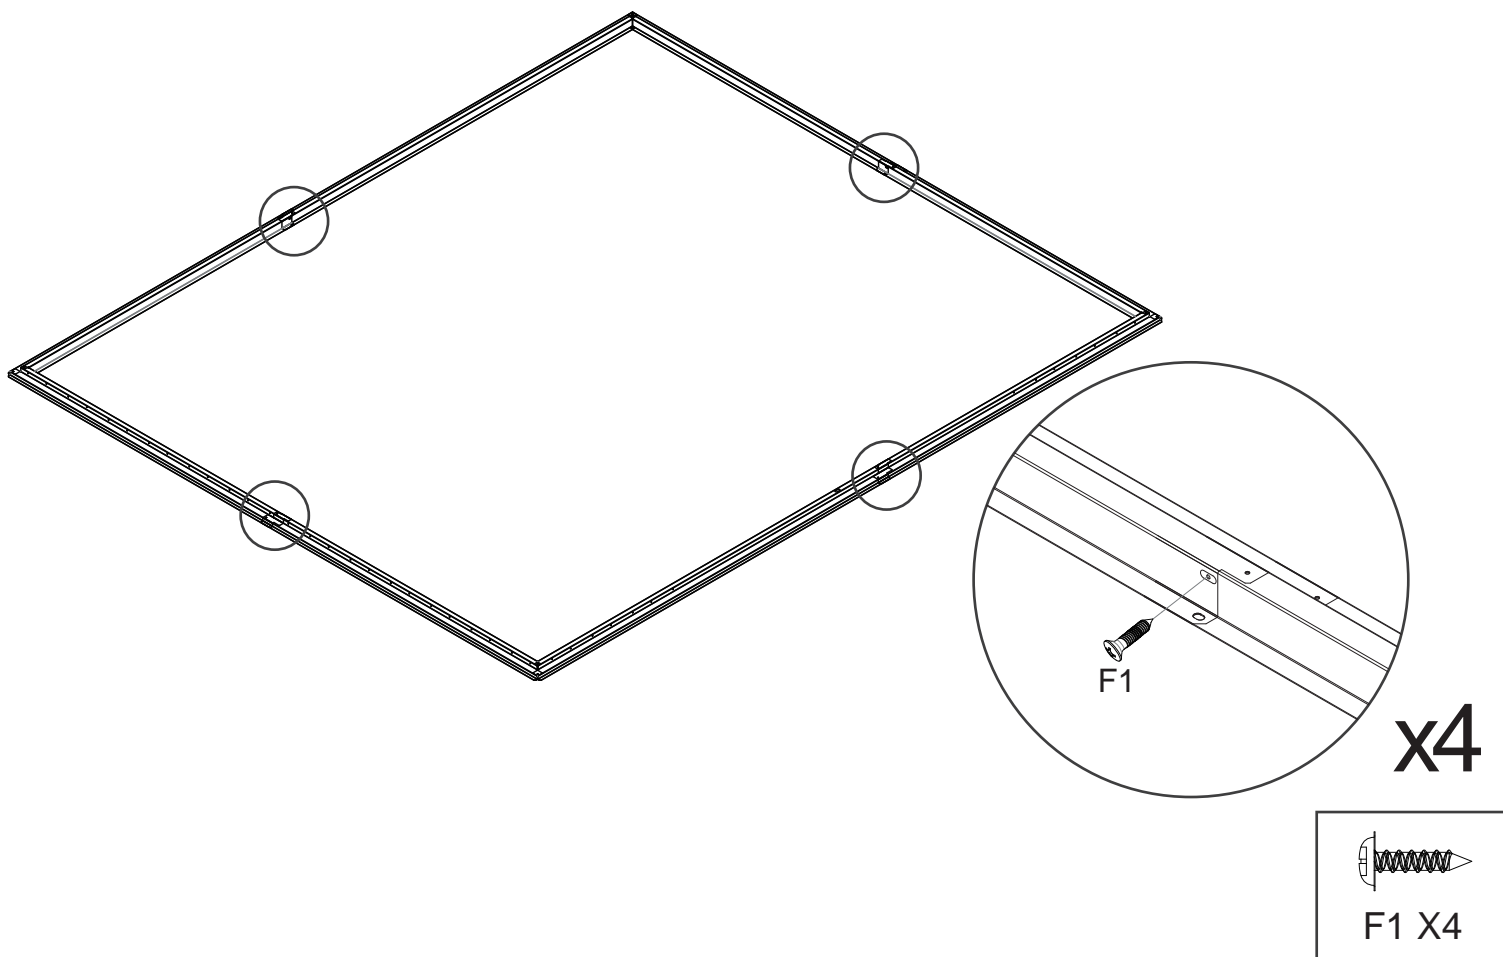


STEP 5


Tips: Align the gasket with the hole, and then use the electric drill to drill the V2 into the hole.

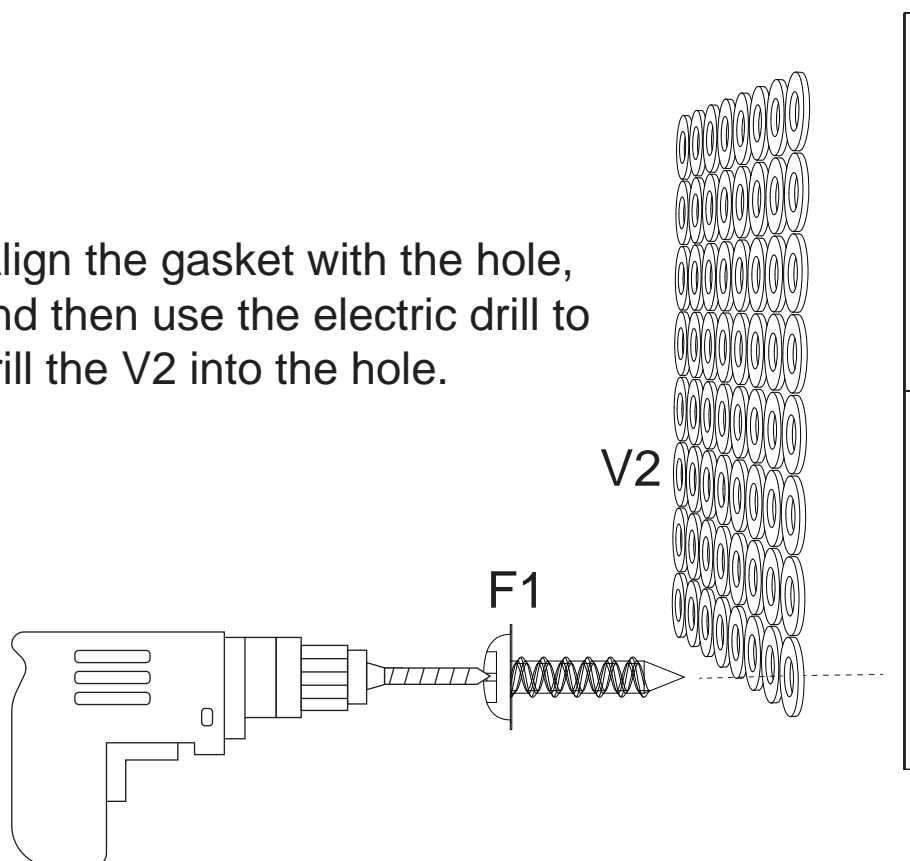

STEP 6

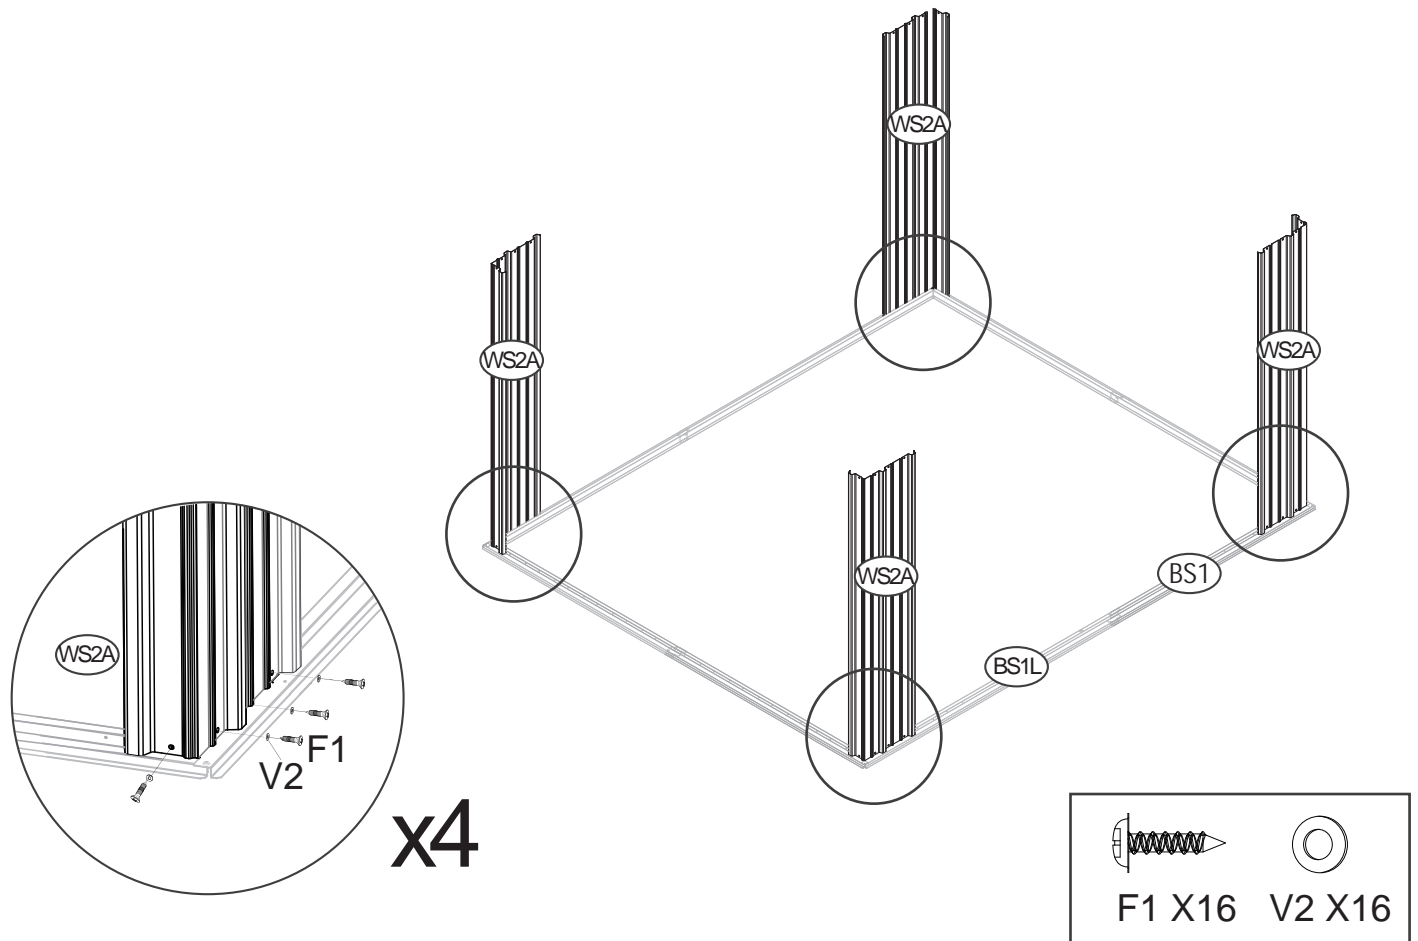


STEP 7

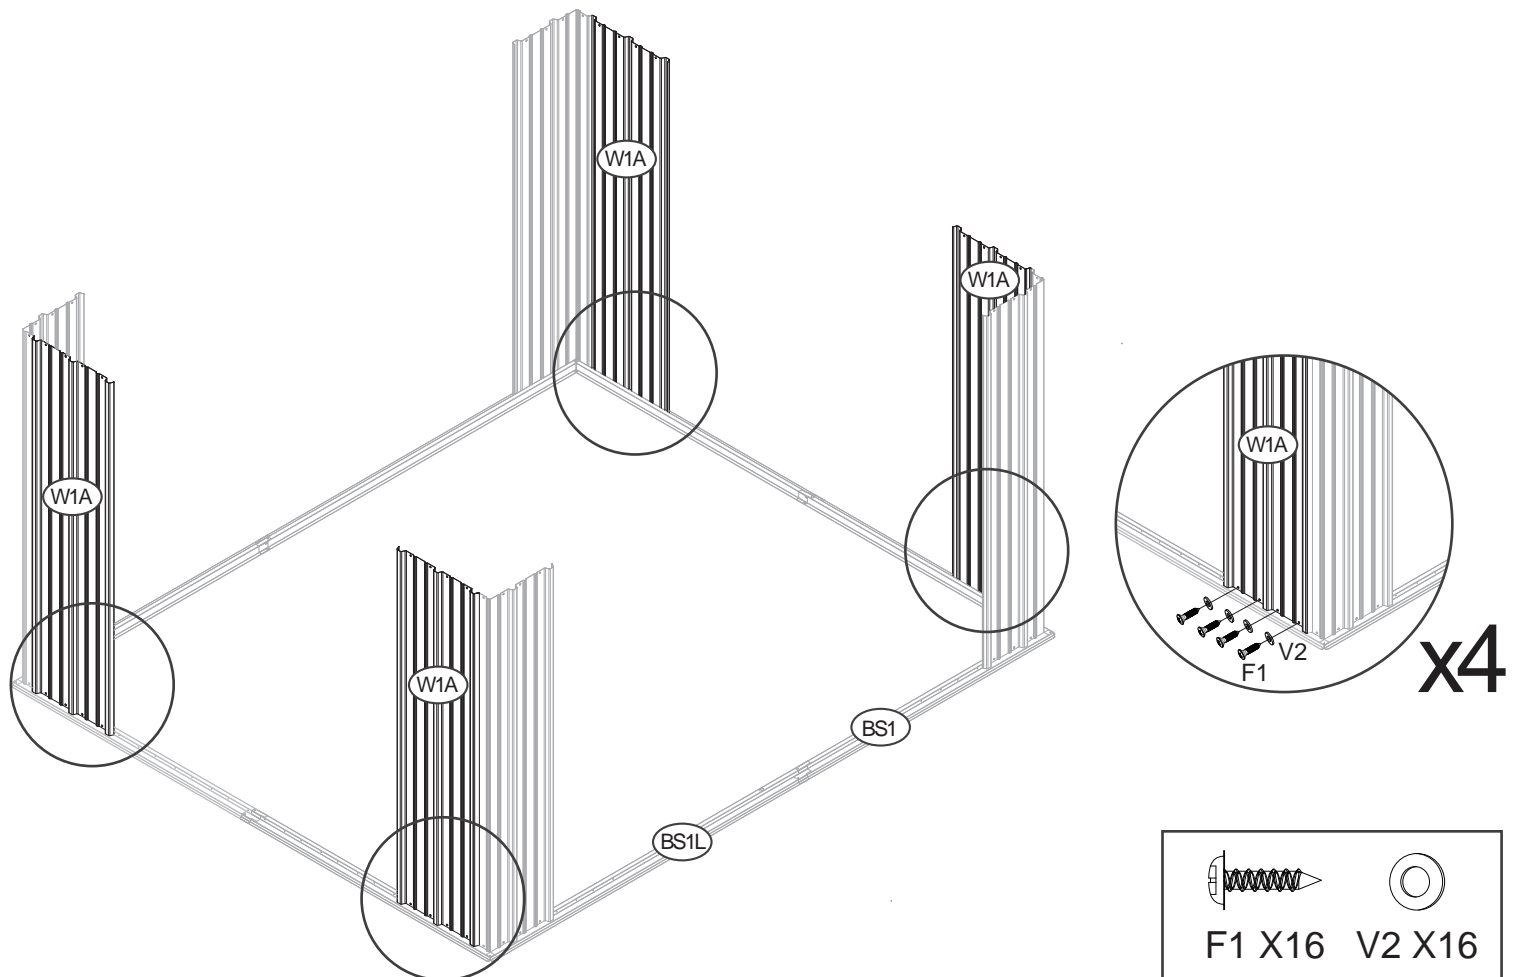


ATTENTION

For this step only, To ensure a better understanding and installation experience, please **Scan The QR Code** next to it to watch a video tutorial that will assist you in completing the installation.


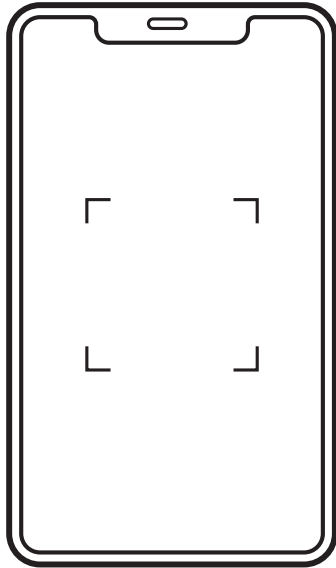


<https://www.patiowell.com/pages/video-t-ps22-0096-8?step2>

STEP 8

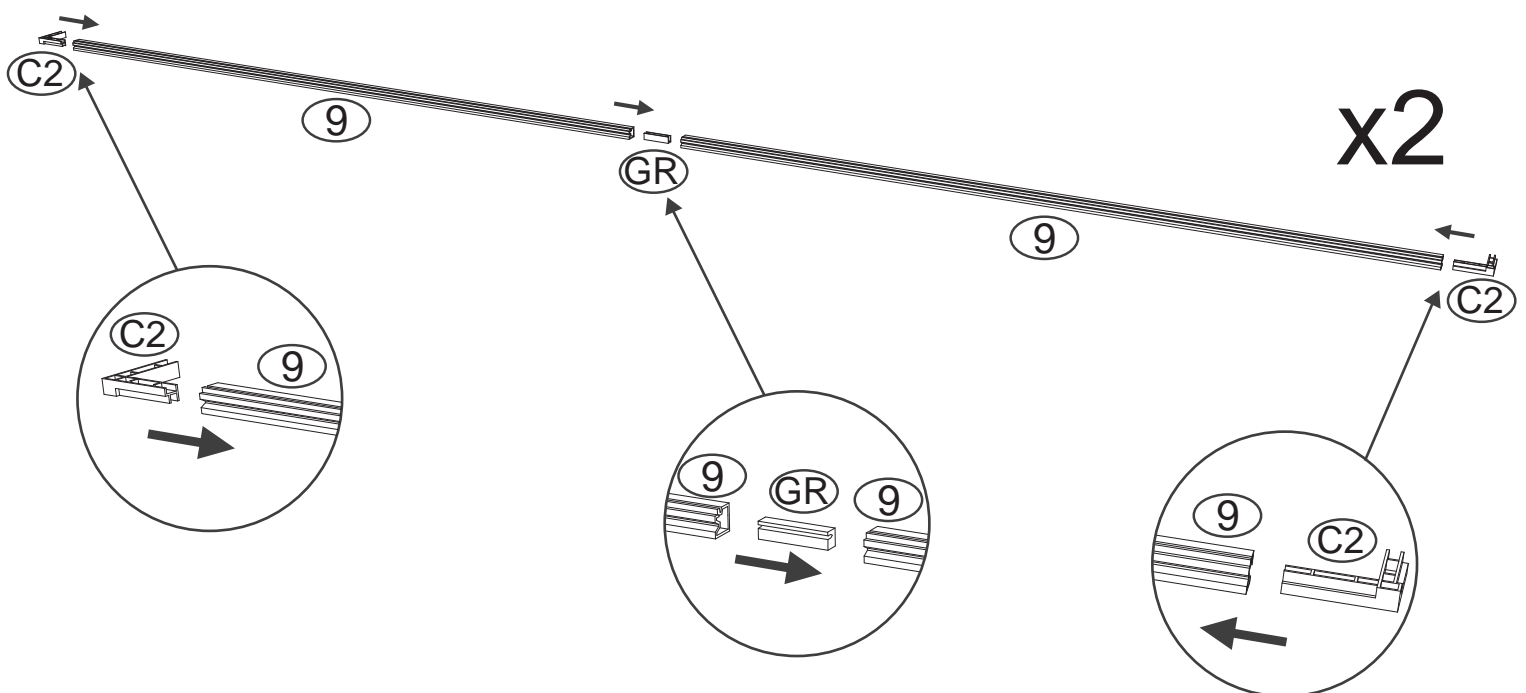


STEP 9

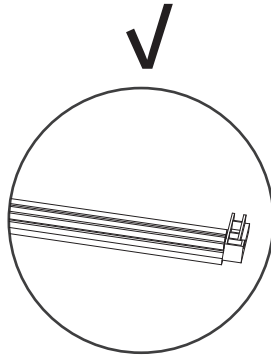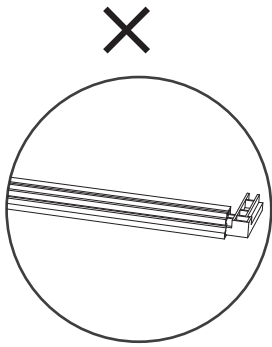

Note:
Connector must fit.

STEP 10

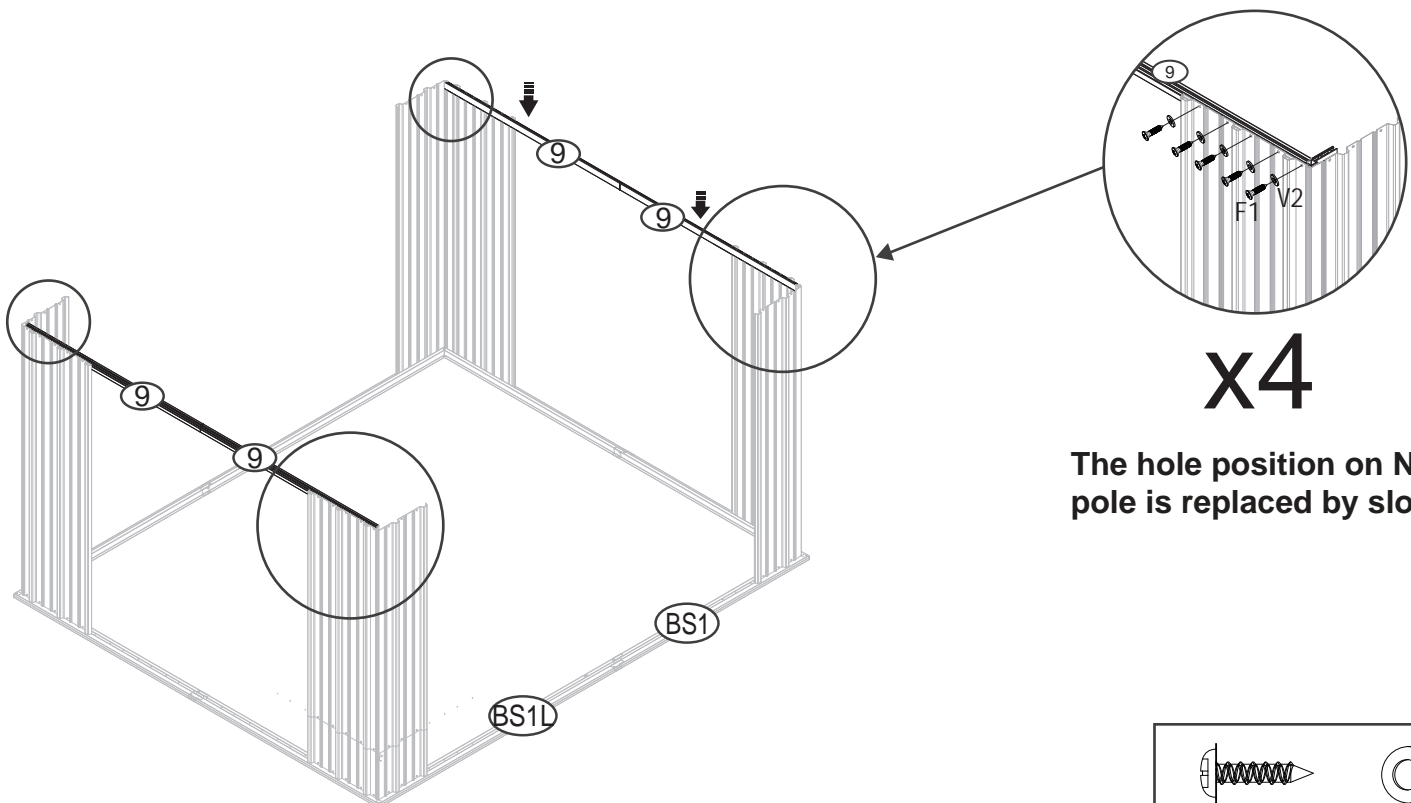


x4

The hole position on No. 9 pole is replaced by slot.




F1 X20 V2 X20


STEP 11

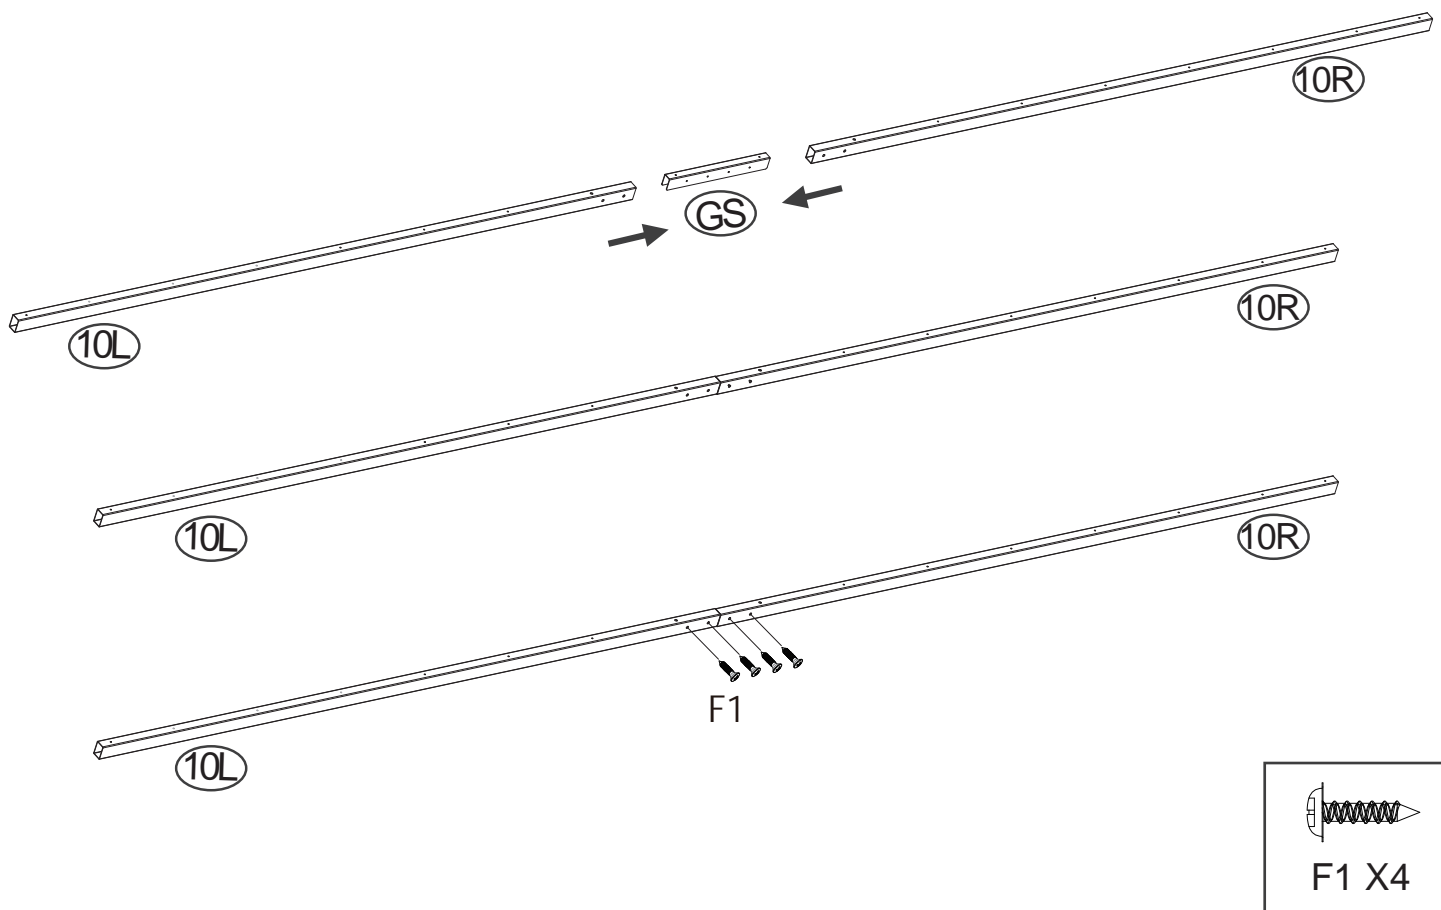


STEP 12

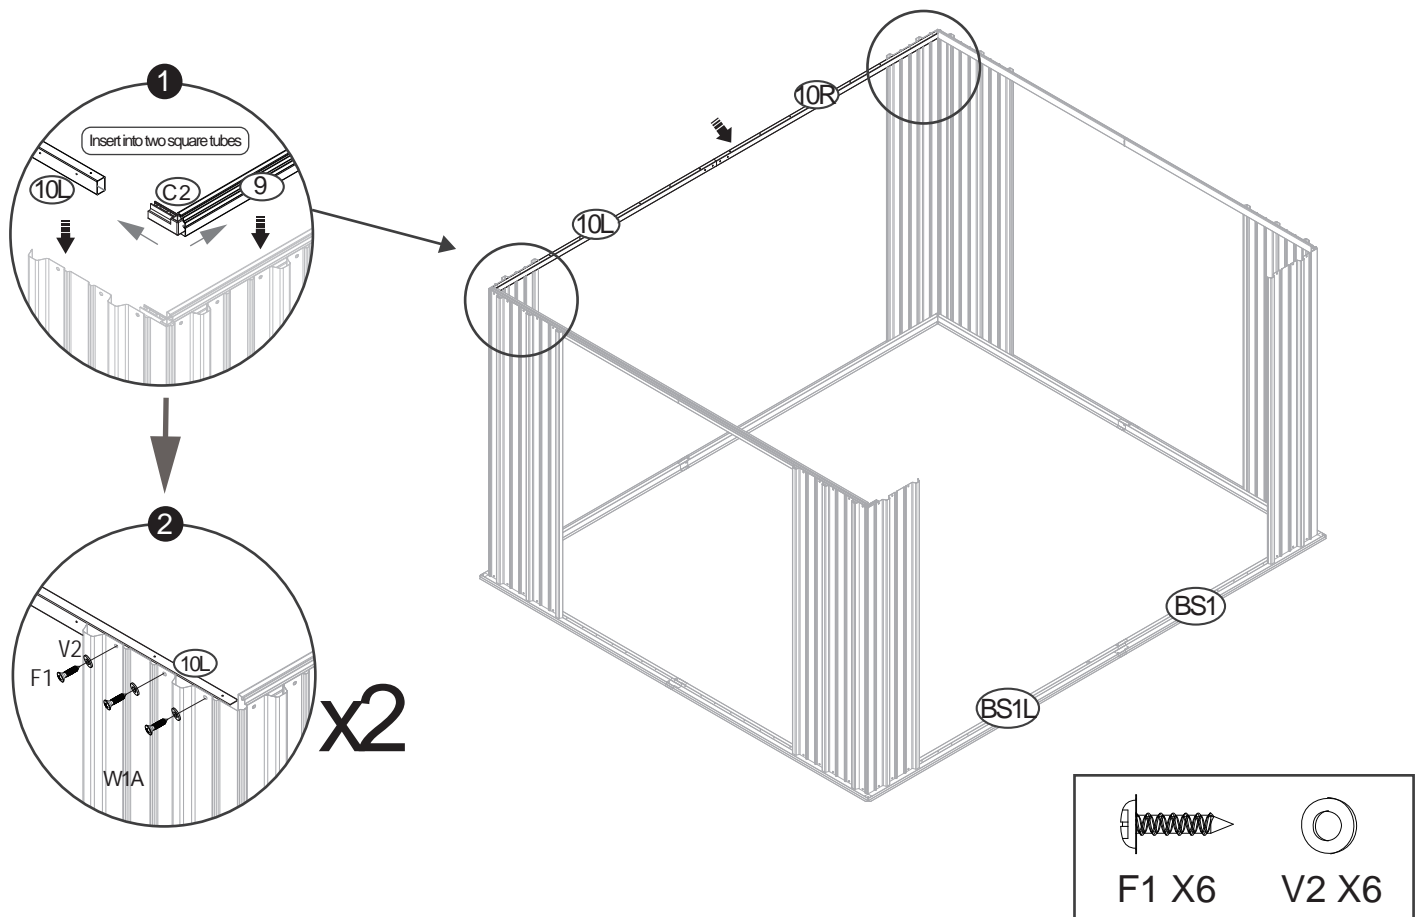

STEP 13

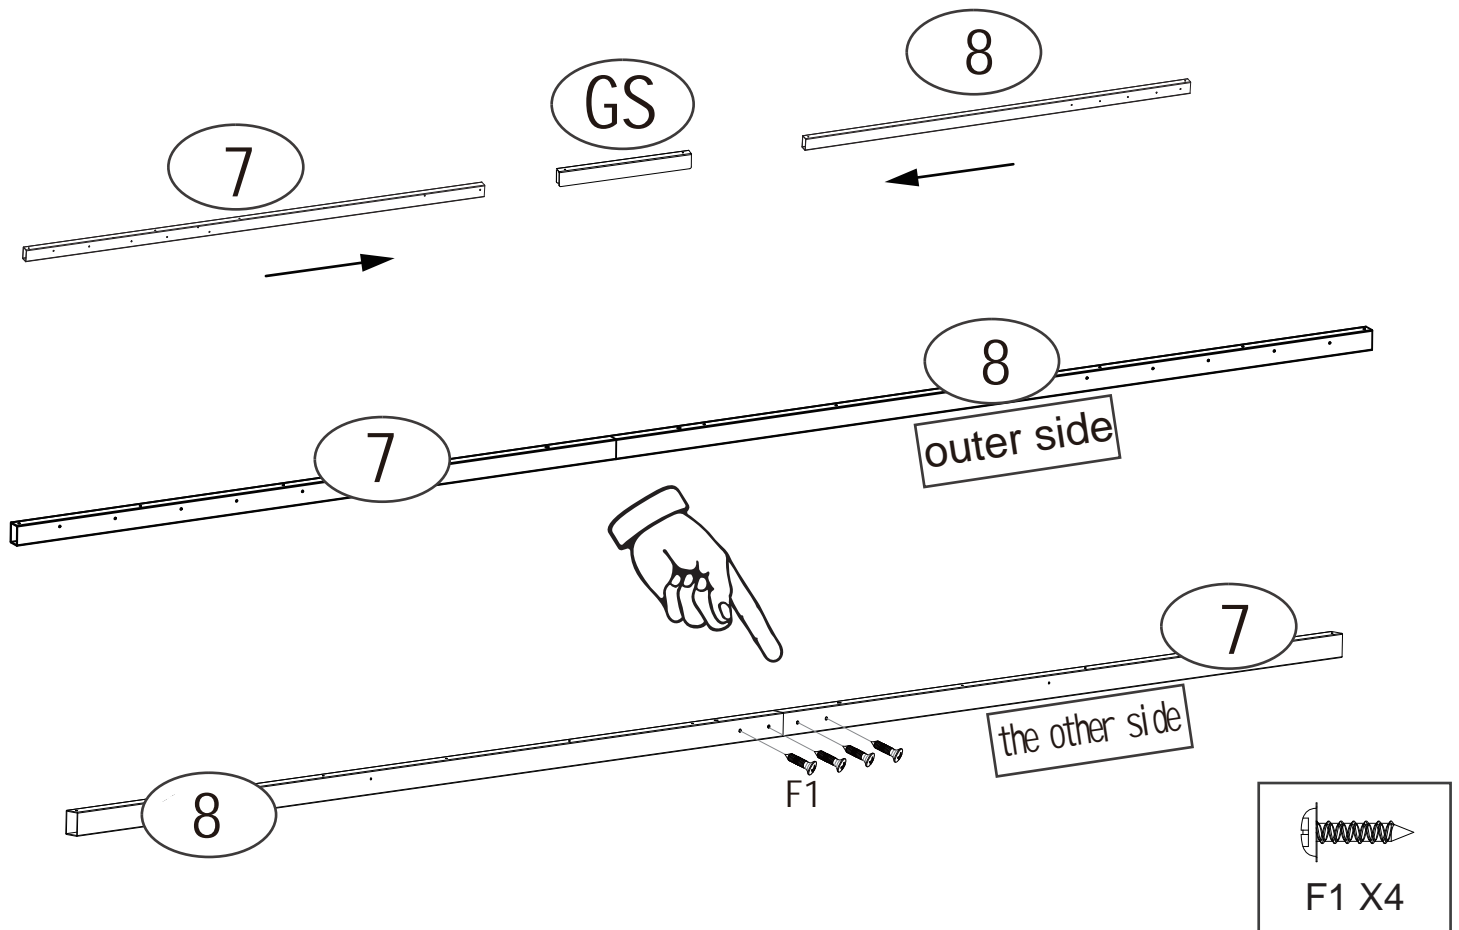


STEP 14

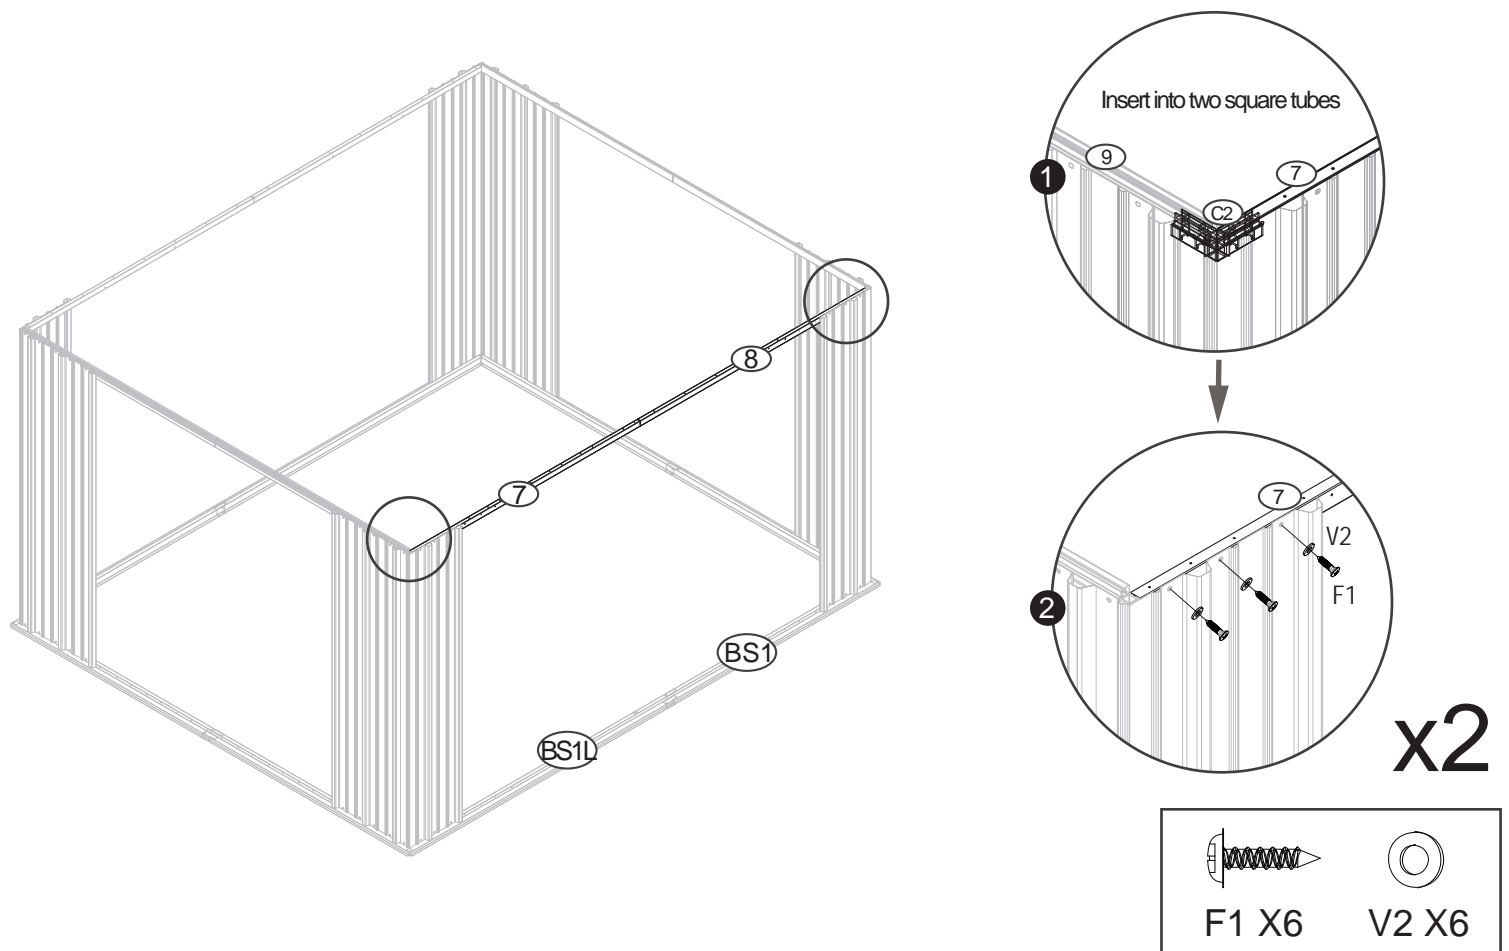



ATTENTION

For this step only, To ensure a better understanding and installation experience, please **Scan The QR Code** next to it to watch a video tutorial that will assist you in completing the installation.

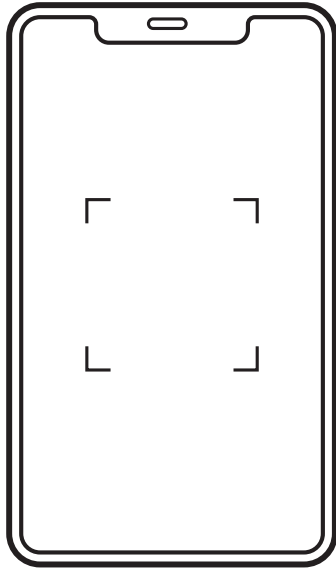


<https://www.patiowell.com/pages/video-t-ps22-0096-8?step3>


STEP 15

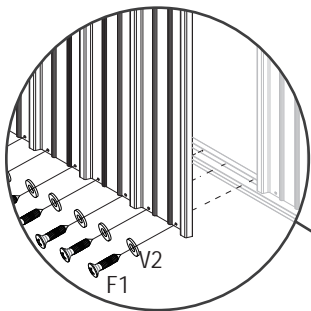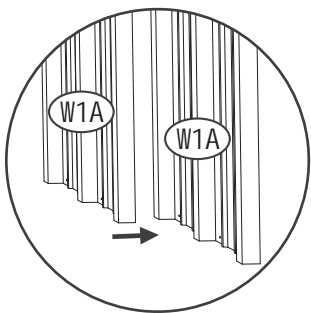


In order to facilitate the positioning, it is recommended that the screws at the bottom be driven first.

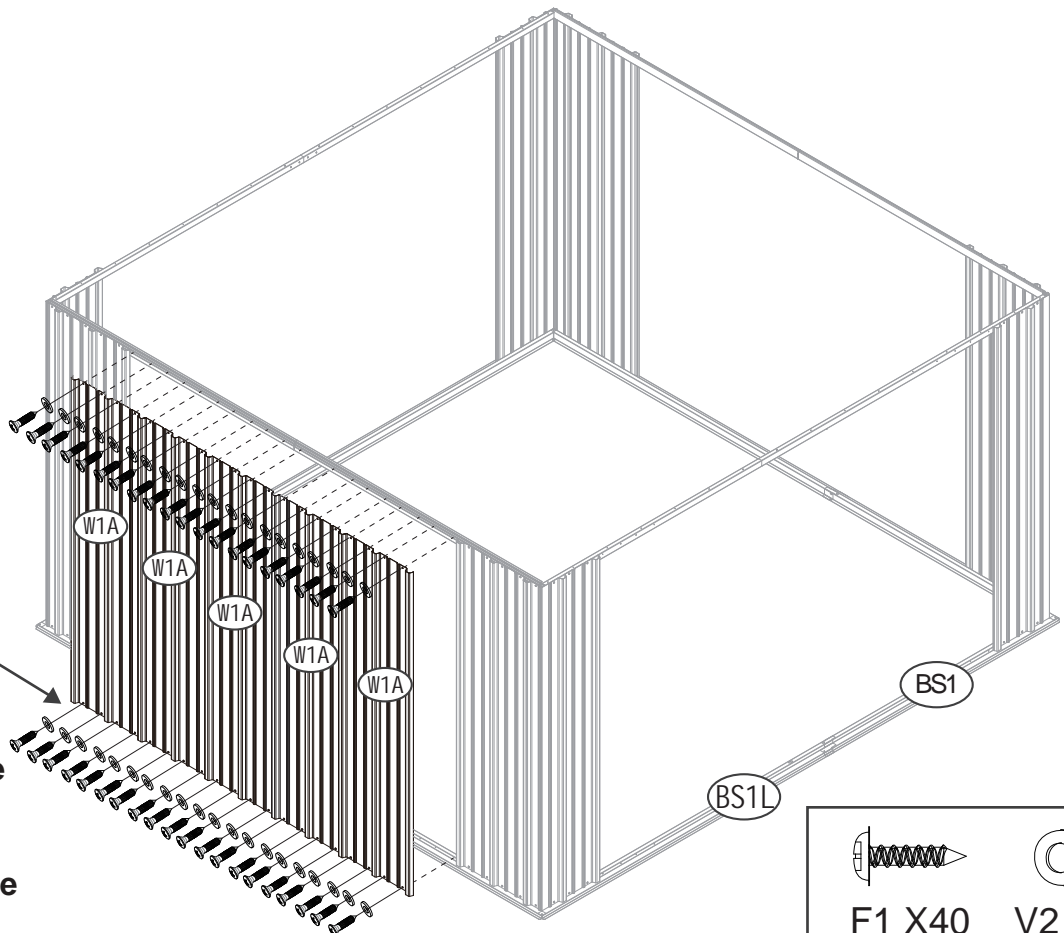


STEP 16

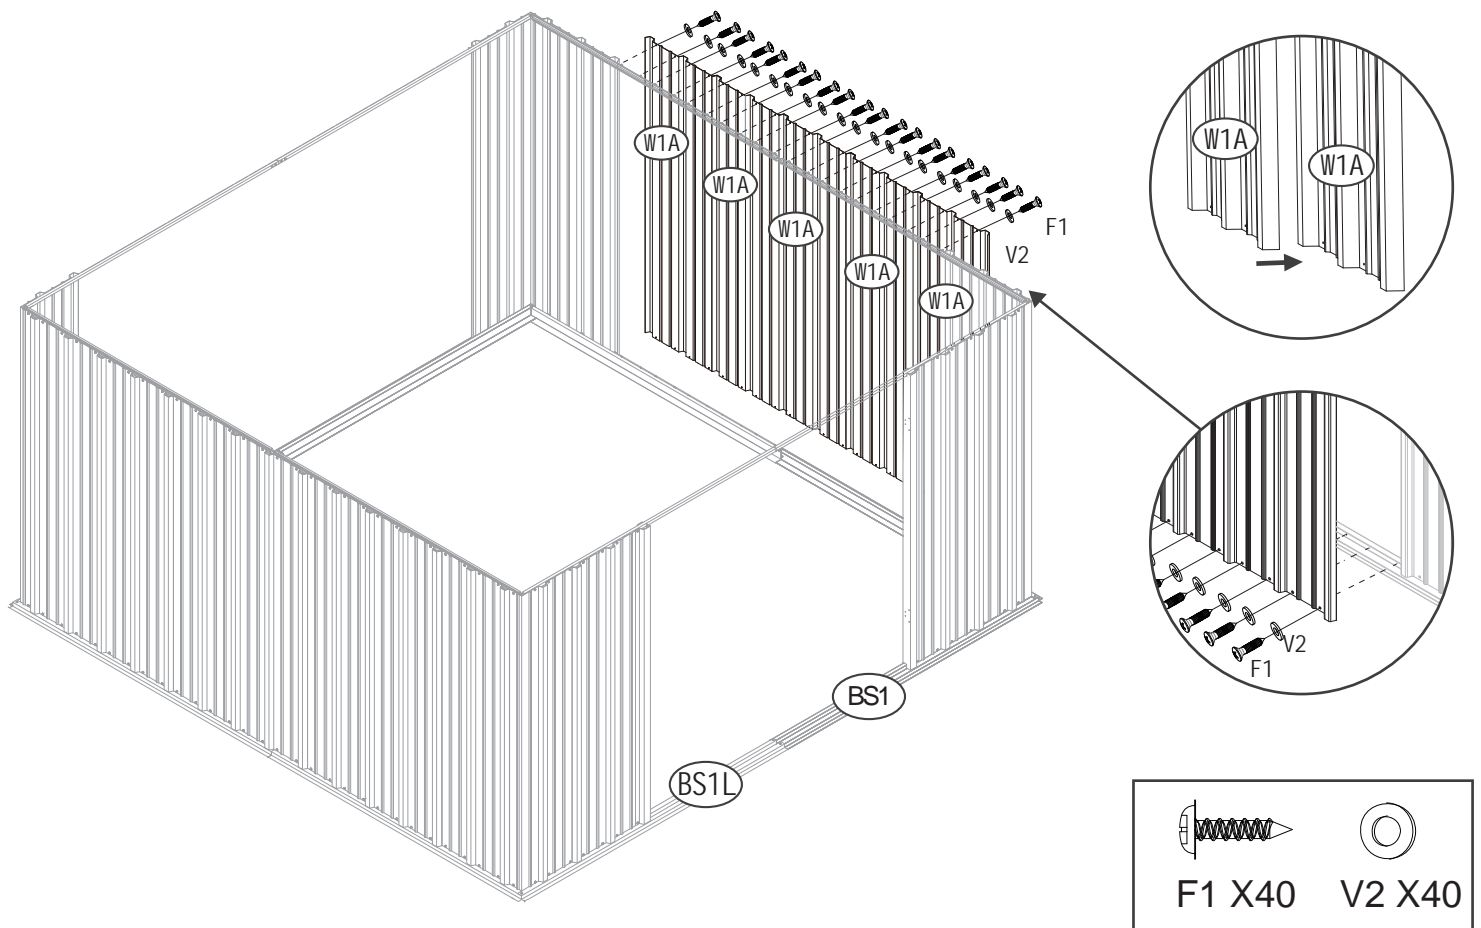



STEP 17

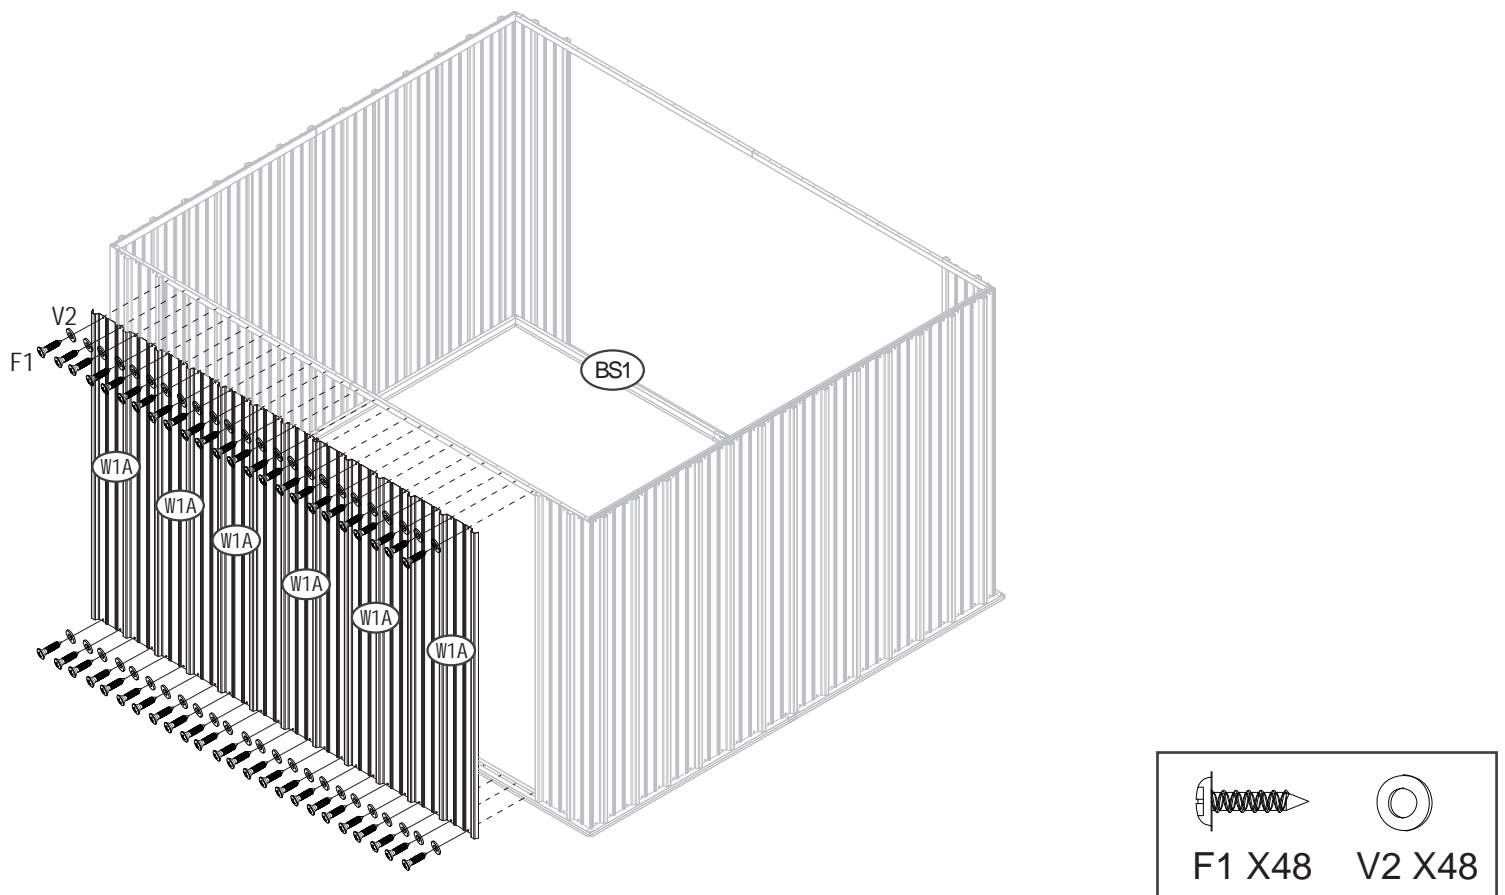


STEP 18

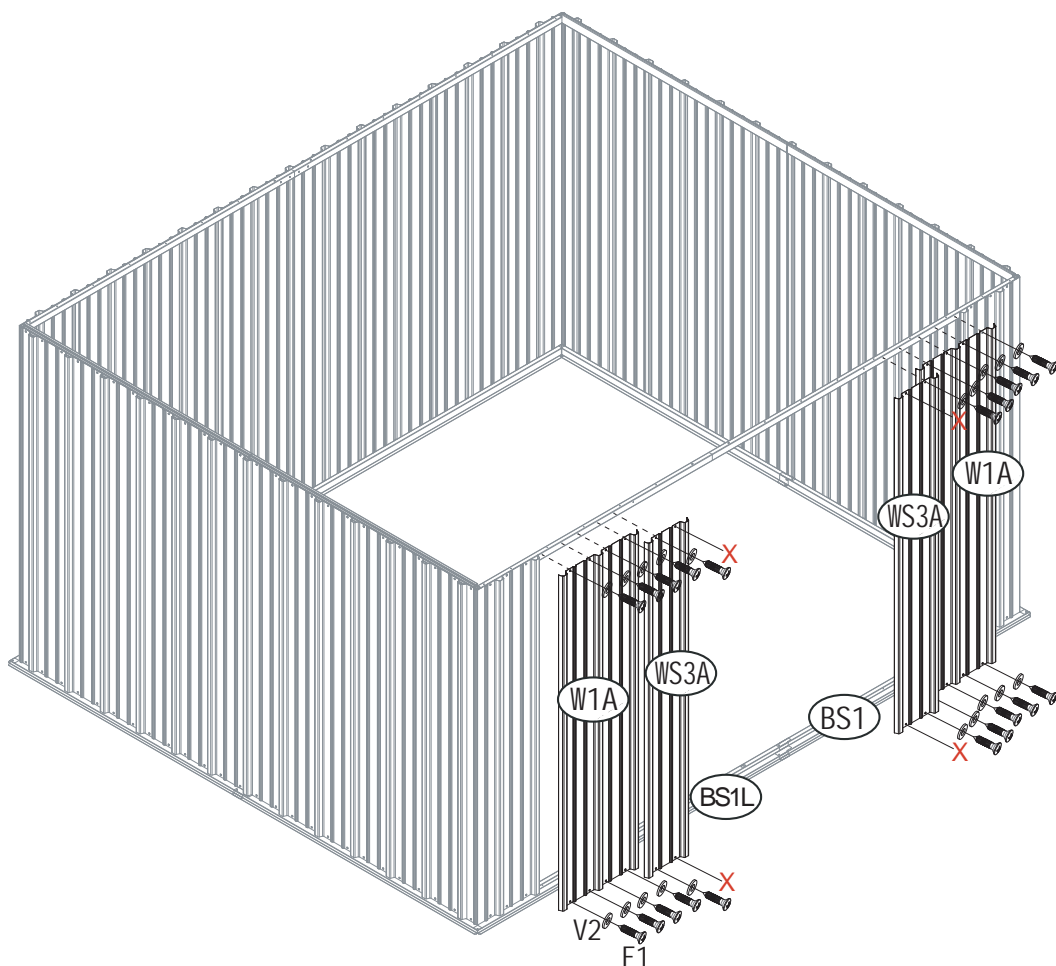

STEP 19

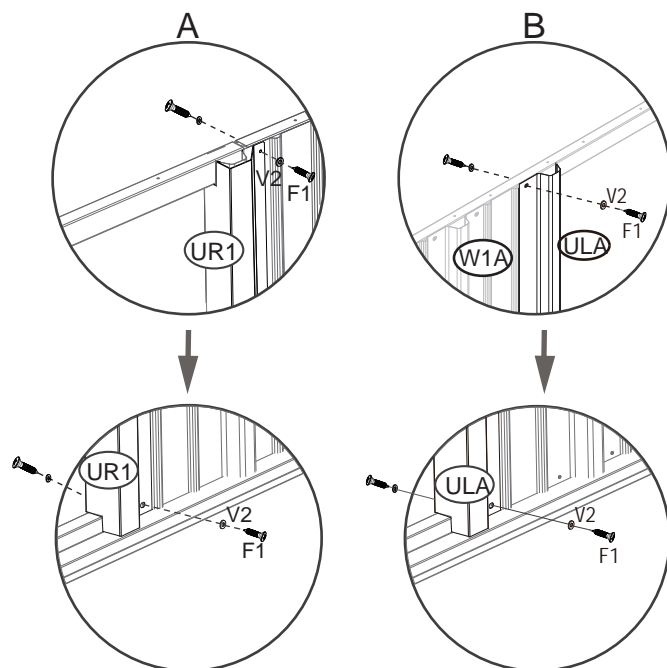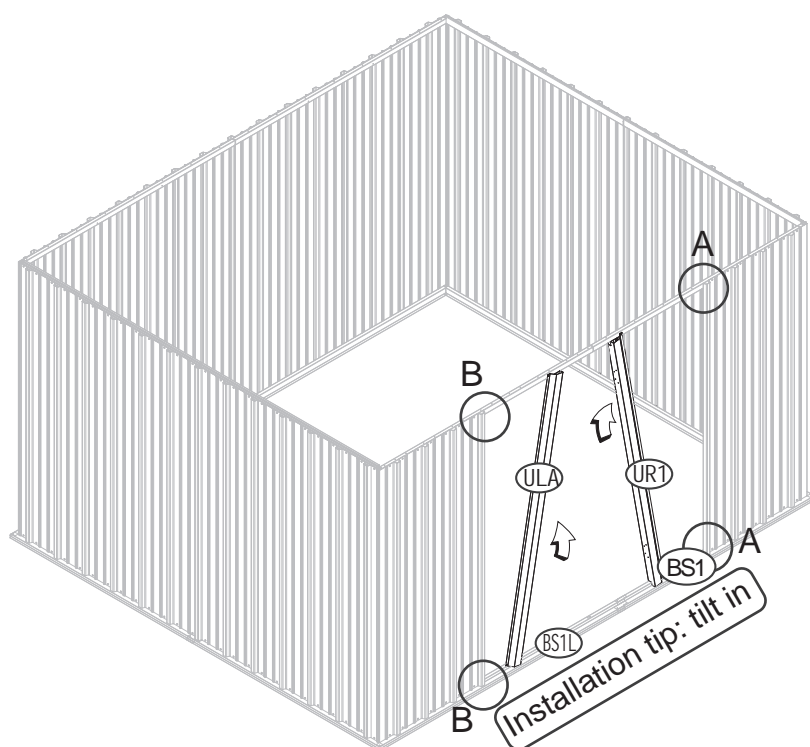


Tips: Insert ULA and UR1 between the top beam and bottom frame respectively, and then push them to the corresponding position.

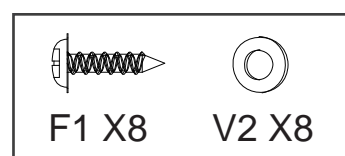


ATTENTION

For this step only, To ensure a better understanding and installation experience, please **Scan The QR Code** next to it to watch a video tutorial that will assist you in completing the installation.


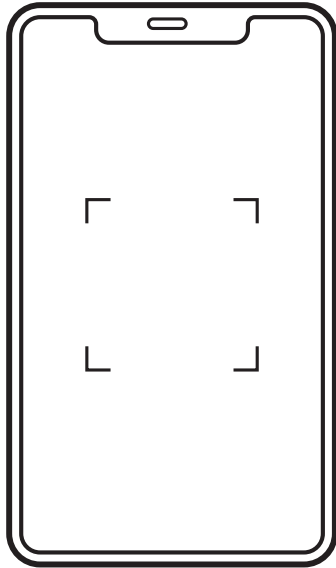


<https://www.patiowell.com/pages/video-t-ps22-0096-8?step4>

STEP 20

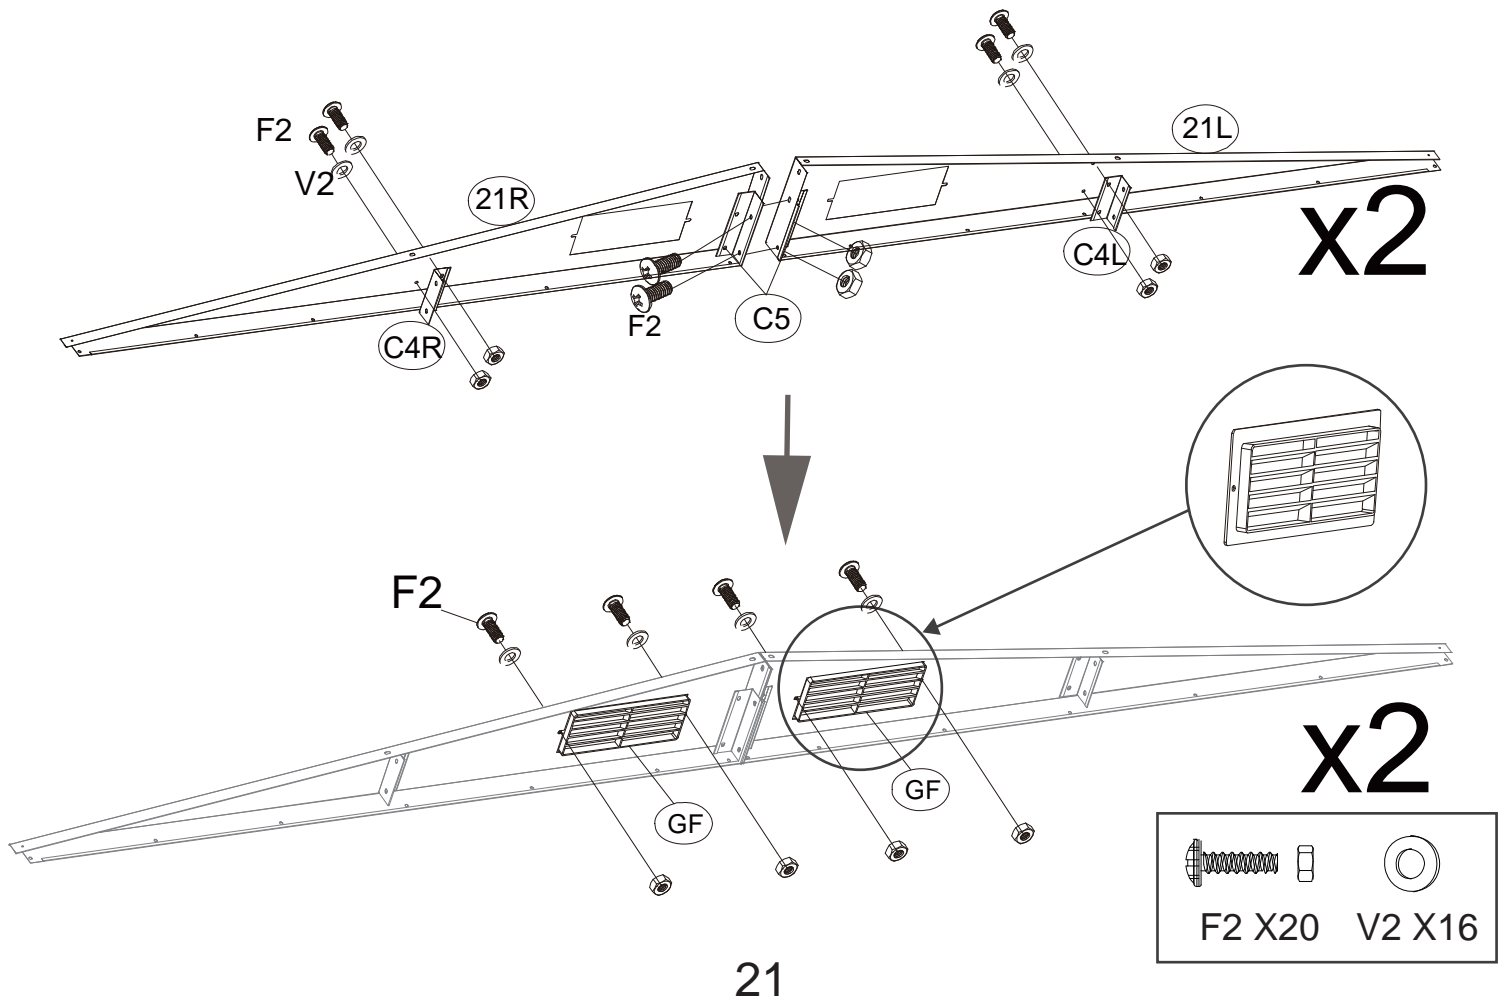


STEP 21

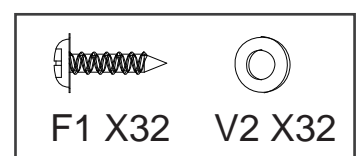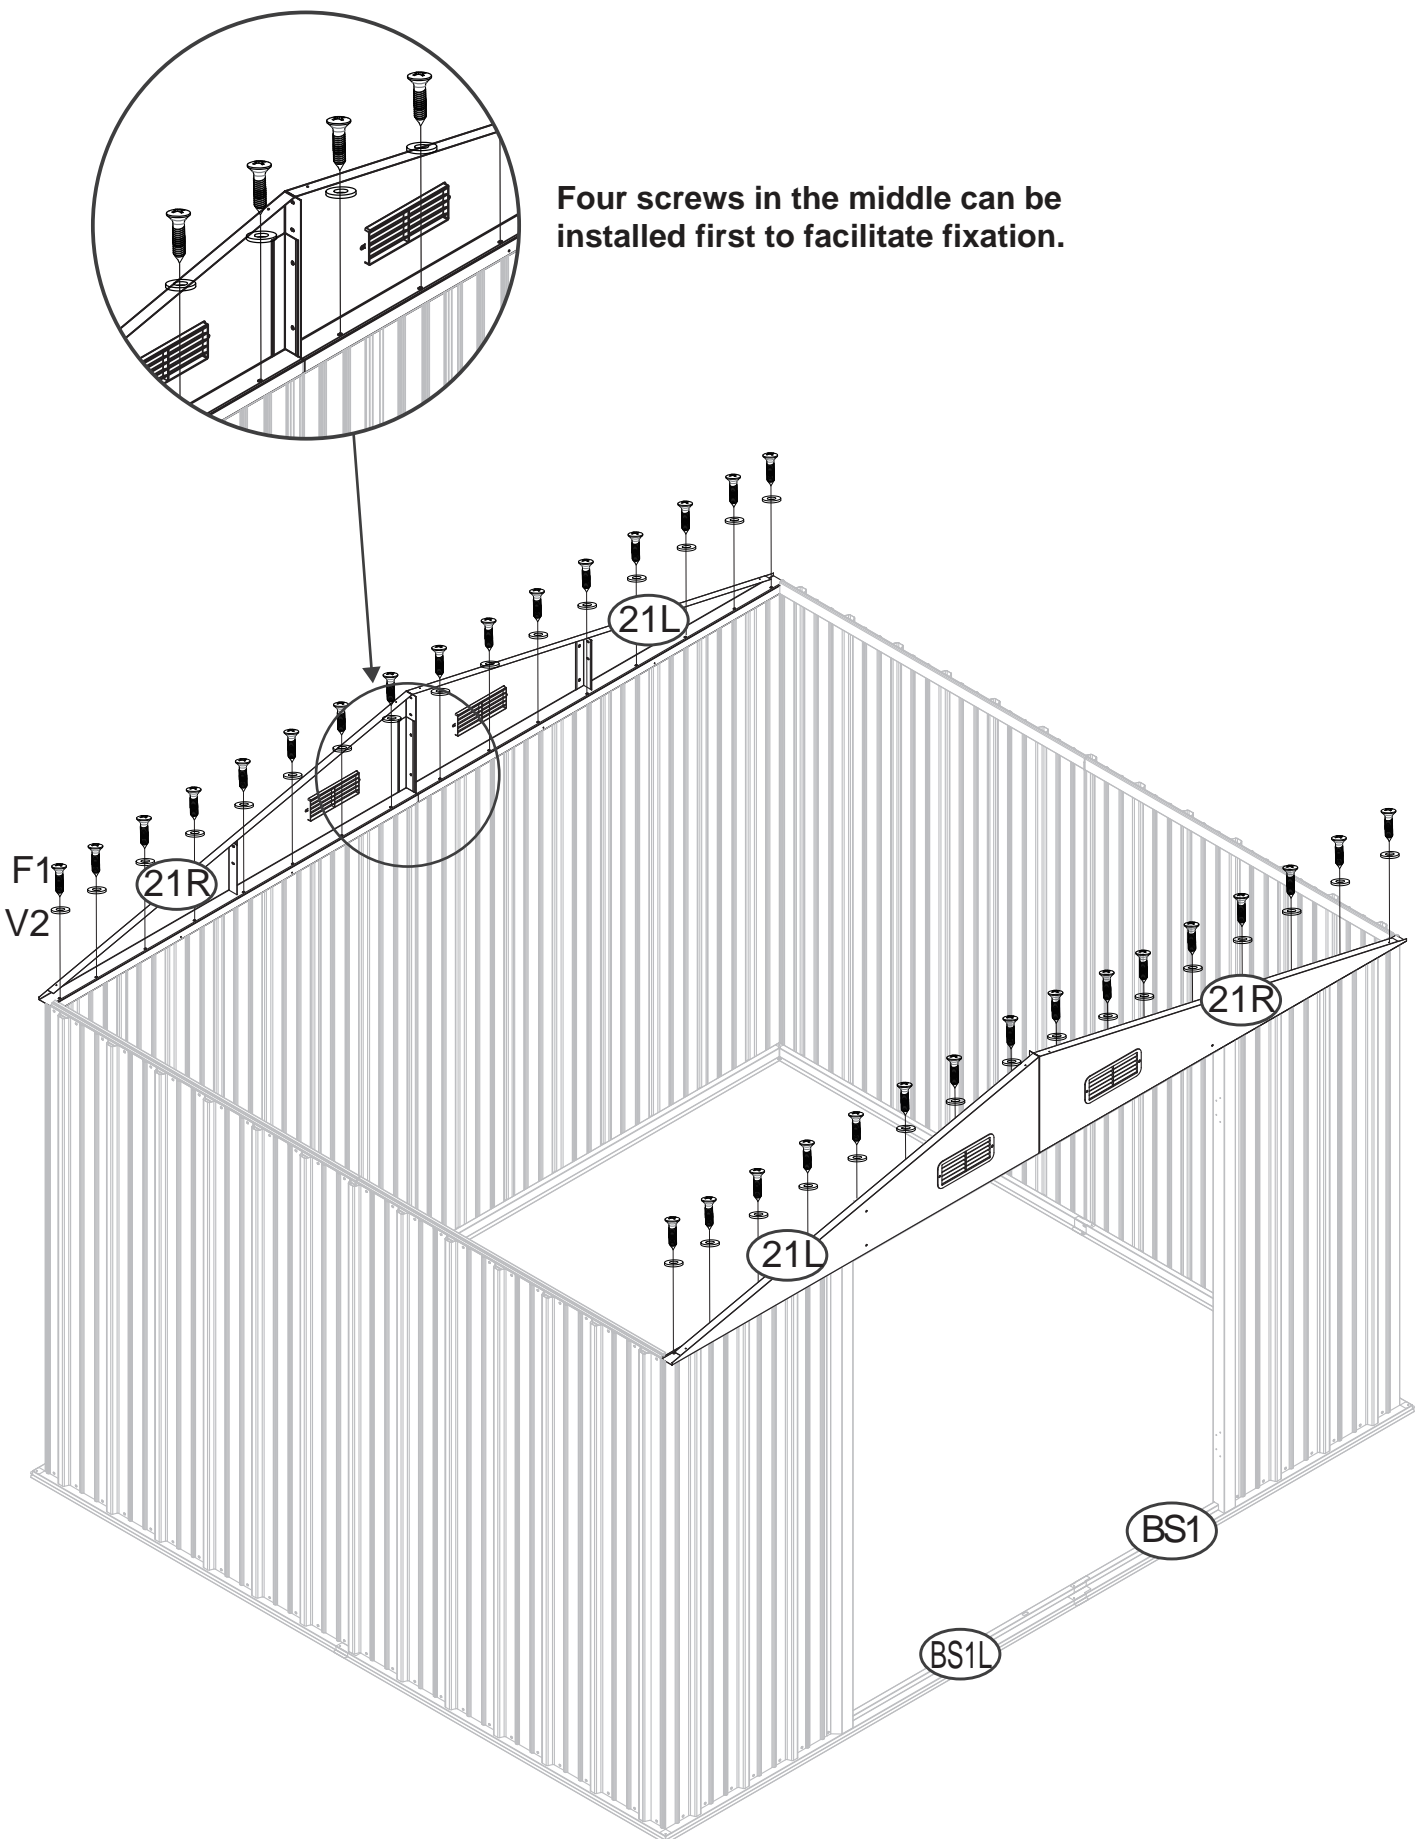


ATTENTION

For this step only, To ensure a better understanding and installation experience, please **Scan The QR Code** next to it to watch a video tutorial that will assist you in completing the installation.

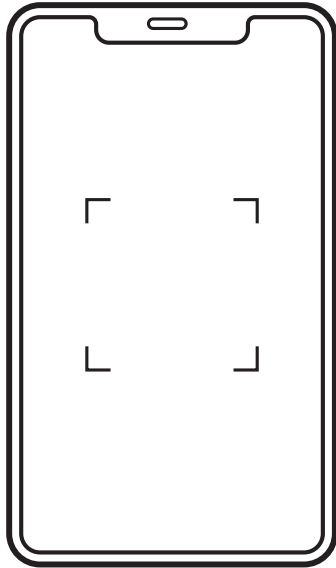

<https://www.patiowell.com/pages/video-t-ps22-0096-8?step5>


STEP 22

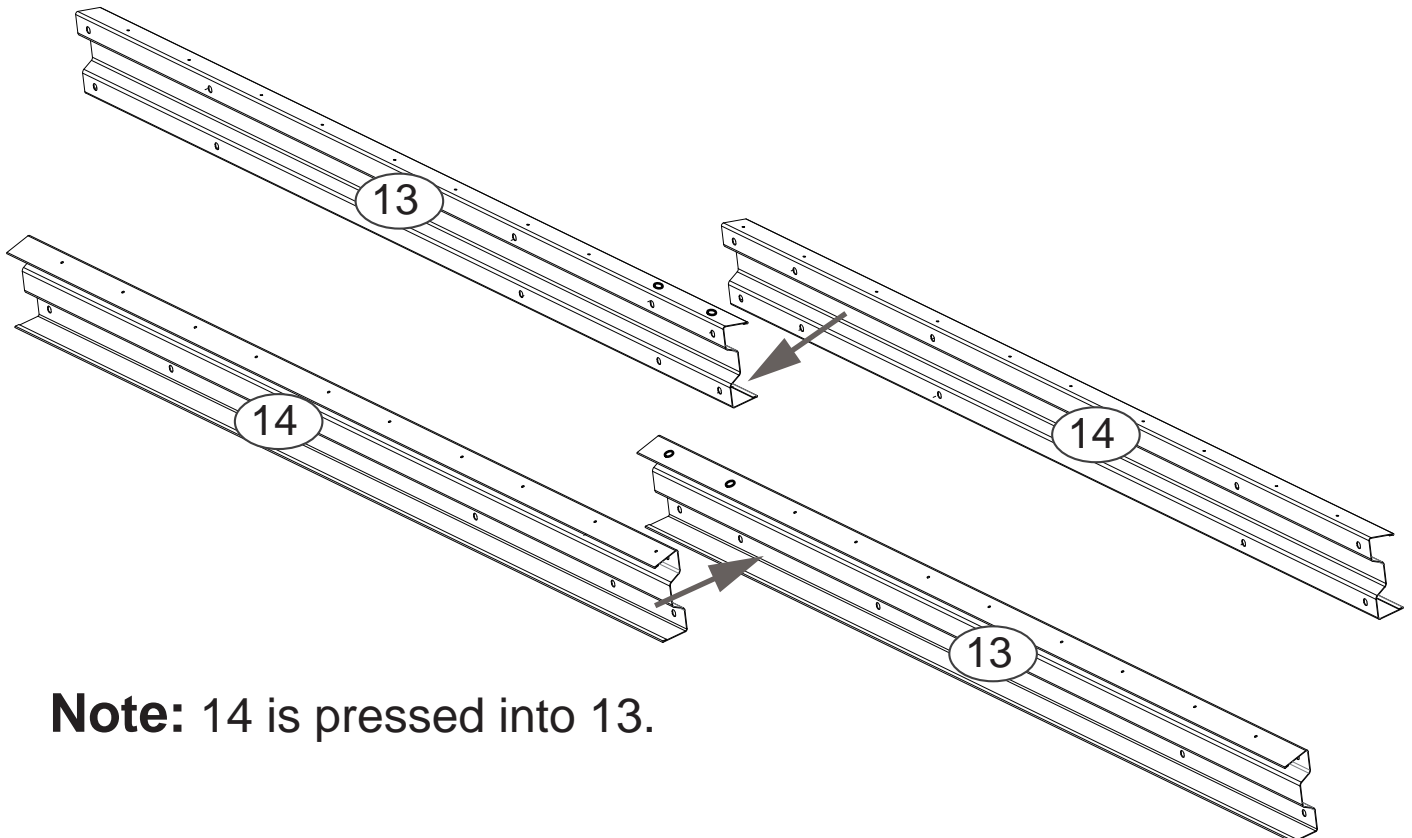

Note: 14 is pressed into 13.

STEP 23

Don't tighten these two screws too tightly.

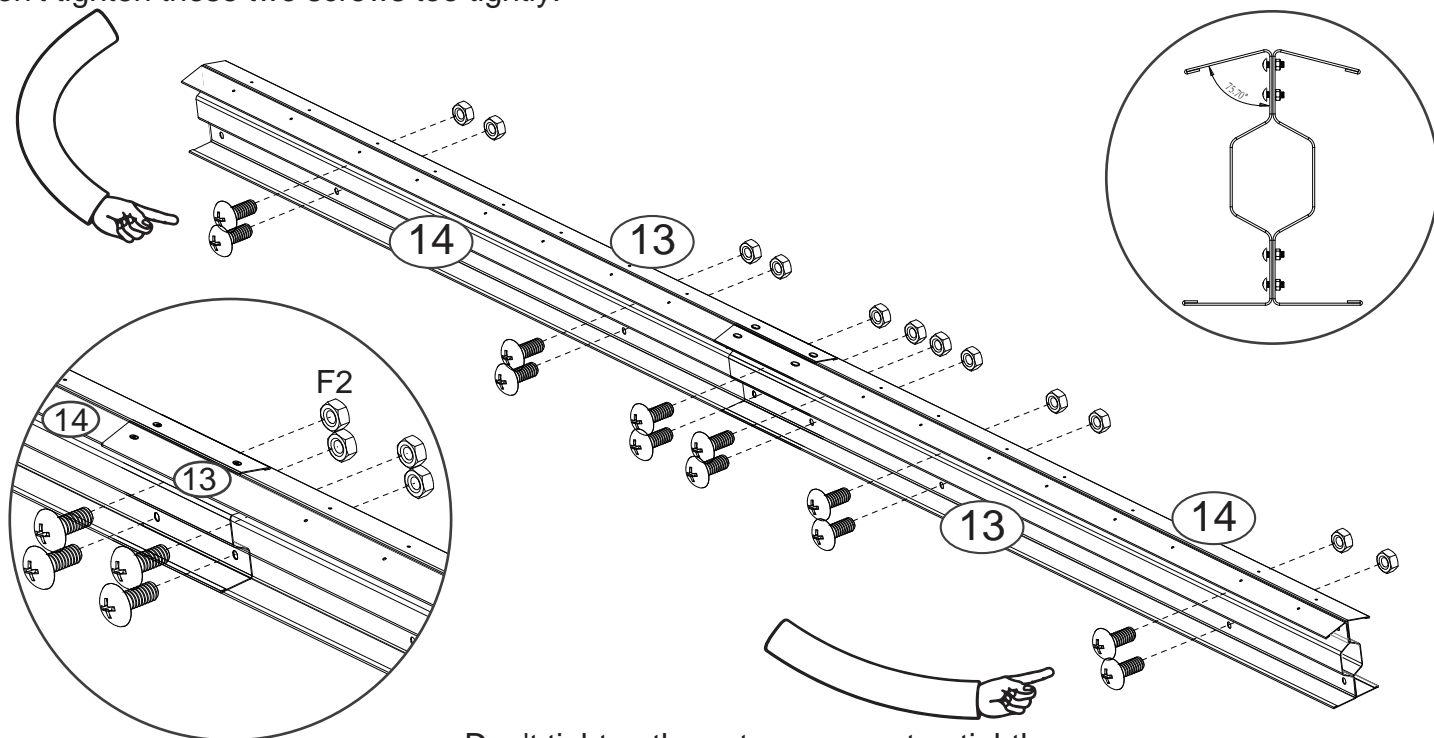


Don't tighten these two screws too tightly.




F2 X12

STEP 24

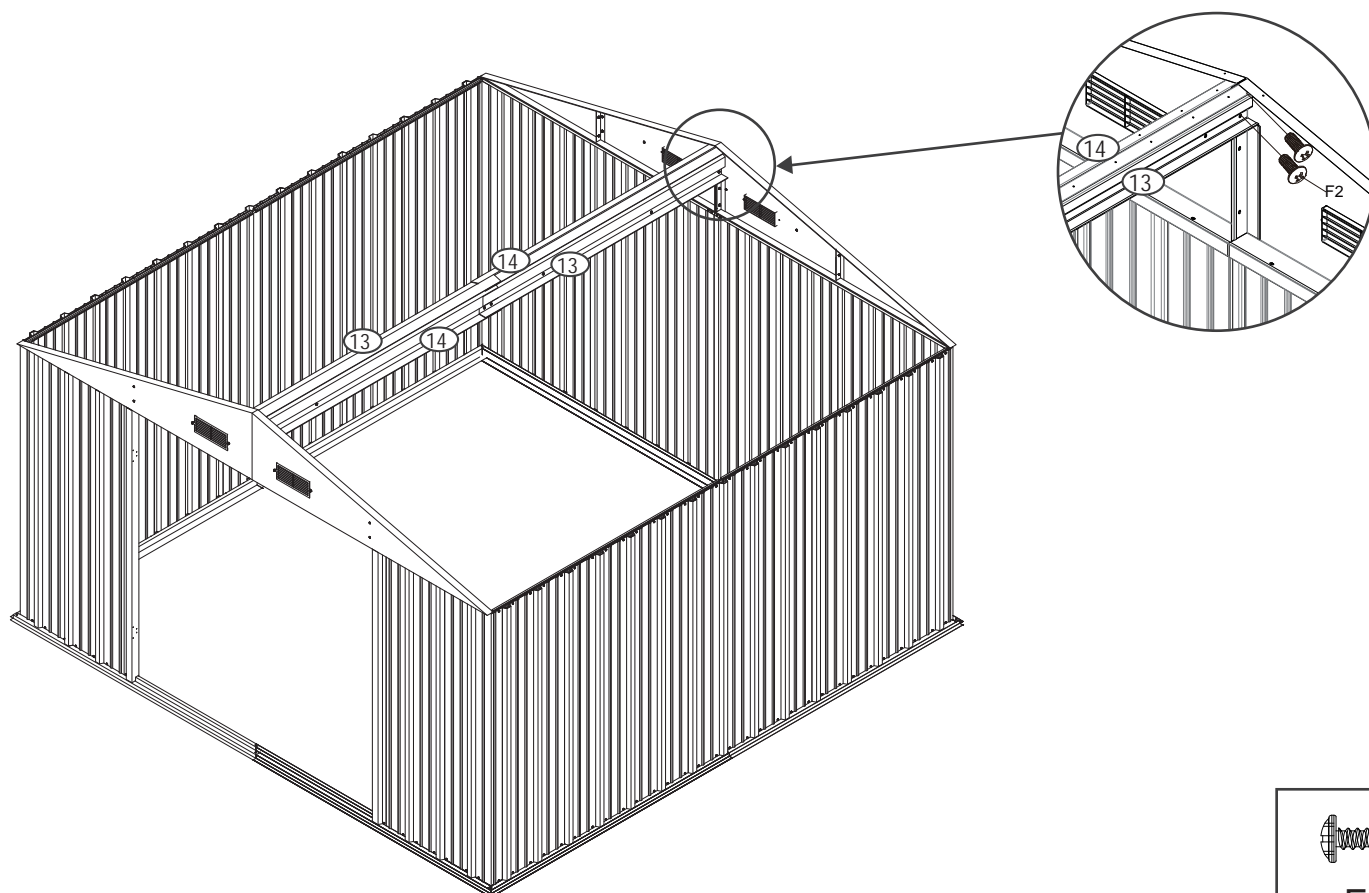


F2 X4

STEP 25

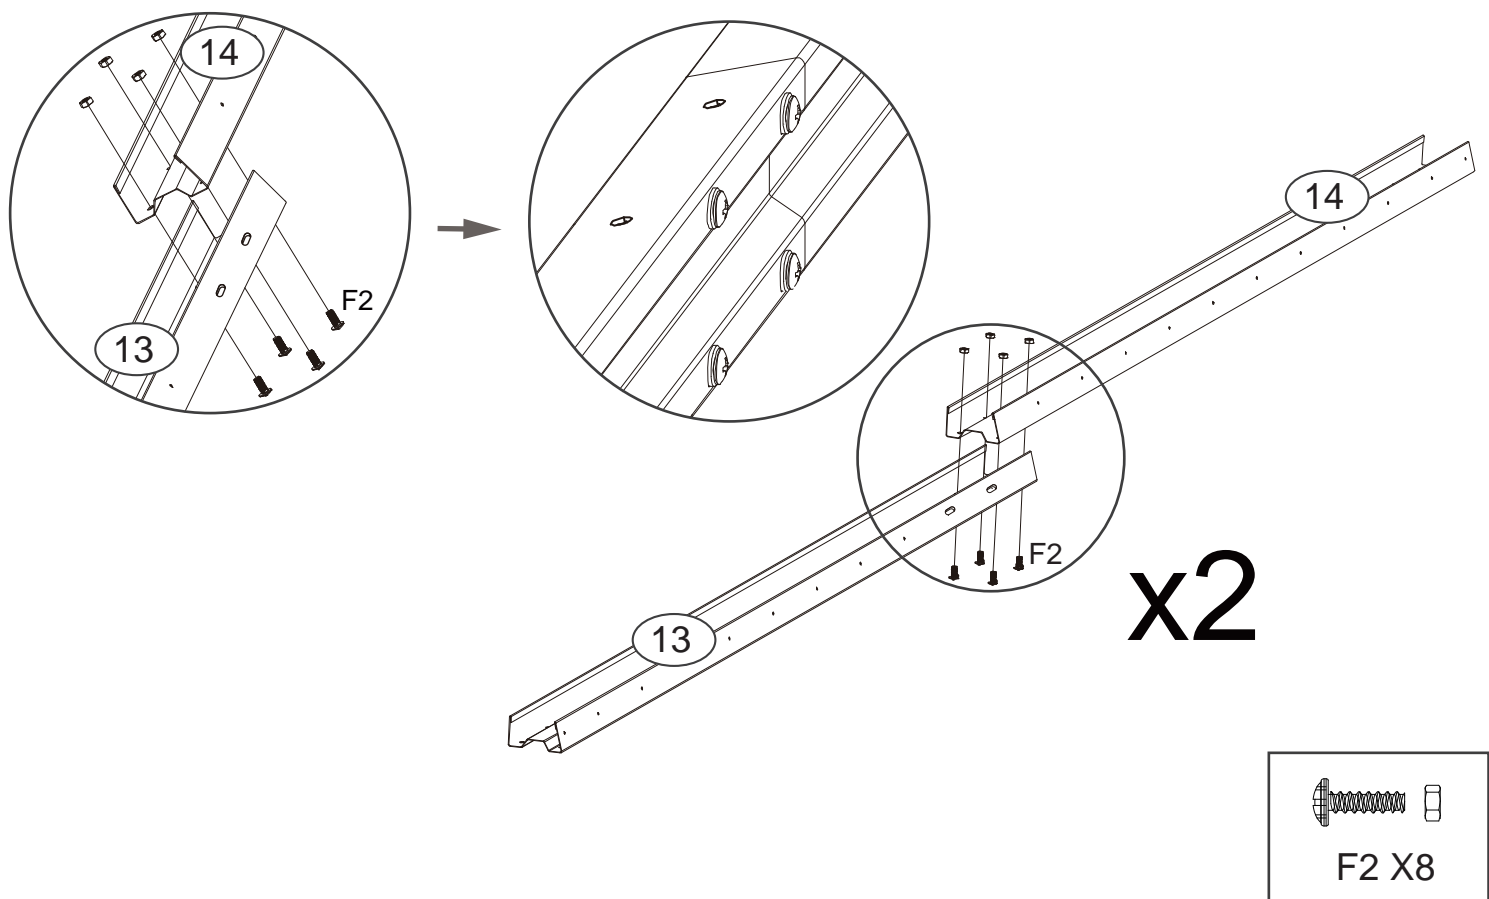


STEP 26

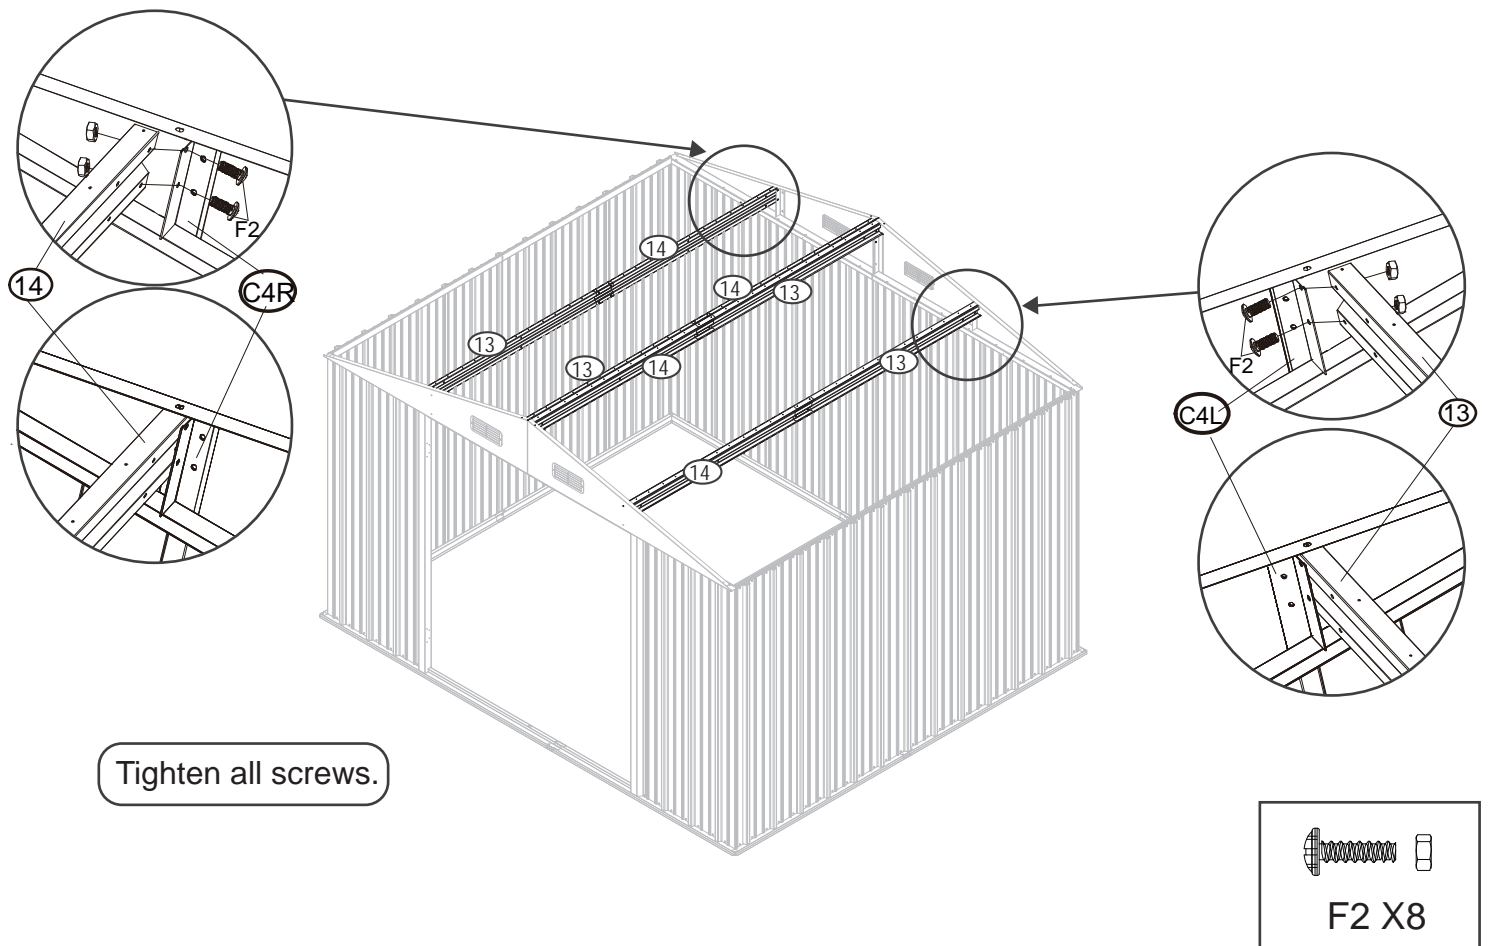


ATTENTION

For this step only, To ensure a better understanding and installation experience, please **Scan The QR Code** next to it to watch a video tutorial that will assist you in completing the installation.

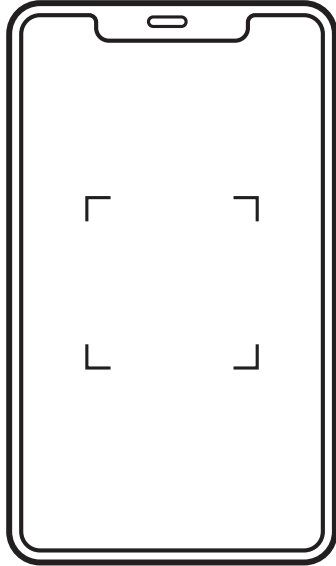


<https://www.patiowell.com/pages/video-t-ps22-0096-8?step6>


STEP 27

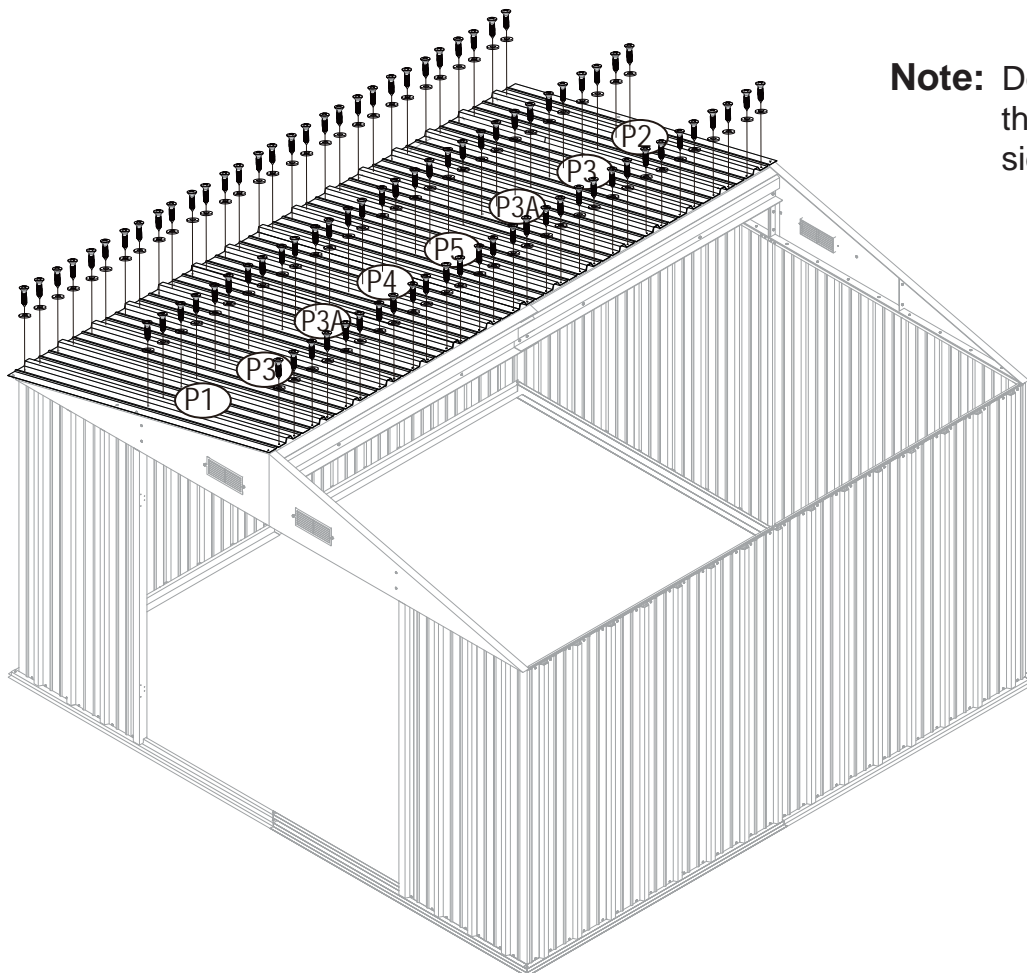



Note: Do not install F1 and V2 in the holes near the outer side of P1,P2.

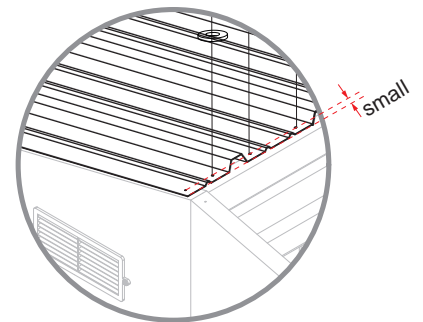


Short distance from the edge at the top.

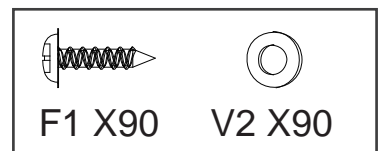


STEP 28

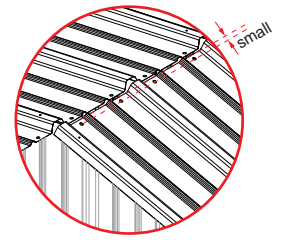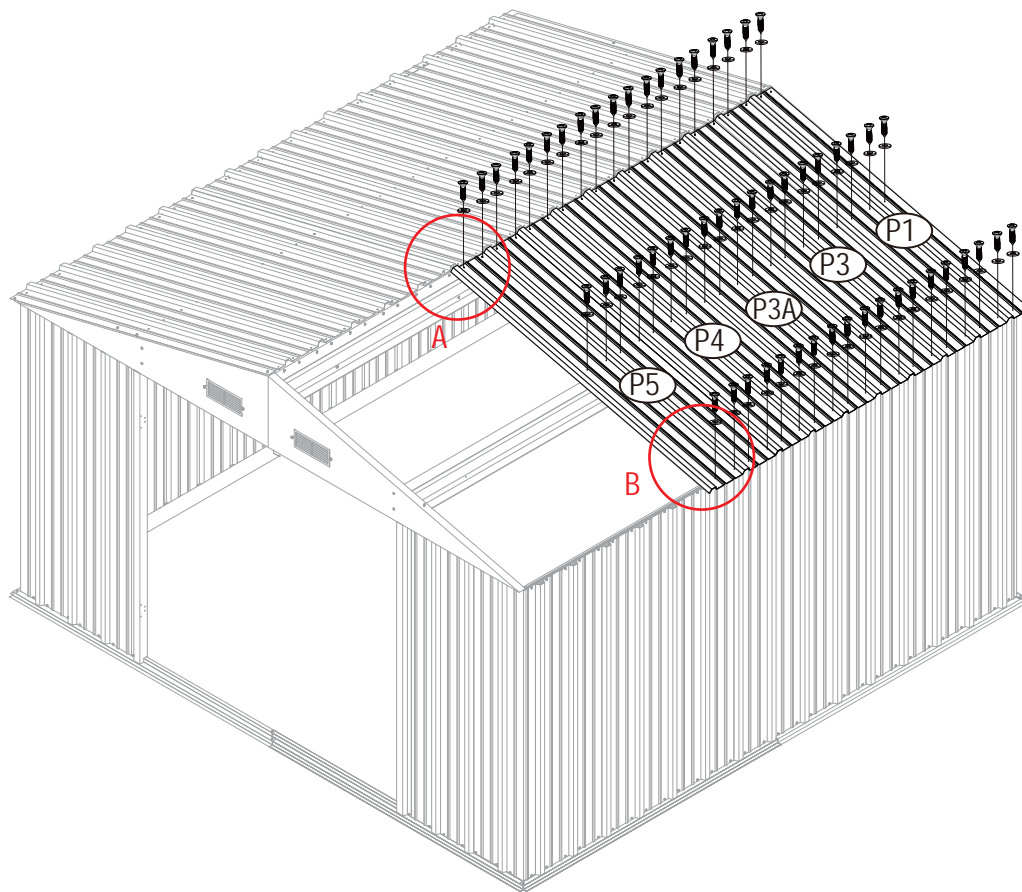



A

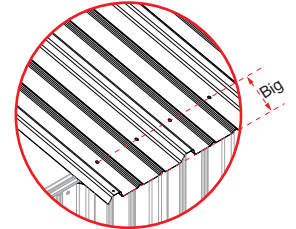



B

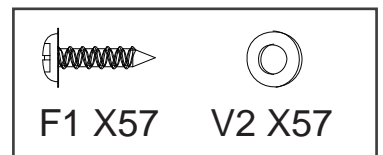

STEP 29

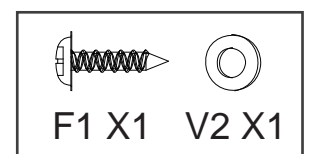
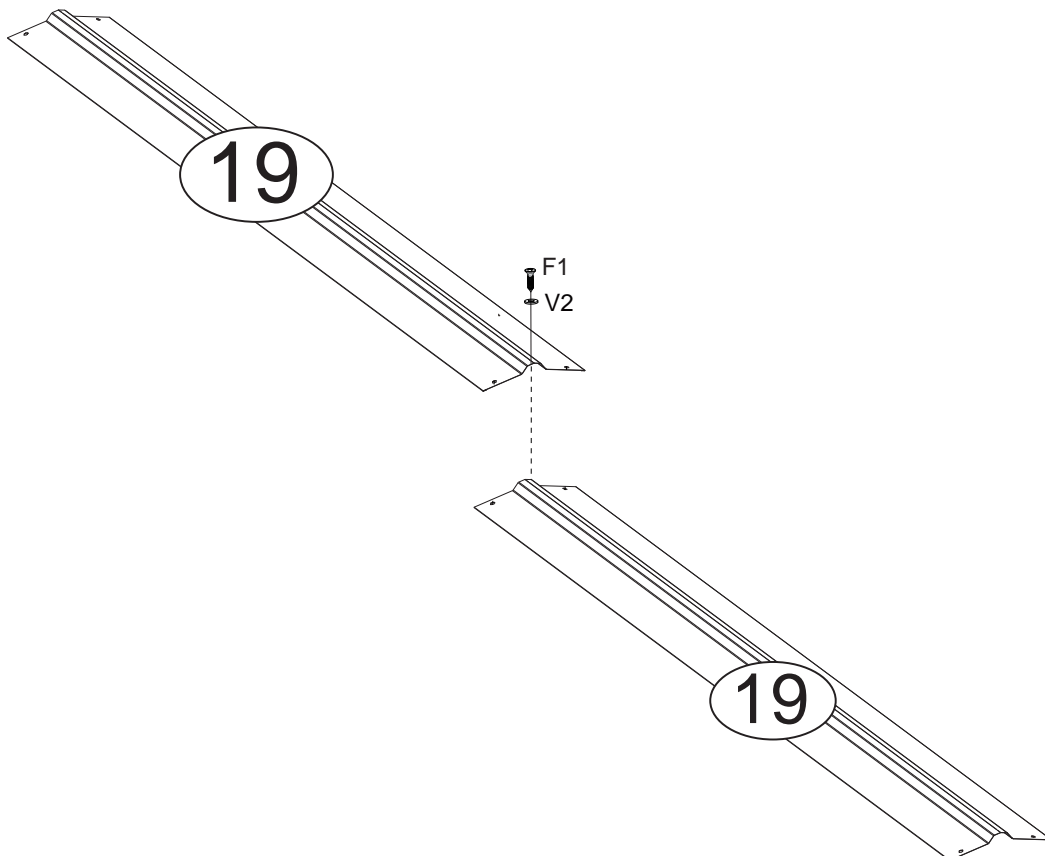


STEP 30

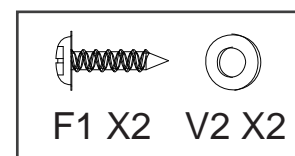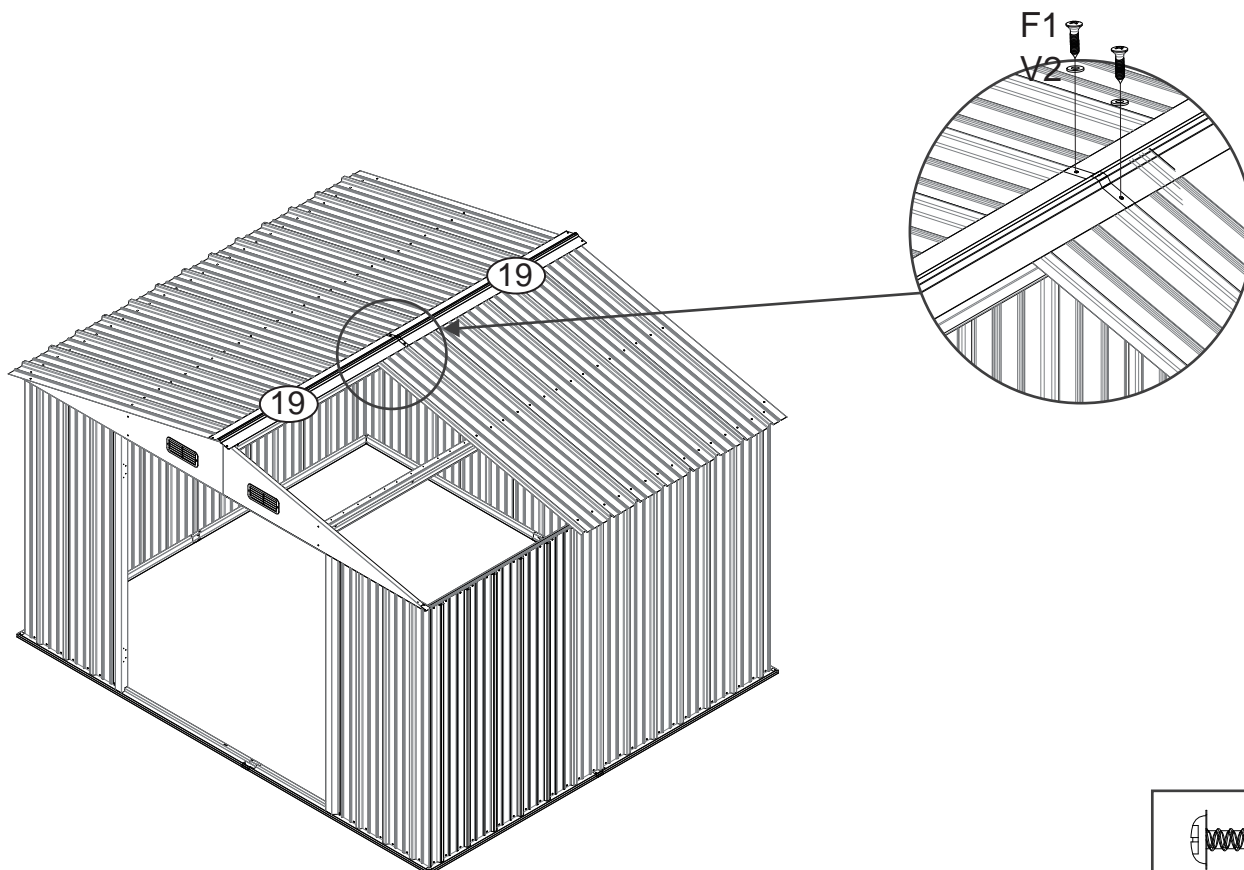


STEP 31

Installation tips: You need to gently lift the 19 and then screw it.

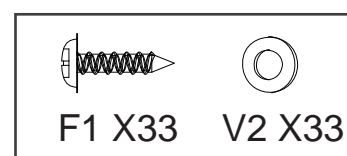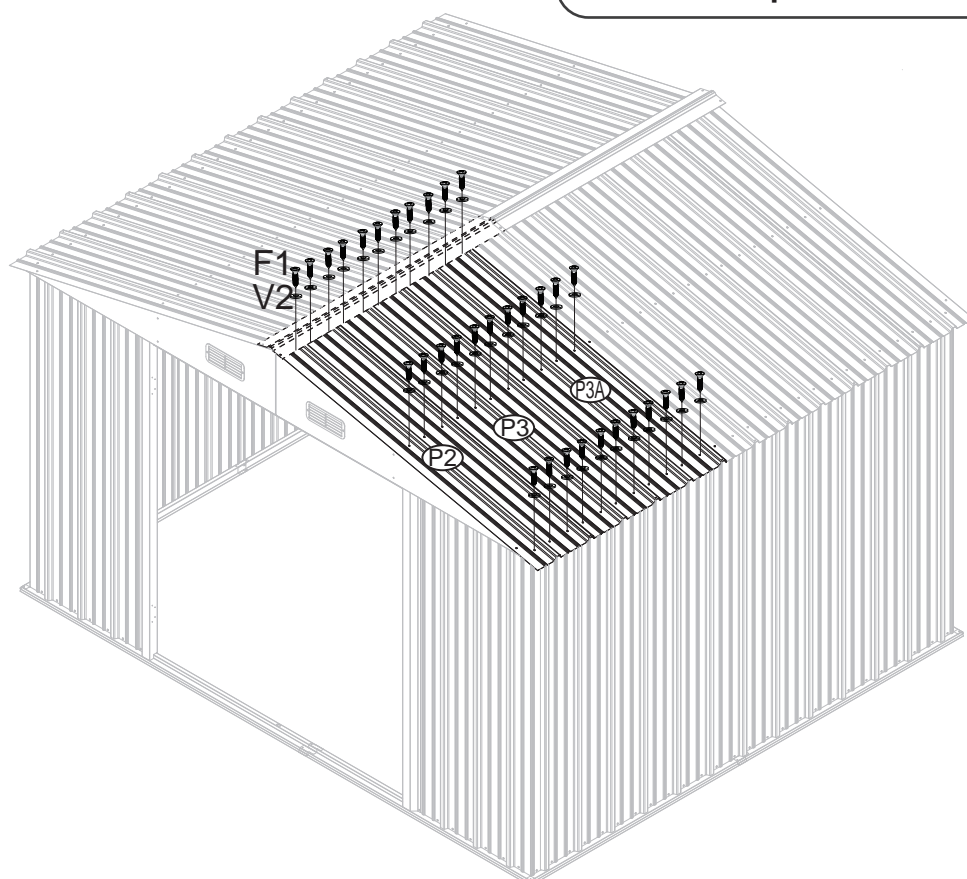



ATTENTION

For this step only, To ensure a better understanding and installation experience, please **Scan The QR Code** next to it to watch a video tutorial that will assist you in completing the installation.

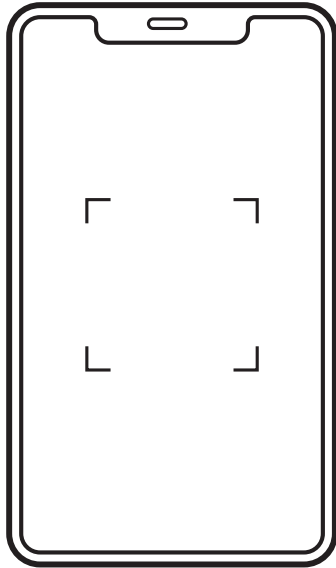


<https://www.patiowell.com/pages/video-t-ps22-0096-8?step7>



STEP 32

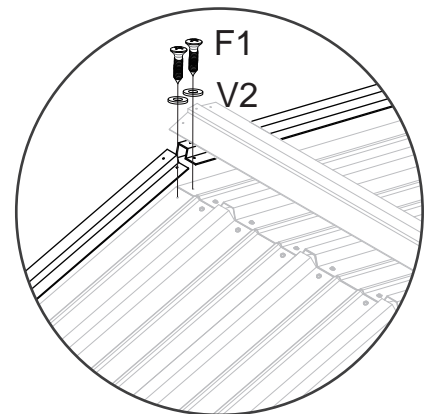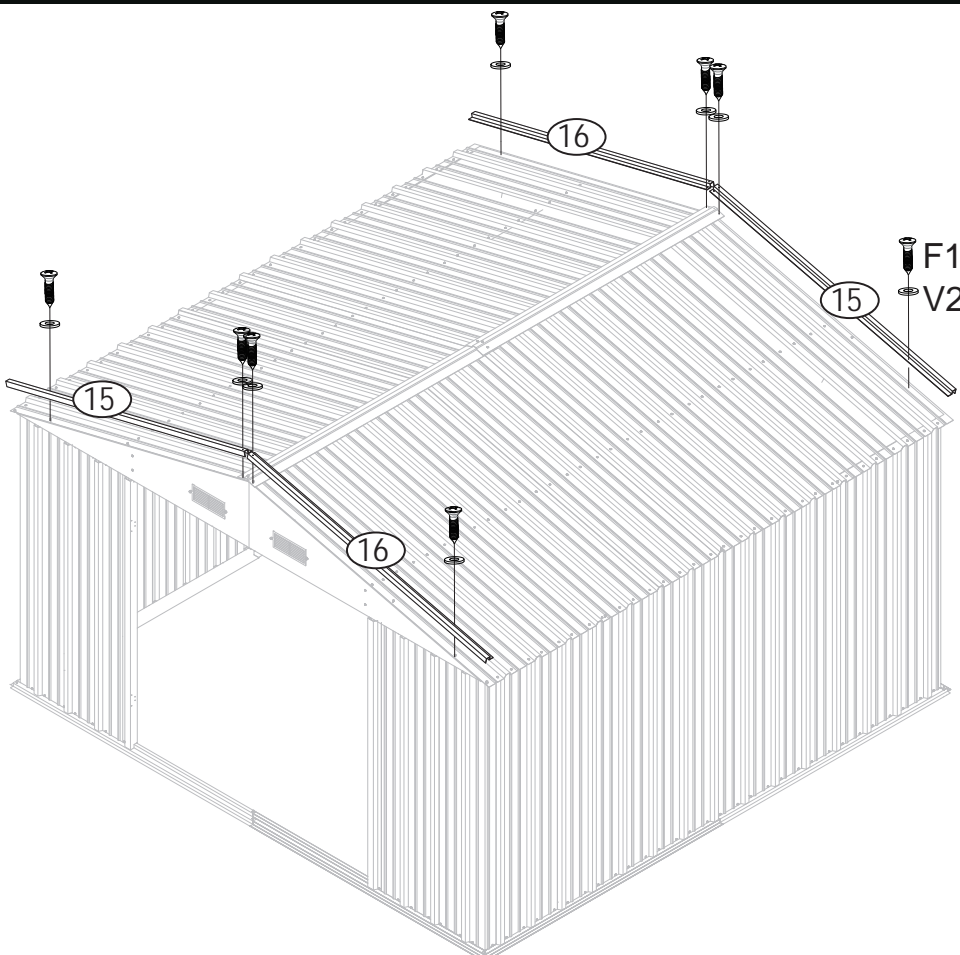


Note: Do not install F1 and V2 in the holes near the outer side of P1,P2.

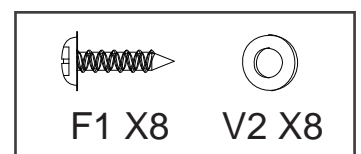



STEP 33

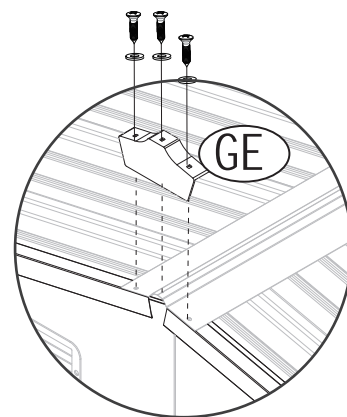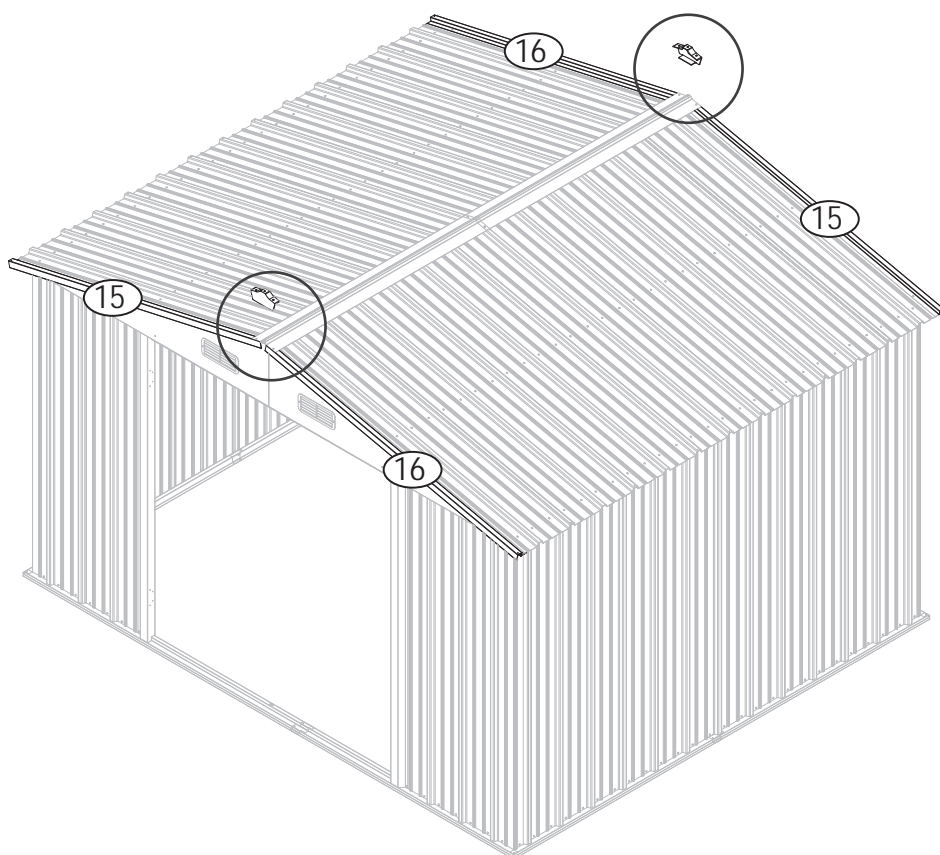


x2

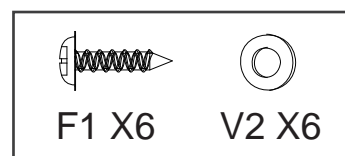


STEP 34

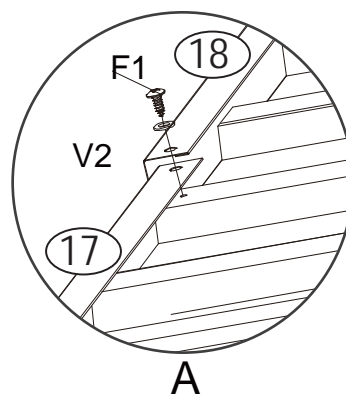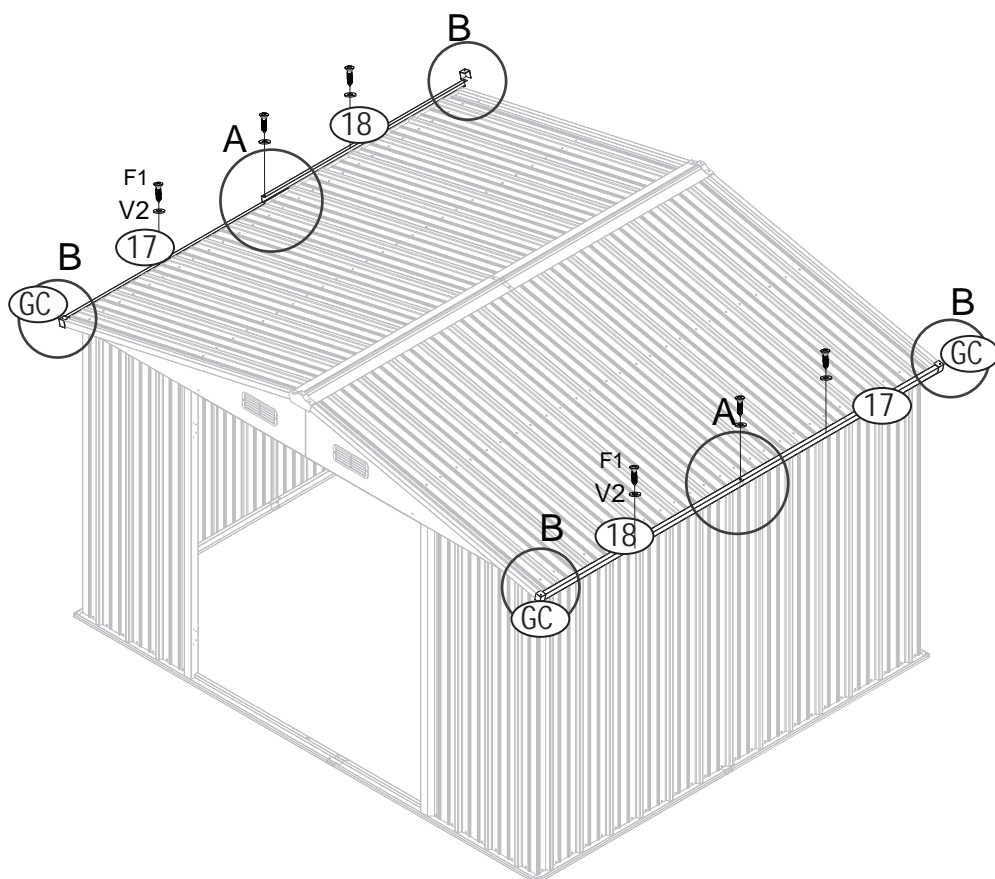

x2

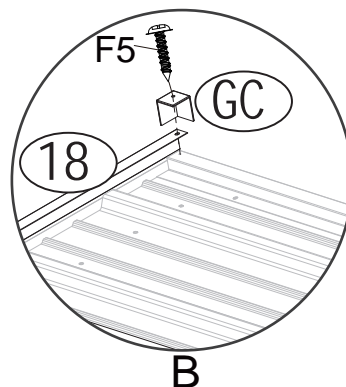


x4

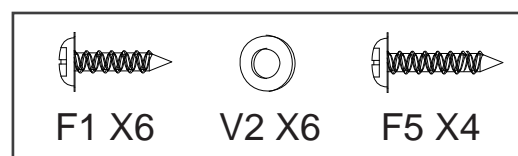


ATTENTION

For this step only, To ensure a better understanding and installation experience, please **Scan The QR Code** next to it to watch a video tutorial that will assist you in completing the installation.

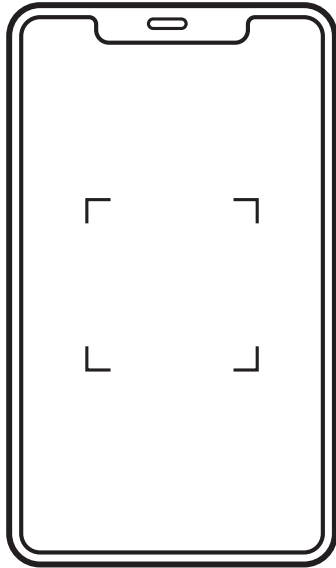



<https://www.patiowell.com/pages/video-t-ps22-0096-8?step8>

STEP 35


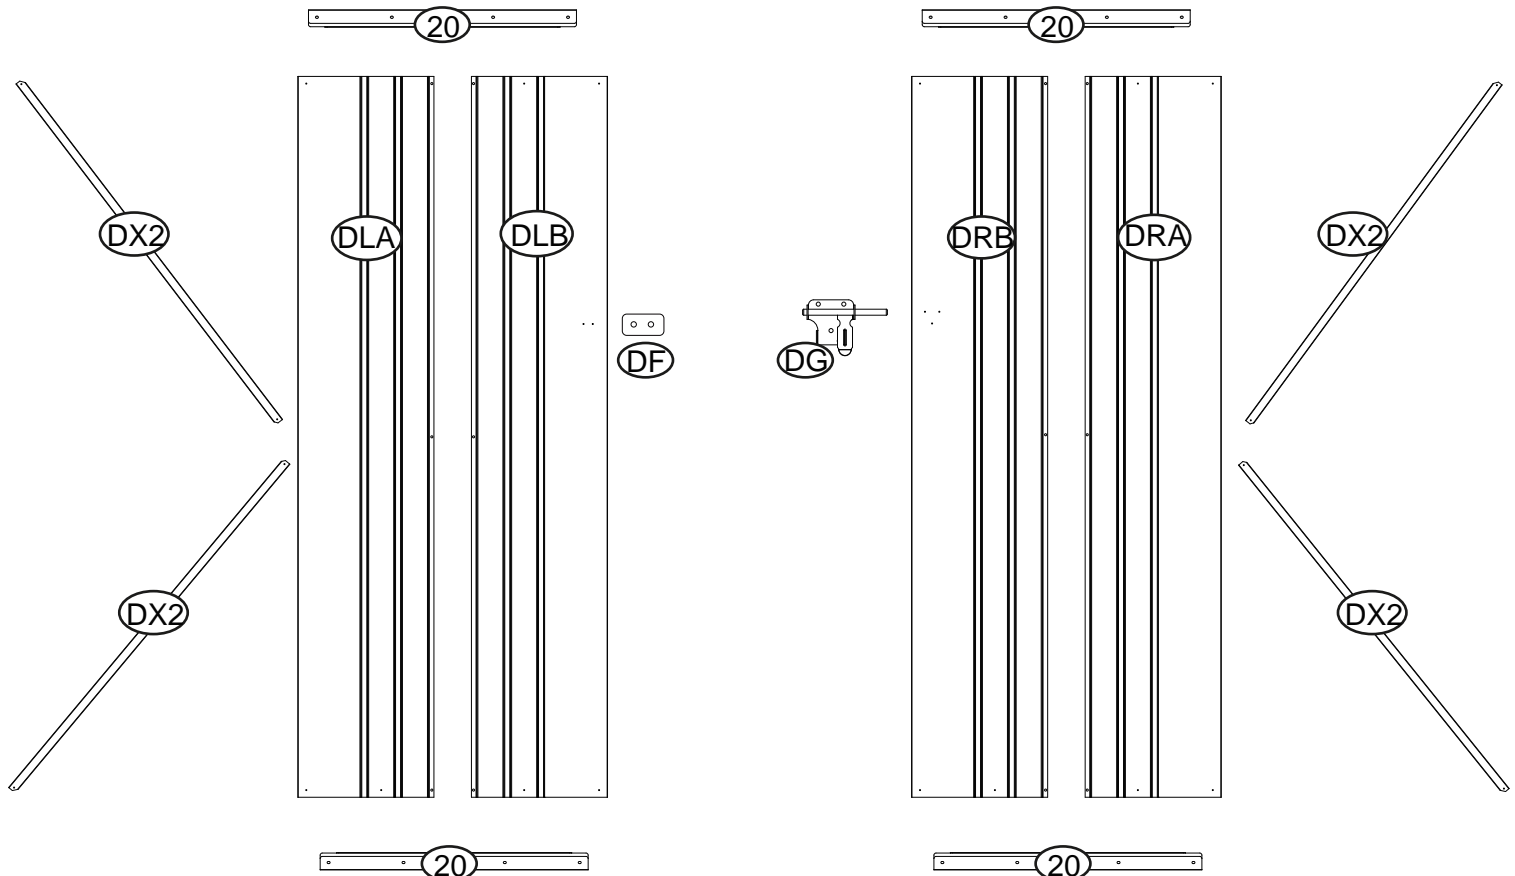


STEP 36

The other door operates the same way

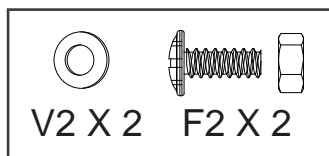
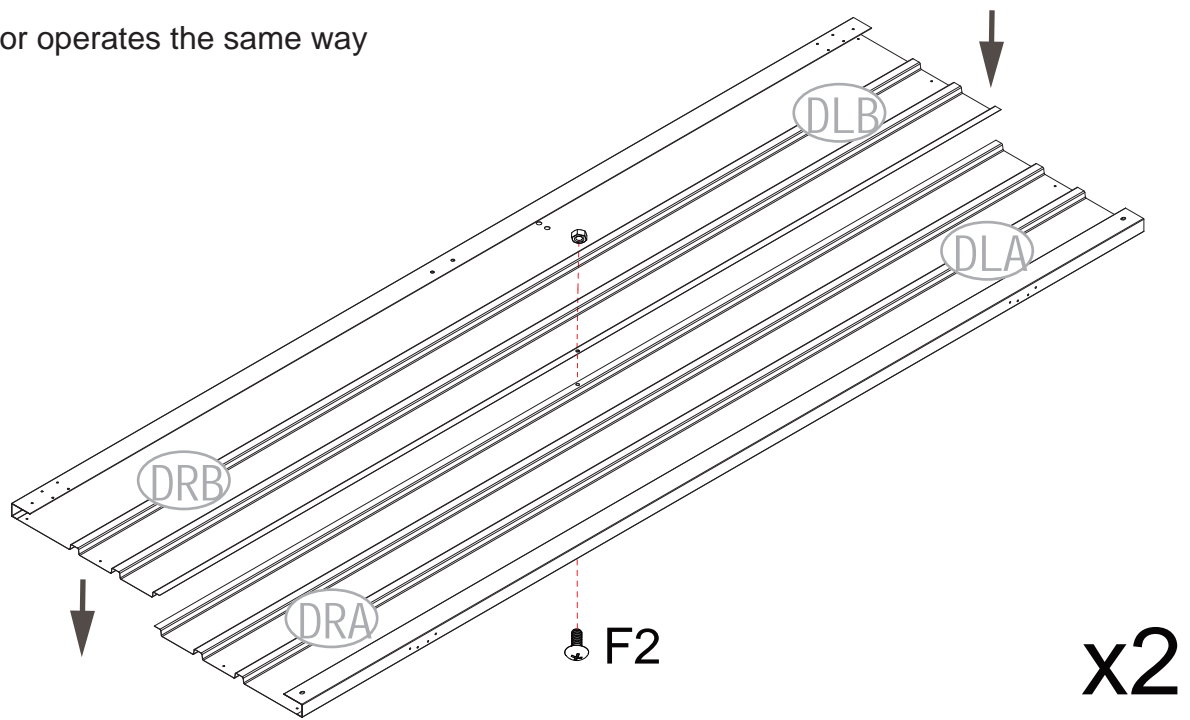


STEP 37




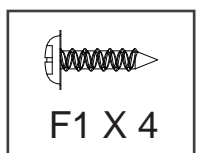
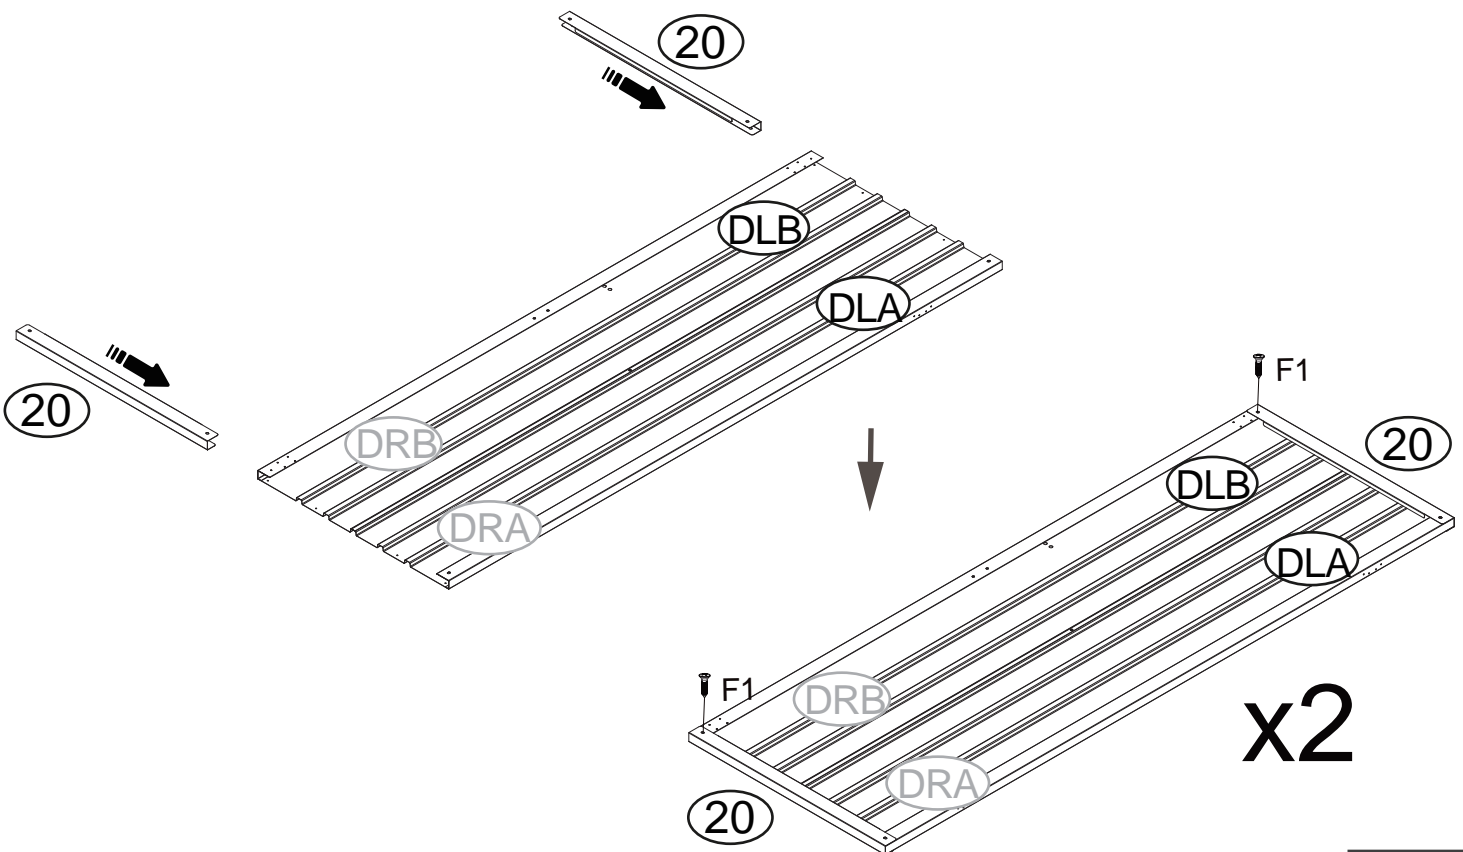


The other door operates the same way




STEP 38

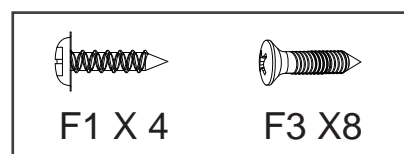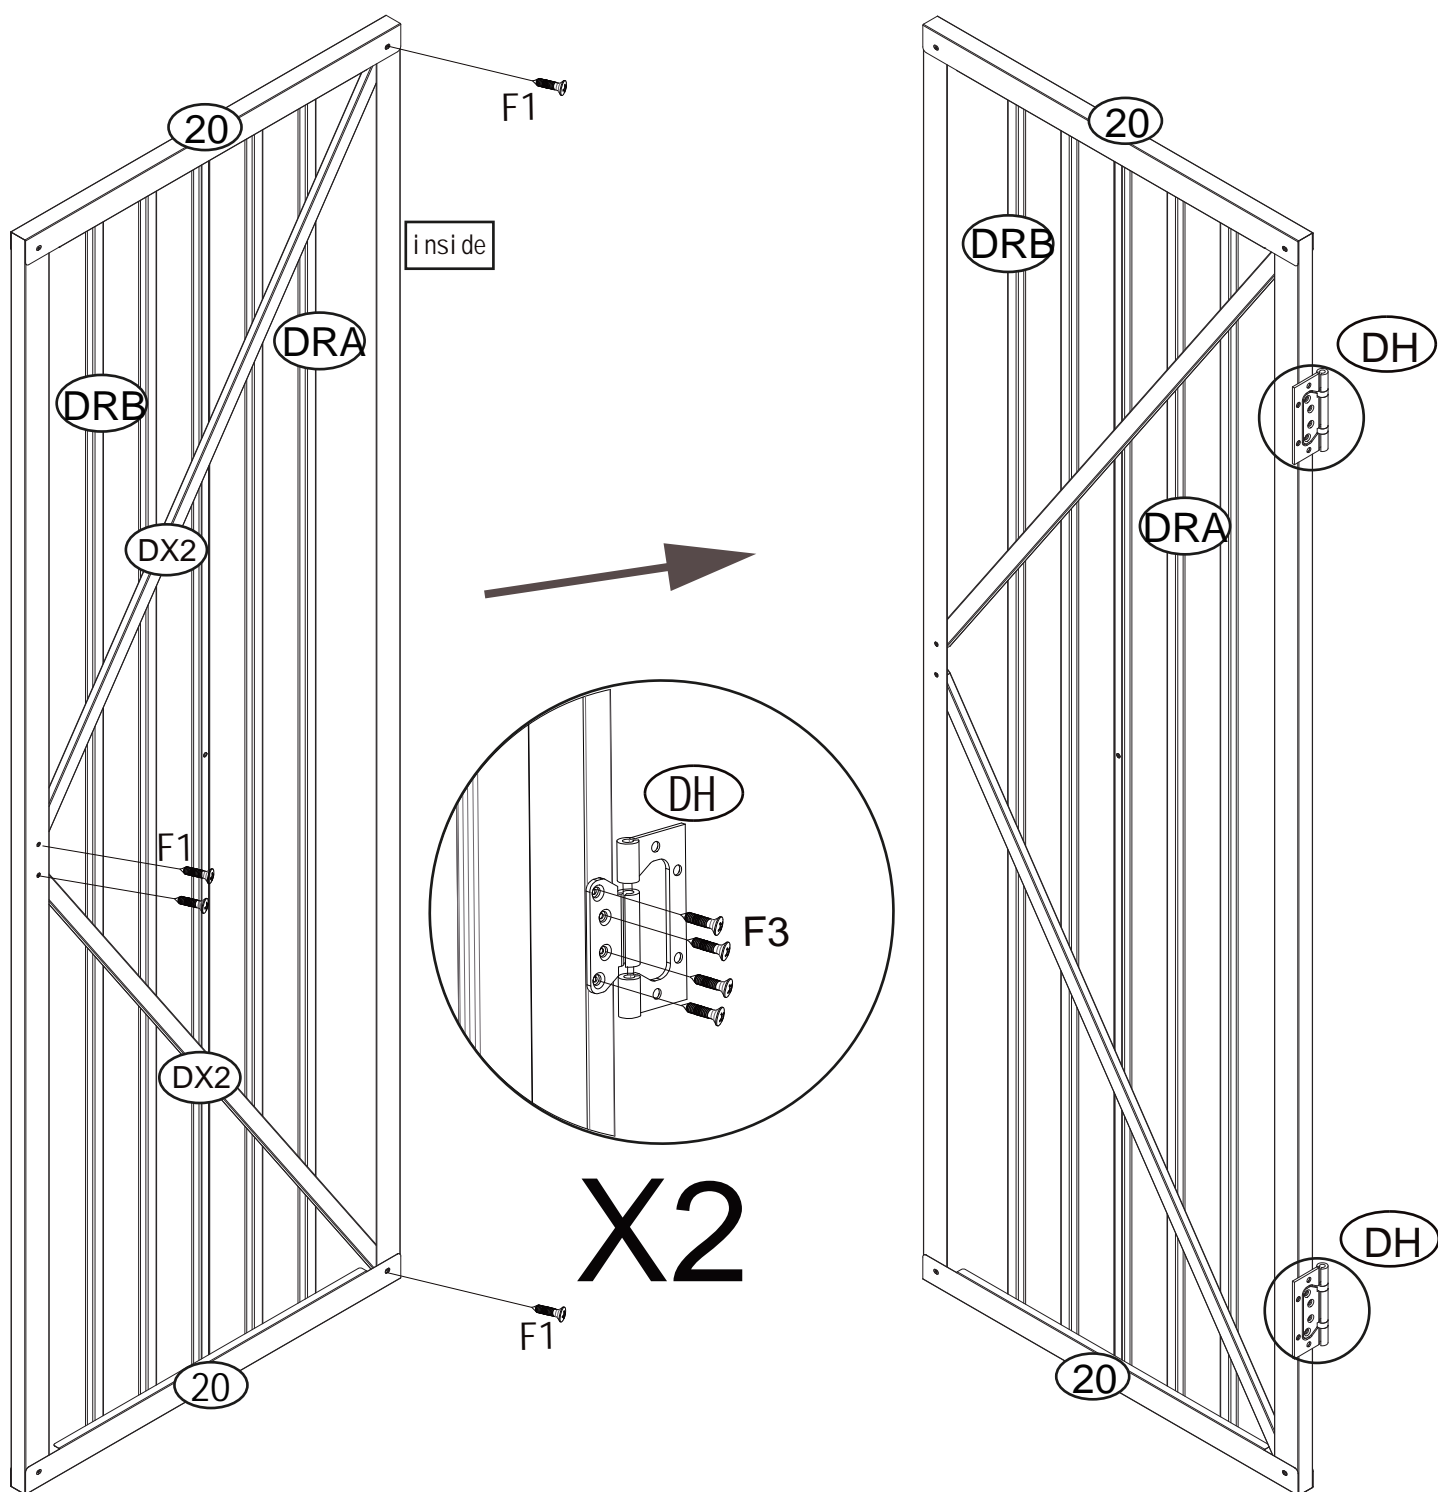




STEP 39

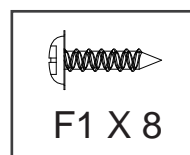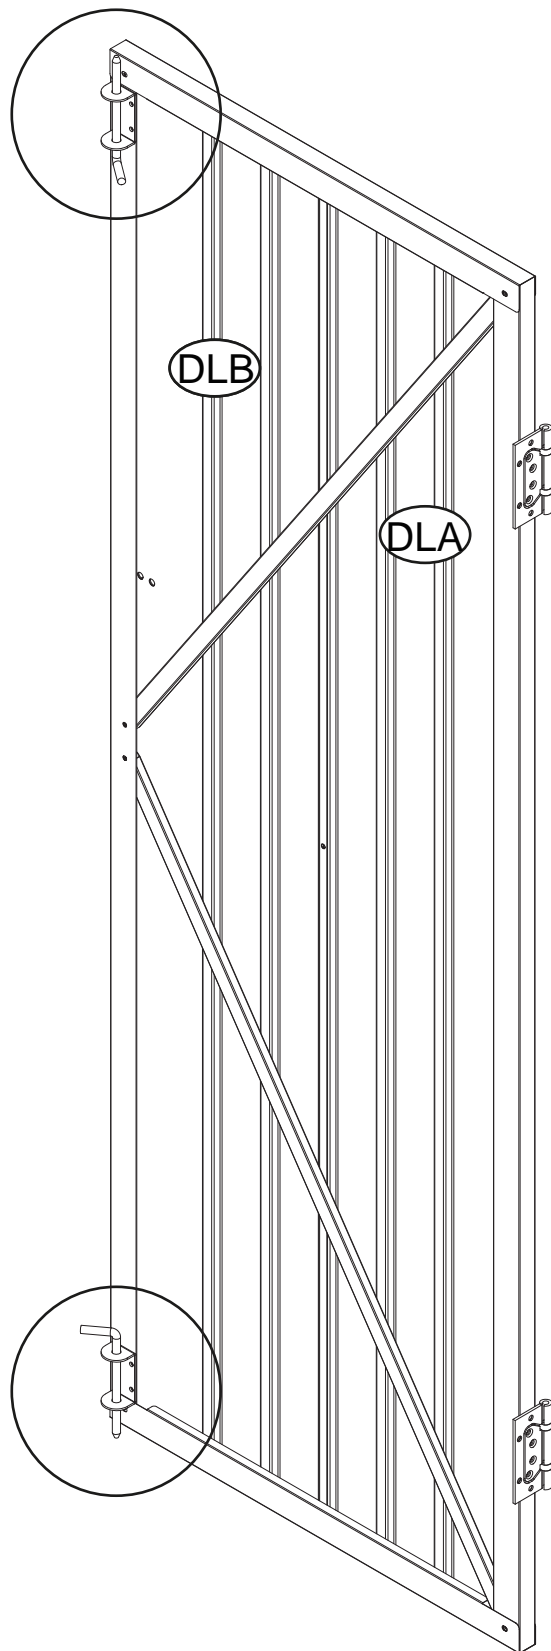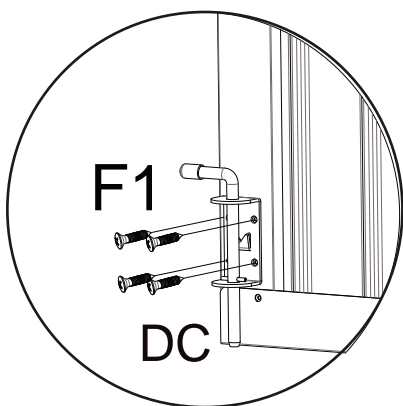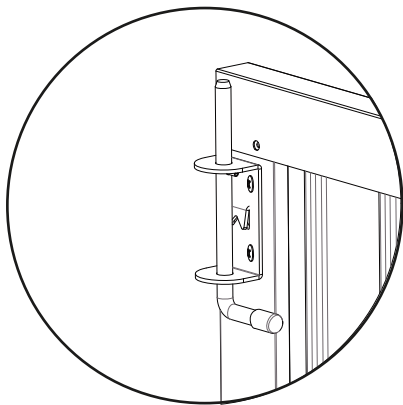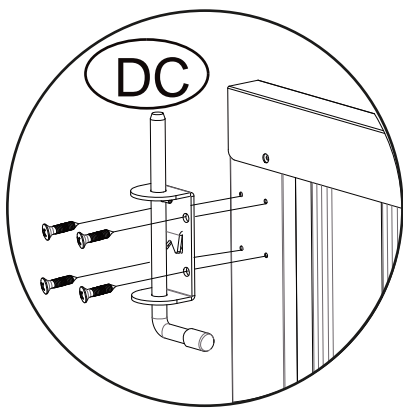

STEP 40

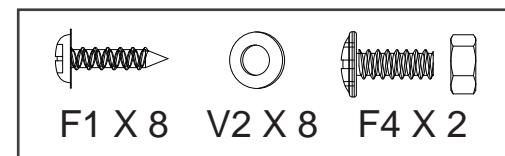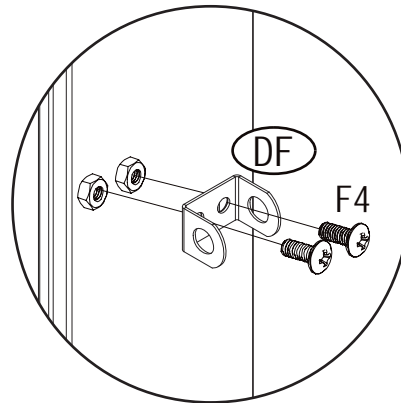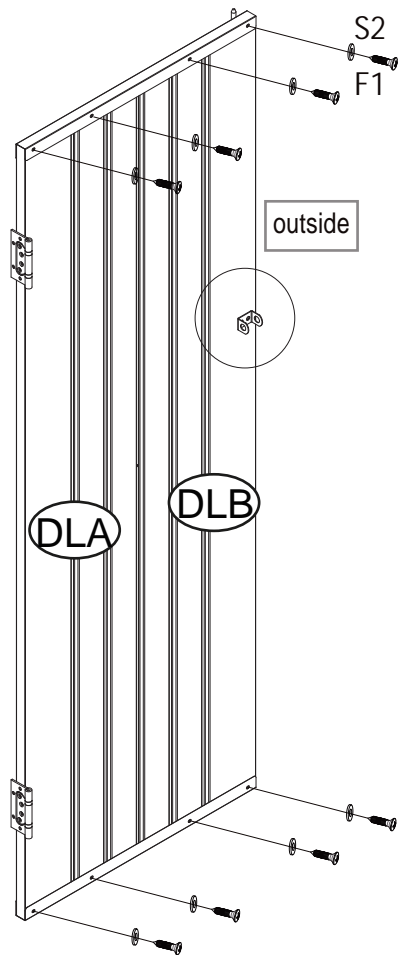


STEP 41

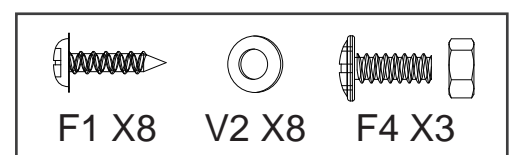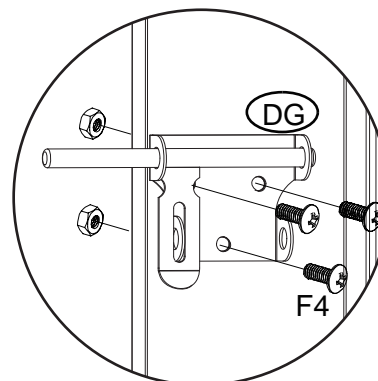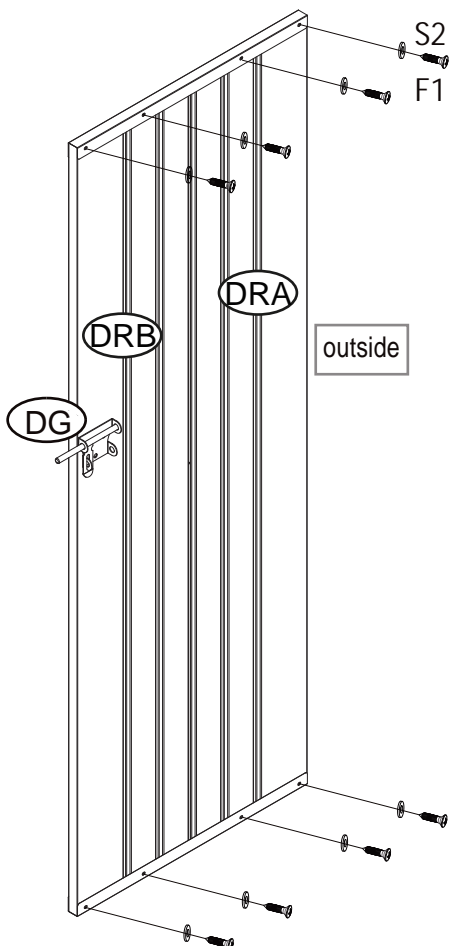



ATTENTION

For this step only, To ensure a better understanding and installation experience, please **Scan The QR Code** next to it to watch a video tutorial that will assist you in completing the installation.



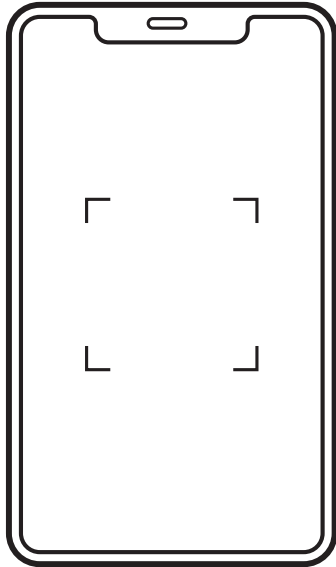


[https://www.patiowell.com/pages/
video-t-ps22-0095-gy?step=9](https://www.patiowell.com/pages/video-t-ps22-0095-gy?step=9)

STEP 42

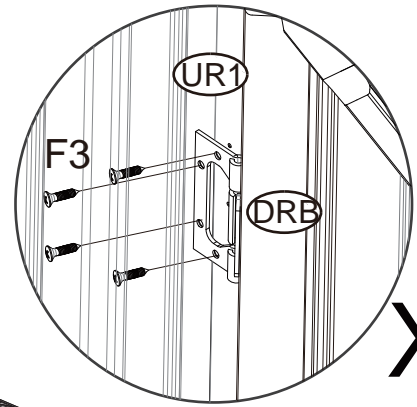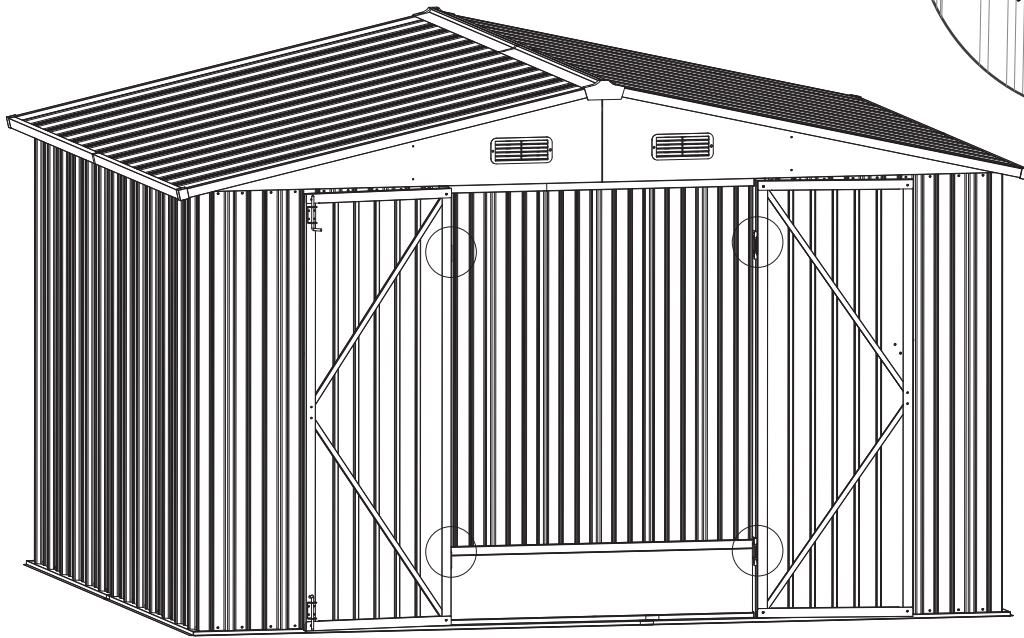

X4

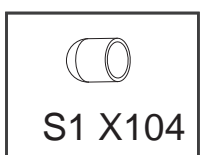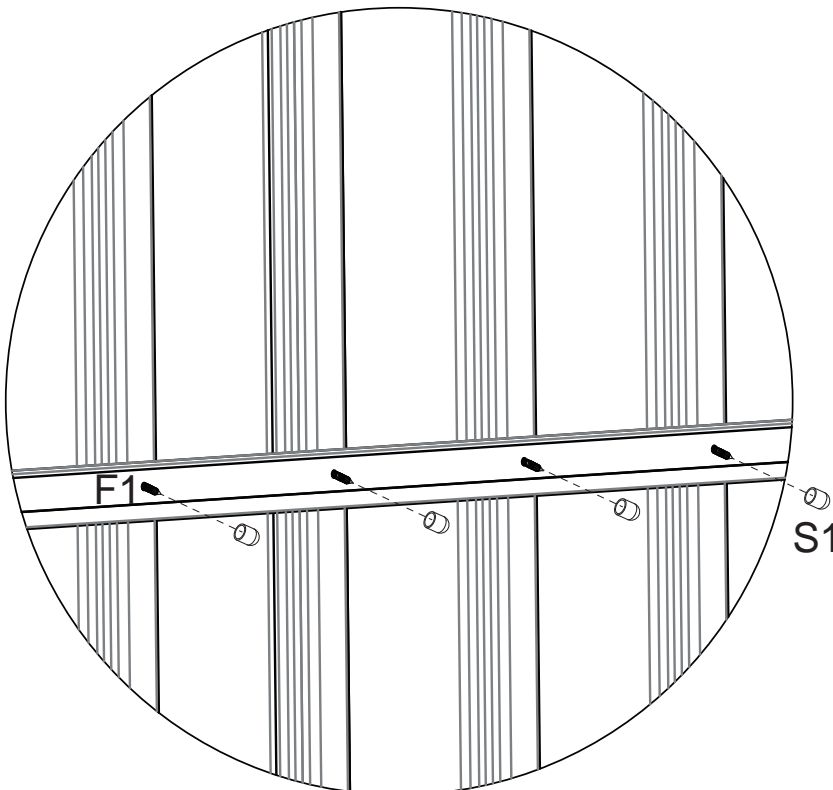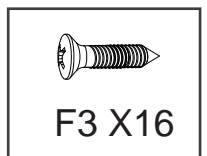

CARE & SAFETY

- In case of fire, do not attempt to extinguish any burning polypropylene with water. Unsuitable for storage of flammable or corrosive substances.
- It is of utmost importance to assemble all of the parts according to the directions. Do not skip any step.
- Please consult your local authorities if any permits are required to erect shed.
- Periodically check shed to assure that it remains stable and that the site remains level.
- It is highly recommended to secure the shed to an immovable object or to the ground by drilling holes in the floor at the pre-marked locations and inserting proper screws into the ground (size: 1.9"-3", screws are not included).
- Wear safety-goggles and always follow the manufacturer's instructions when using power tools.
- Wash shed with garden hose or a mild detergent solution. Using a stiff brush or abrasive cleaner could damage shed.
- Hot items such as recently used grills, blowtorches, etc. must not be stored in the shed.
- Heavy articles should not be leaned against the walls, as this may cause distortion.
- Keep roof clean of snow and leaves. Heavy amounts of snow on roof can damage the shed making it unsafe to enter.
- Although wind direction varies, it is an important factor when taking into account where to place your shed. Therefore, it is recommended to reduce wind exposure of the shed in general, and the door side in particular.
- Keep doors closed and locked to prevent wind damage.
- Do not stand on the roof.