



12'X 14'

WALL MOUNT GAZEBO

Assembly Manual

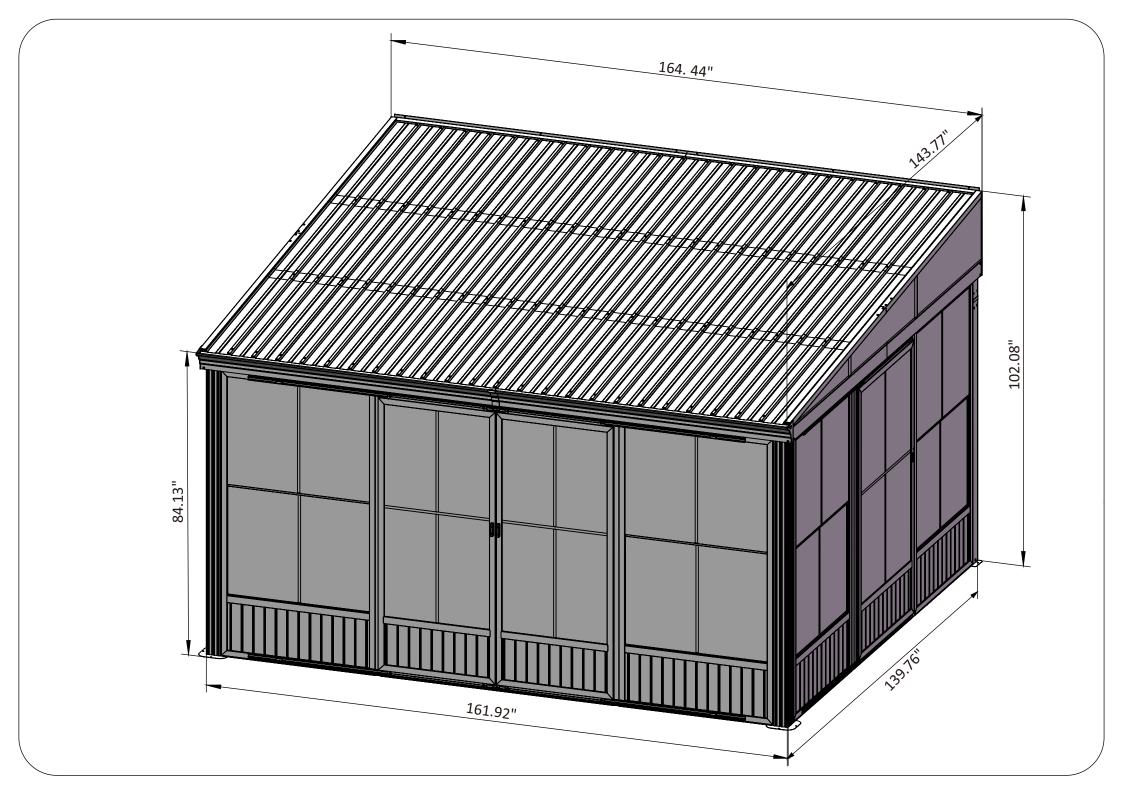

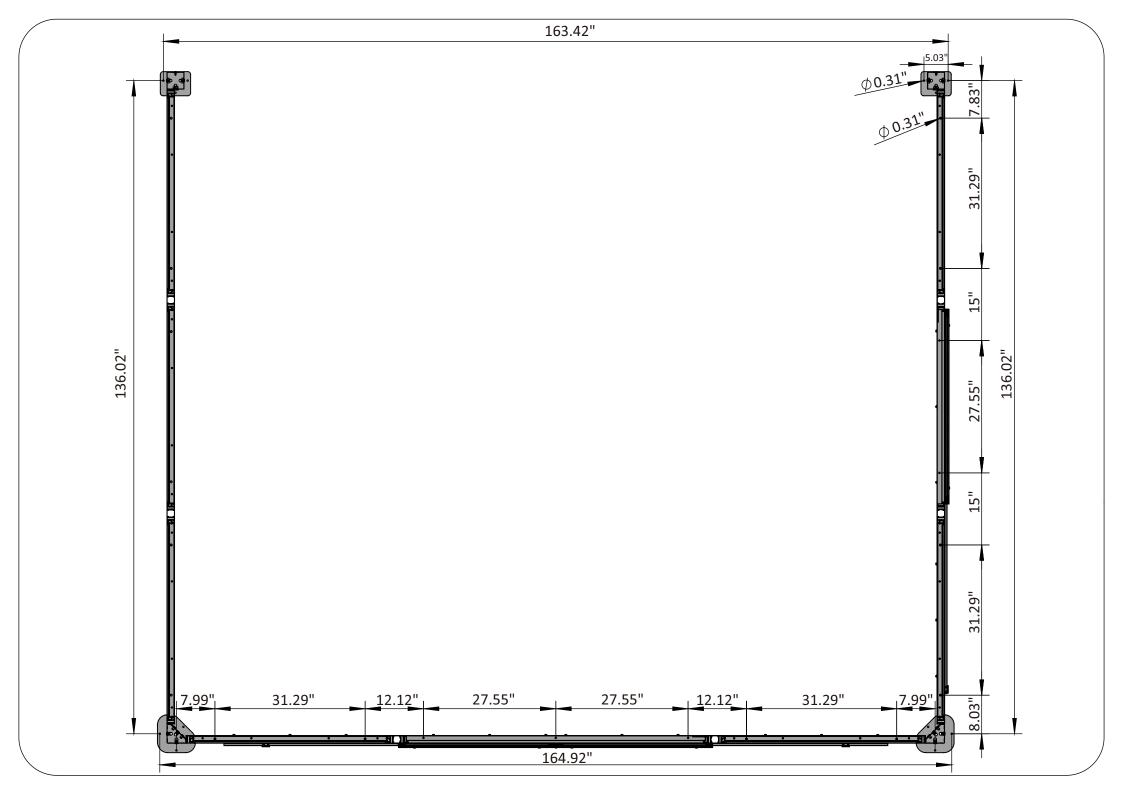

Read and follow this assembly and operation guide.

To reduce personal injury and damage to you Sunroom

We recommend a **three-person team** for assembly and disassembly.

Please **remove** snow accumulation at all times.

Please schedule enough time to complete the assembly of the sunroom.

It will takes approximately 7 hours to set up.

If you like our products, please tell other customers

If you have problem with our products, please tell us

Please feel free to contact us.


Pre-assembly

TOOLS THAT MAY BE REQUIRED (Not included in boxes)

*NOTE: Tools / equipment are not shown to actual size and scale.



LEVEL



RUBBER MALLET



PHILLIPS SCREW



DRILL



N KEY



ALLEN KEY

EQUIPMENT REQUIRED (Not included in boxes)

*NOTE: Equipment are not shown to actual size and scale.



SAFETY HAT



GLOVES



SAFETY GOGGLES



STEPLADDER

Matters needing attention



1. Three or more people are required for assembly.




2. Do not fully tighten screws prior to complete assembly.


Regulation


IMPORTANT: A sunroom may entail to purchase a municipal permit or be subject to specific building codes. It is the consumer's responsibility to inform themselves of any restrictions.


Care and Cleaning:


For cleaning, use a domestic soap or detergent and wash with warm water using a sponge or fabric. Rinse with clean water.

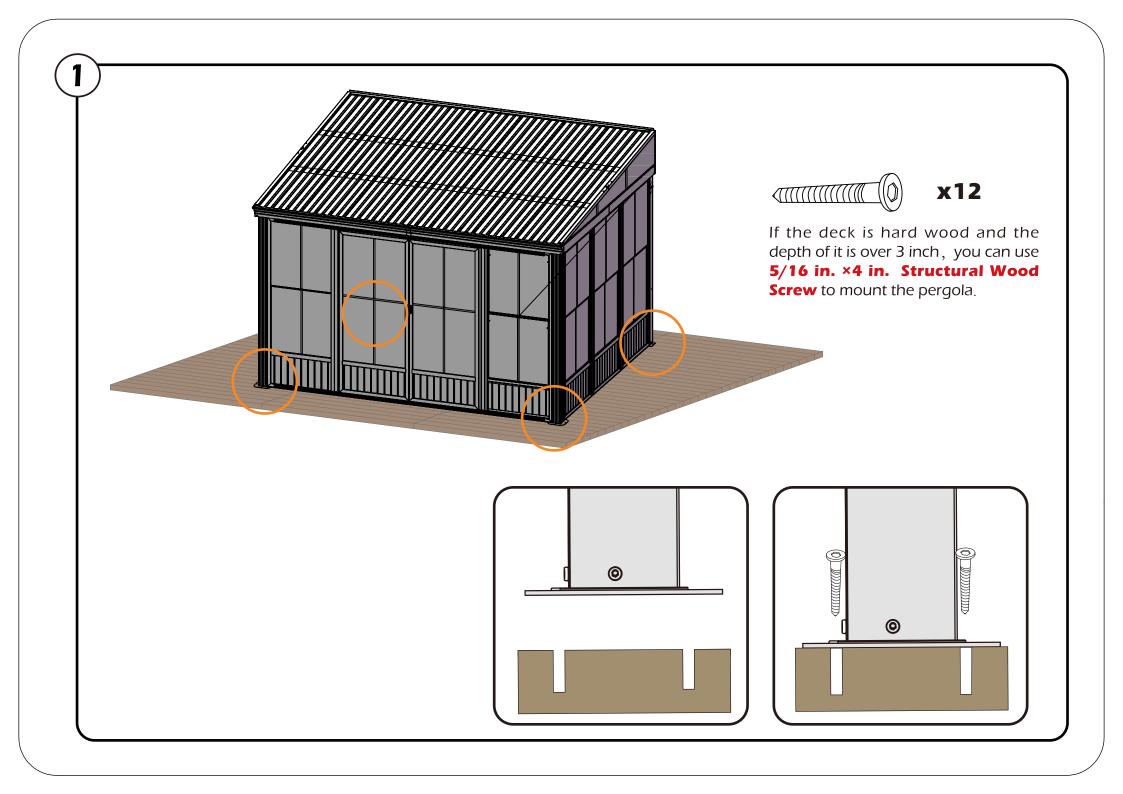


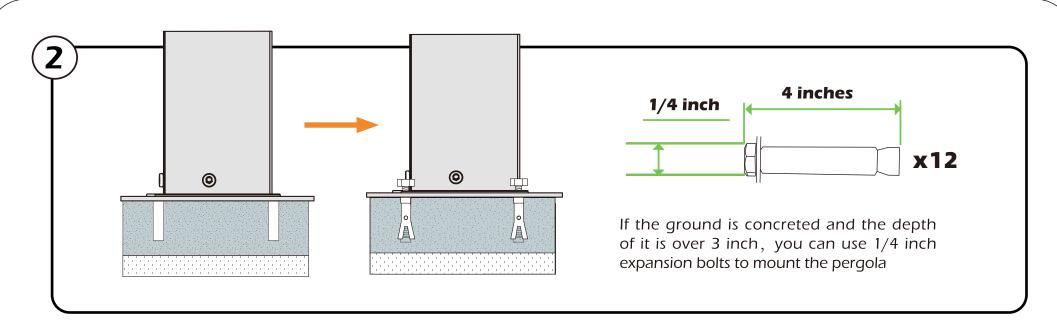

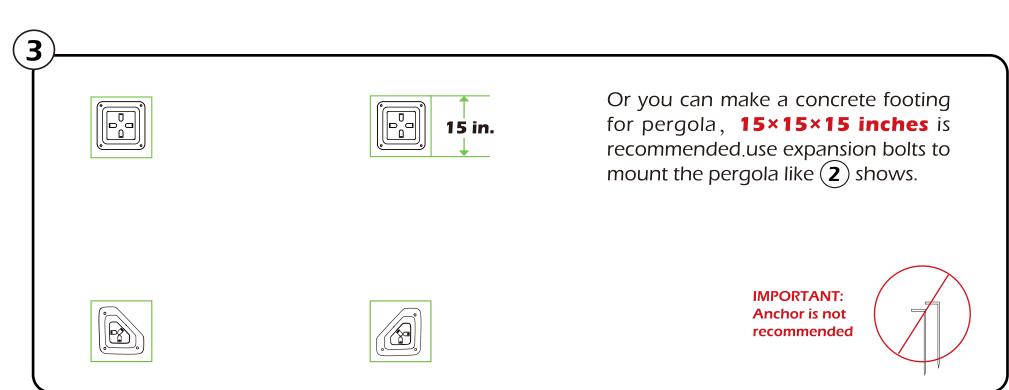


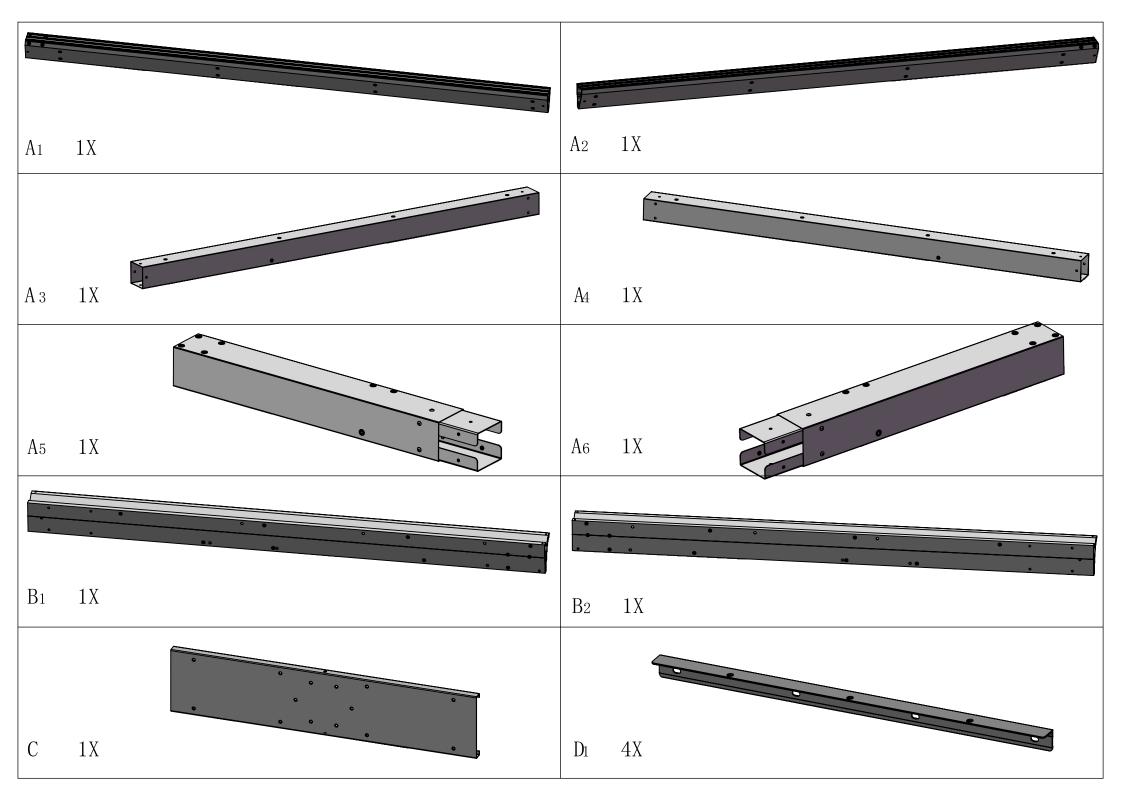


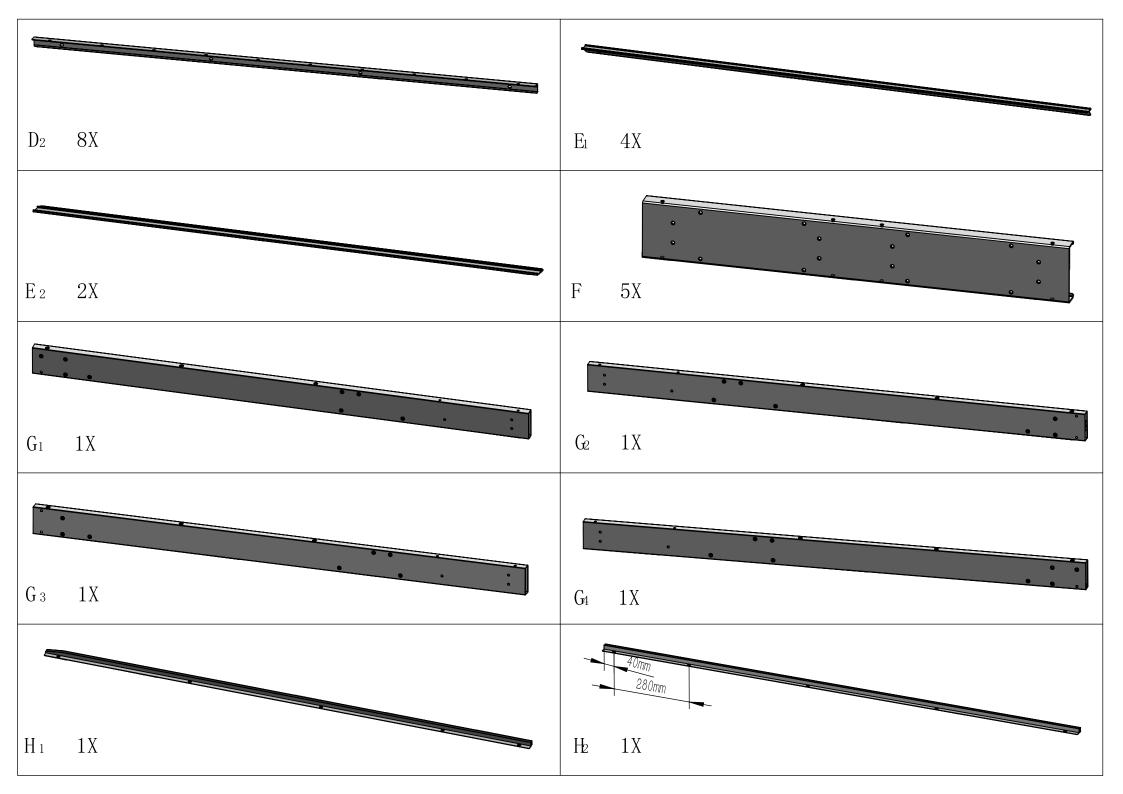


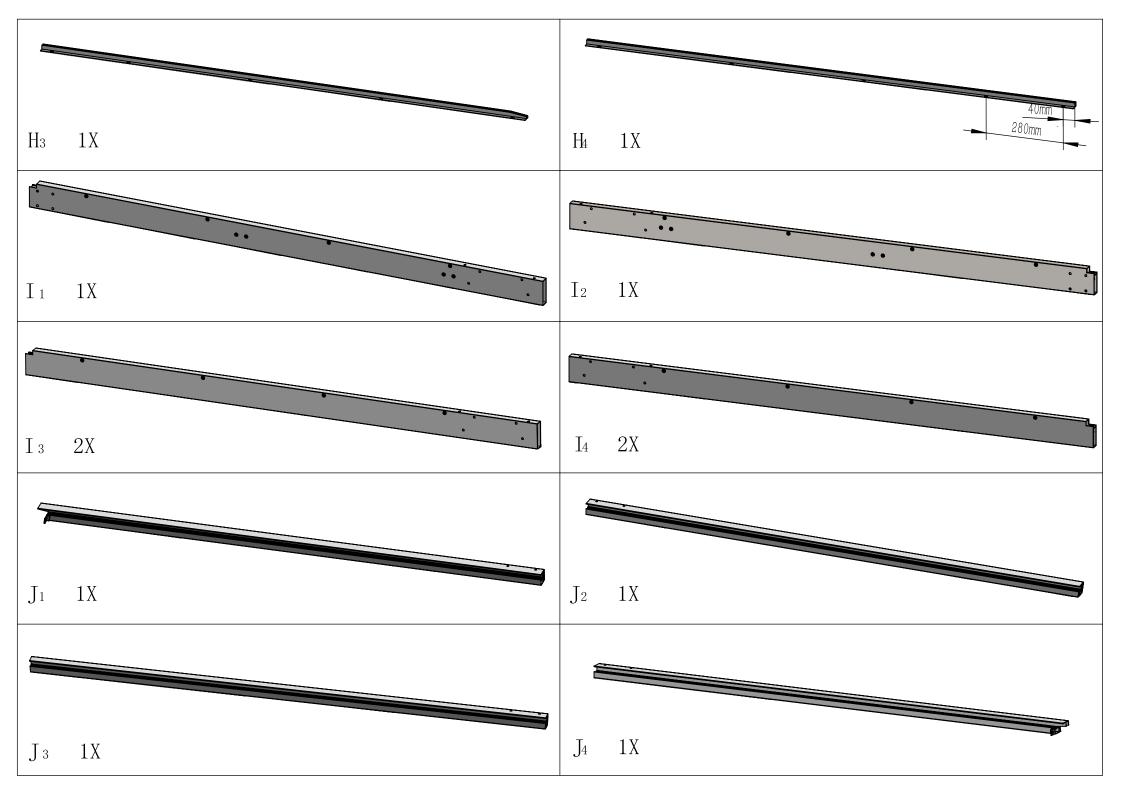




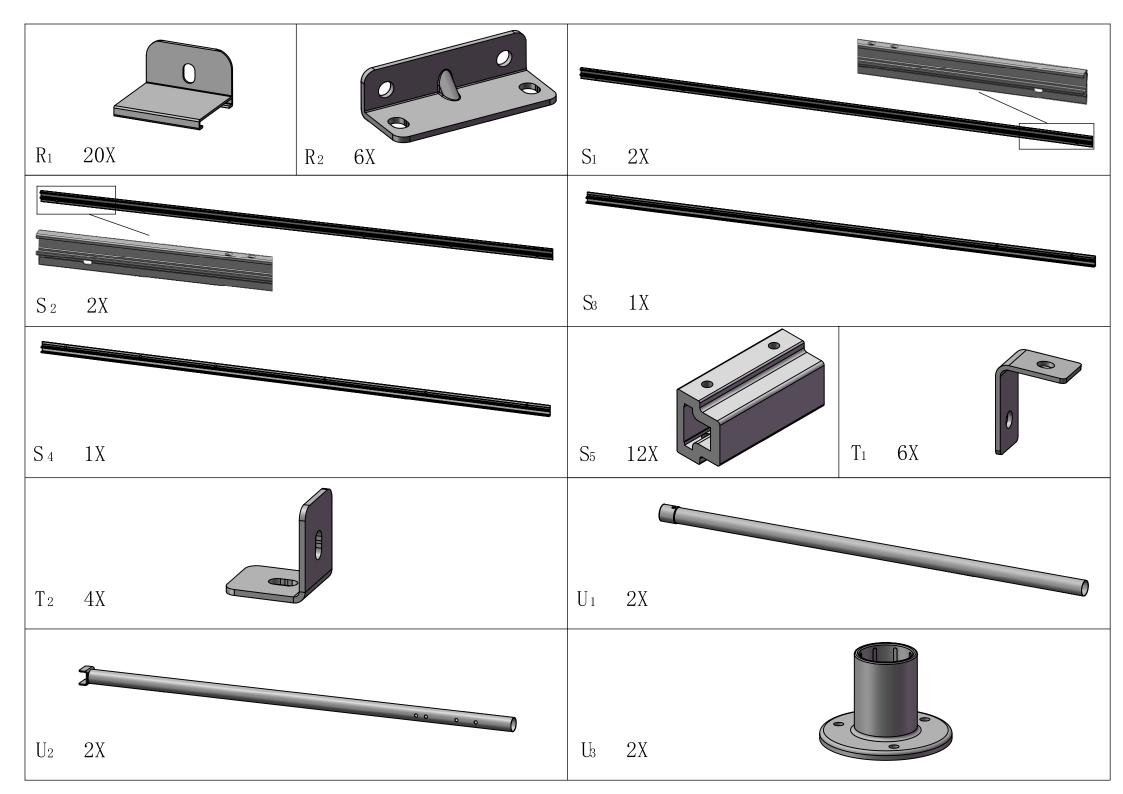

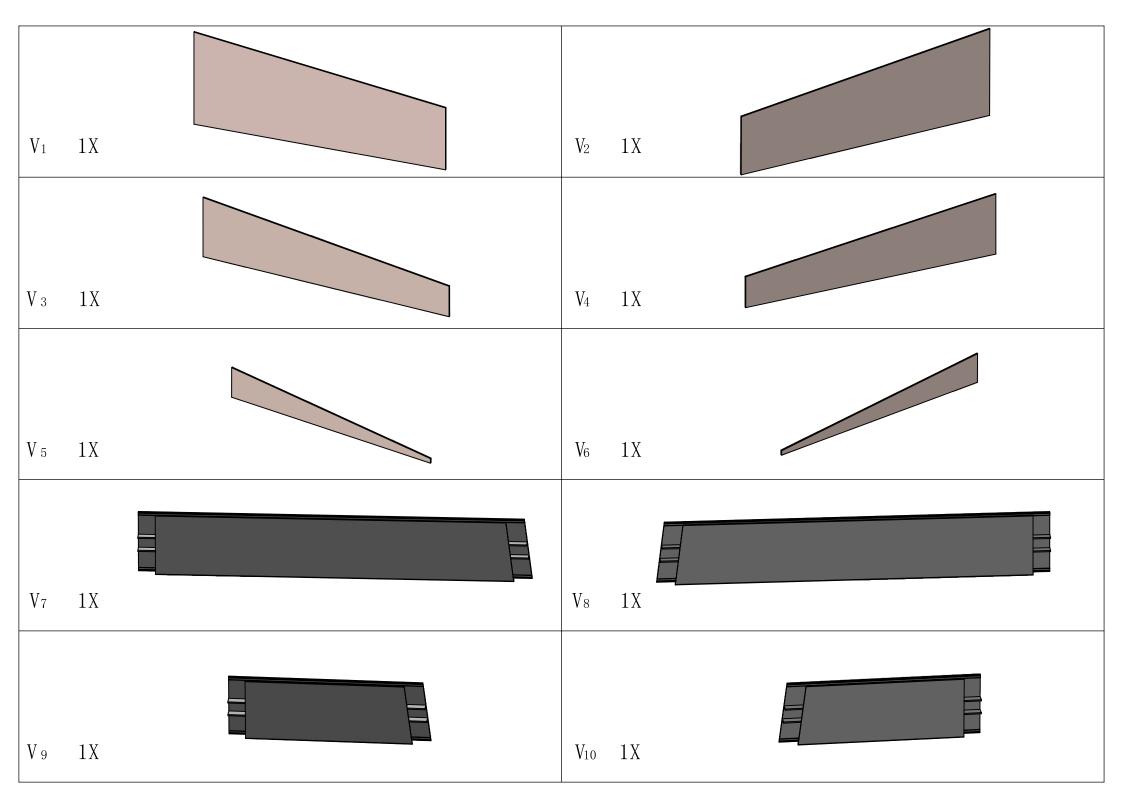


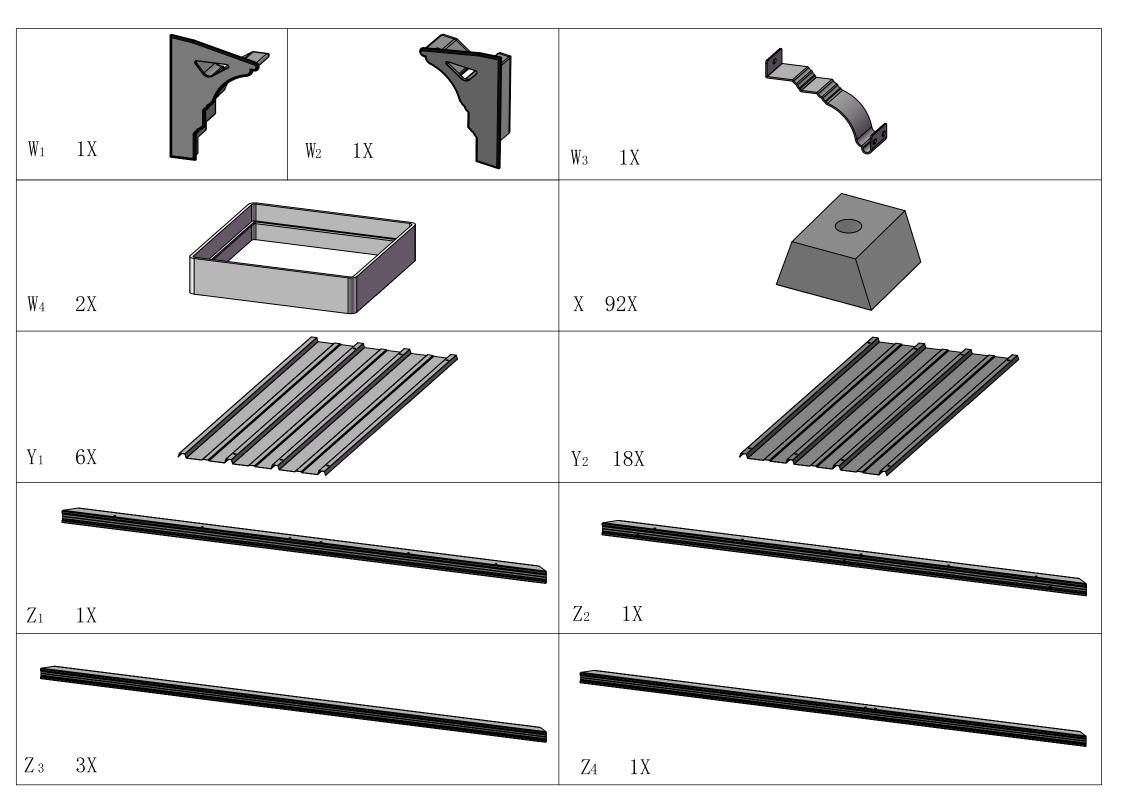


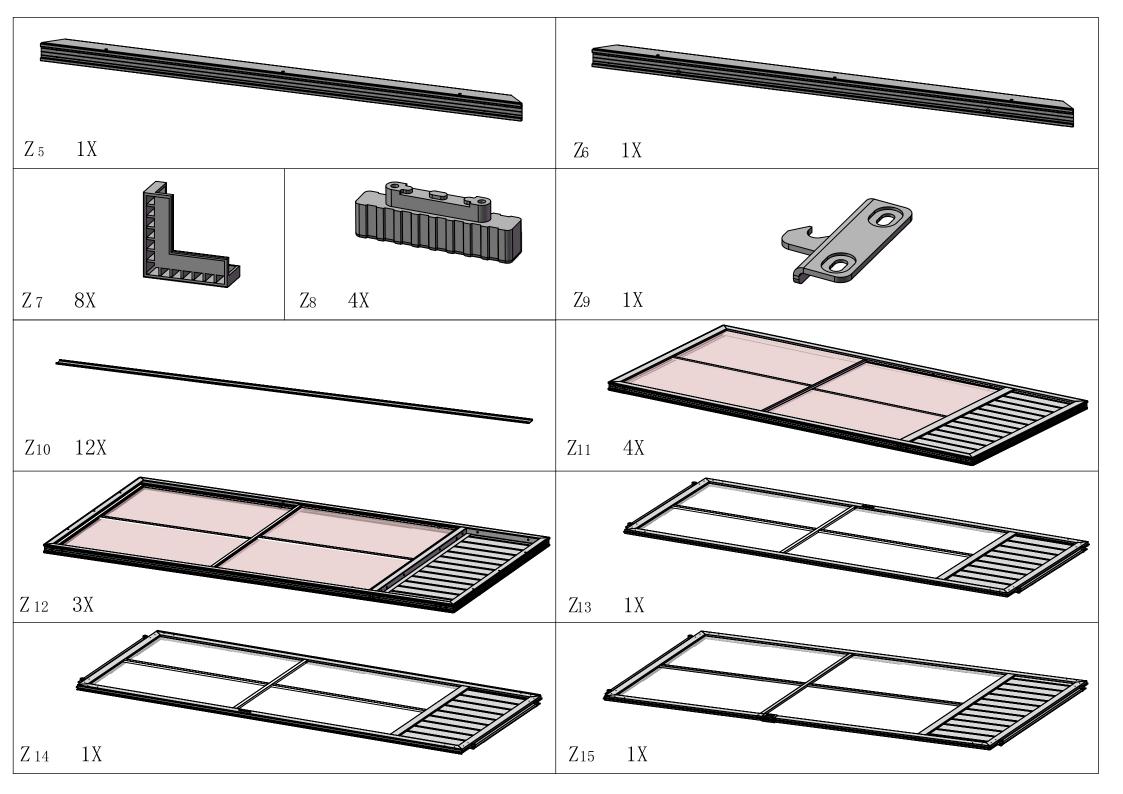



1#	8	ST4. 8*13	2#	19	M5*12	3#	64	ST3. 5*13
4#	276	M6*16	5#	92	M6*28	6#	8	M6*40
7#	2	M6*12(L20)	8#	6	M6*15 (L30)	9#	10	ST6*70
10#	10		114	0.0		10#		
10#	10		11#	92	M6	12#	2	M8*60
13#	2	M8	14#	2	M8	15#	2	


16#	24	S3. 5*19	17#	36	M5*4	8 18	3#	6	M5
19#	36	M5	20#	4	M4*50	21	# 4		M4
22#	1	S8	23#	1	S13	24	# 1		S4
25#	92	D12/d6. 2*H2	26#	1	S3				

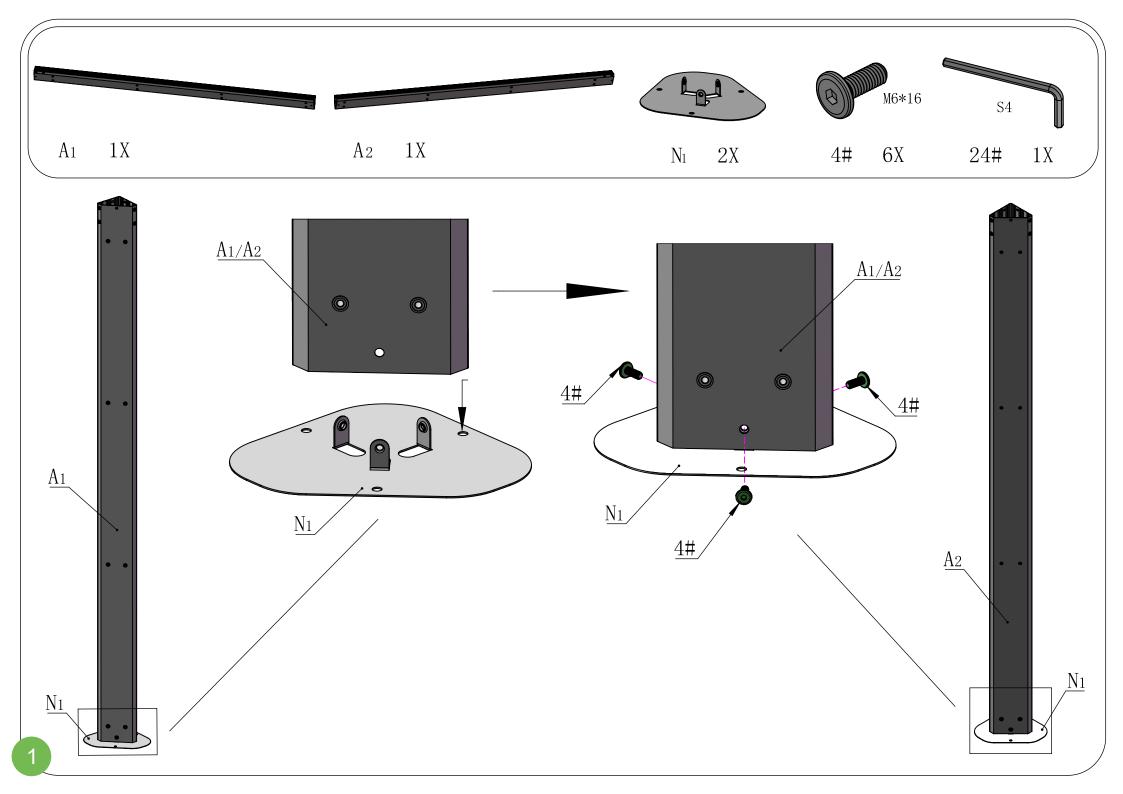


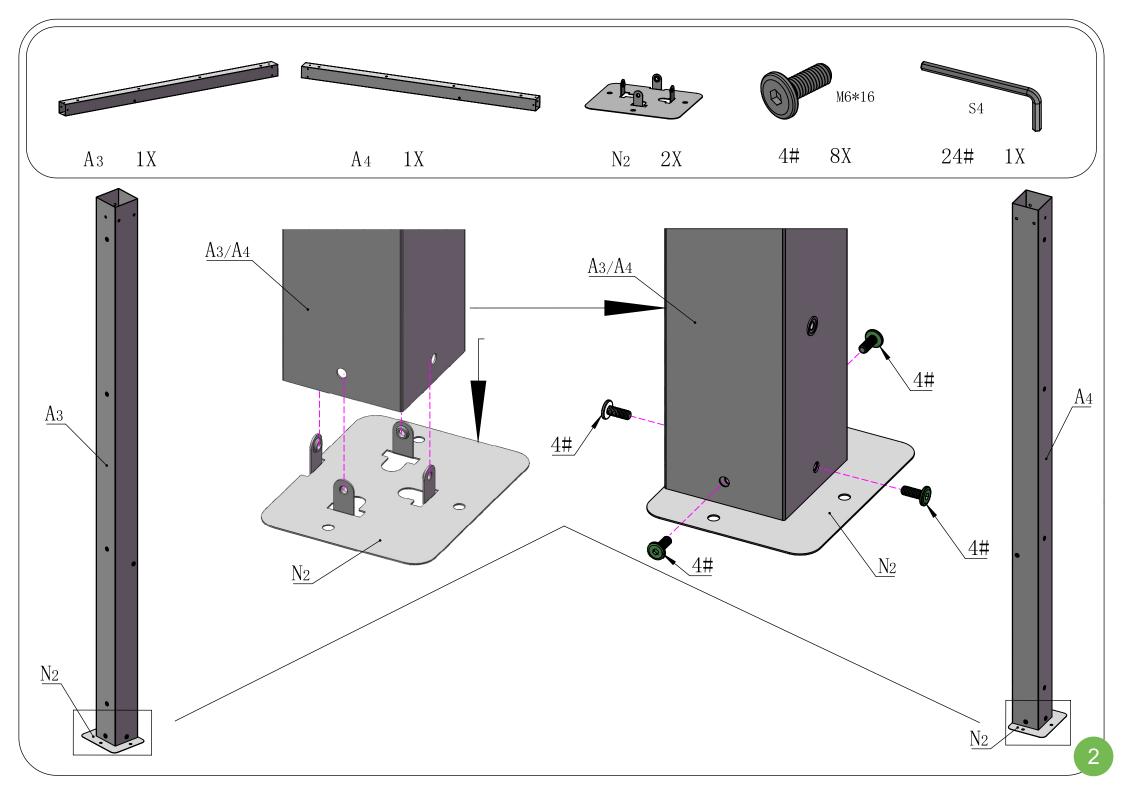


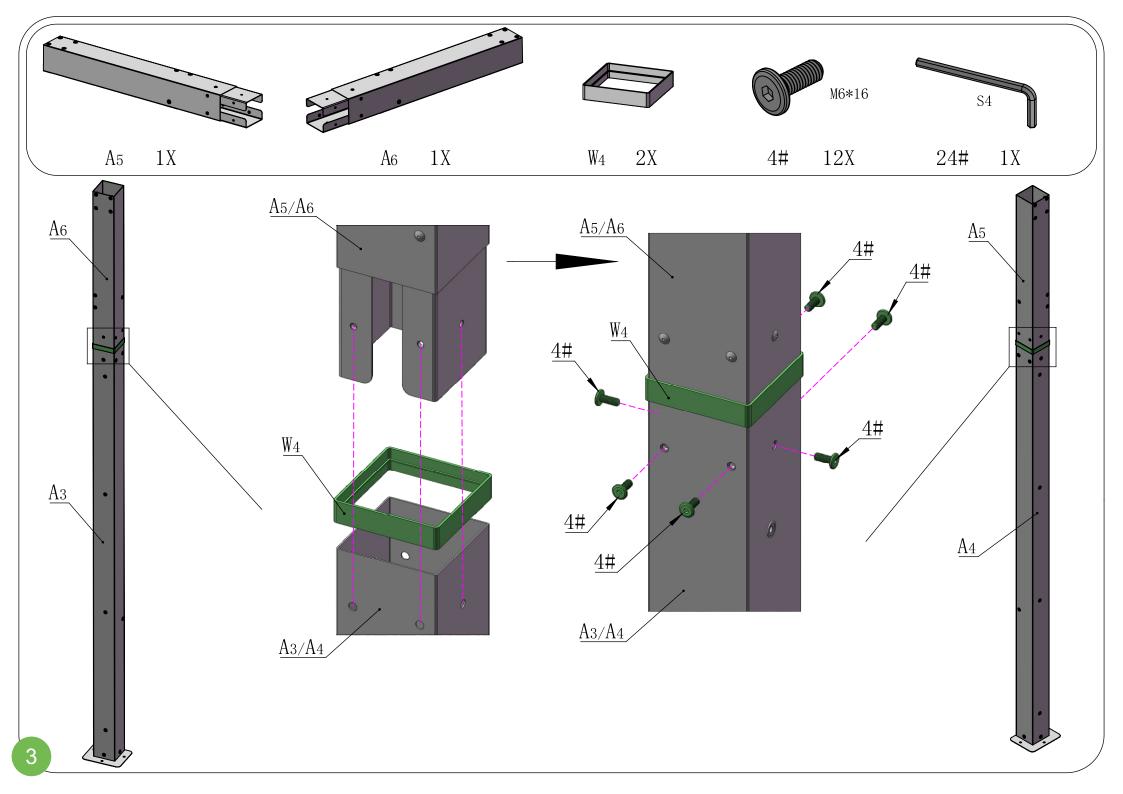


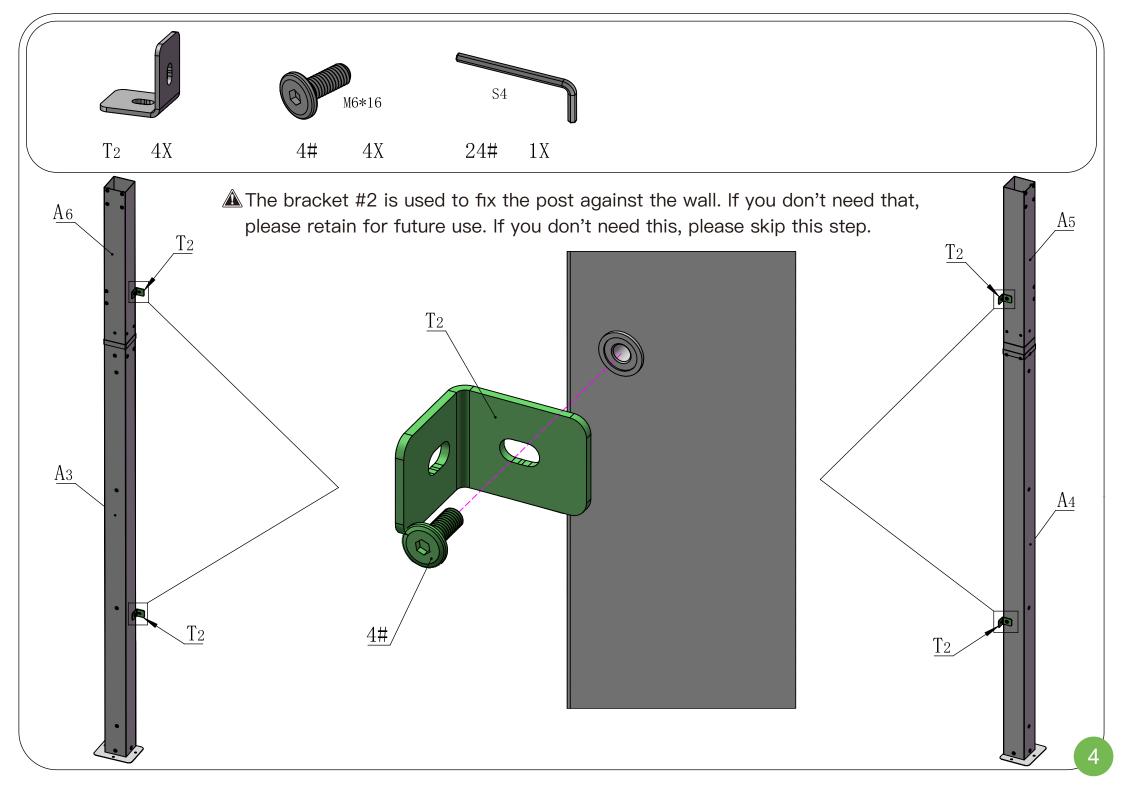


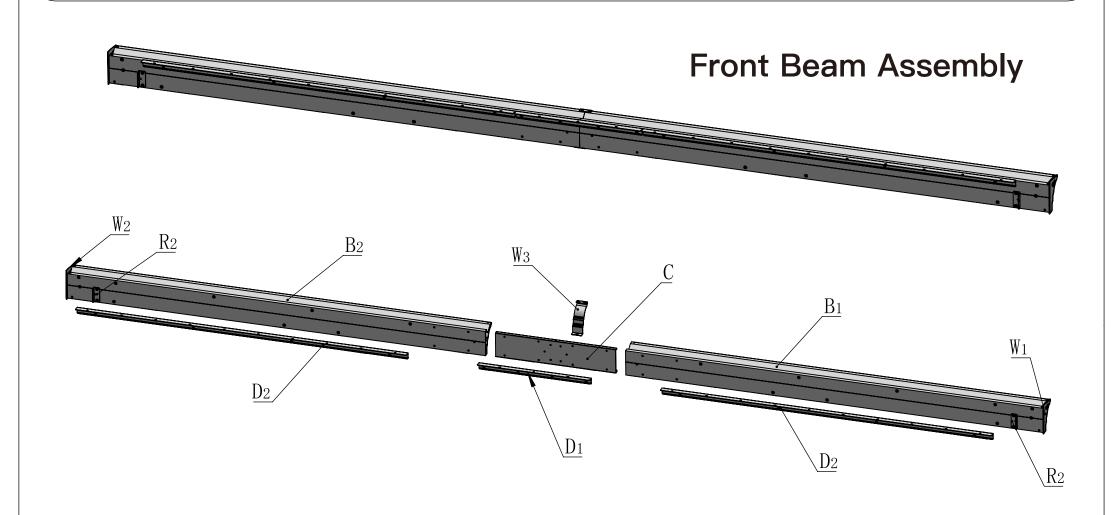


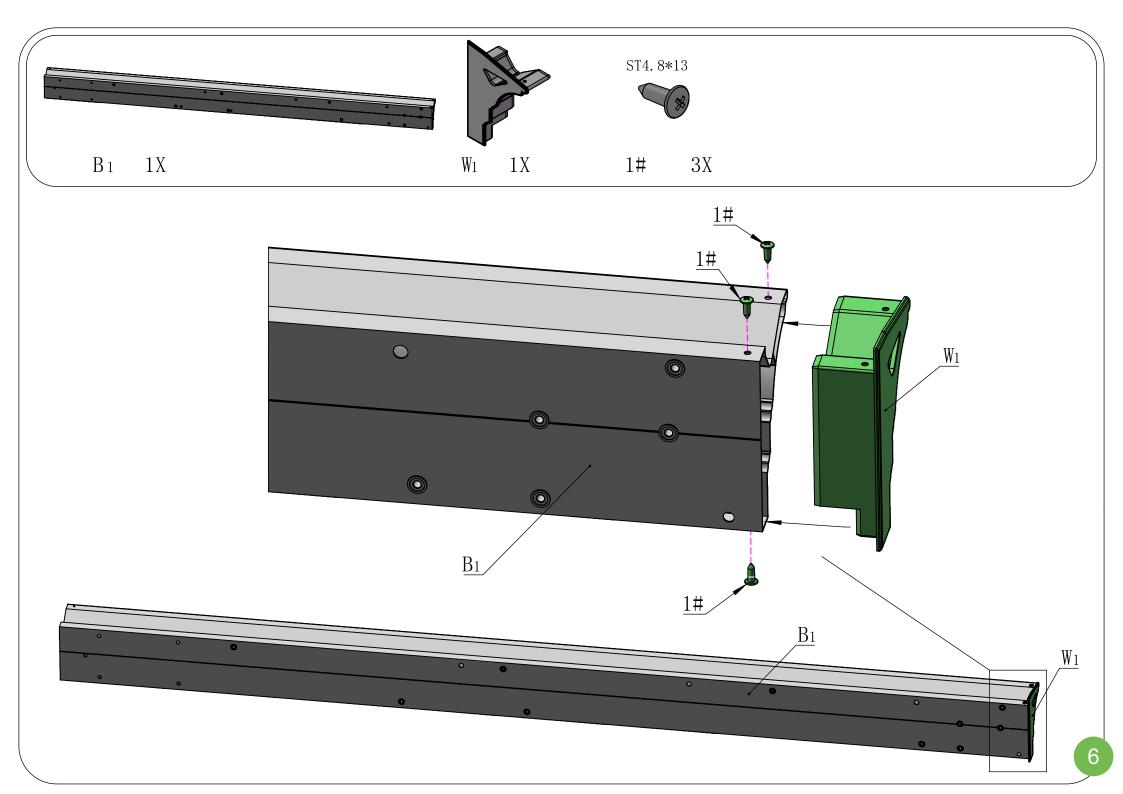


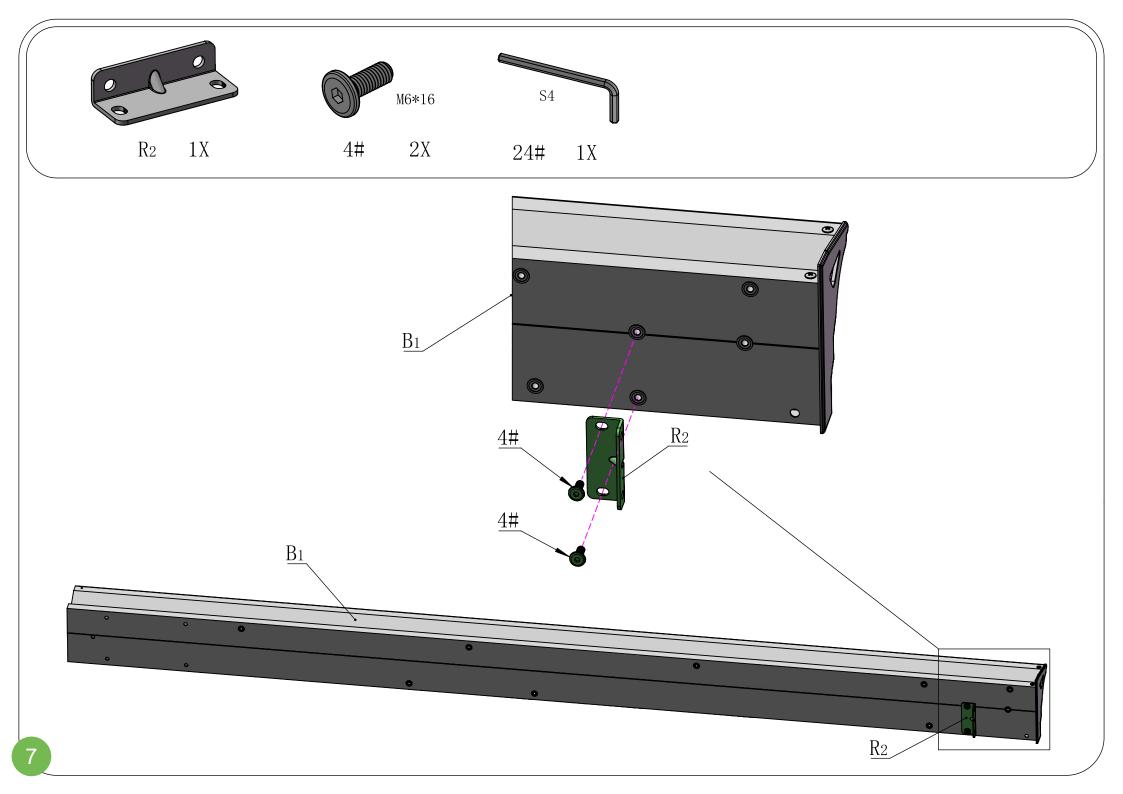


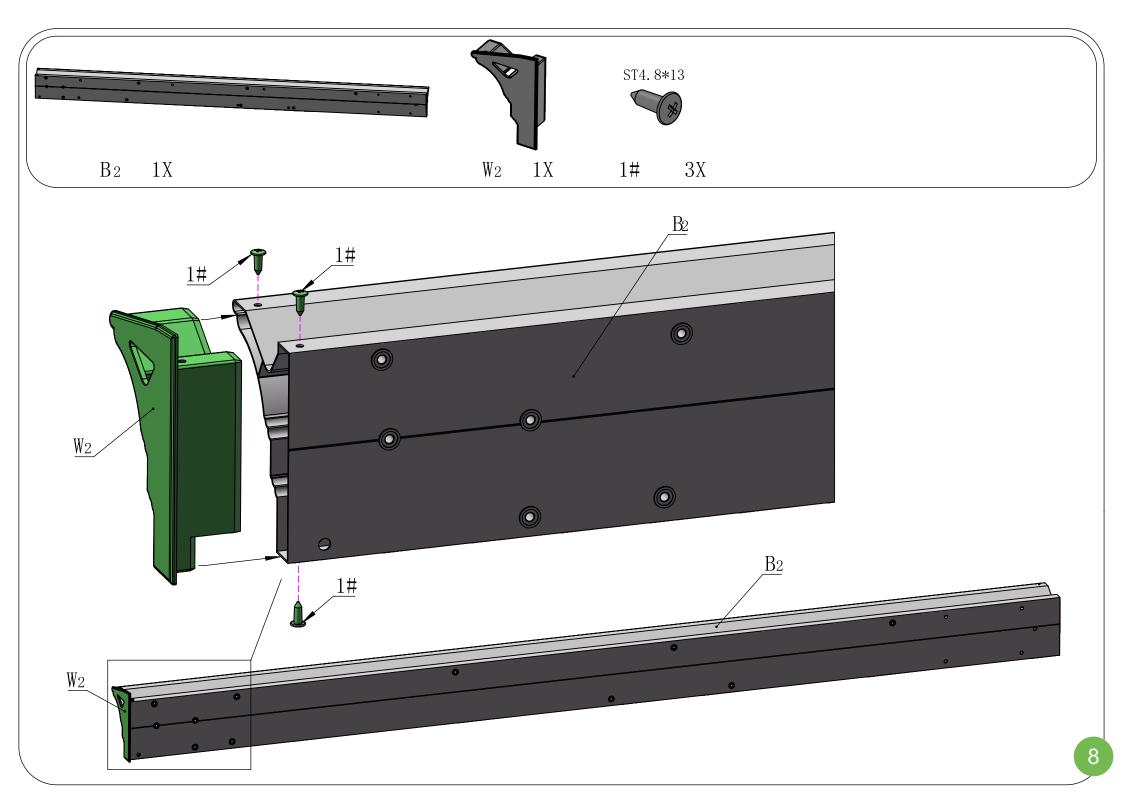


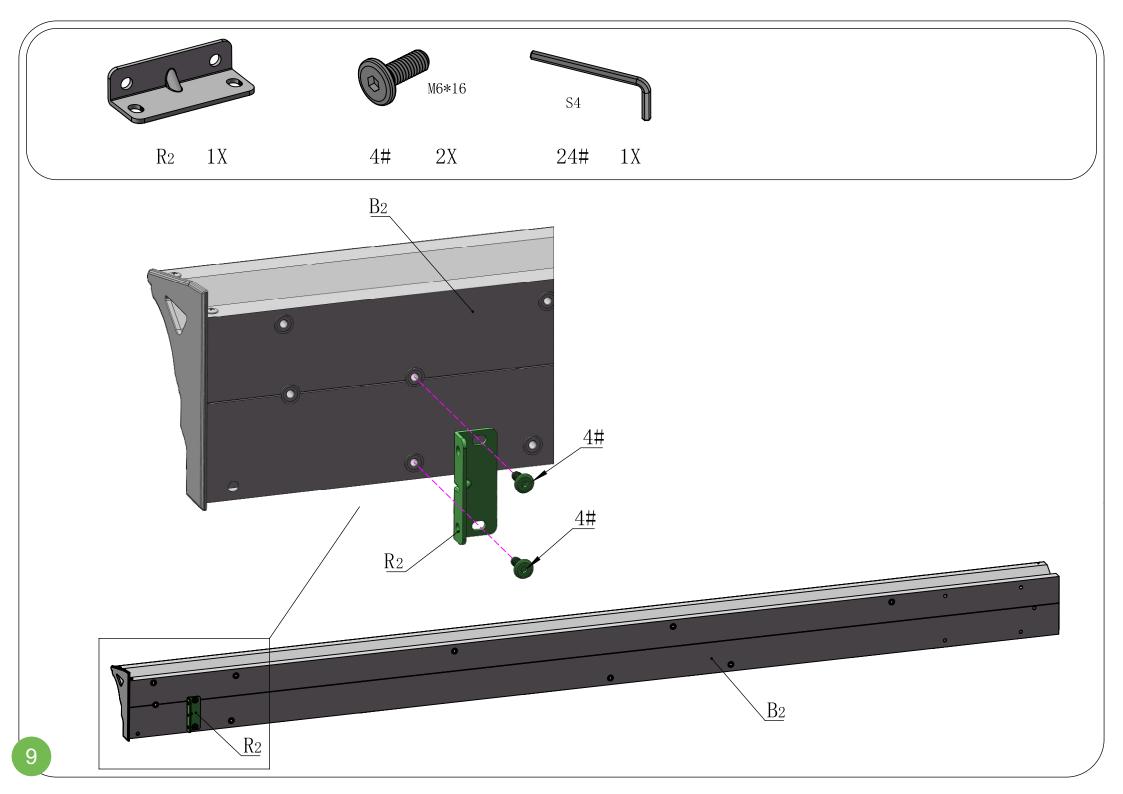


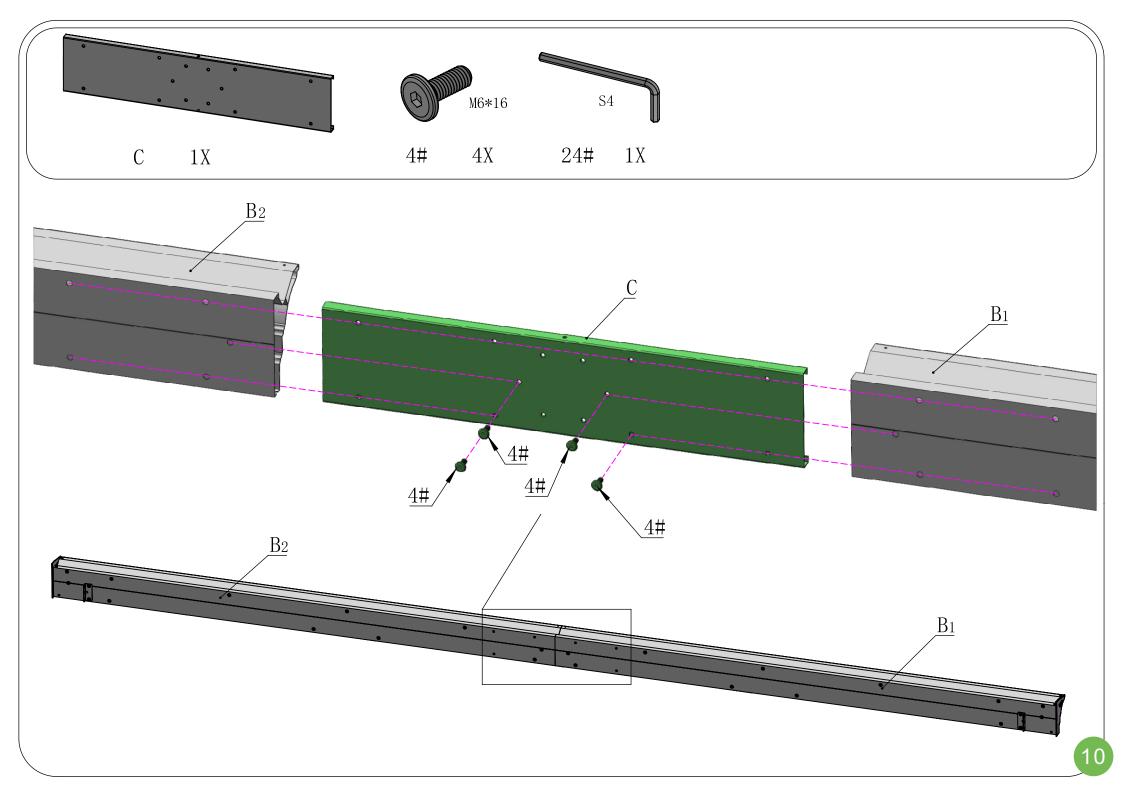


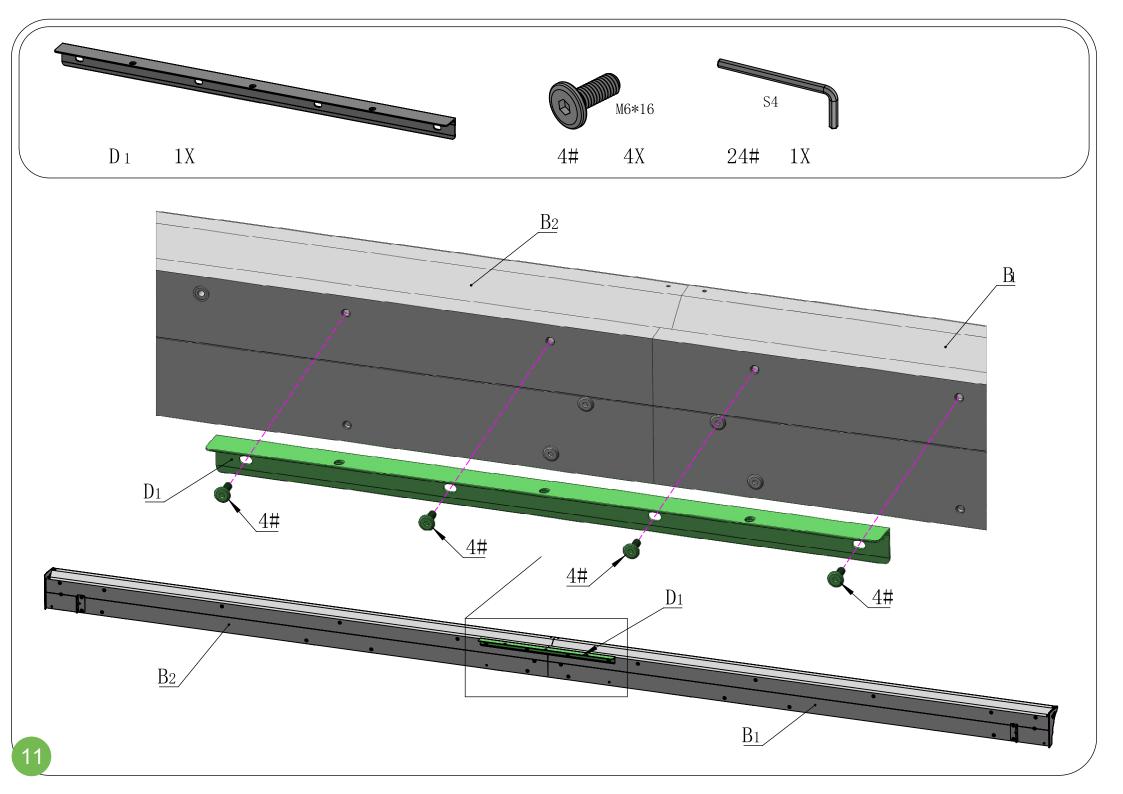


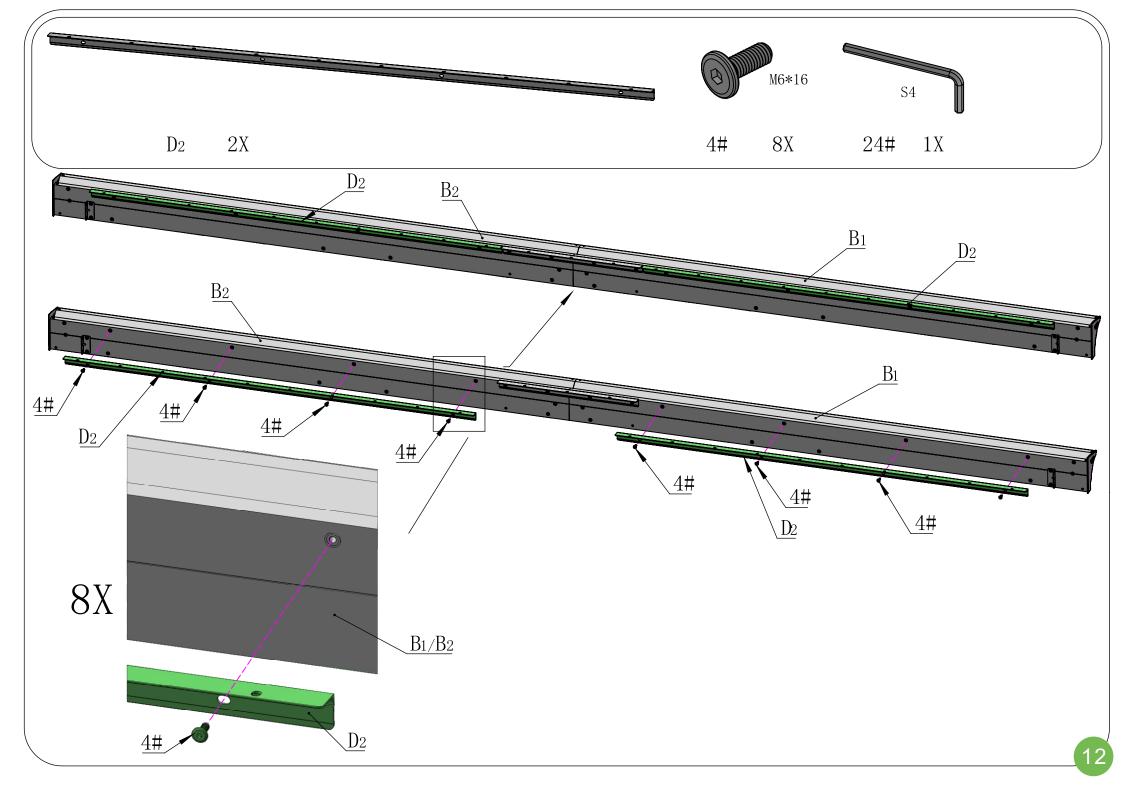


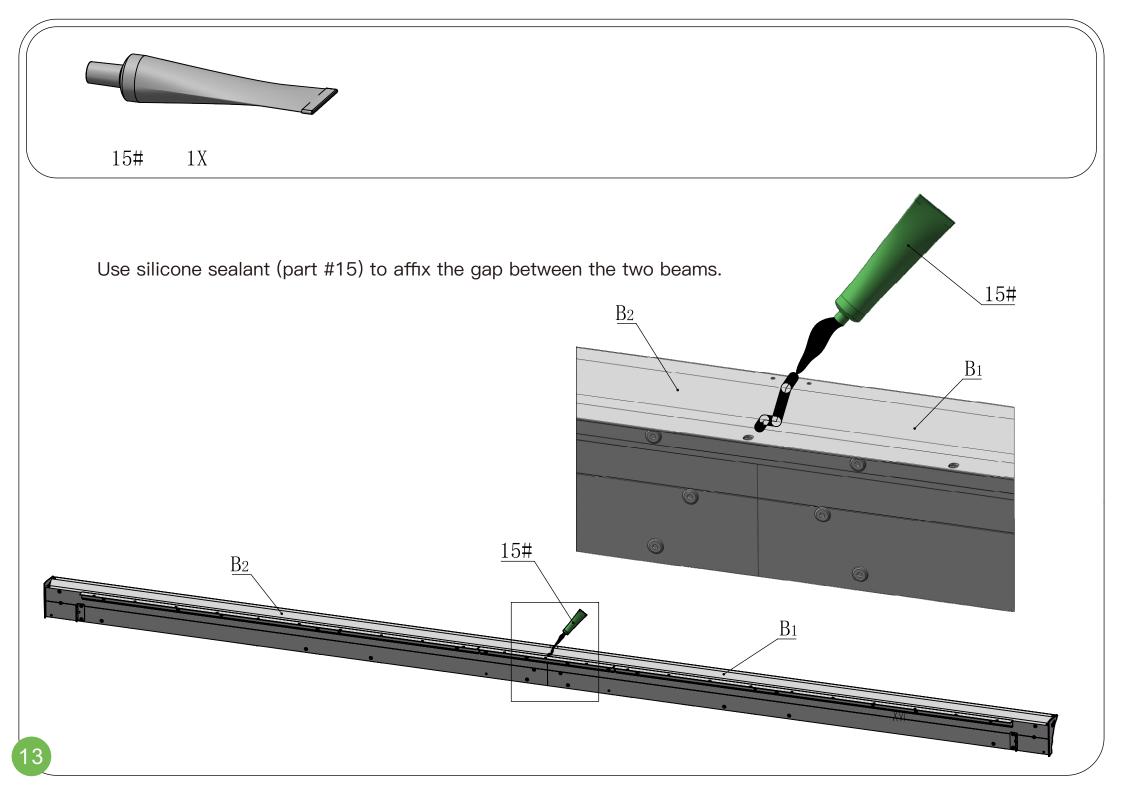


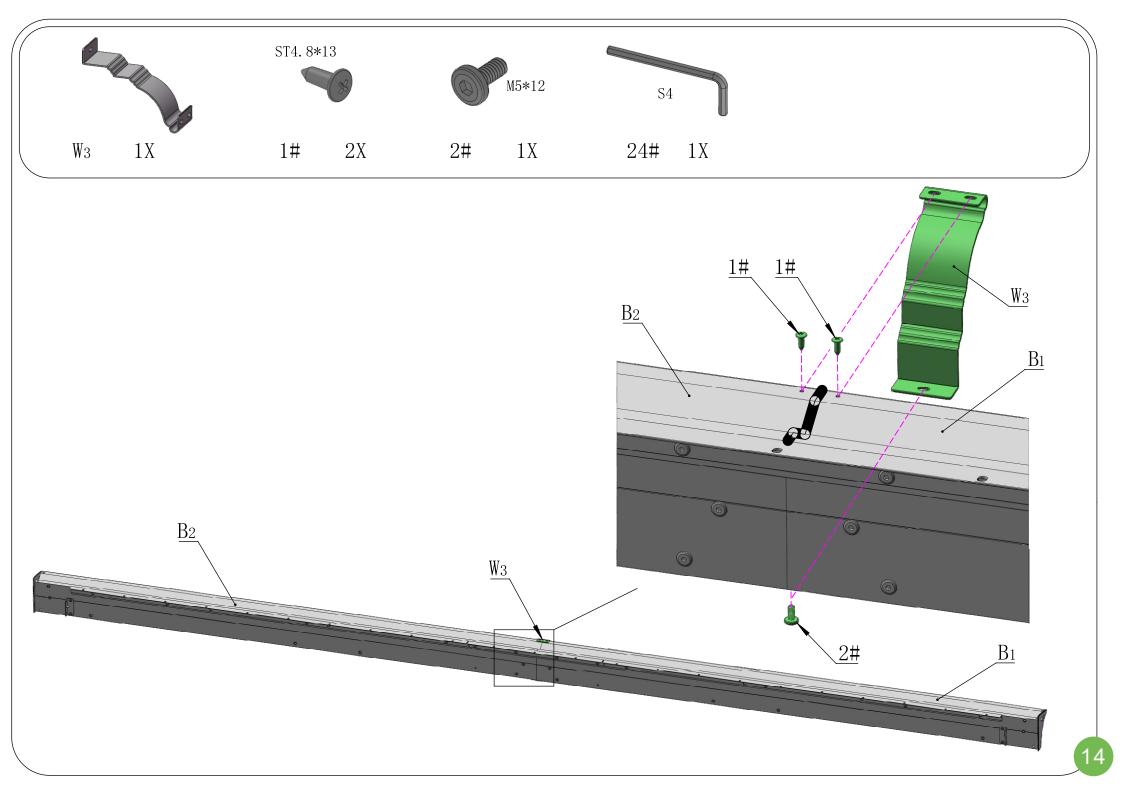


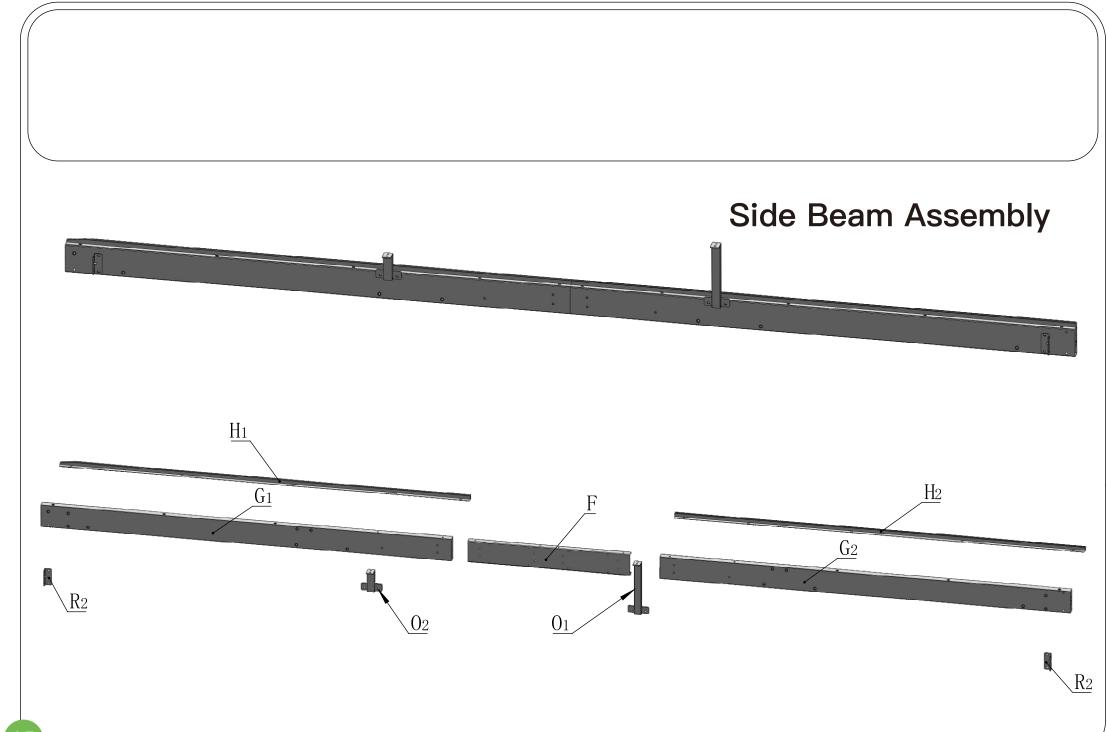


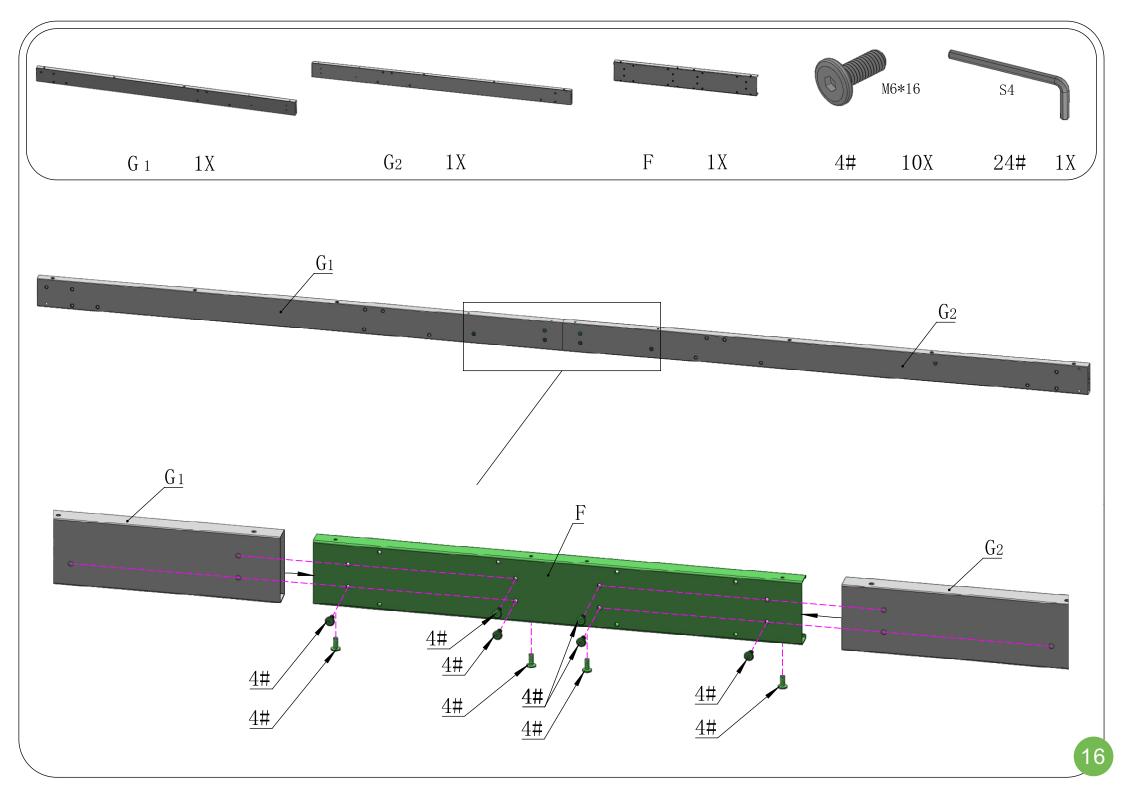


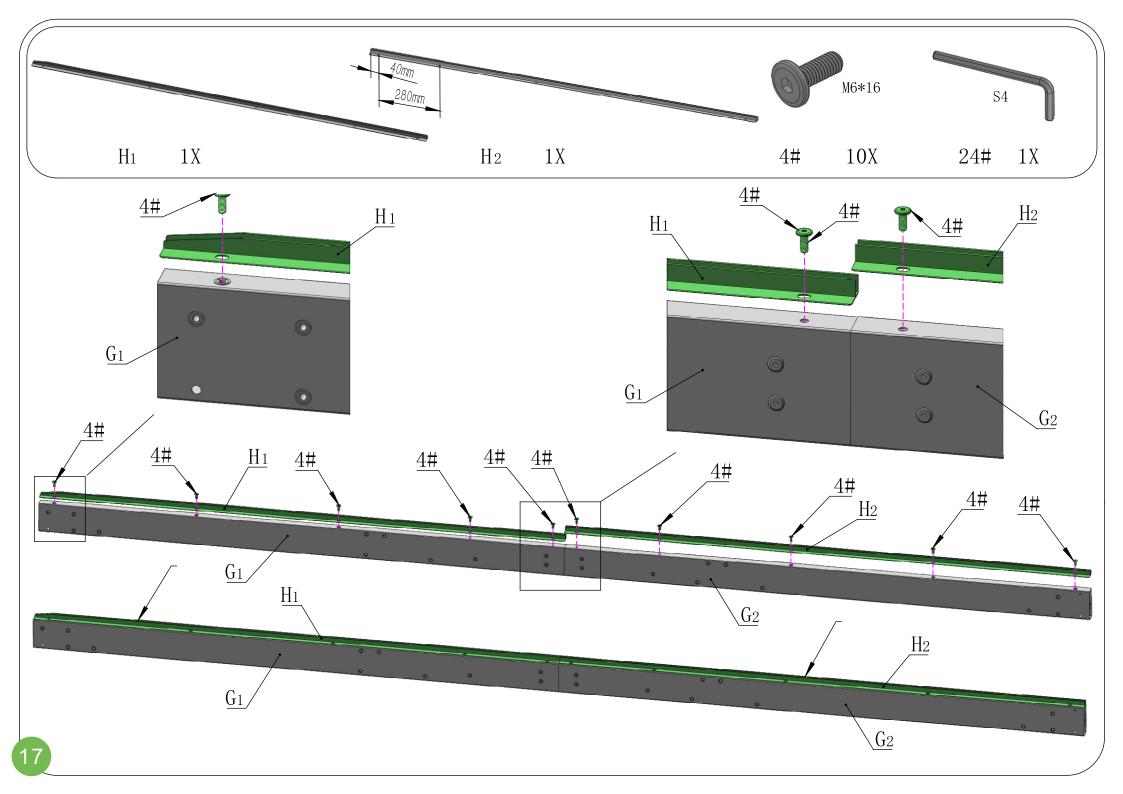


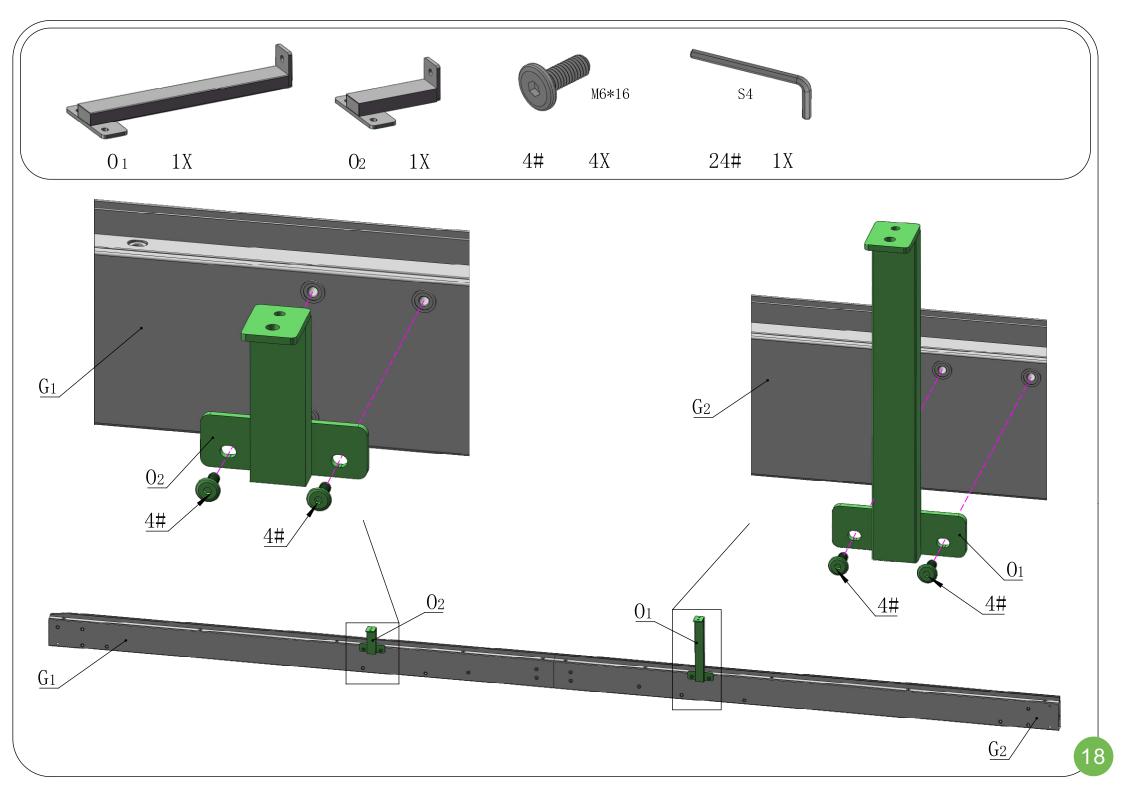


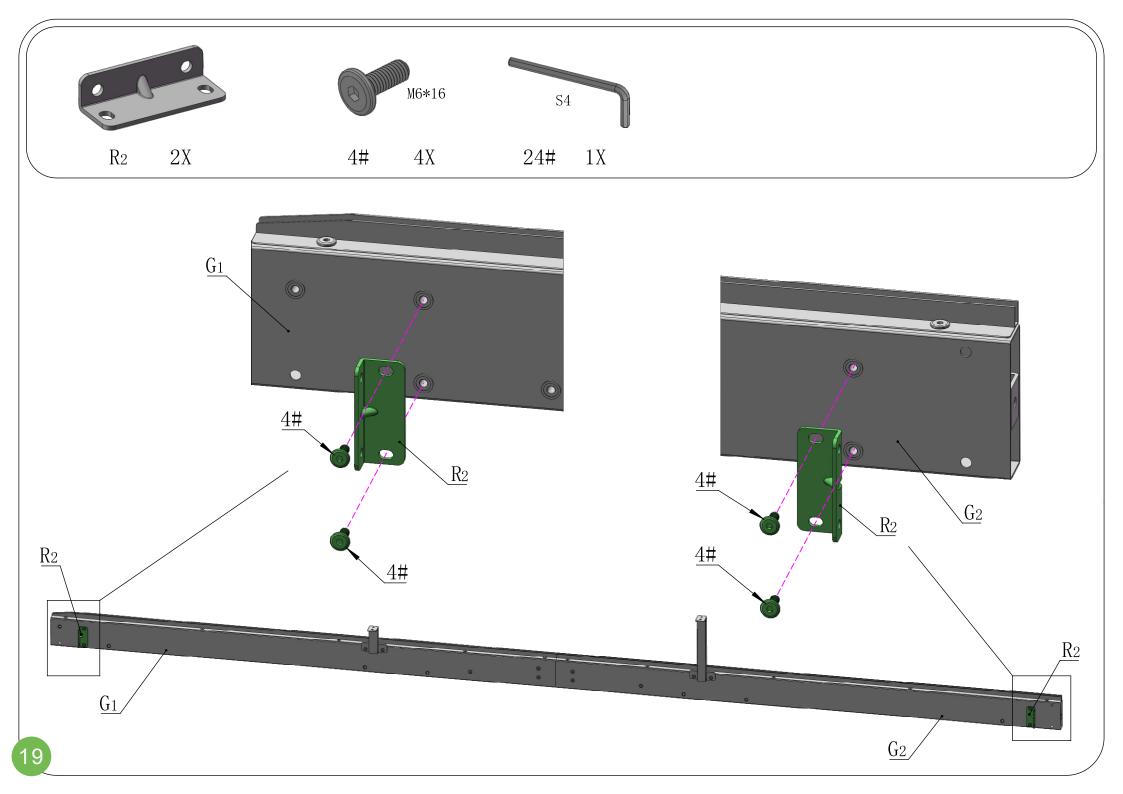


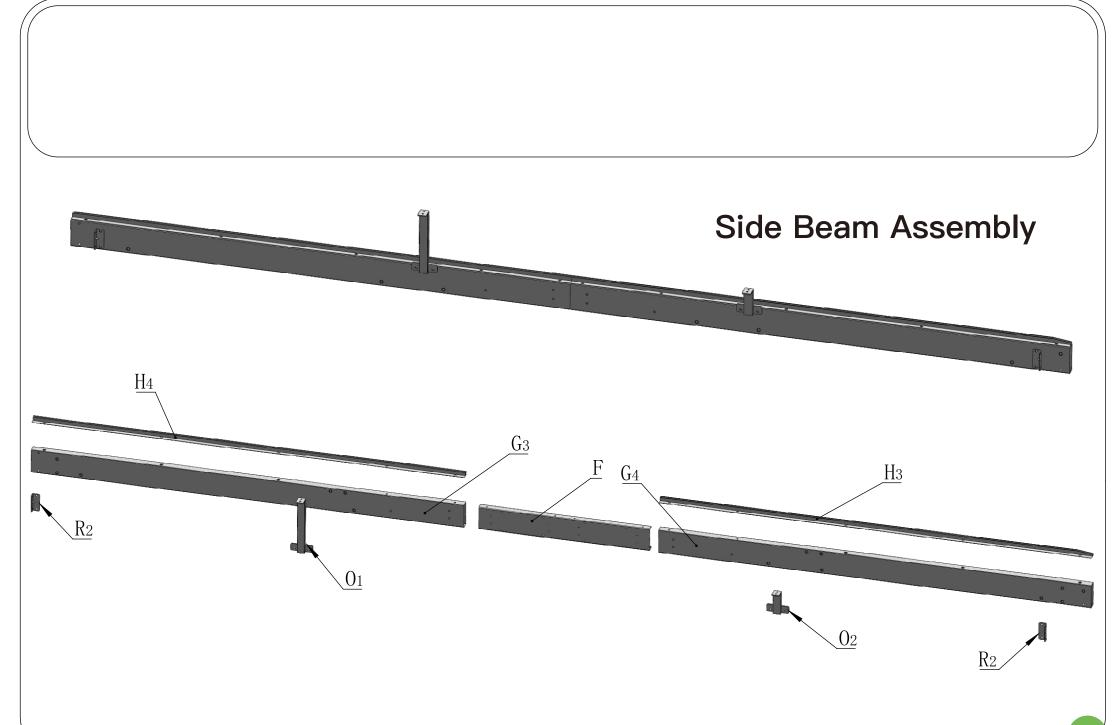

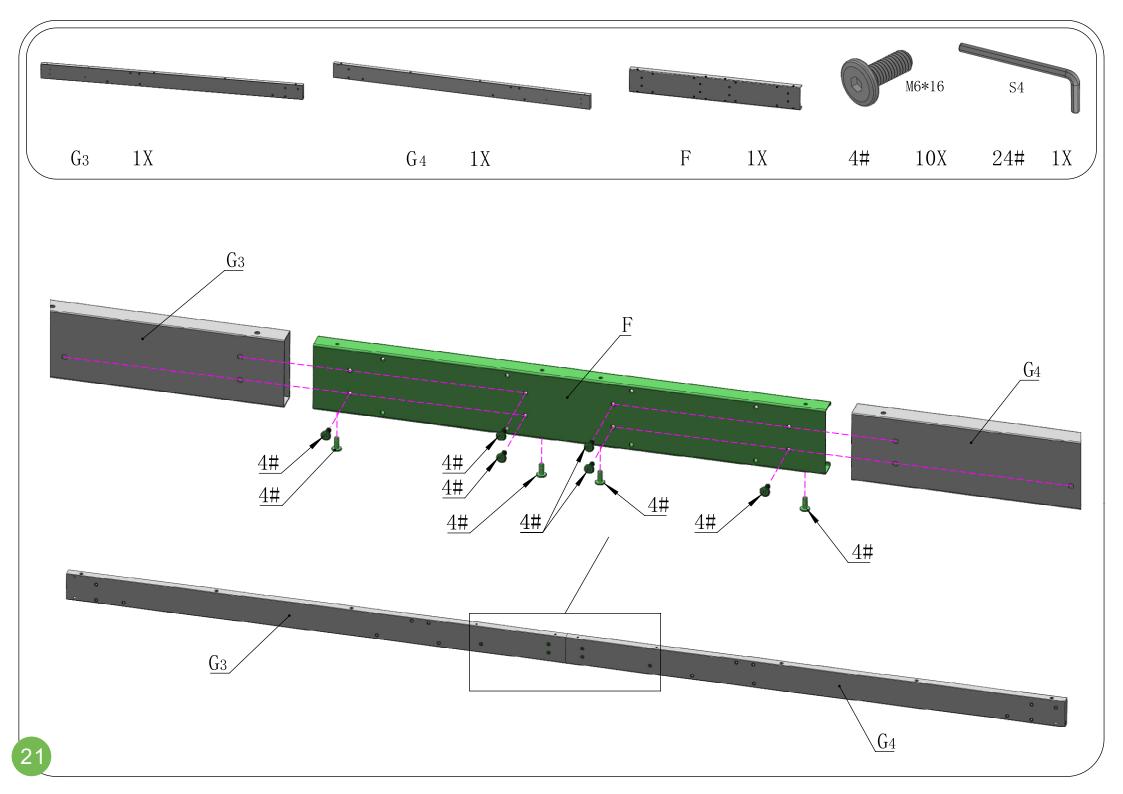


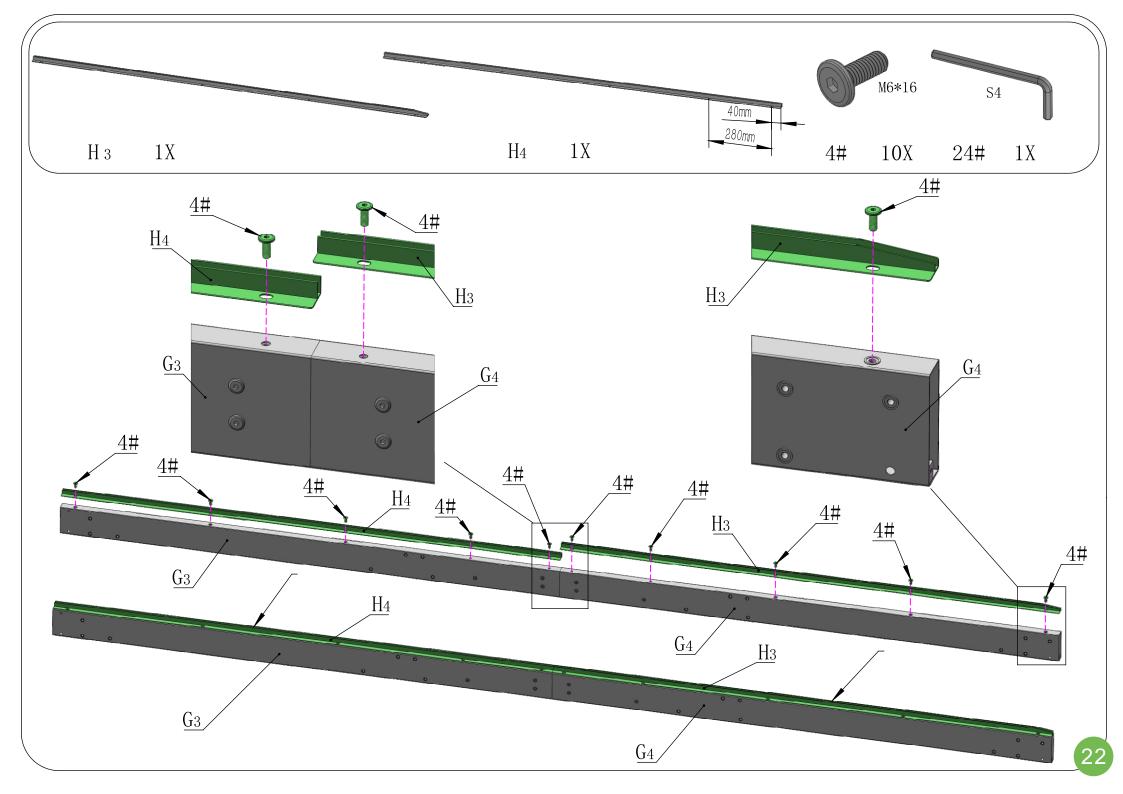


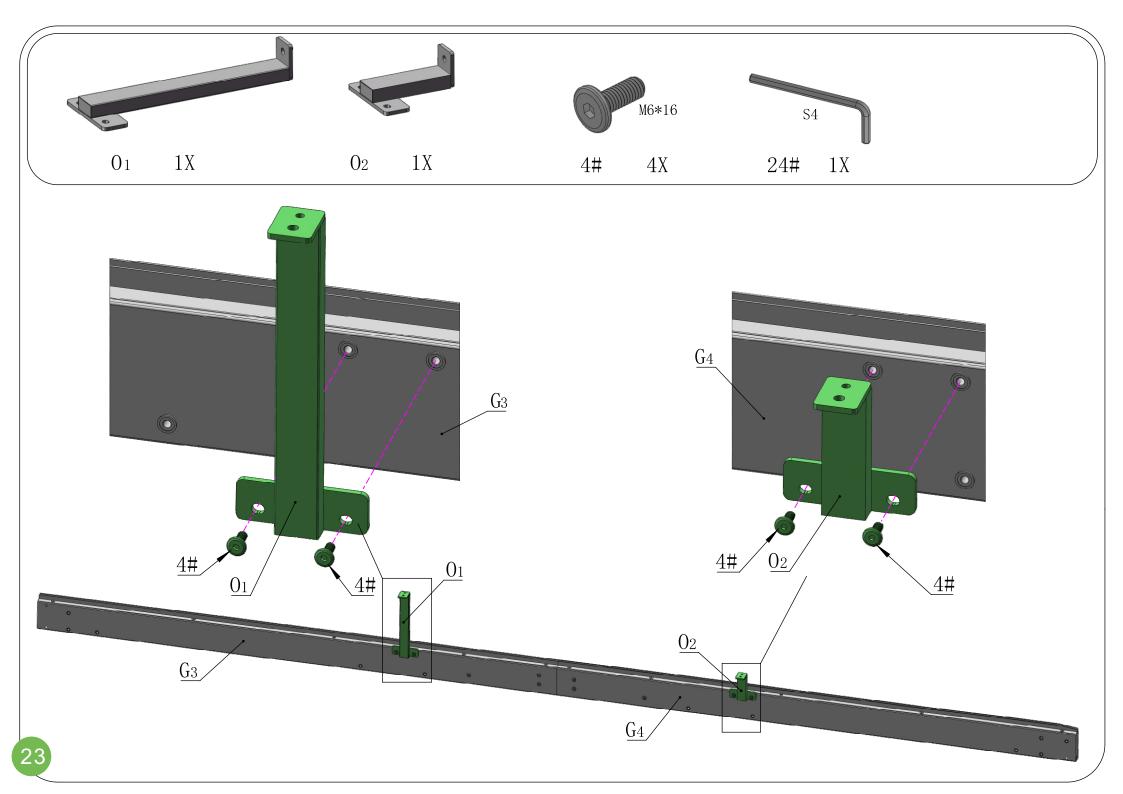


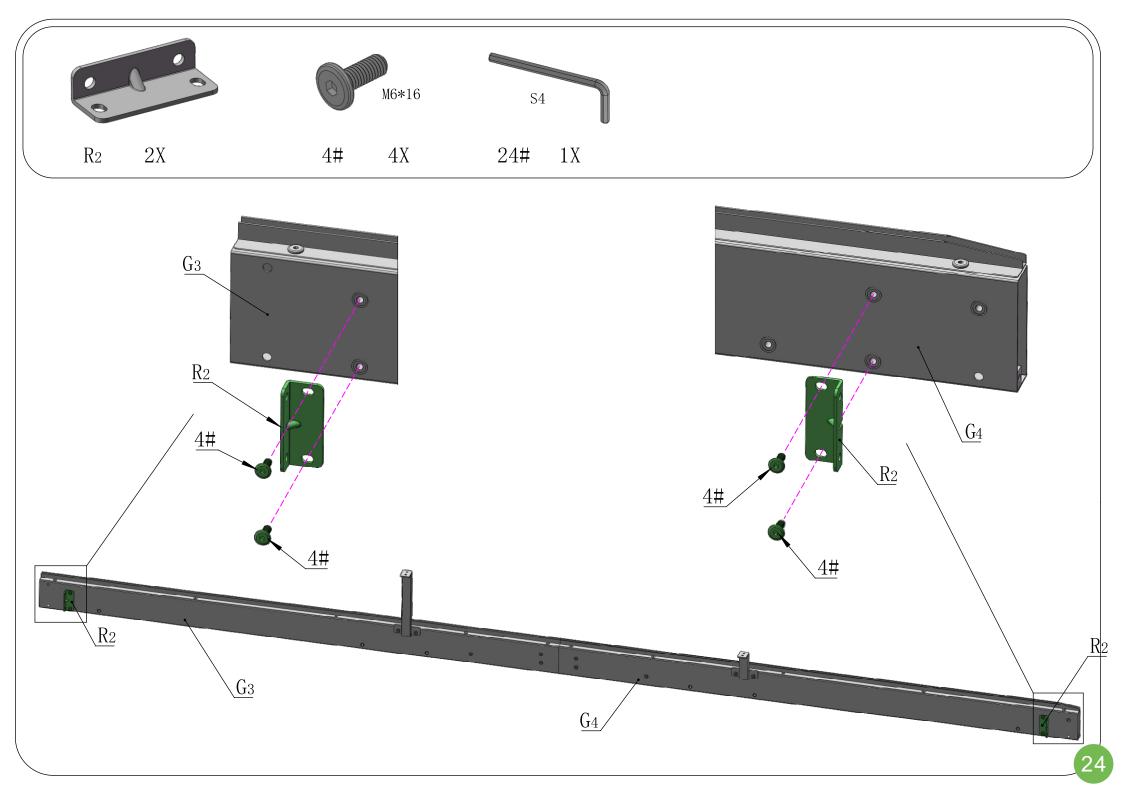



Rear Beam Assembly

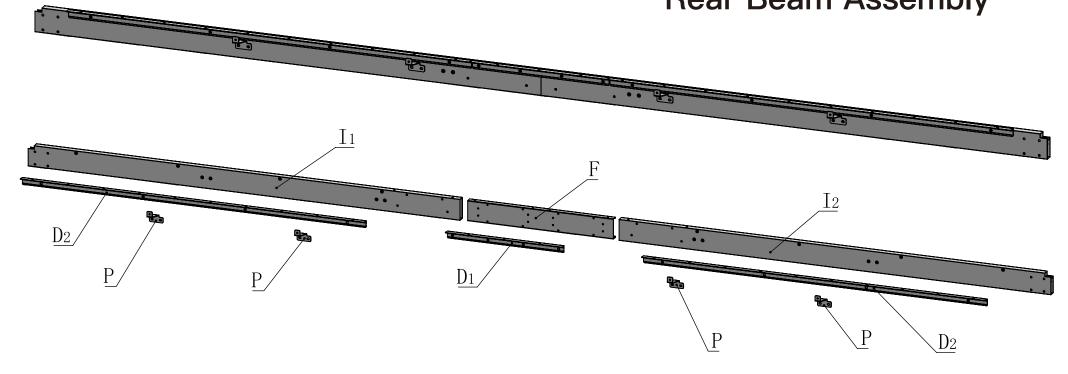


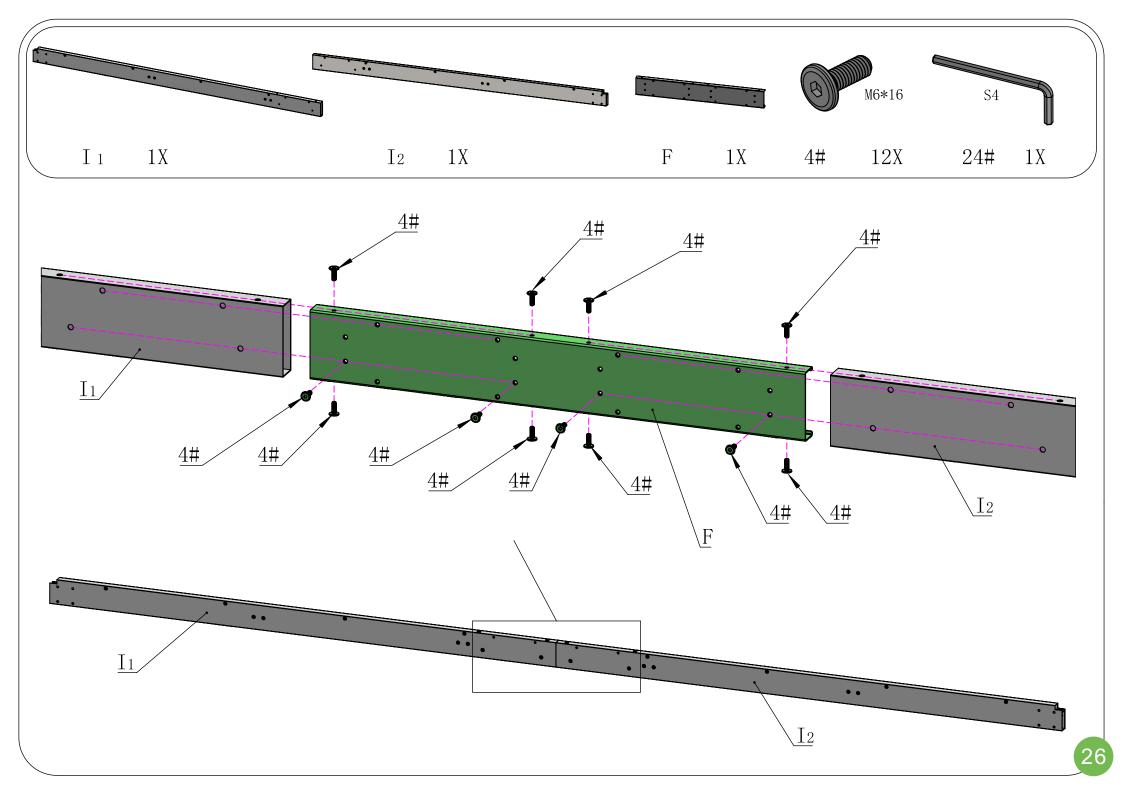


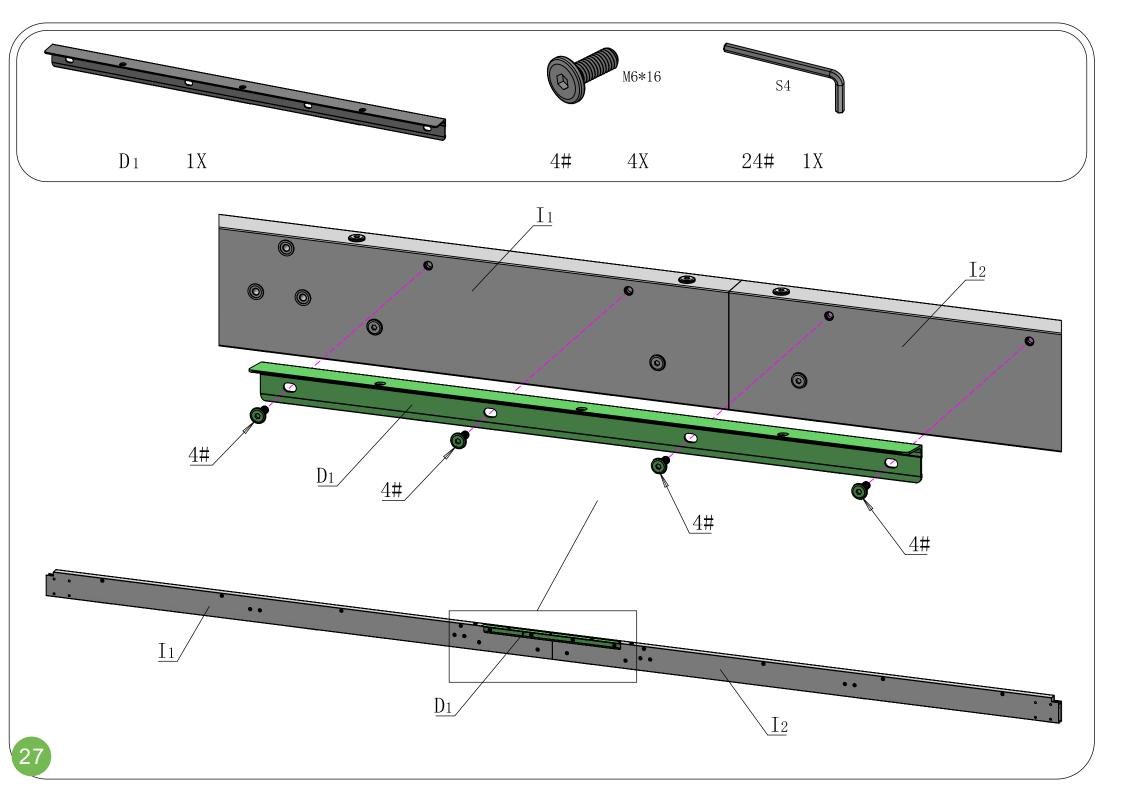


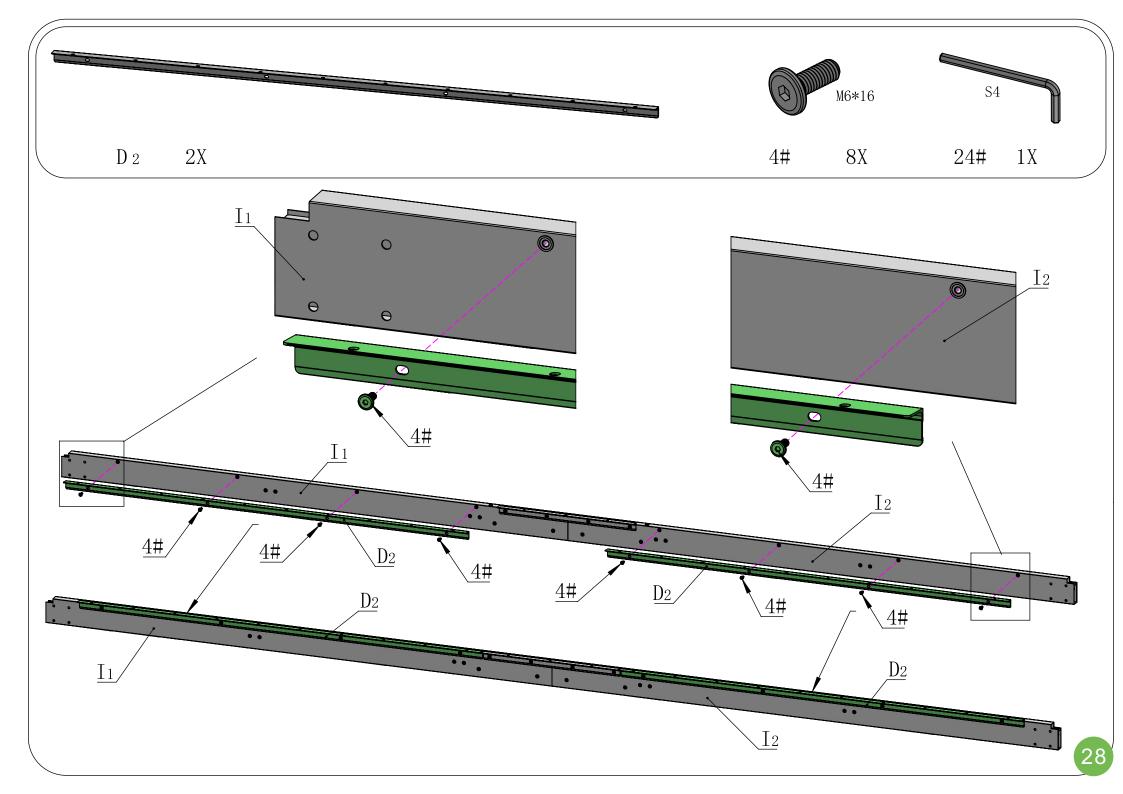


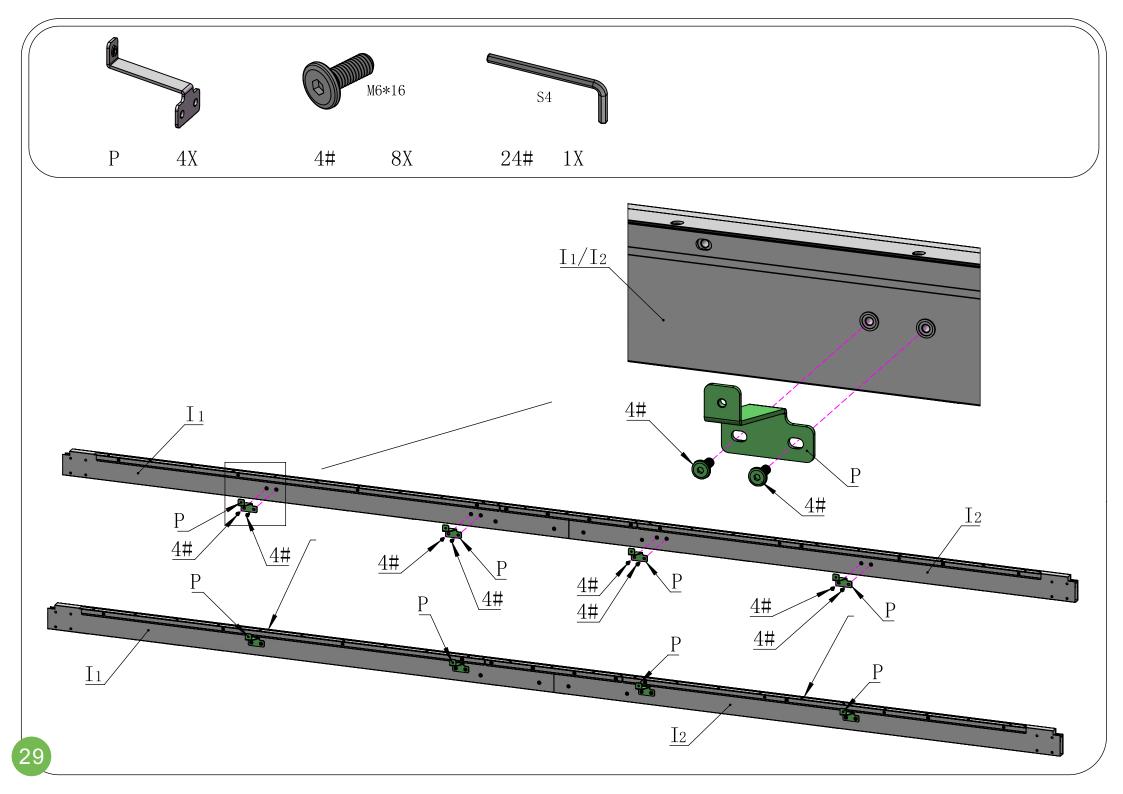


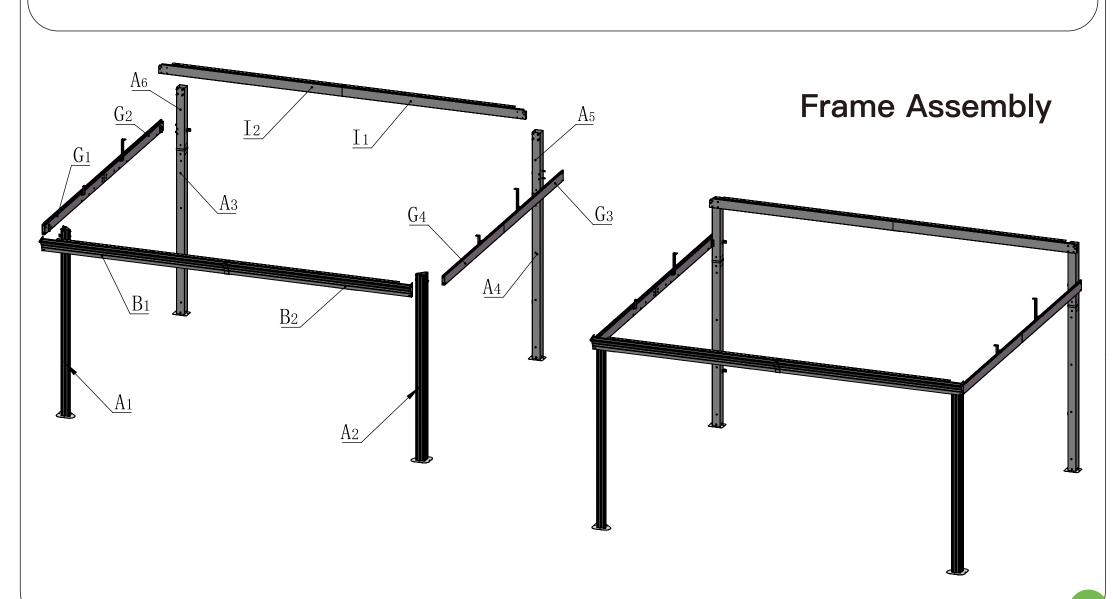


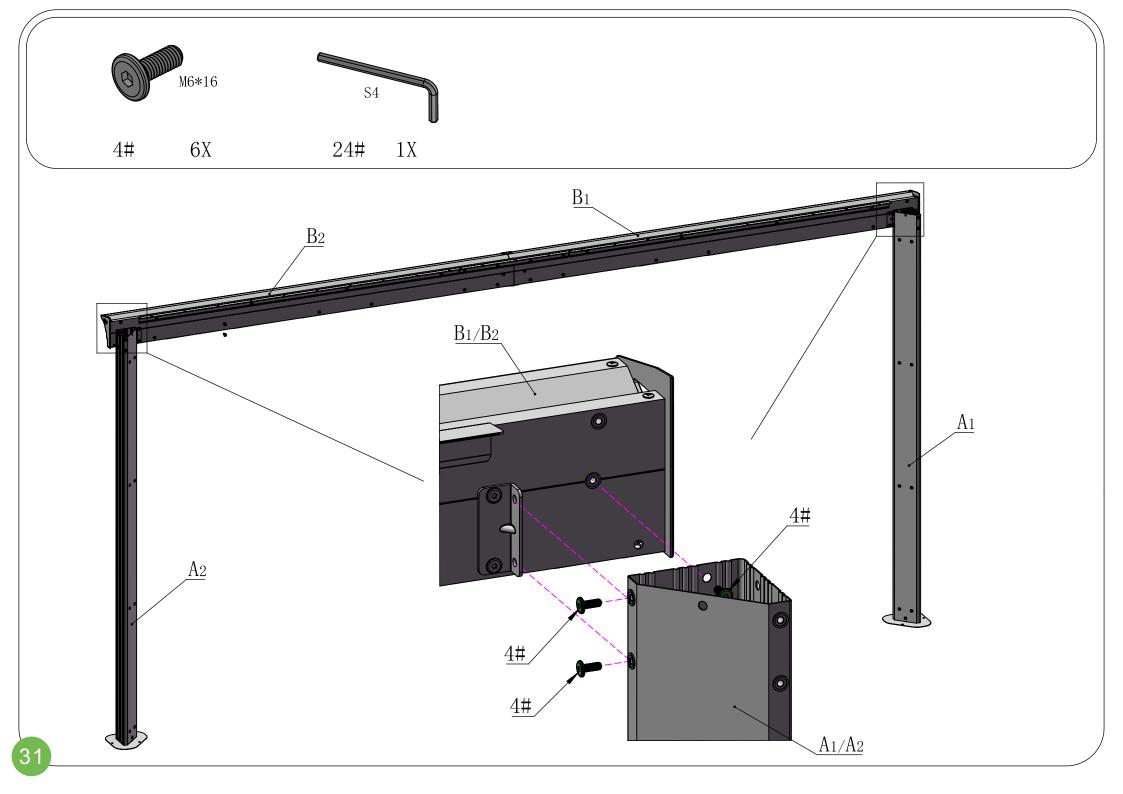


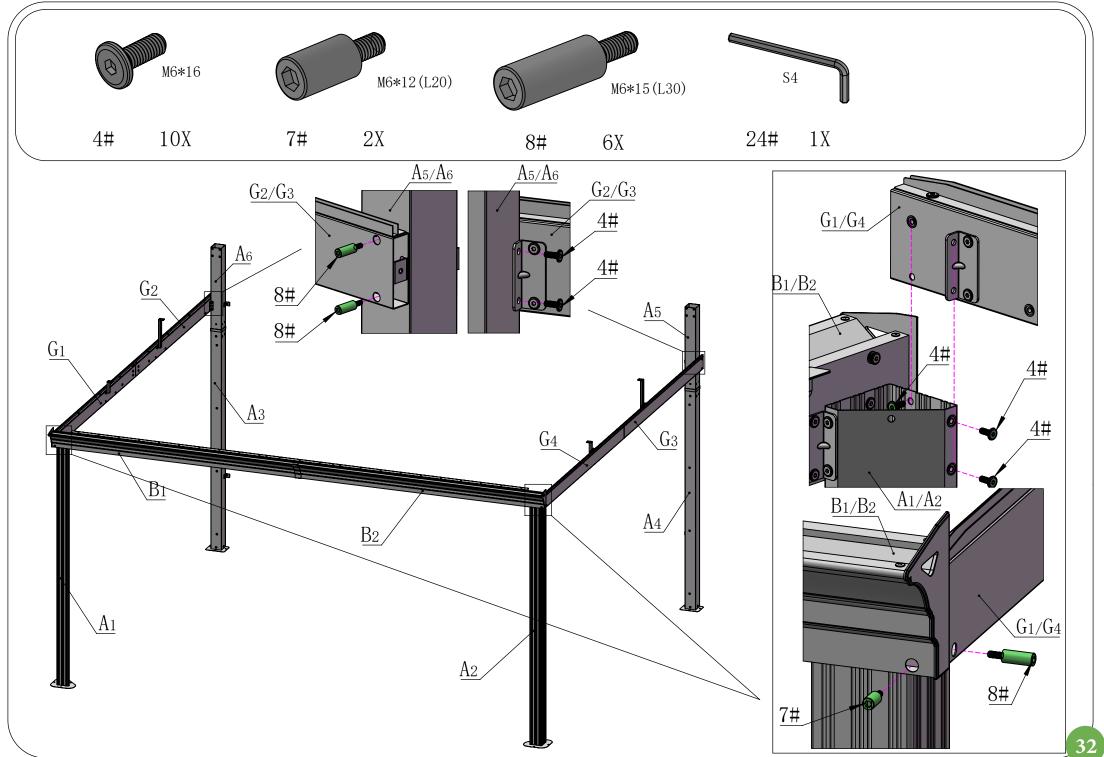


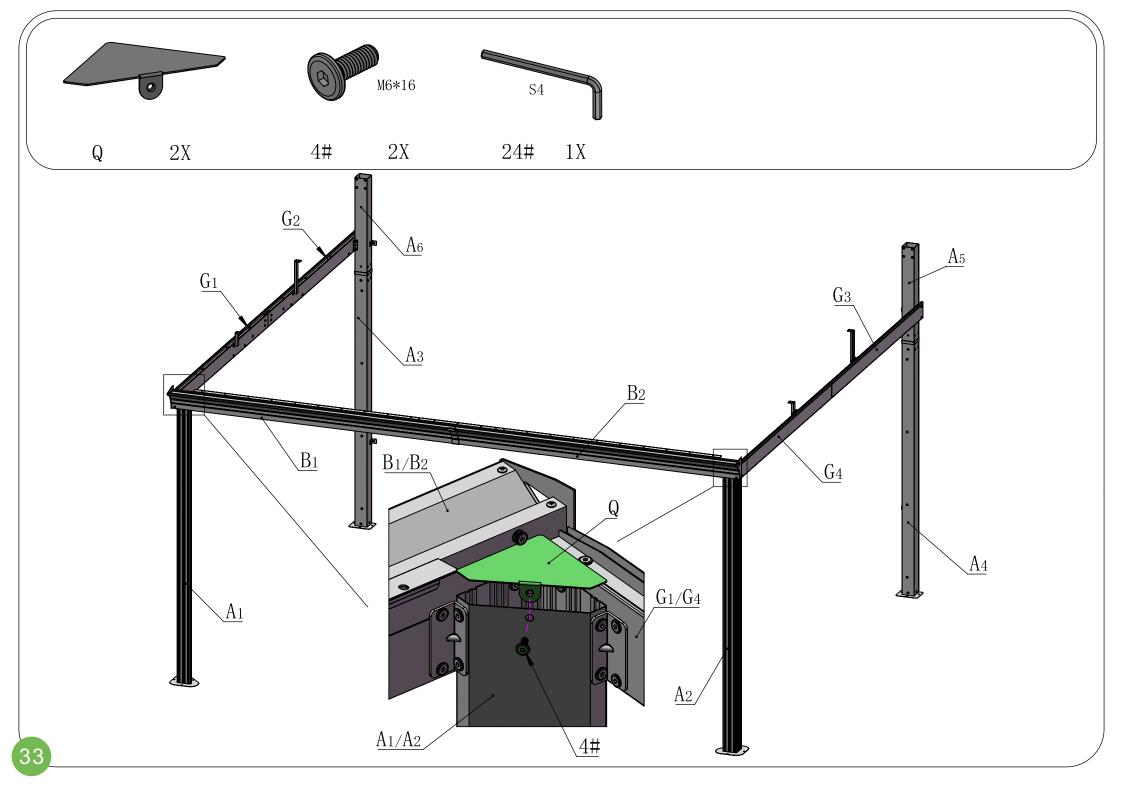


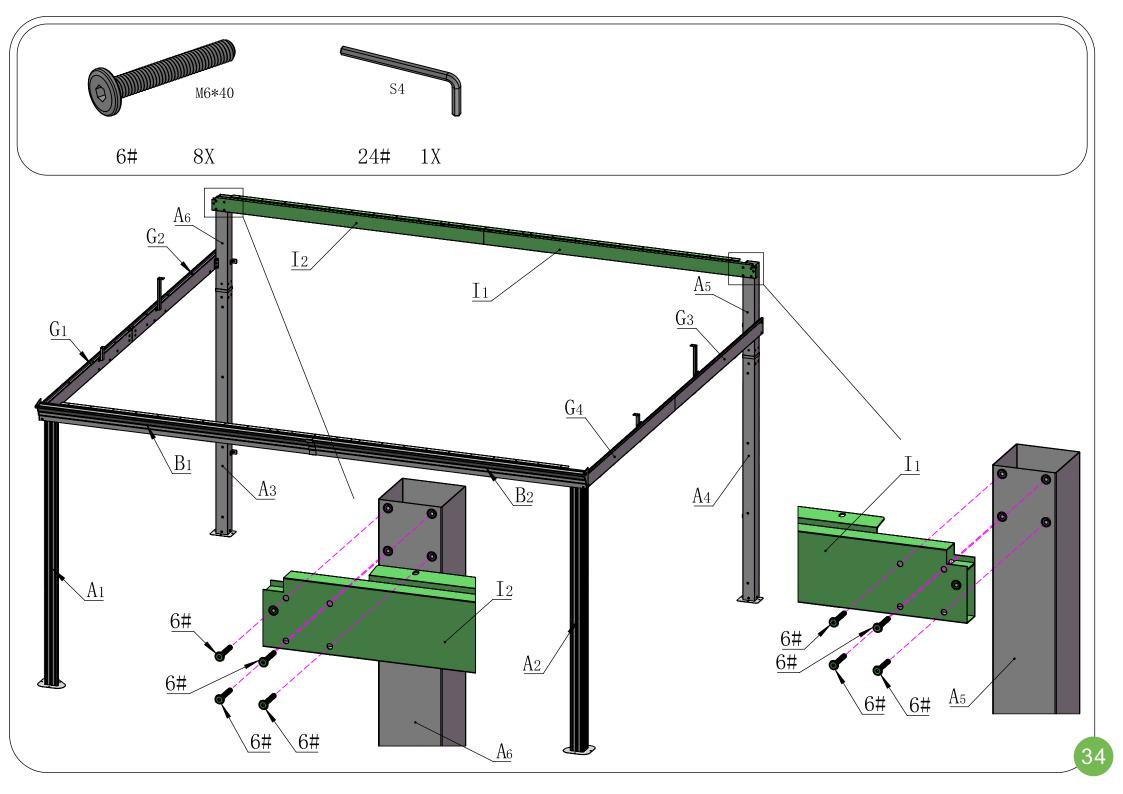


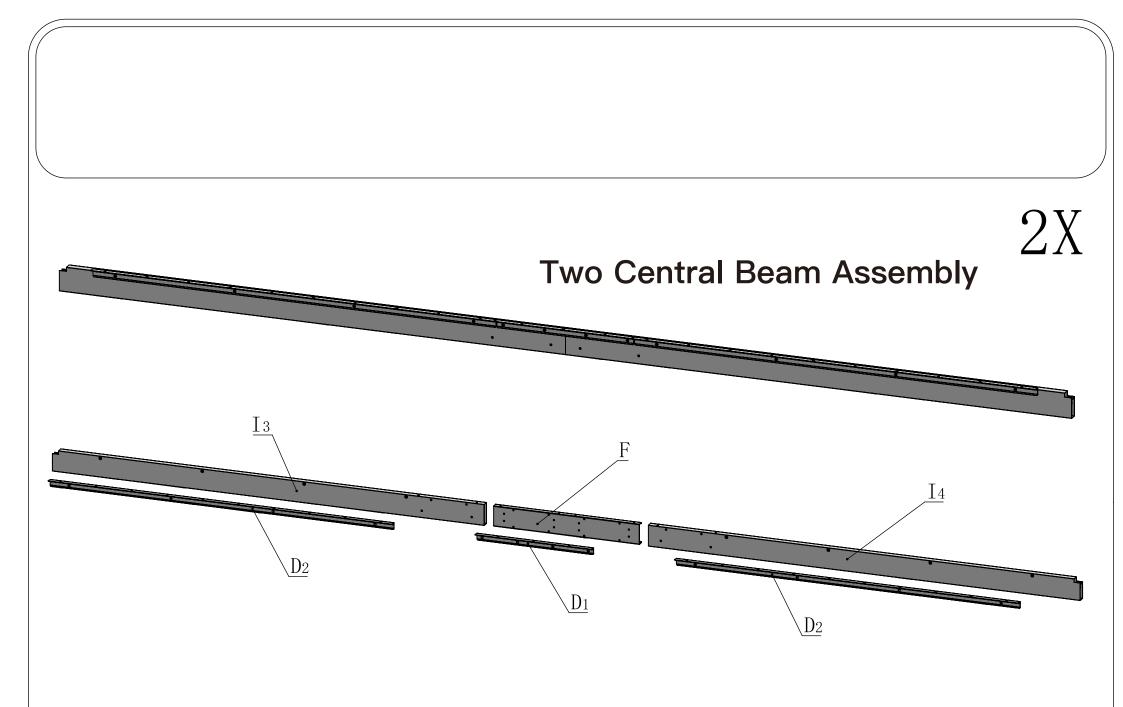


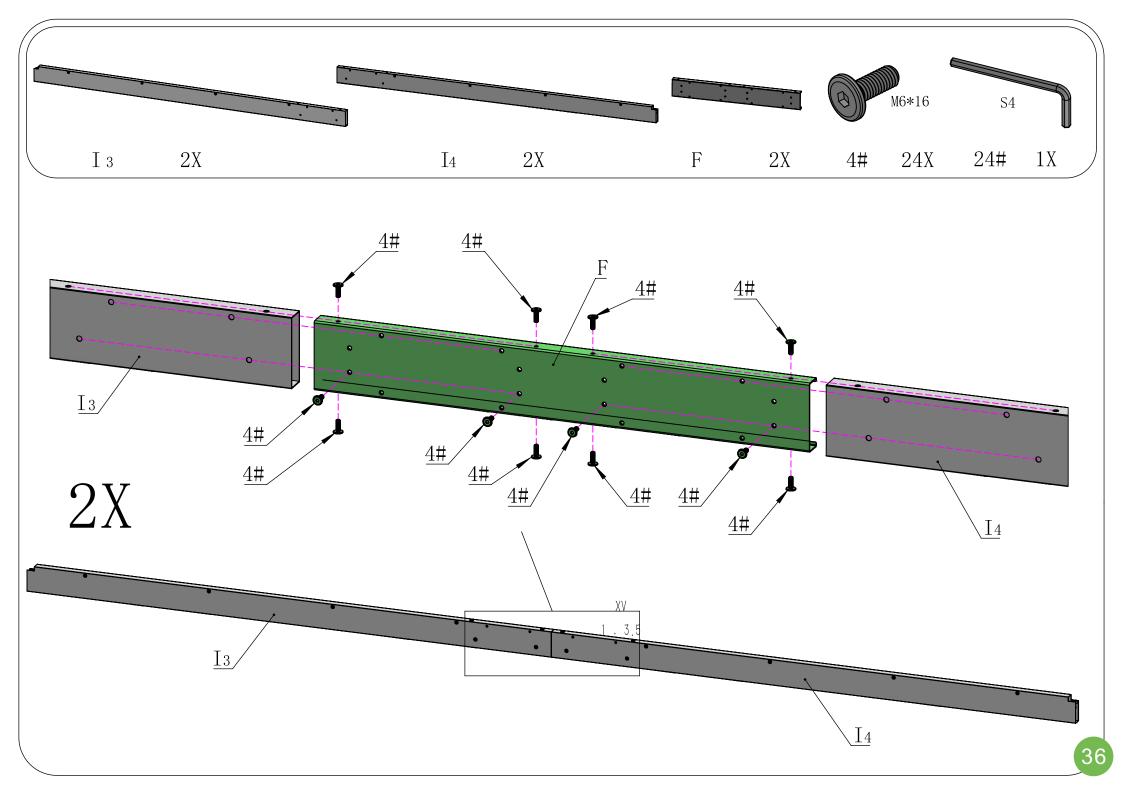


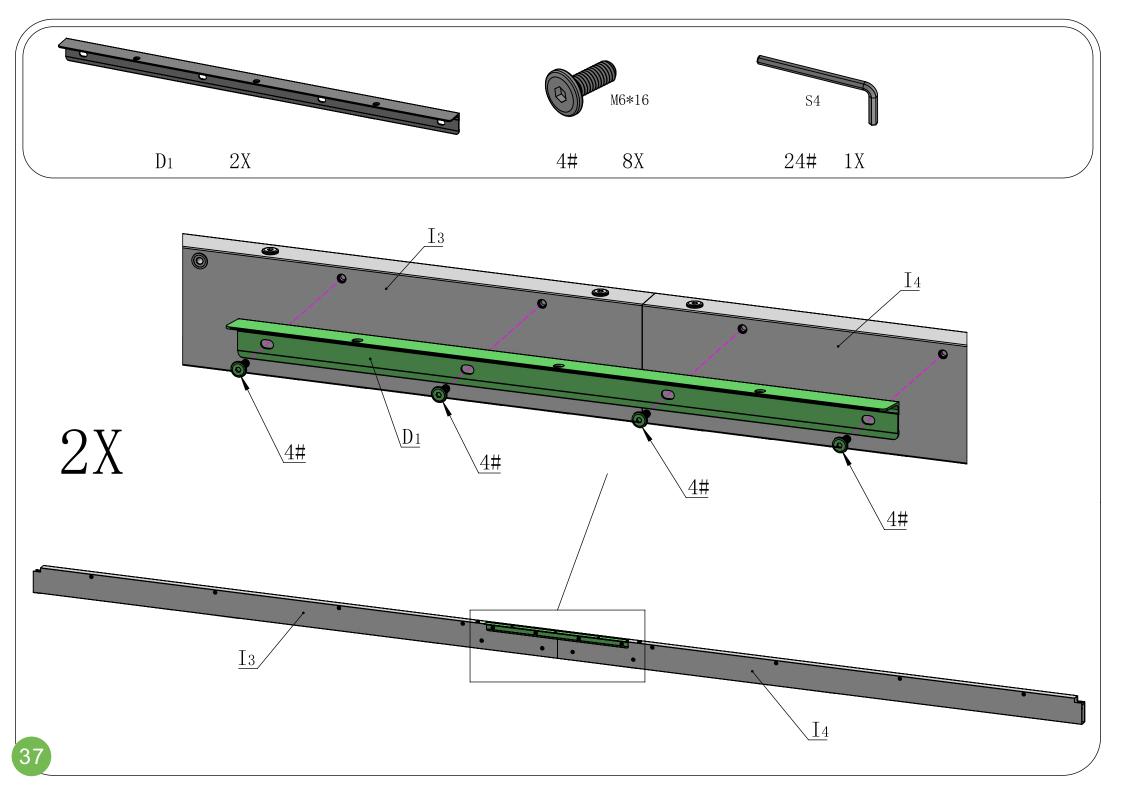


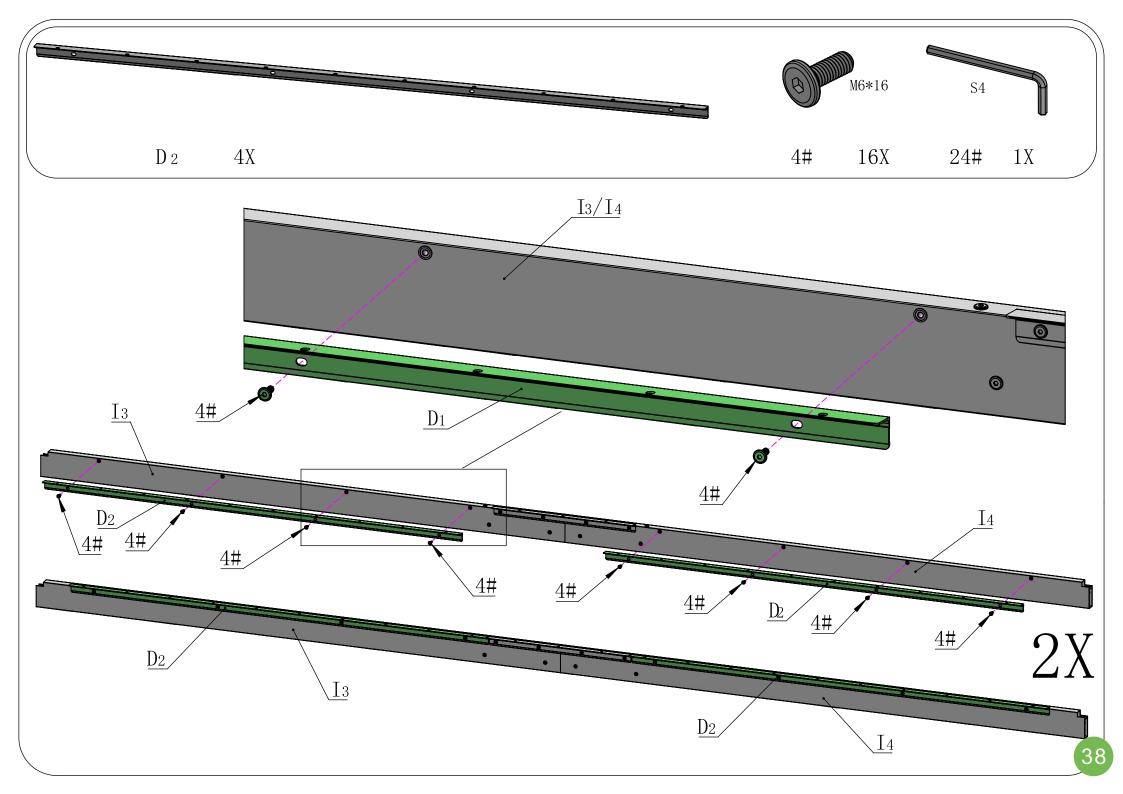


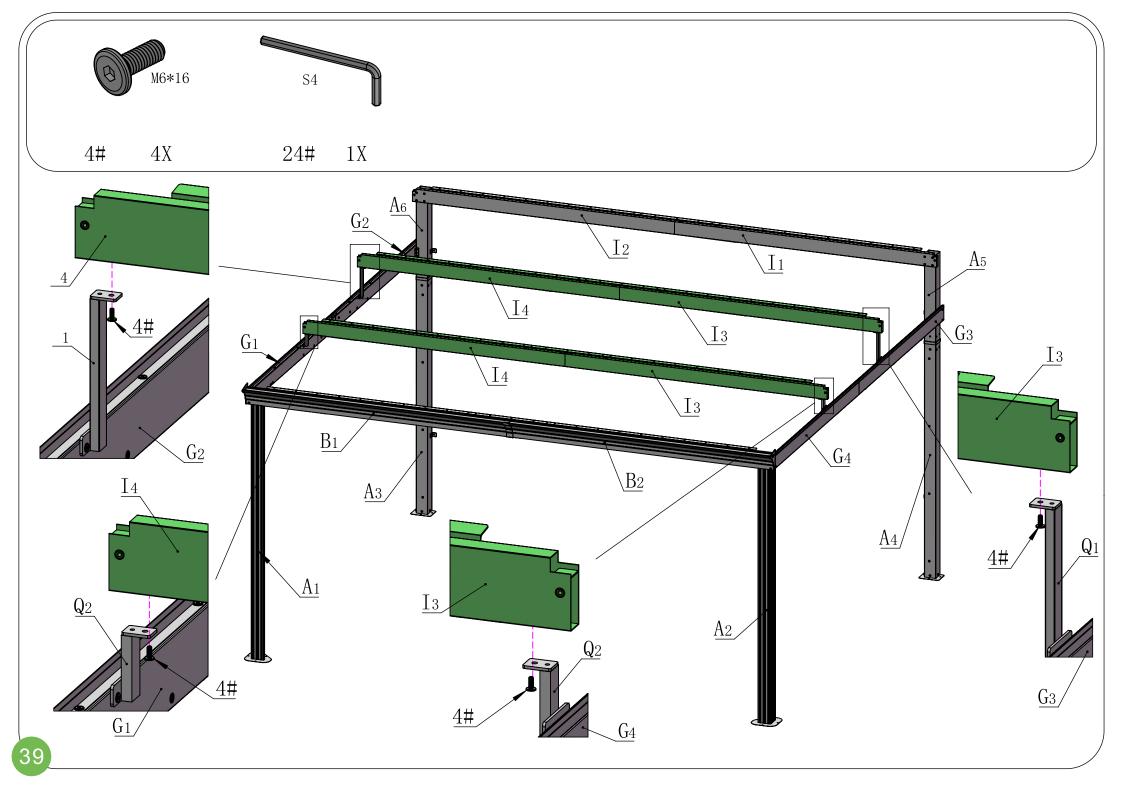


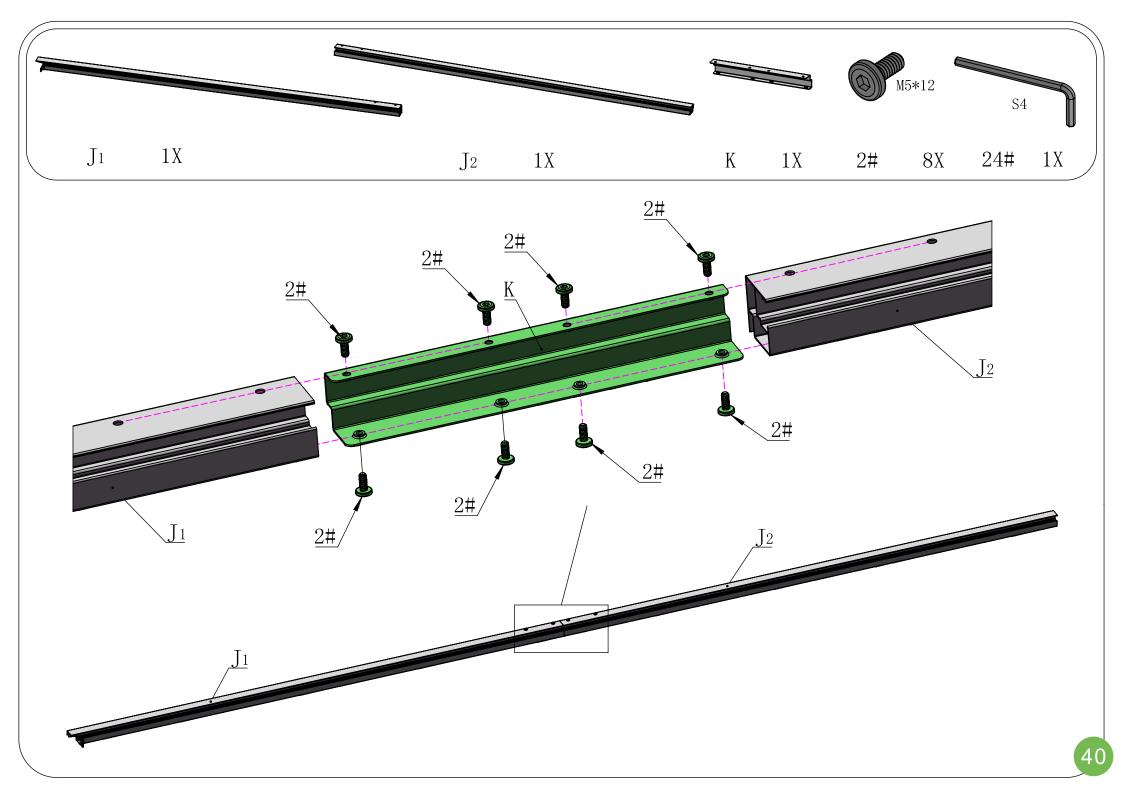


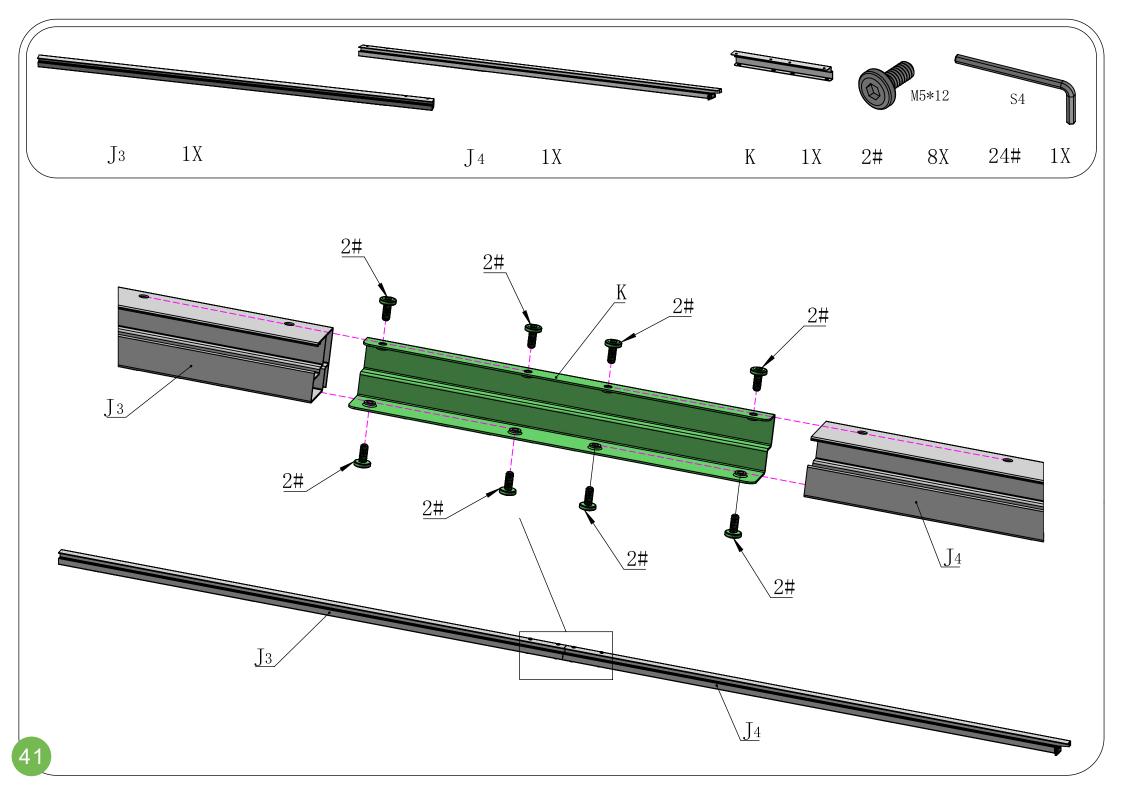


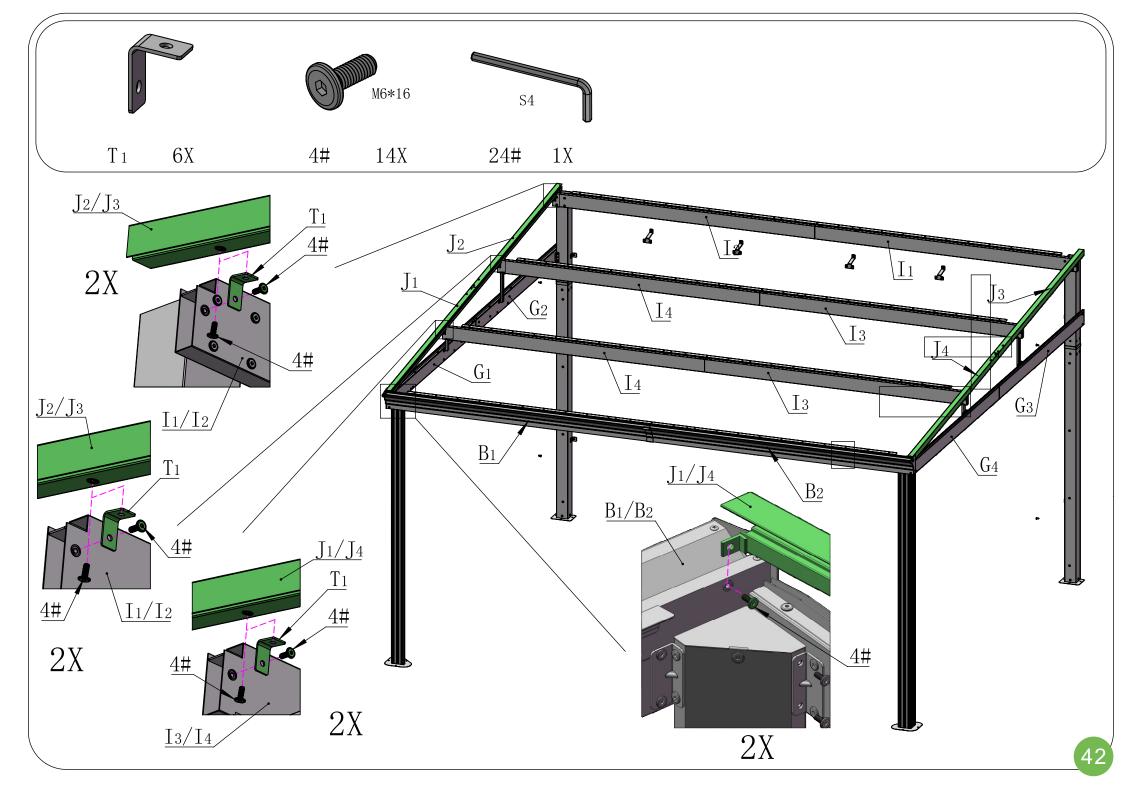


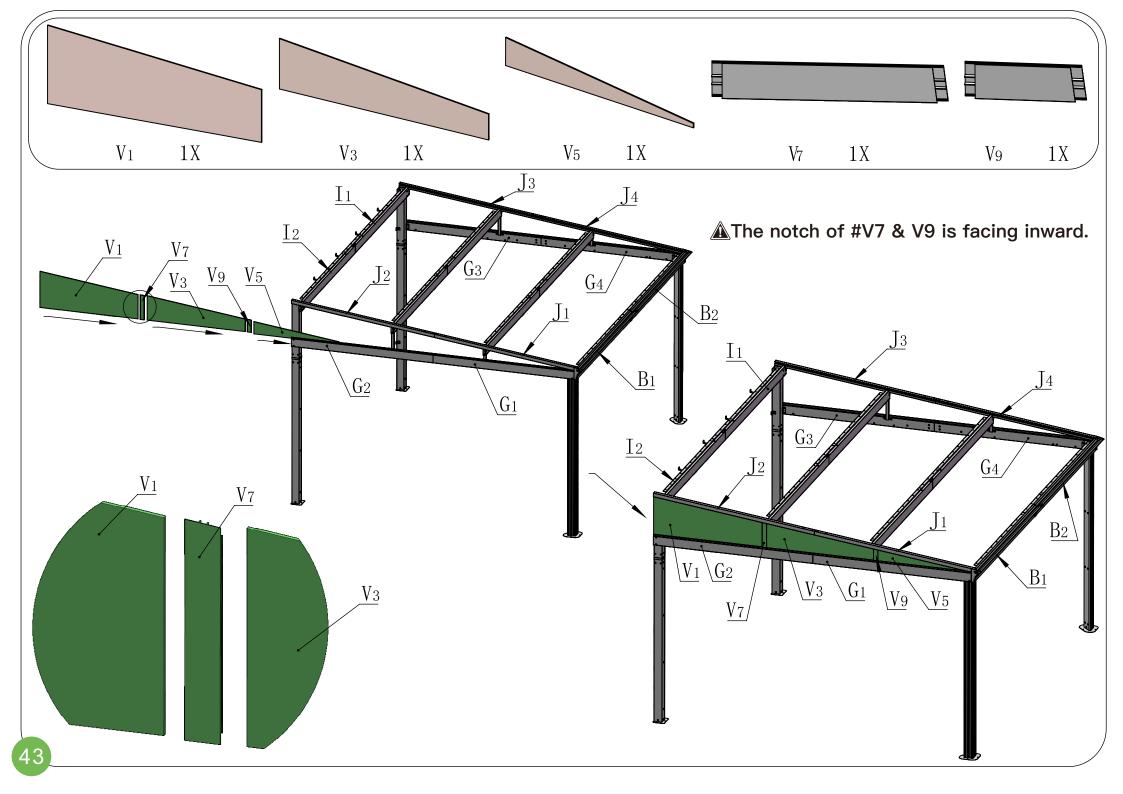


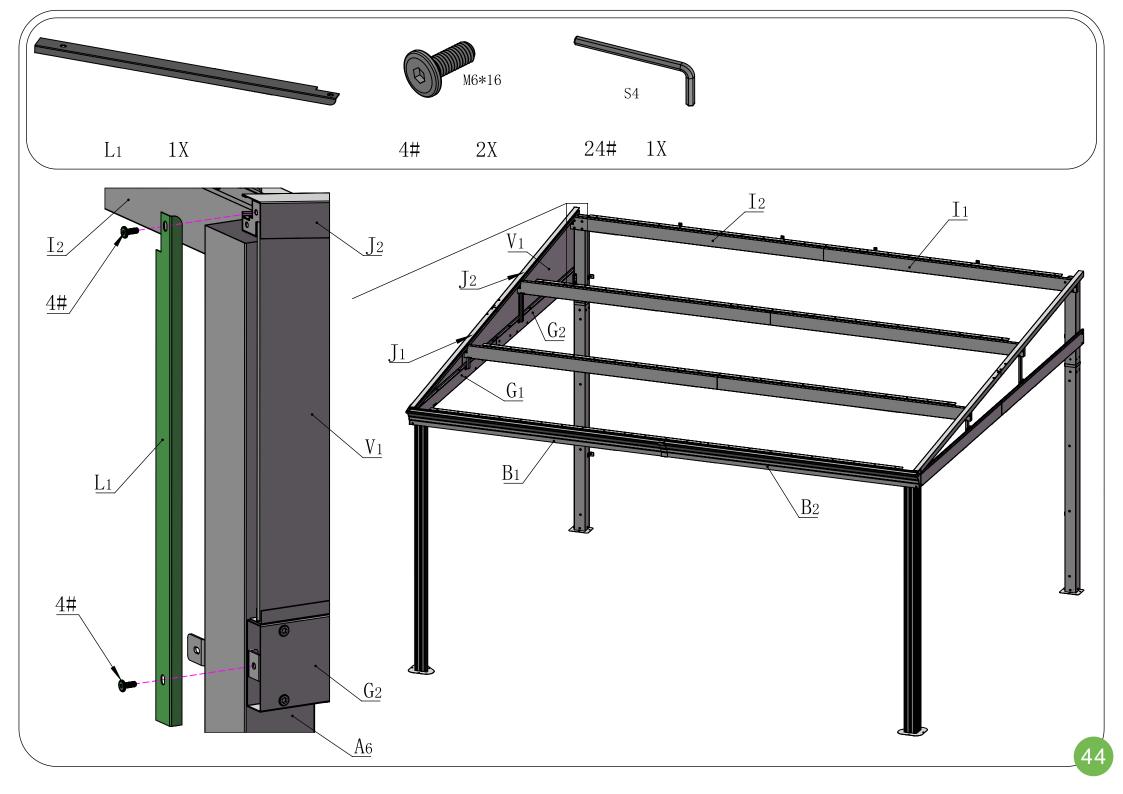


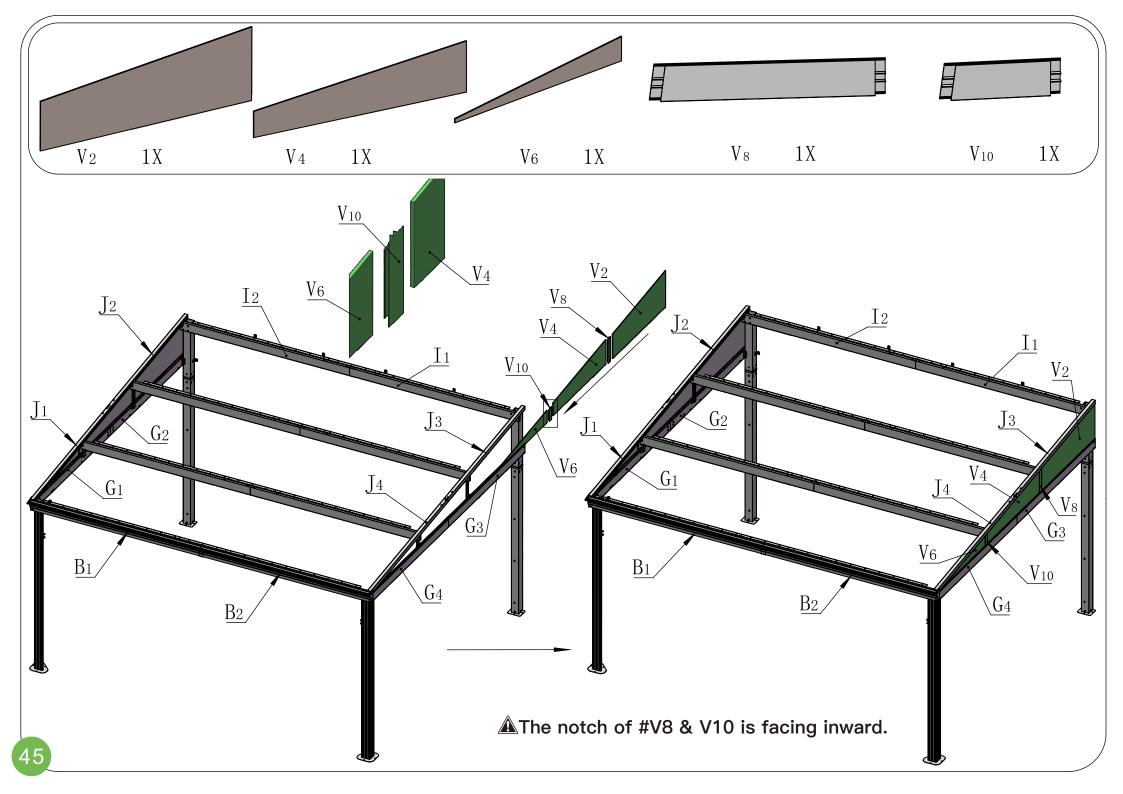


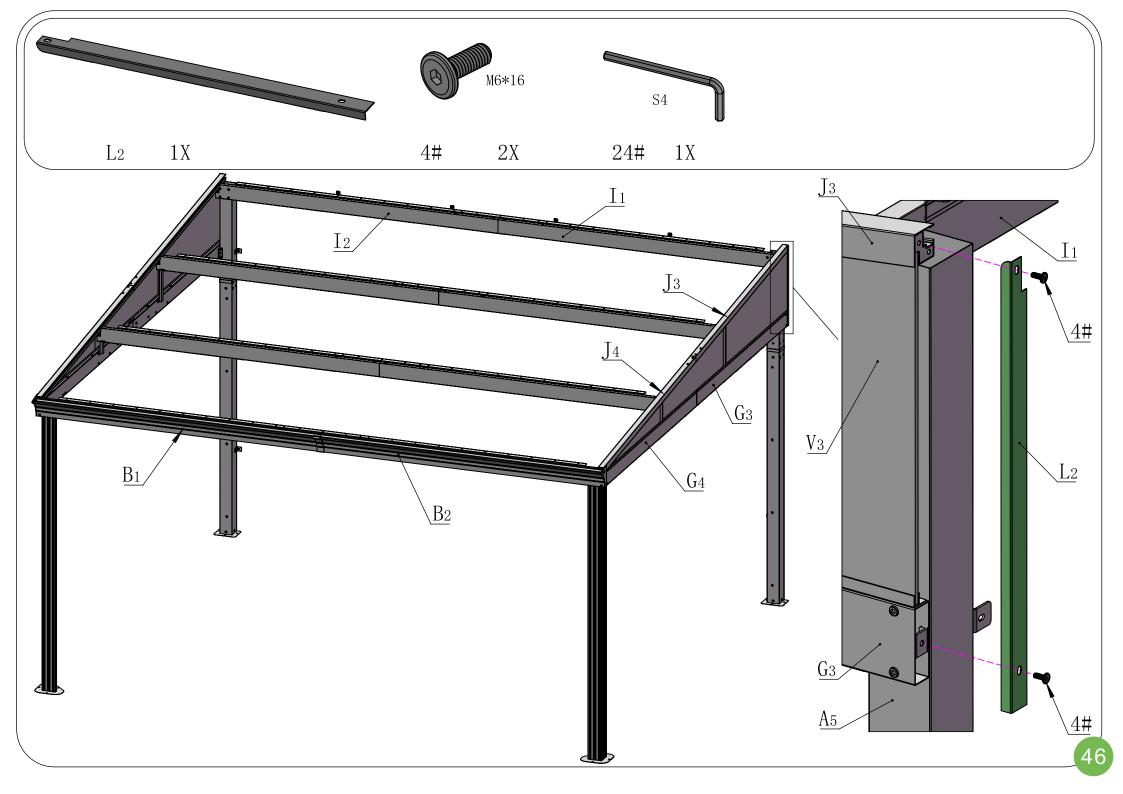


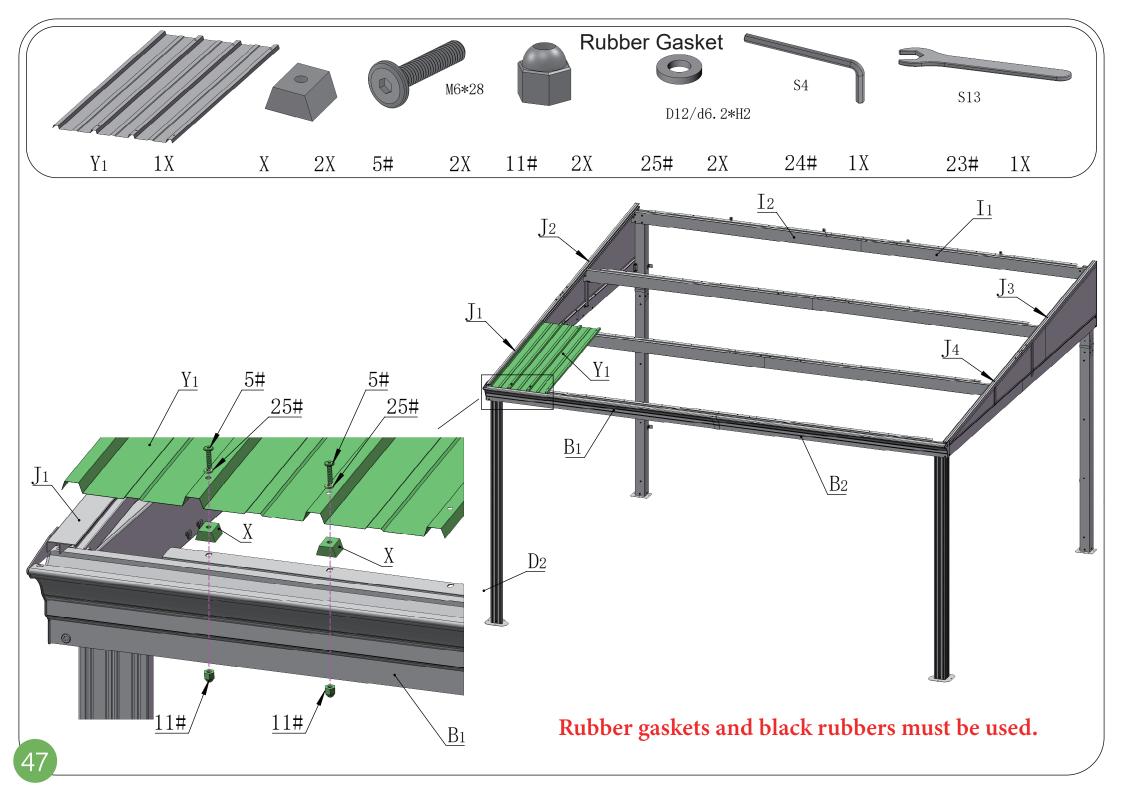


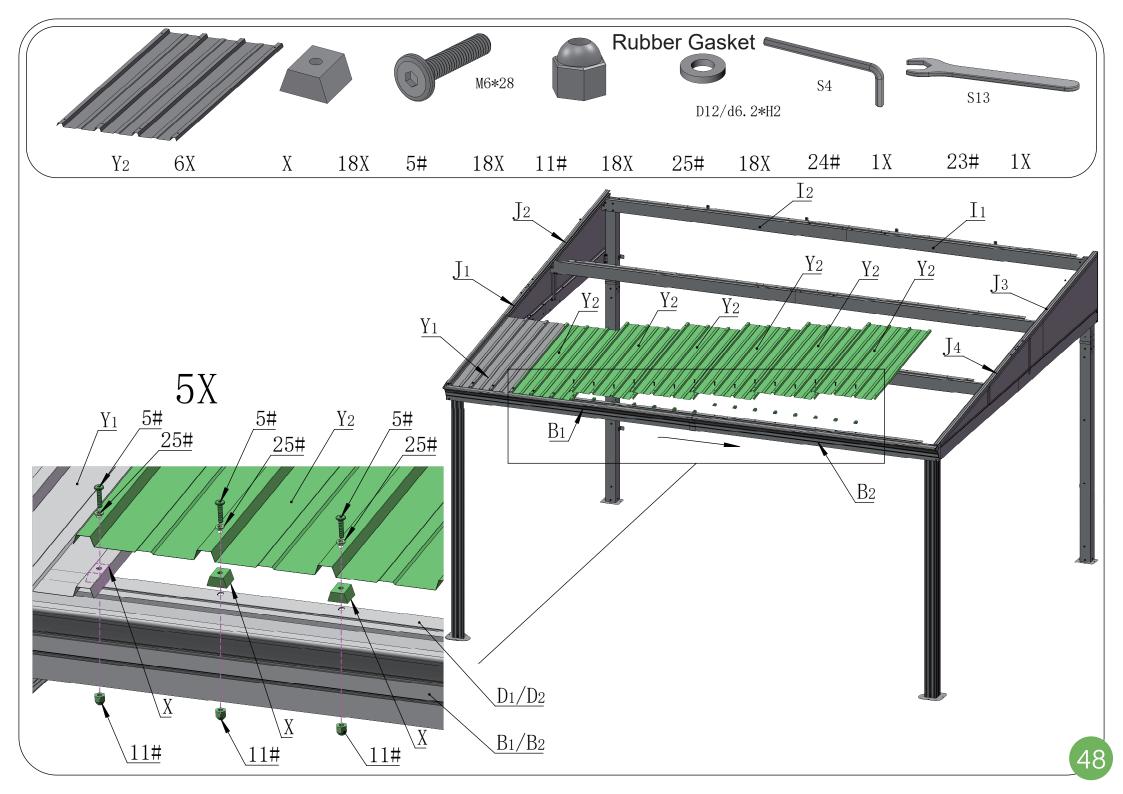


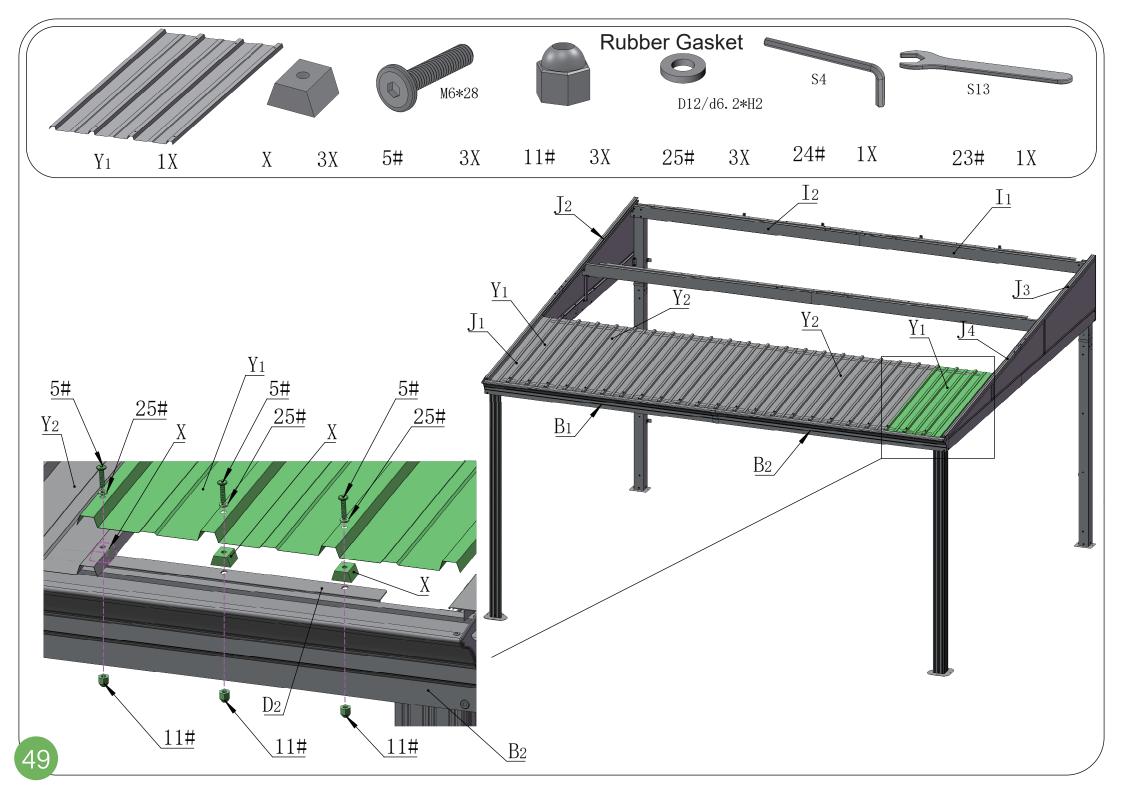


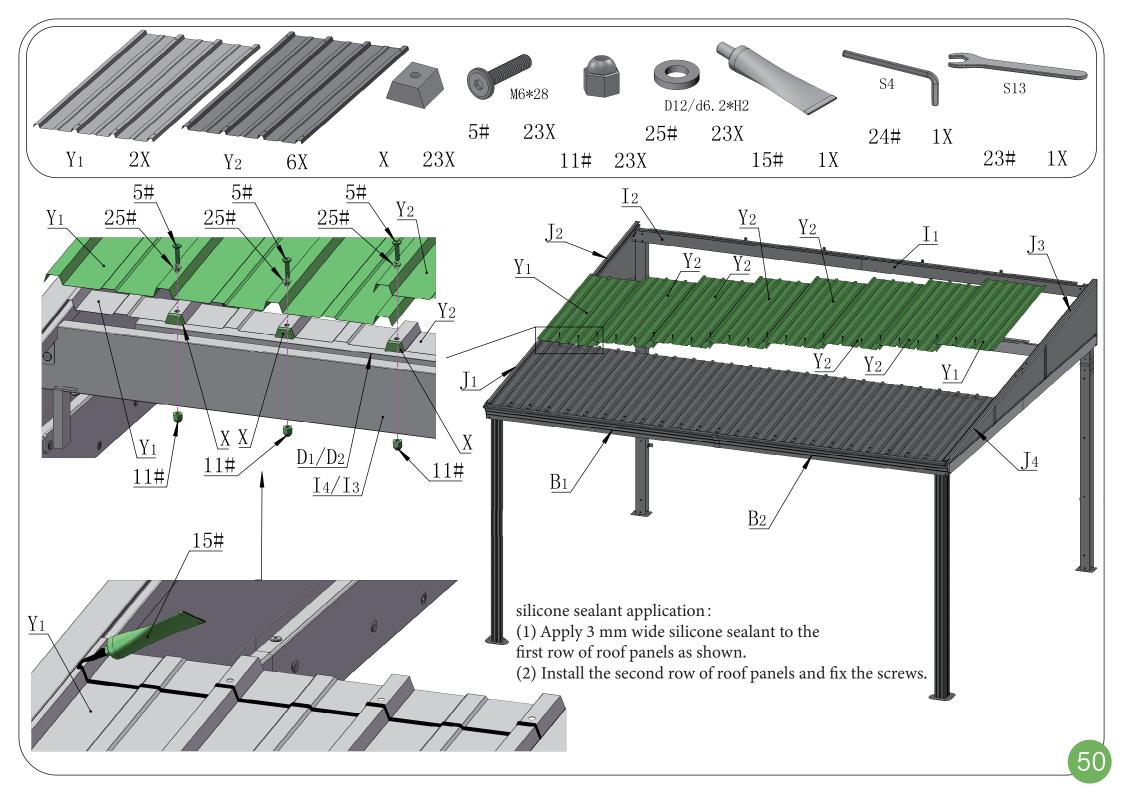


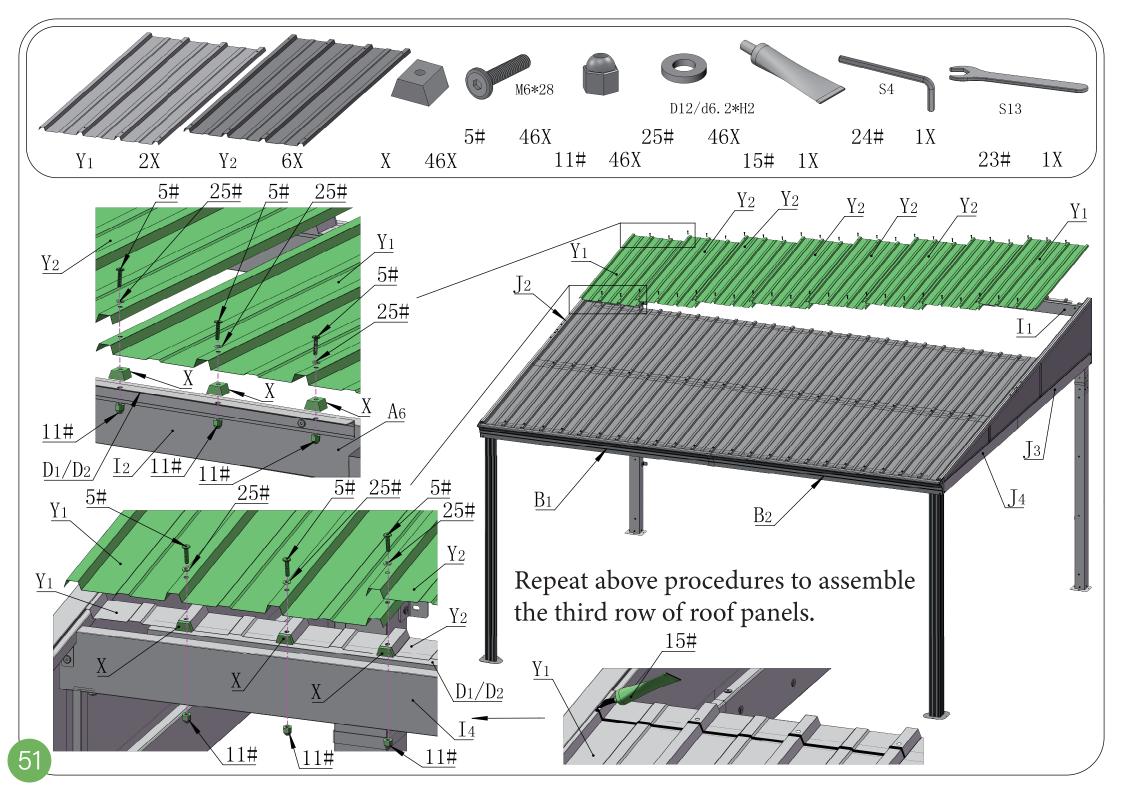


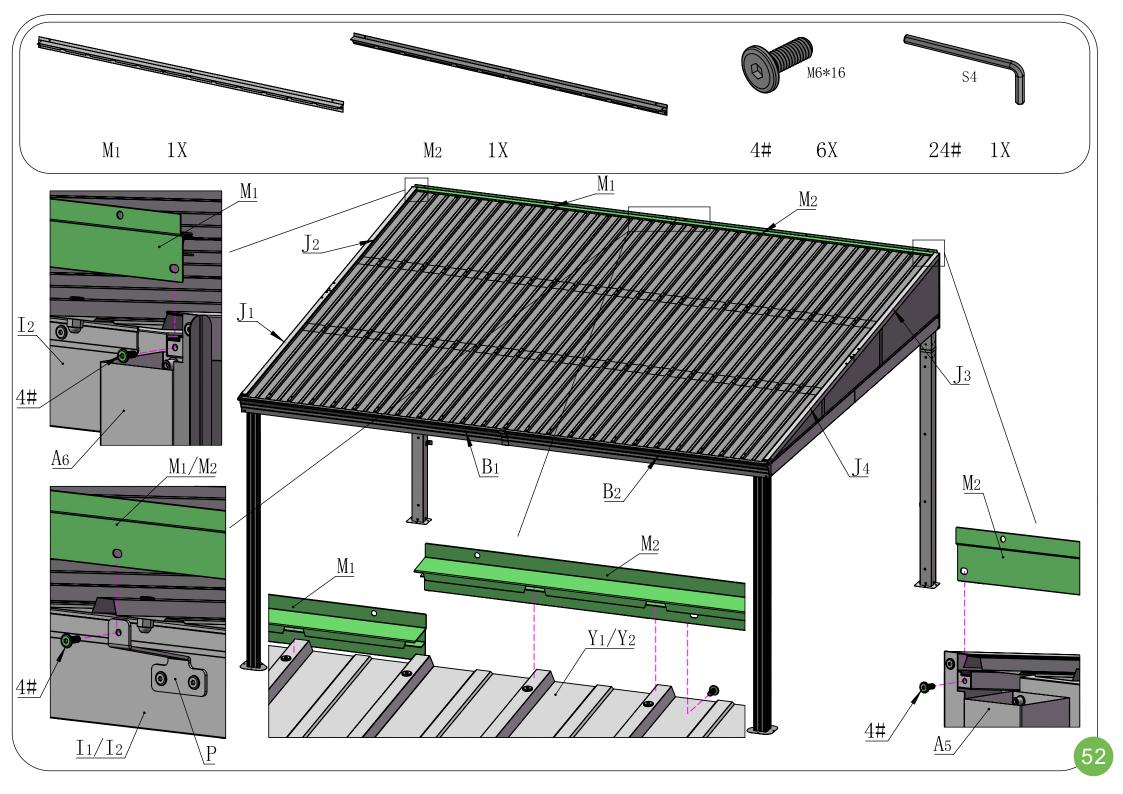


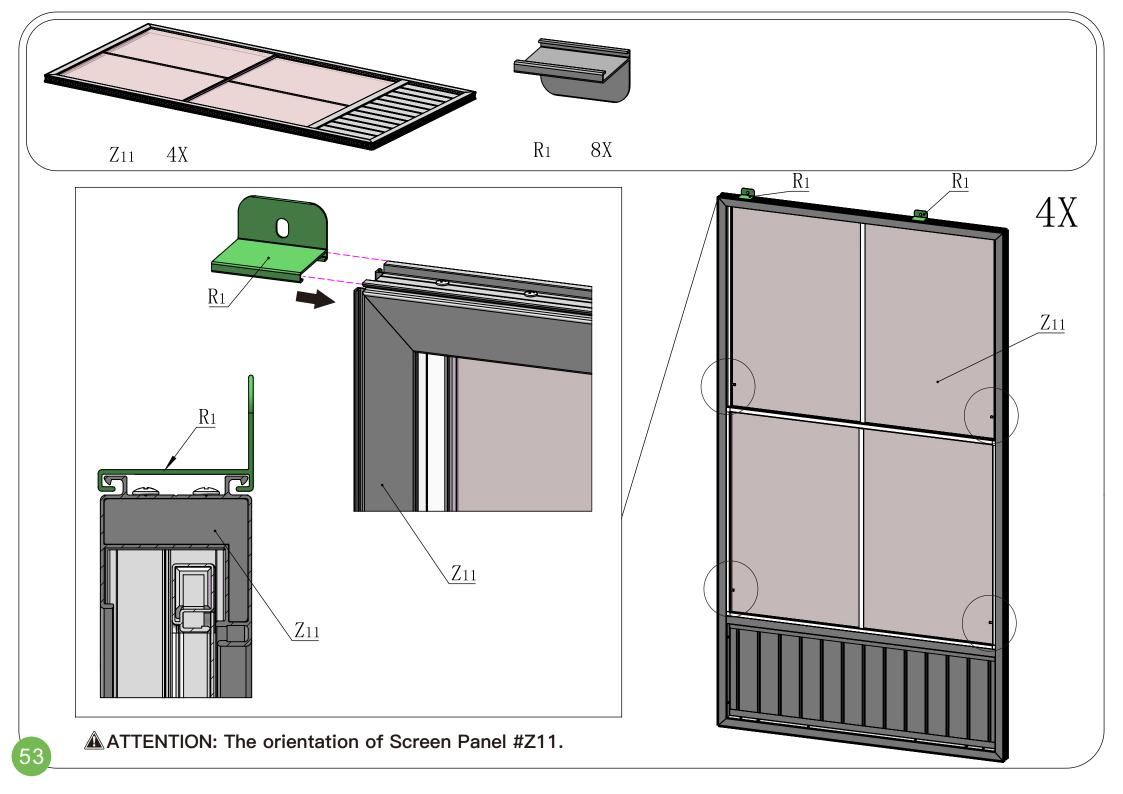


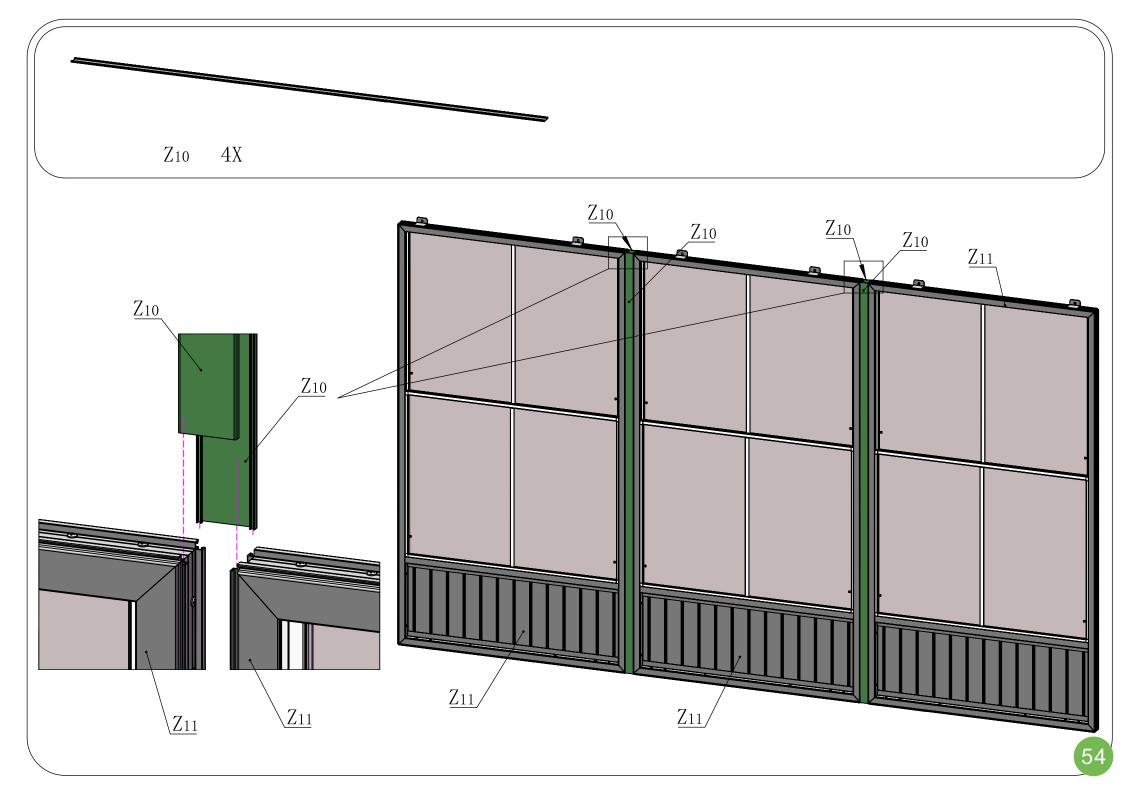


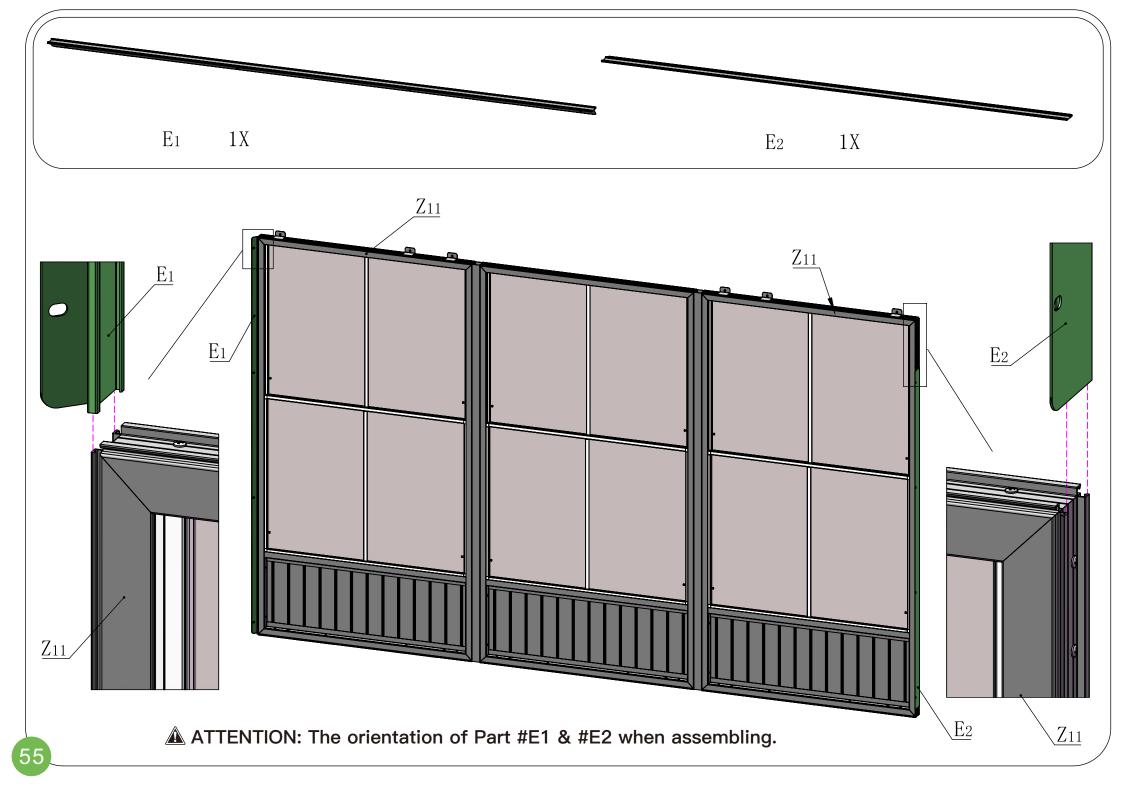


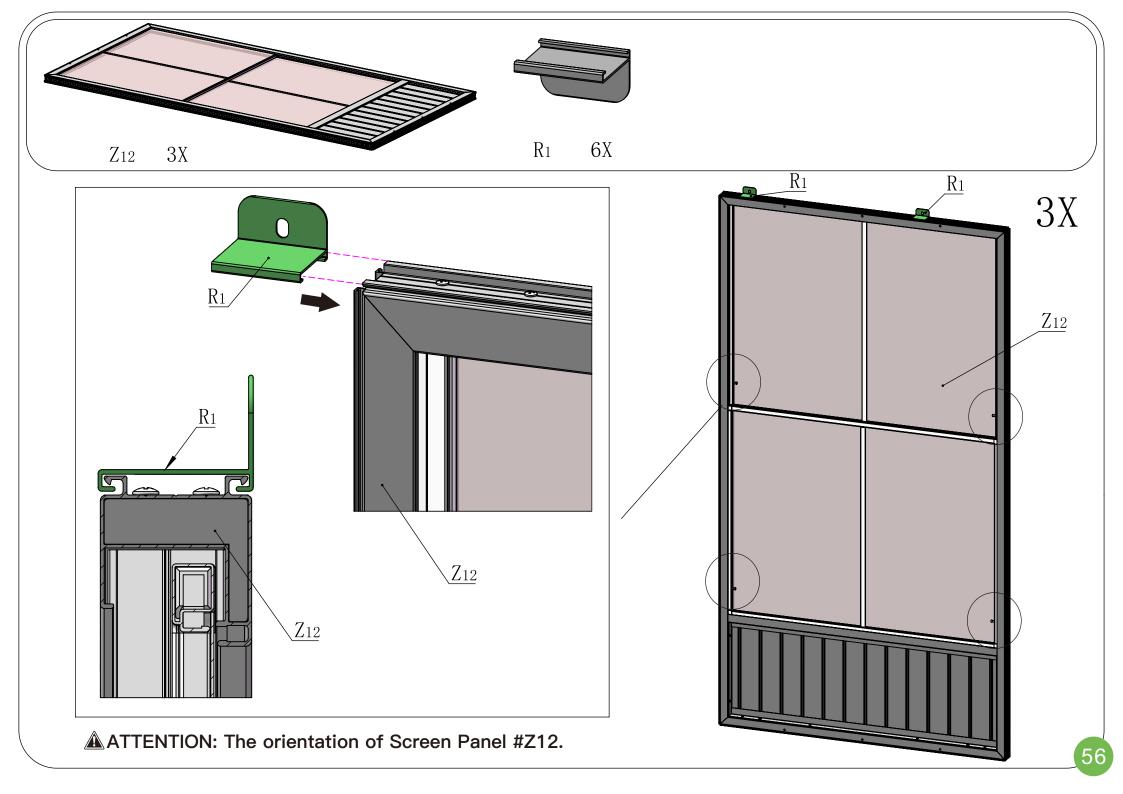

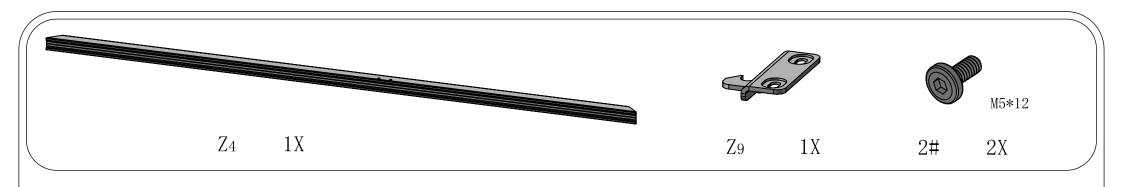

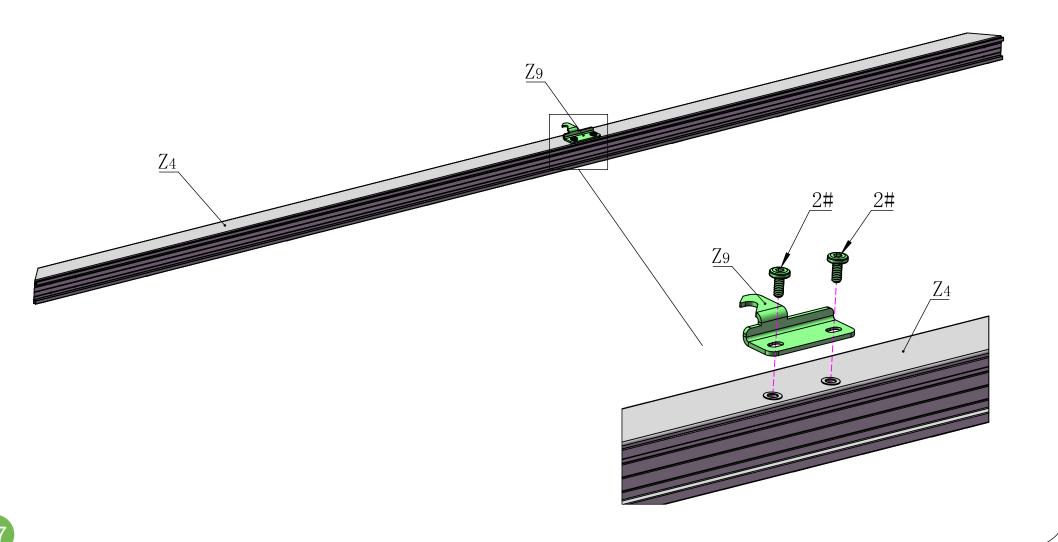


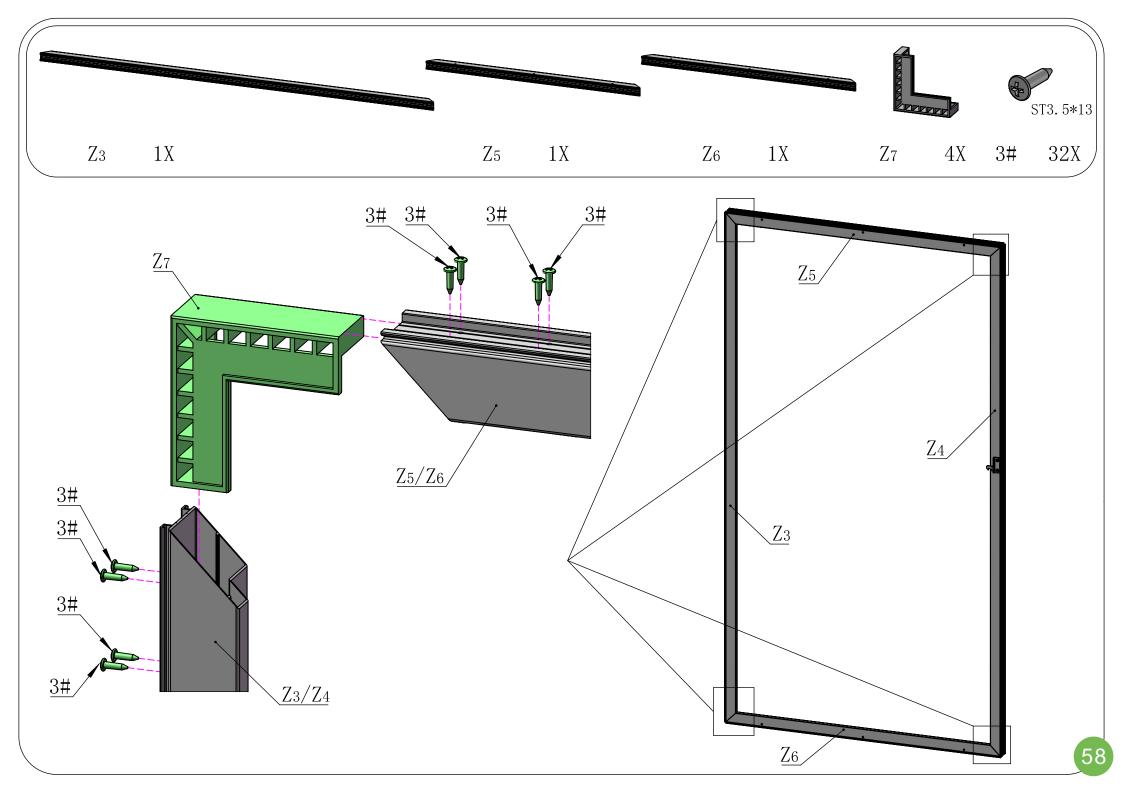






ATTENTION: The orientation of Part #R1.


R1 2X

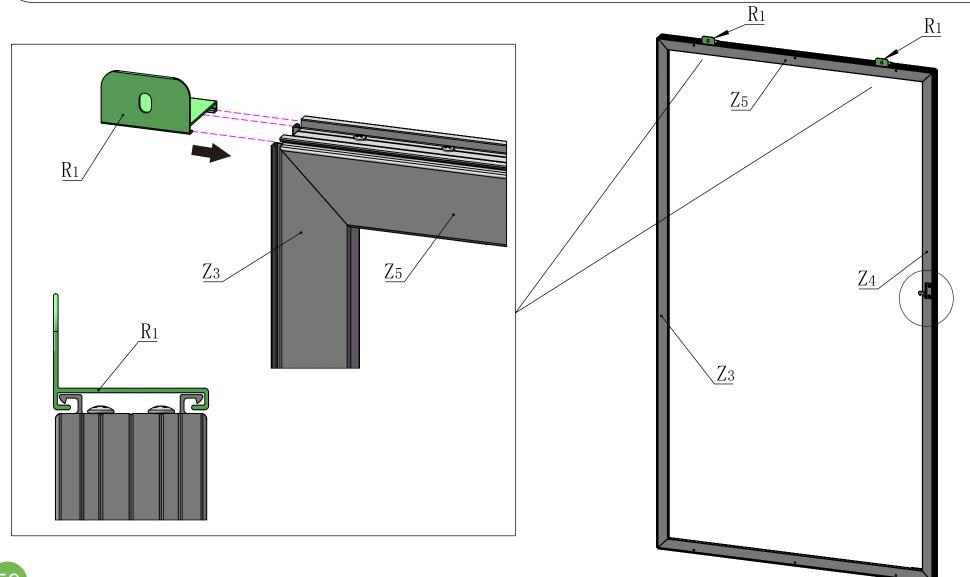


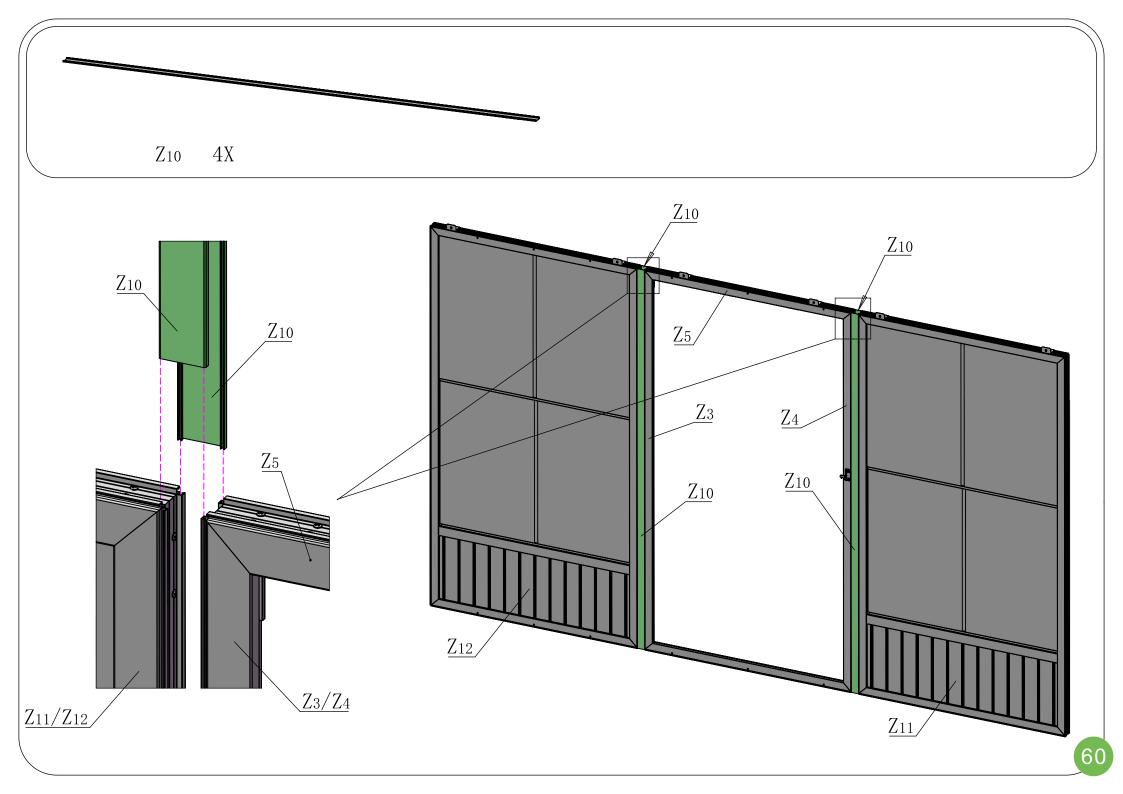


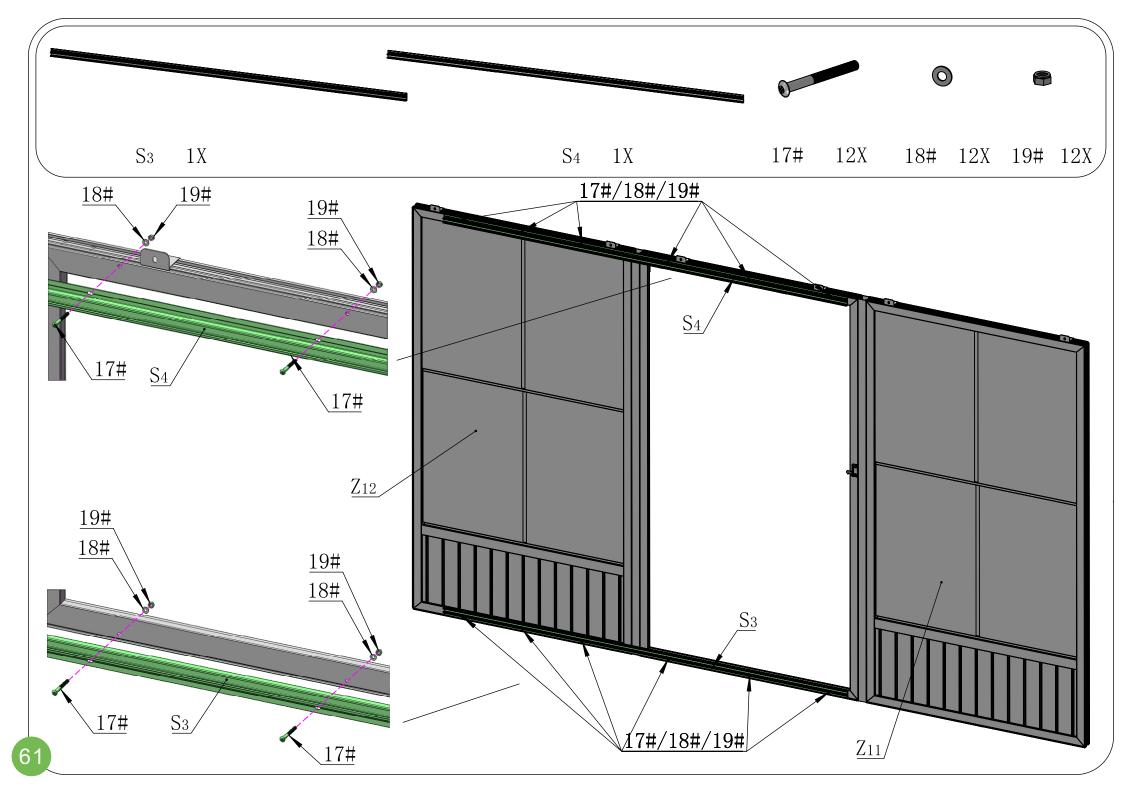


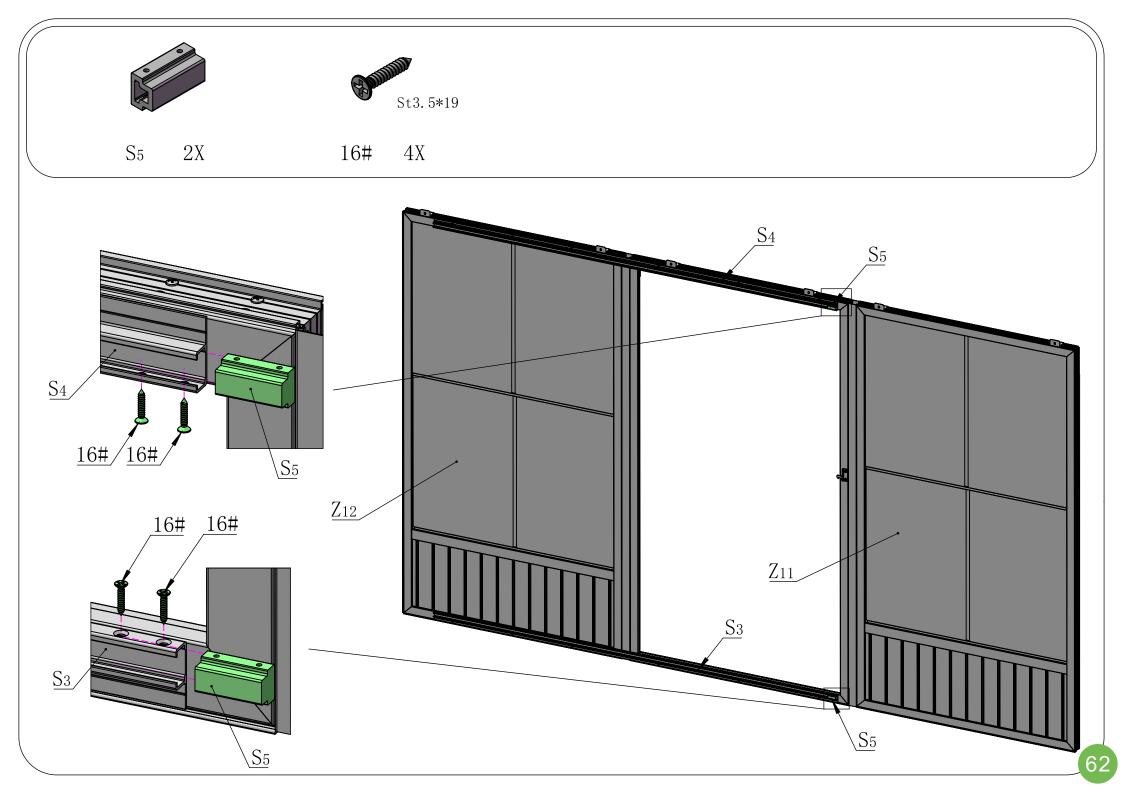


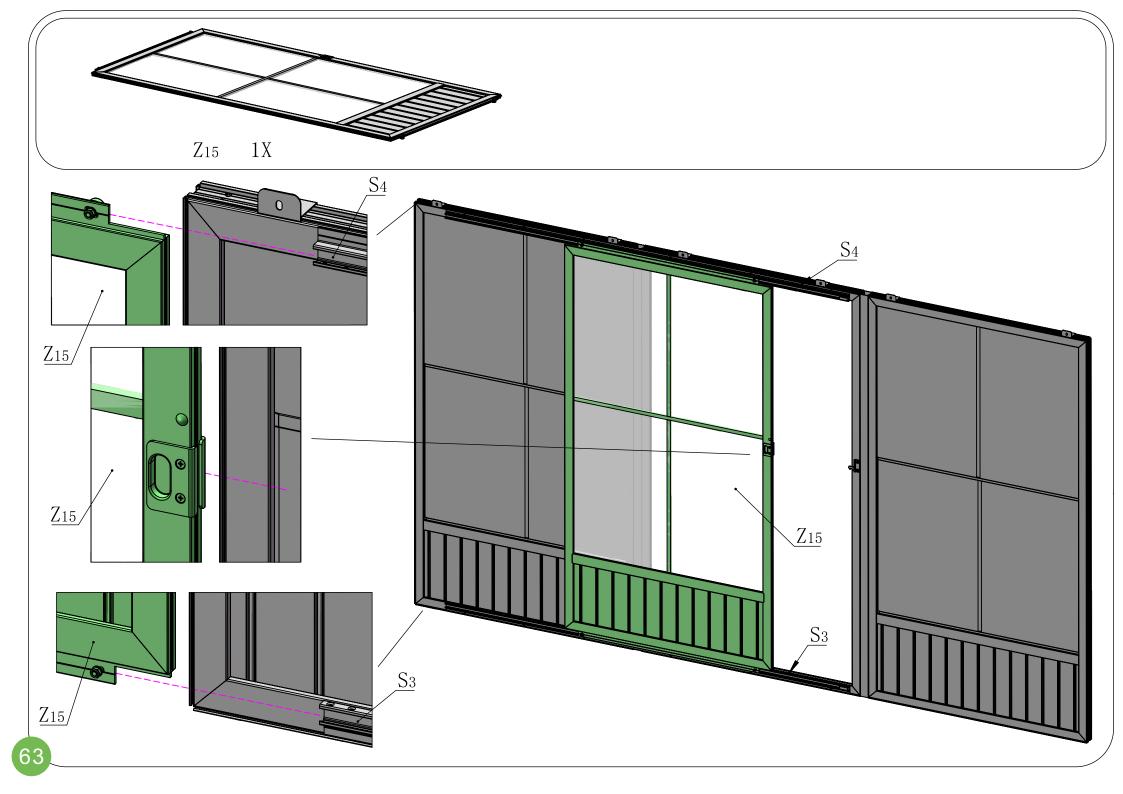

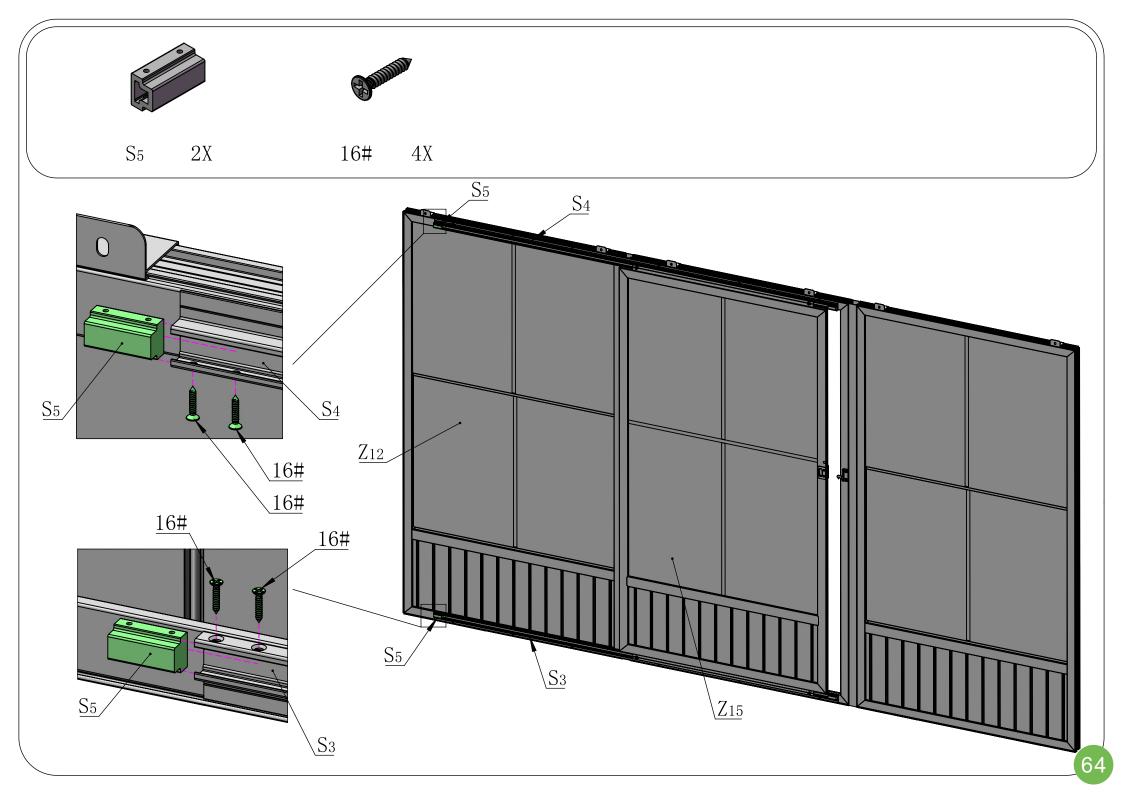

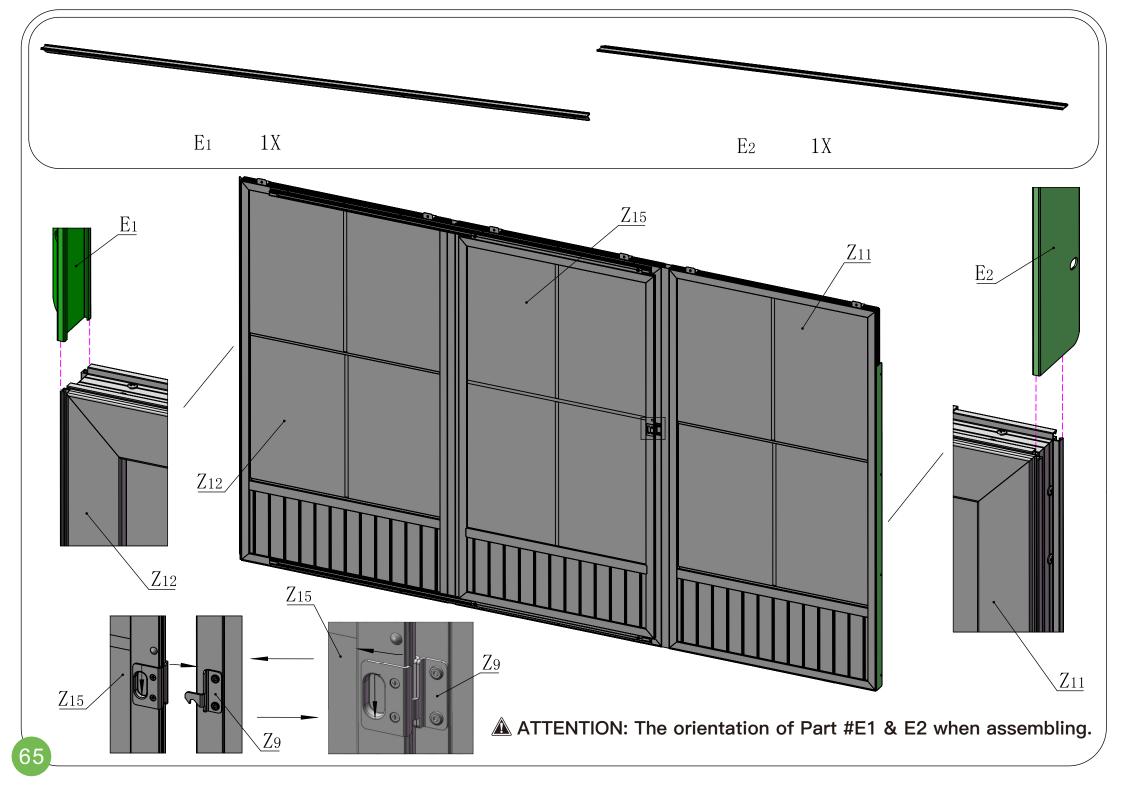

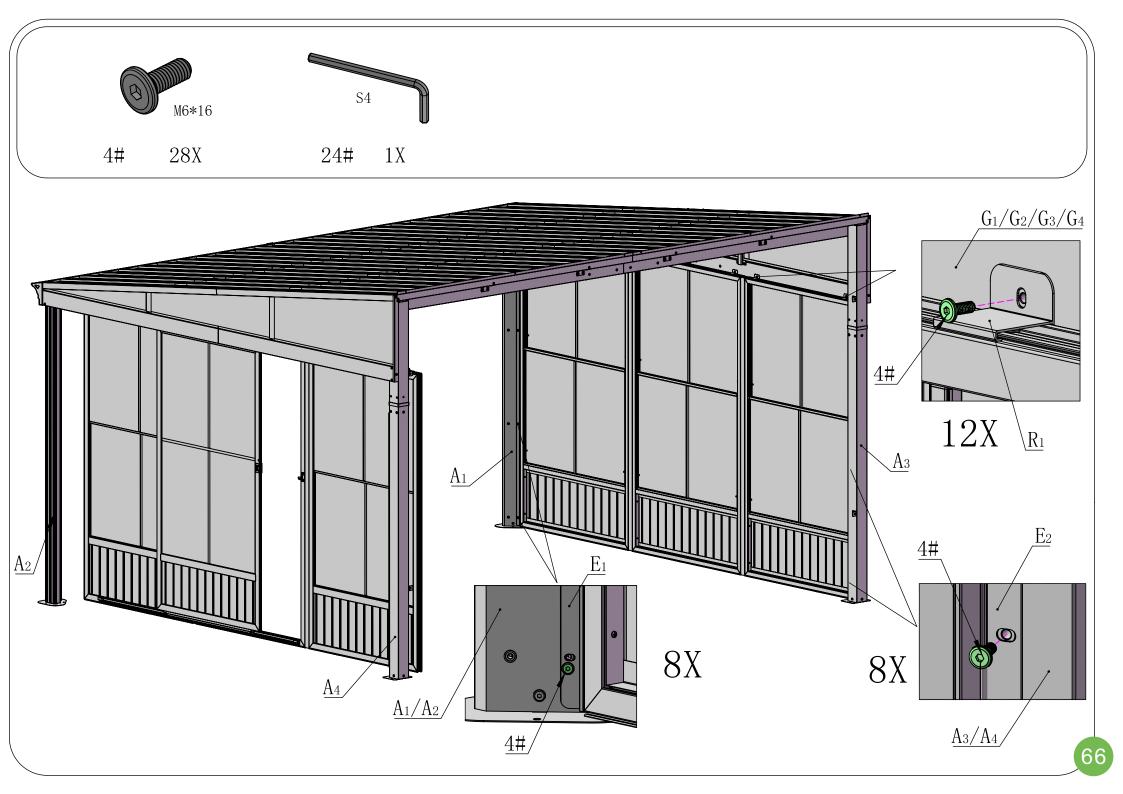


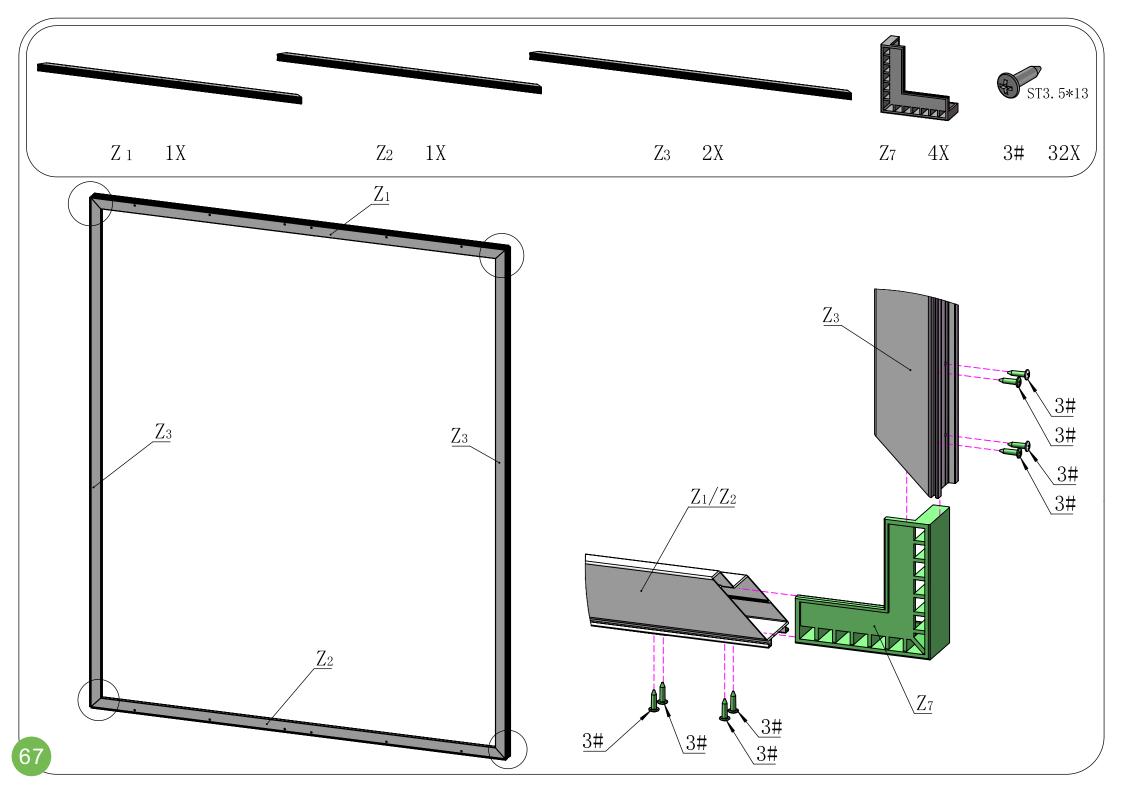






ATTENTION: The orientation of Part #R1.




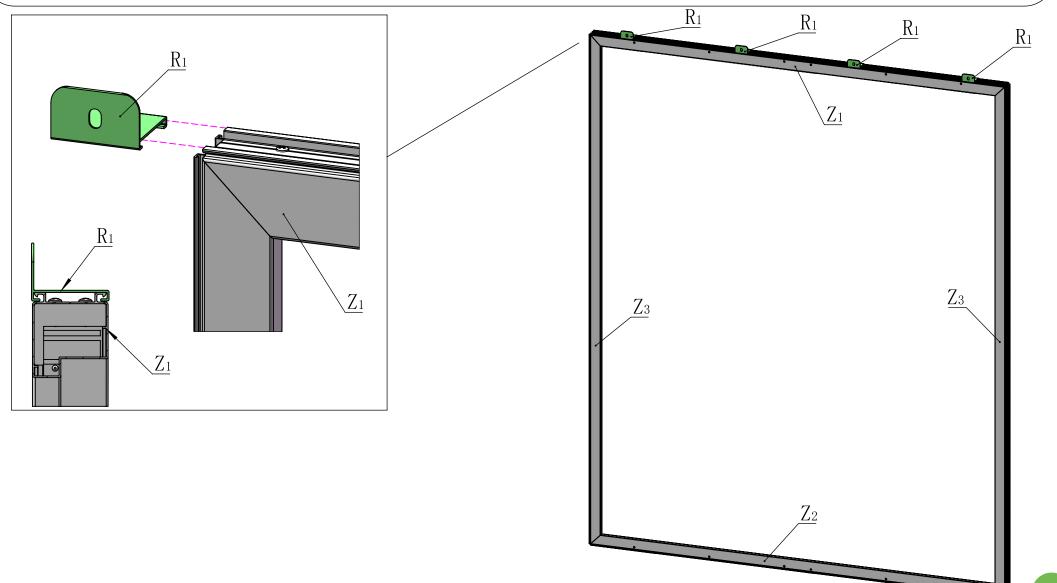


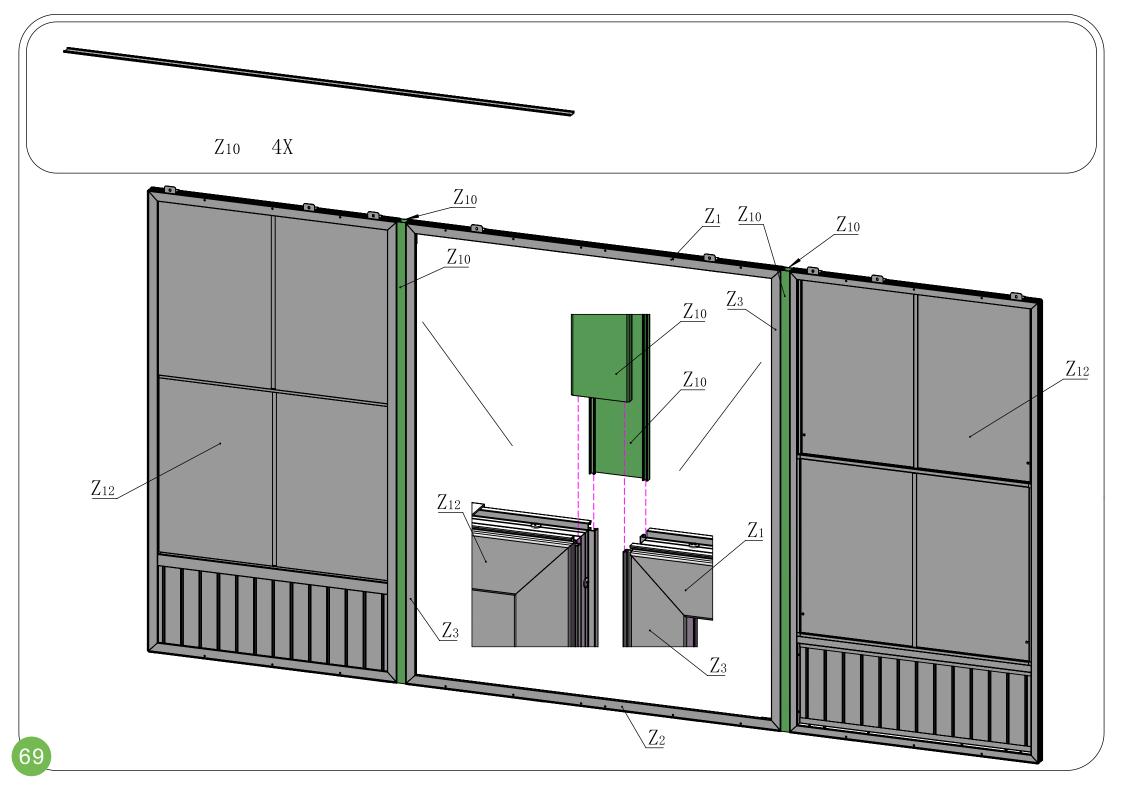


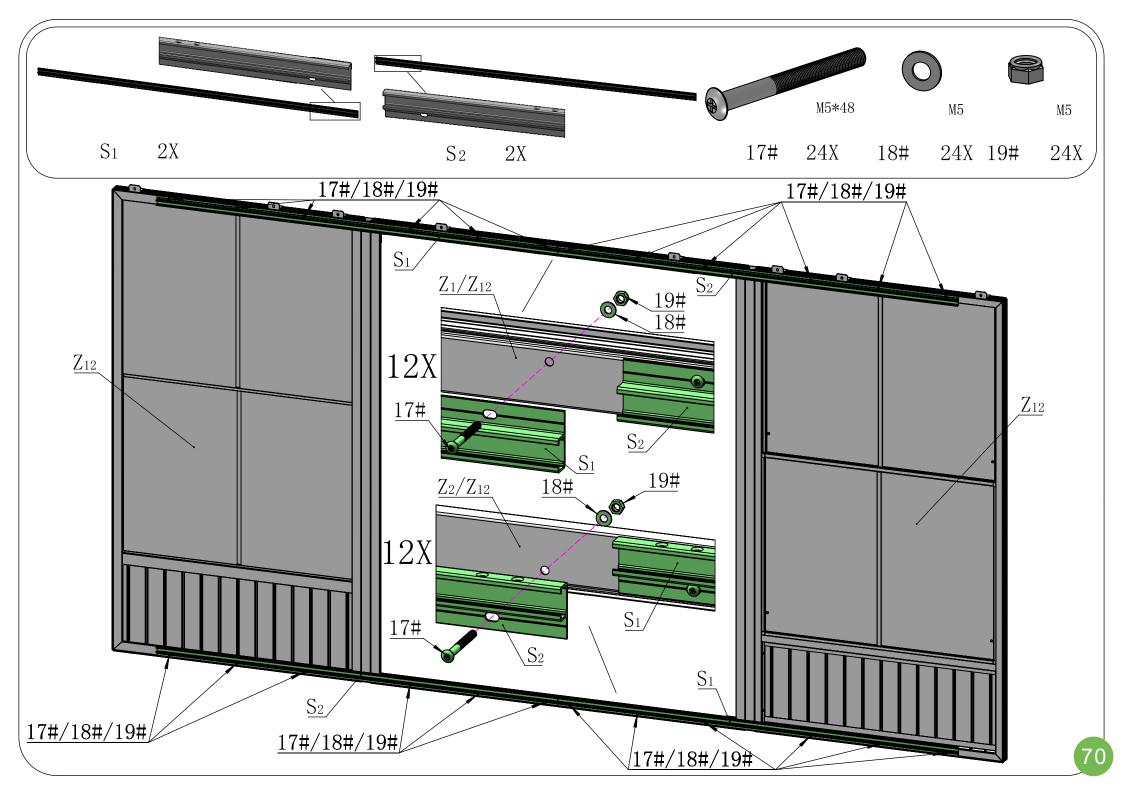

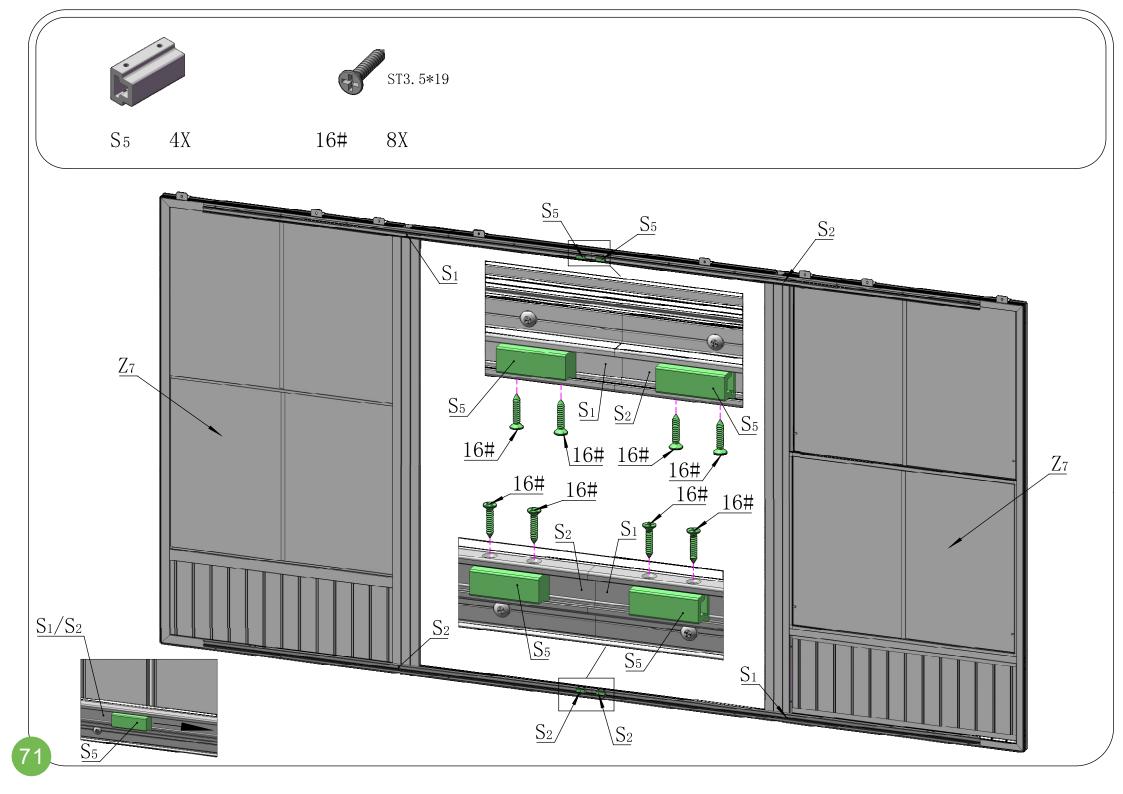


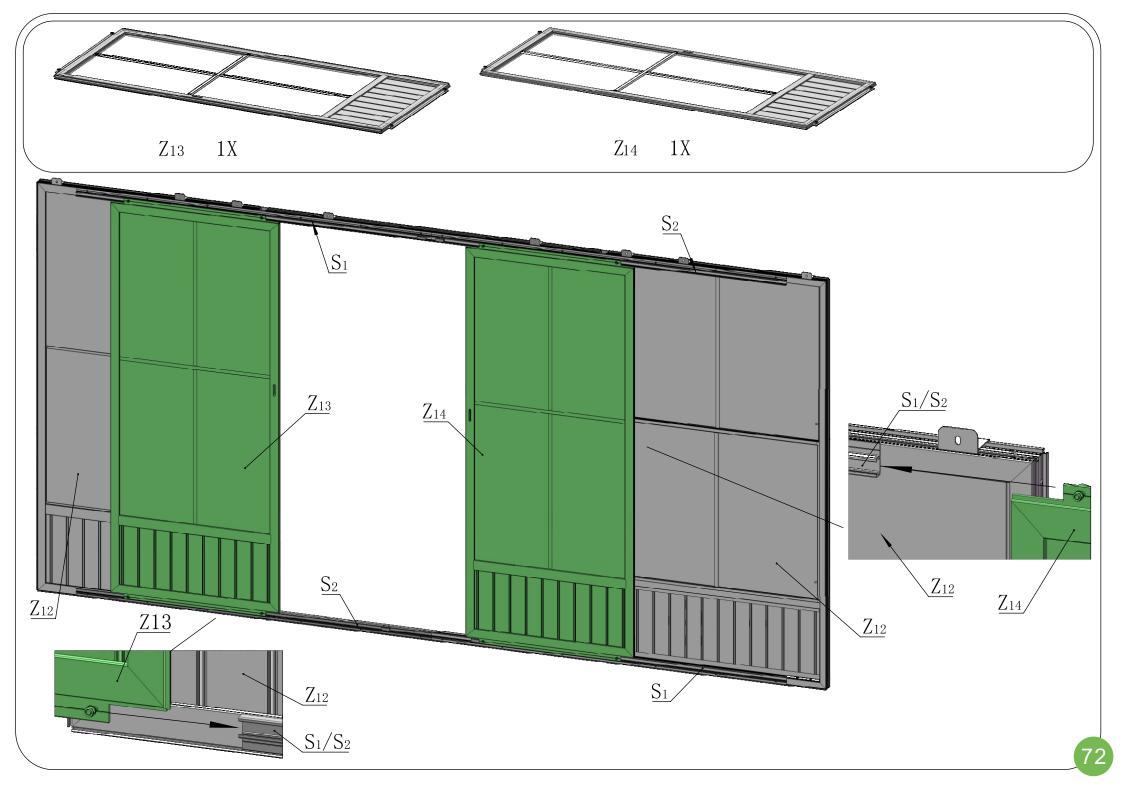

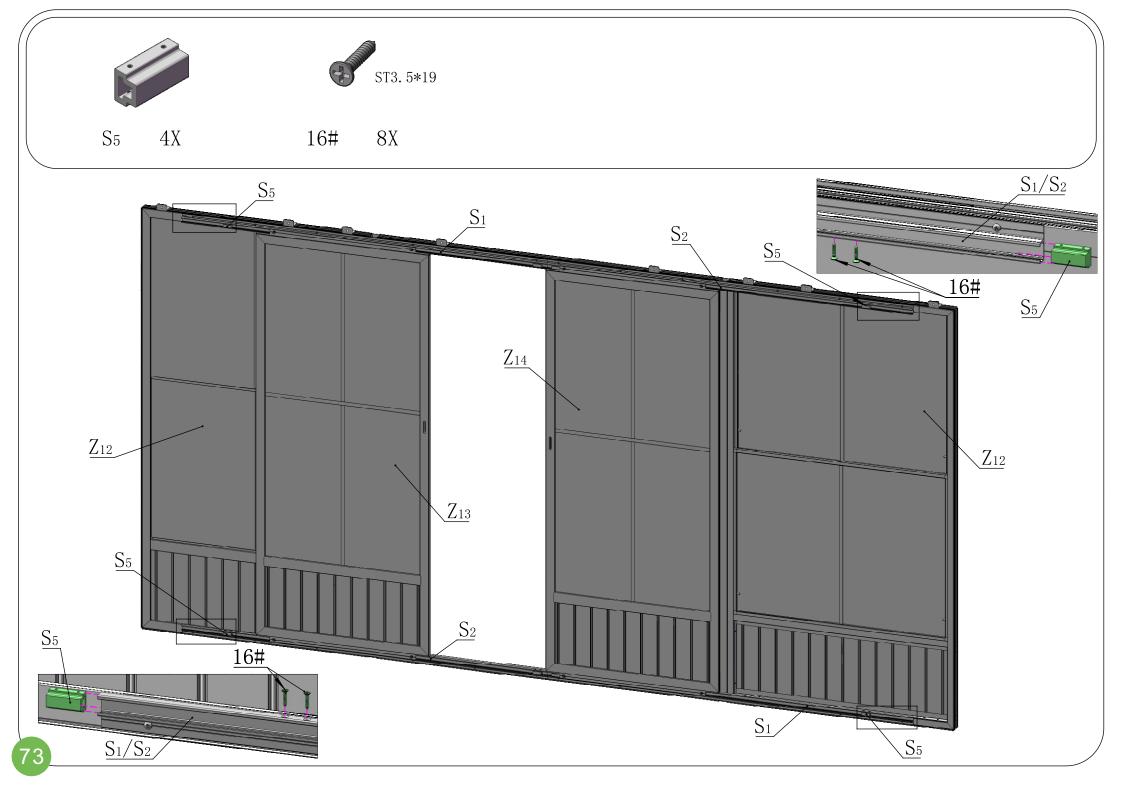

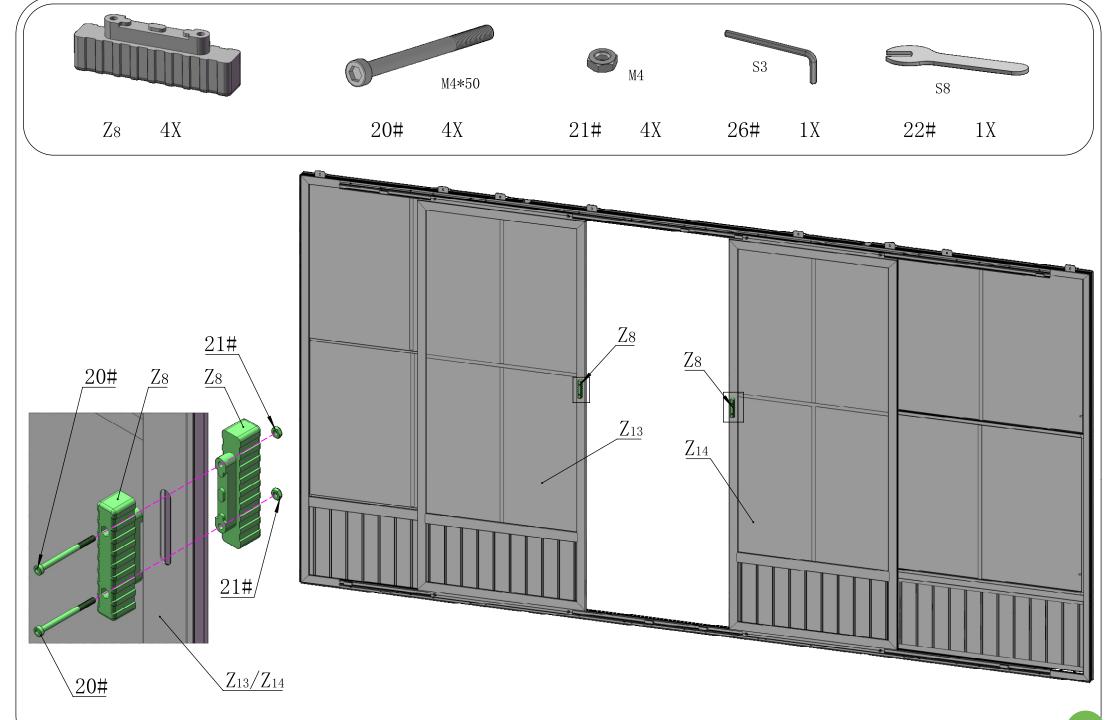


E1 2X

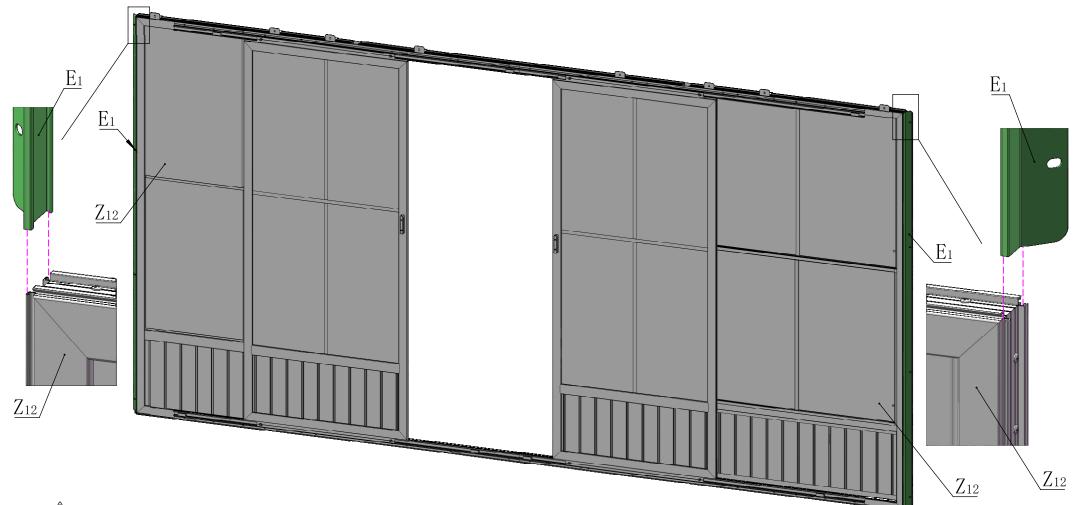



ATTENTION: The orientation of Part #E1.




4# 16X

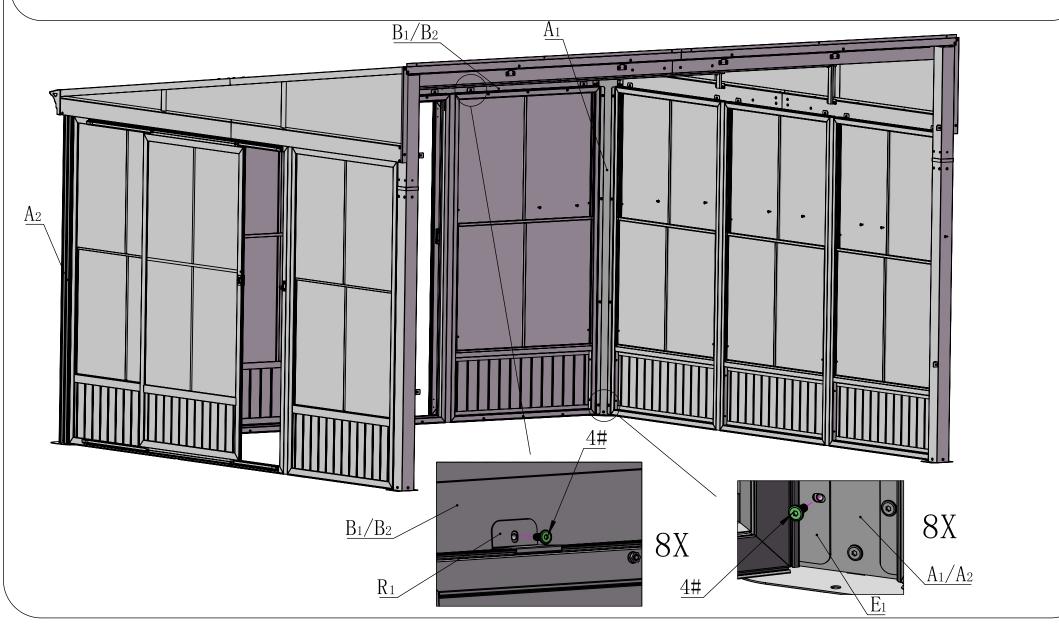


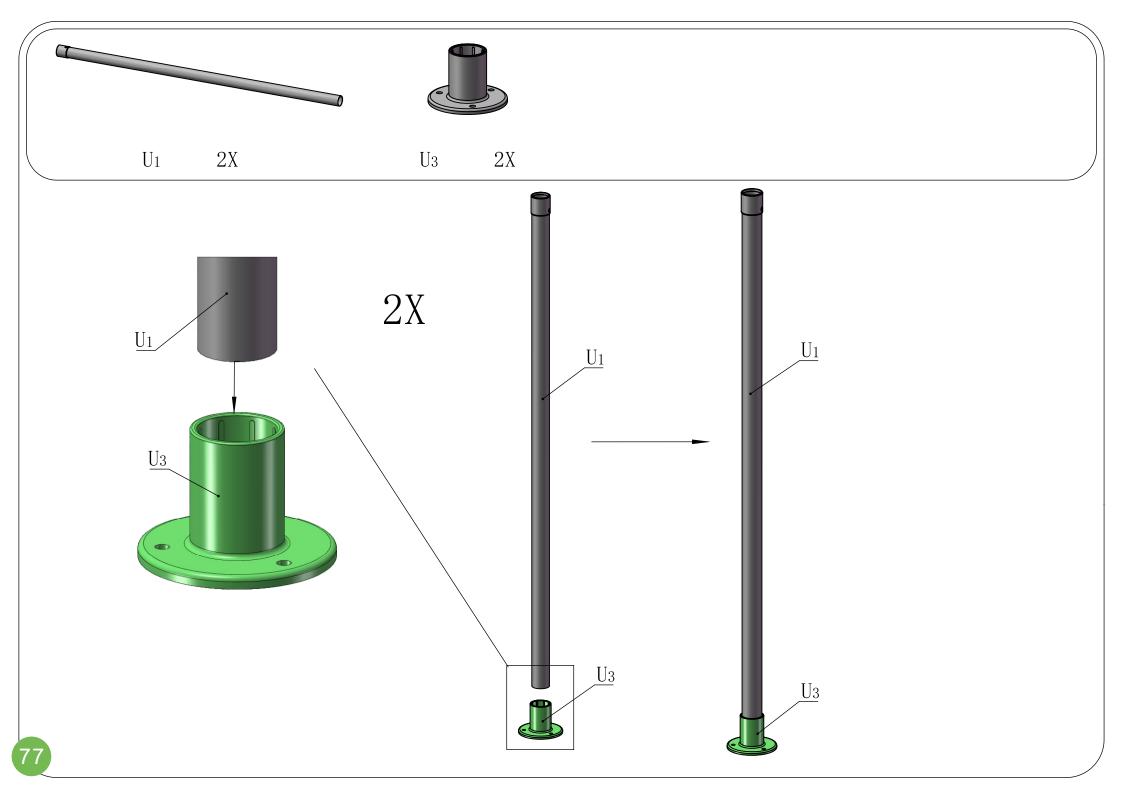

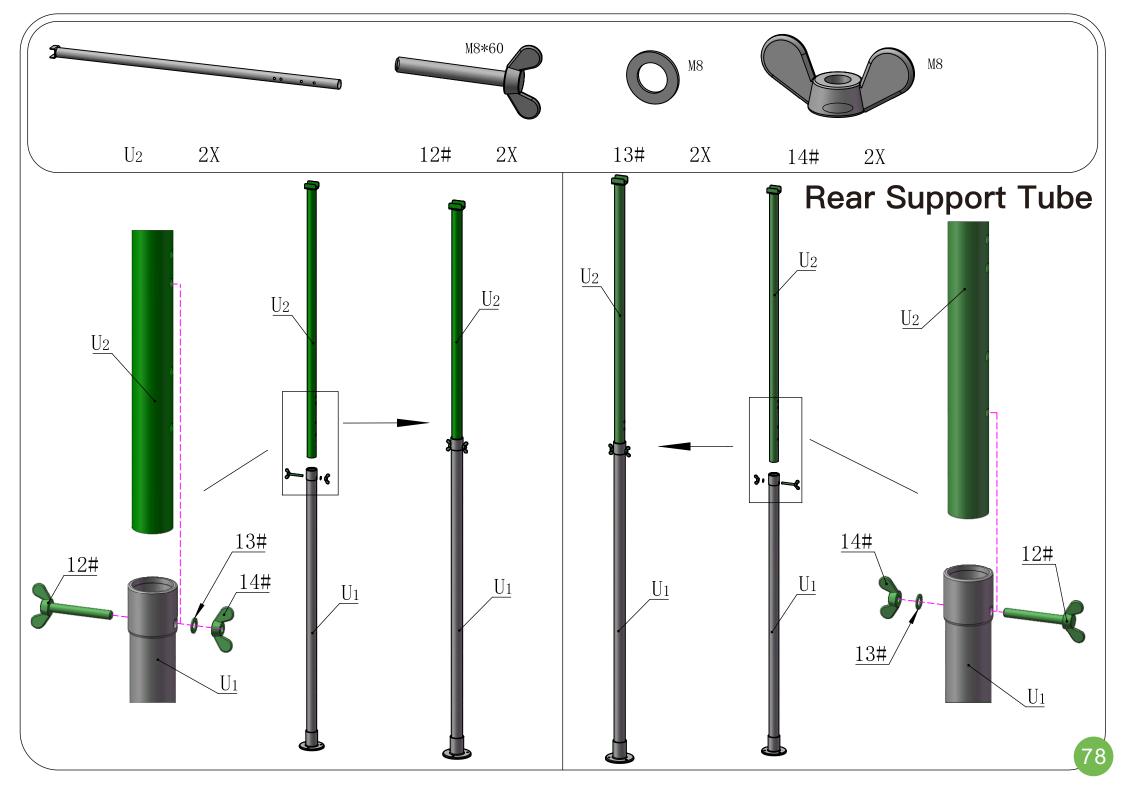


⚠ The two support tubes can strengthen the weight capacity of the metal roof. In bad weather, especially snowstorm, they are essentially needed to prevent the roof from collapsing under heavy snow. In daily life, you can put them away.

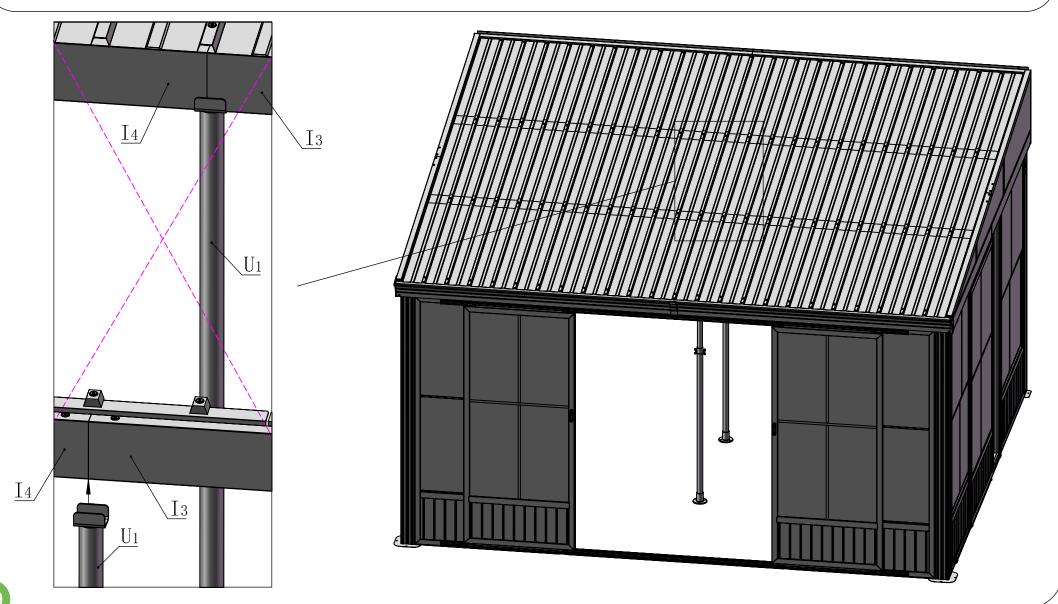

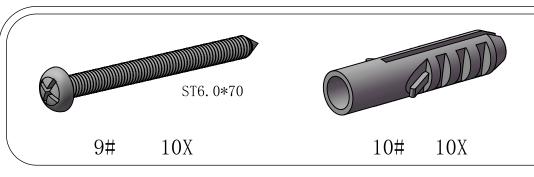

Install this step if you need fix the canopy to the wall (you need to drill holes into the wall).

Otherwise please skip this step.

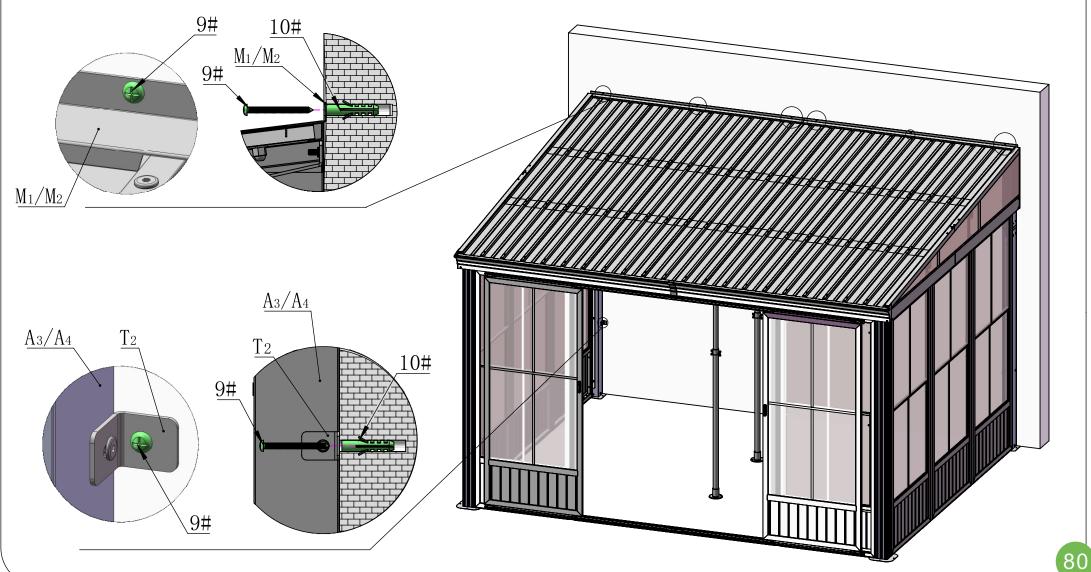

Care and Cleaning

Wash frame part with mild soap and water, rinse thoroughly.

Do not use bleach, or other solvents on the frame parts.

Please check periodically that the sunroom is anchored properly to the floor or ground to enjoy its safe usage.

Please check periodically that all screws are tight to maintain the solidity of the structure.

Please remove any snow accumulation at all times.

Warranty

Frames

Frames constructions are warranted to be free from defects in material and worksmanship for 1 year from item purchased. Damage to frame from negligence won't be covered by this warranty.

Bolts & nuts

Bolts and nuts are warranted to be free from defects in material and worksmanship for 1 year from item purchased. Damage from exposure to chemicals (including not only oils ,spills, fluids) won't be covered by this warranty.

Warranty Limitation

This warranty is for the original purchase order only. (Order number required). This warranty is non-transferable. Domi outdoor living is responsible for the free replacement part including shipping charges for the 1 year warranty.

Warranty Exclusion

This warranty does not cover products subject to negligence, abuse usage, inappropriate installation. Domi outdoor living reserves the right to explain warranty exclusions. When the replacement item is applied, the 1 year warranty automatically expires. Please feel free to contact us for applying warranty.



Call us First! DO NOT RETURN TO STORE

For immediate help with assembly or product information call our number: (951)213-4742

Or E-mail:

contactus24service@gmail.com
Our staff is ready to provide assistance
M-F 9:00 AM to 5:00 PM EST