

**Customer Service: service@forious.com**


## Towel Bar Installation

(Mounting Bracket in product bottom)




1/8" 1/4" 5/16"


**1** Place towel bar on wall where you need to install, mark the outline of product base with a pen.

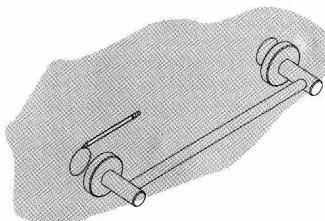


**2** Cover mounting bracket paper on marked circle base, mark 2 points according to paper holes to drill wall holes on each base side.

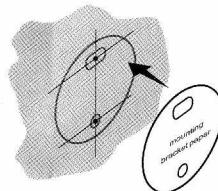


**3** Use 1/4 inch driller to drill holes on wall which you marked, the depth same as white anchor.

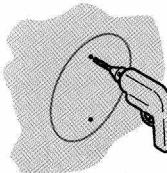


**4** Use hammer hit the white anchors into holes, make sure whole anchor into hole.

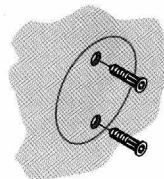


**5** Use allen wrench loosen the setting screw and remove the mounting bracket from accessory.

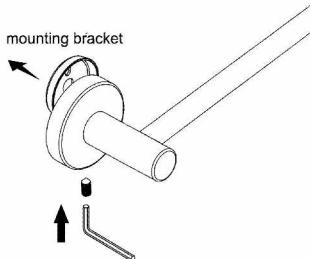

**6** Use screwdriver tighten the mounting bracket on wall stable.

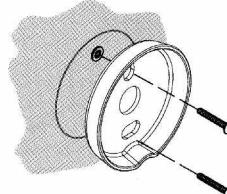


**7** Put the accessory onto mounting bracket and tighten the setting screw in bottom.

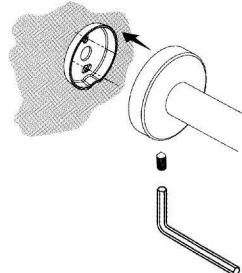


Towel Ring/Toilet Paper Holder  
/Towel Hook Installation  
(Mounting Bracket in product bottom)




**1** Place Towel Ring/Toilet Paper Holder/Towel Hook on wall where you need to install, mark the outline of product base with a pen.

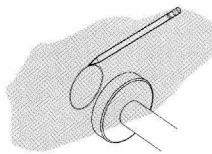


**2** Cover mounting bracket paper on marked circle base, mark 2 points according to paper holes to drill wall holes.

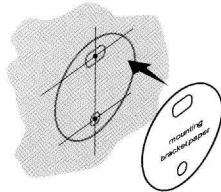


**3** Use 1/4 inch driller to drill holes on wall which you marked, the depth same as white anchor.

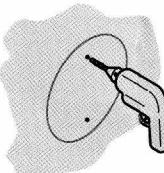


**4** Use hammer hit the white anchors into holes, make sure whole anchor into hole.

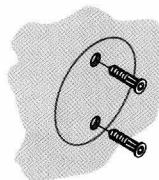

**5** Use allen wrench loosen the setting screw and remove the mounting bracket from accessory.

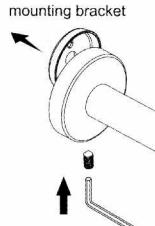

**6** Use screwdriver tighten the mounting bracket on wall stable.

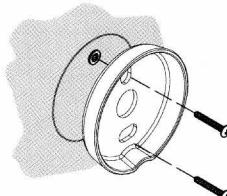

**7** Put the accessory onto mounting bracket and tighten the setting screw in bottom.

