

# MR. GOODBAR<sup>®</sup>


## The Original Home Security Bars

### JOINING POST INSTALL INSTRUCTIONS

**TOOLS REQUIRED:** 1/8" drill bit, Robertson (square head) screw driver #2 & 3, Hacksaw, Pencil, Tape Measure

#### EMERGENCY EXIT WINDOWS


Typically, windows in sleeping rooms and basements with habitable space are used as a secondary means of escape and should be secured with our Keyless Quick Release Locking System (sold separately). Consult your local building and fire codes or ask your local fire department to recommend secondary escapes.

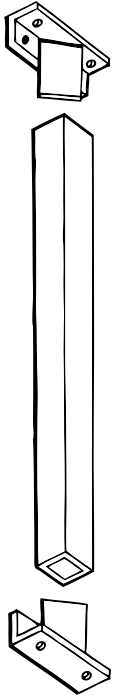

1. Cut post to desired length with hacksaw.  
Refer to diagrams below to help determine length.
2. Insert mounting brackets into post.
3. Mark position of screws. Pre - drill screw holes with a 1/8" bit. Fasten with 1 3/4" screws (provided).
4. Refer to window bar installation instructions to install bars

**Note:** Use 1/2" screws to fasten window bars to joining post instead of 1 3/4" screws provided with the window bars. Pre-drill holes with a 1/8" bit.

#### *Inside Mount*

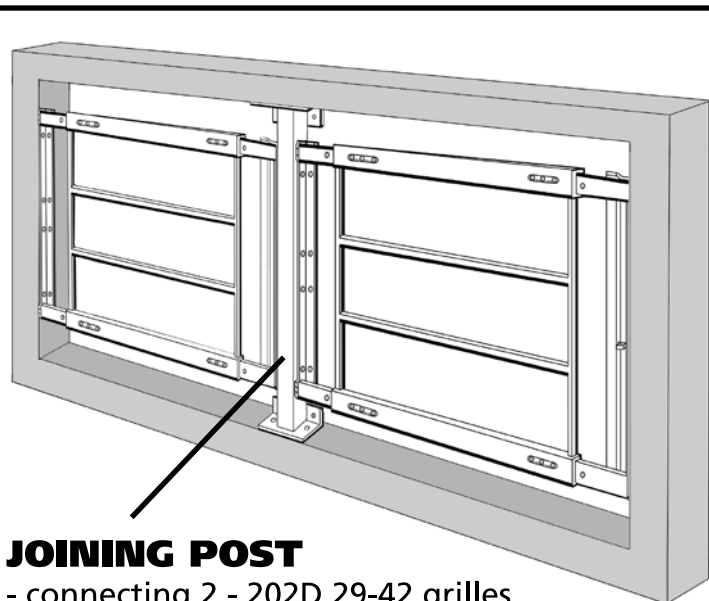

#### *Surface Mount*

