




MANHATTAN COMFORT

888-230-2225

help@manhattancomfort.com

319 Ridge Rd. Dayton, NJ 08810, New Jersey - United States

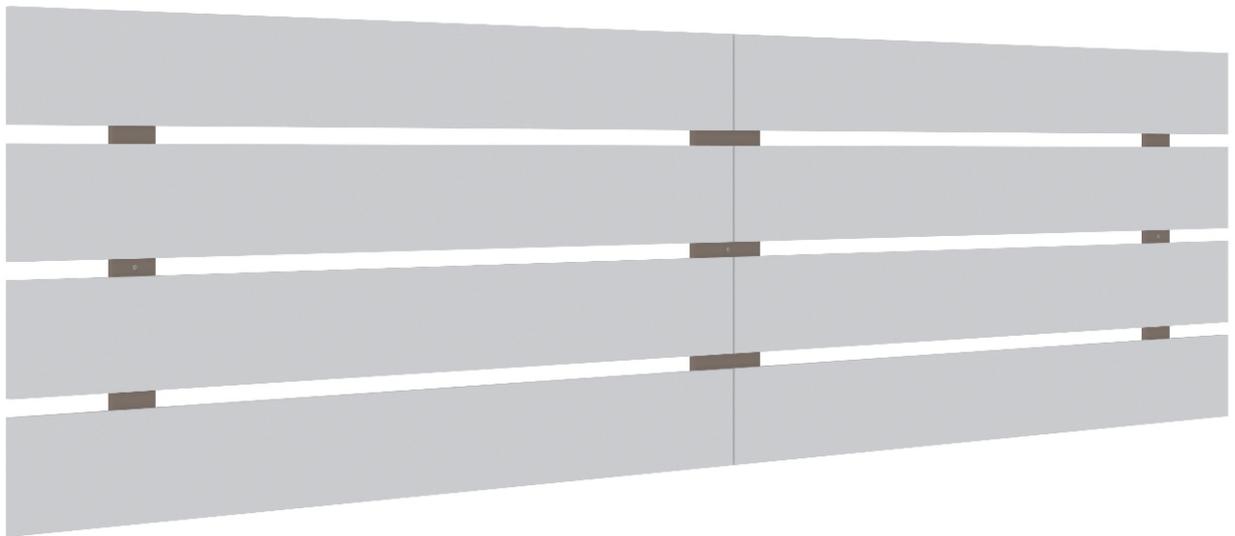


Rockefeller

106.69" Headboard

Included in the package


Part	Description	Qty	Box
01	Headboard Panel	08	01
02	Metal Set	01	01

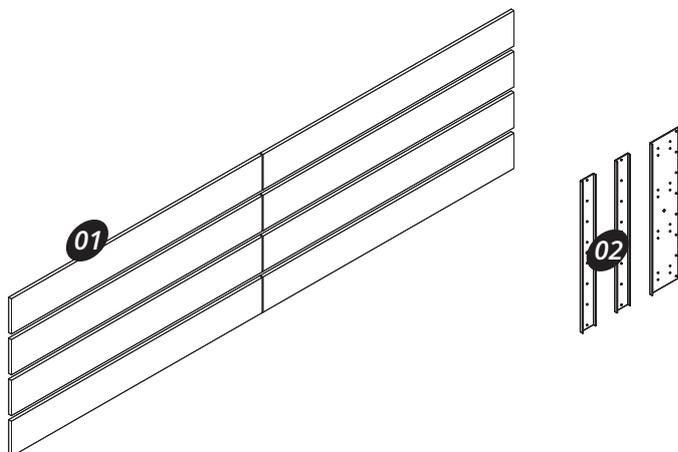


Hardware




A = 48x

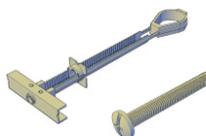

B = 03x

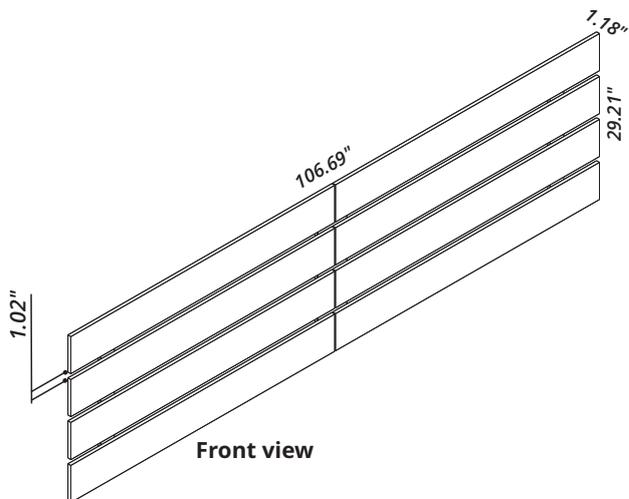


Front view

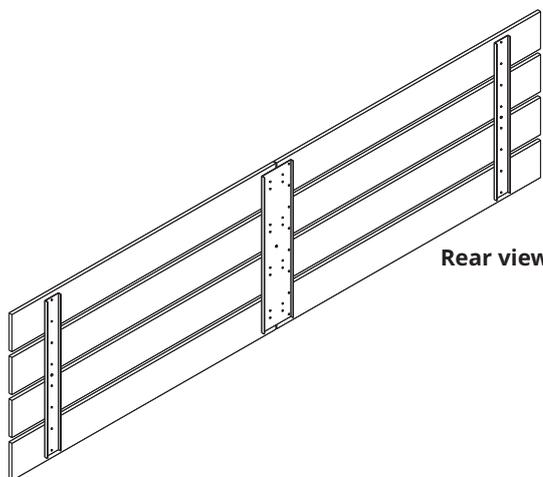

Rear view

Tools needed (not included)

2x

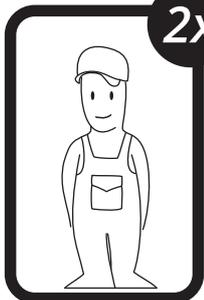


01




A = 48x

Connect all the parts (01) using the parts (02) with the hardware (A).

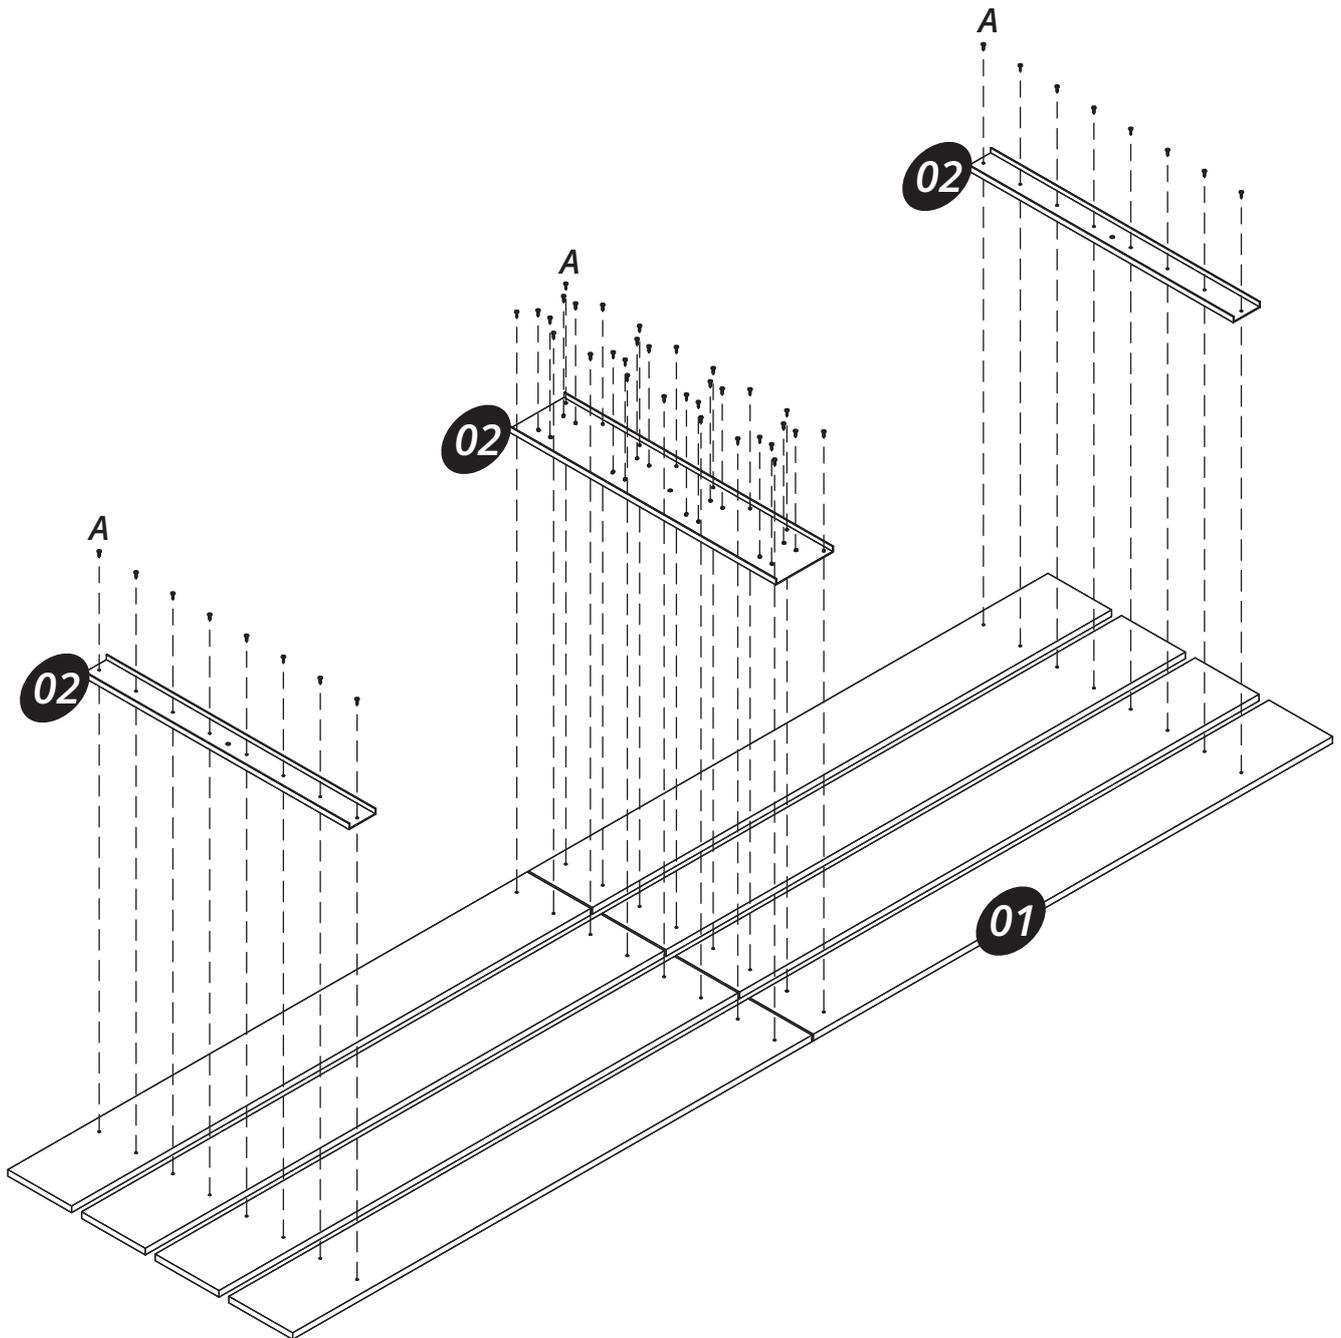


02

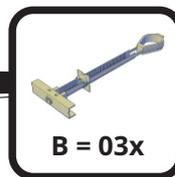

Observe the indicated height of the panel using the floor as reference (around of 20").

The indicated height may vary according to the height of your mattress.

You will need a pencil to mark where you should drill the wall with a 1 / 2" drill bit to put in the hardware (B).

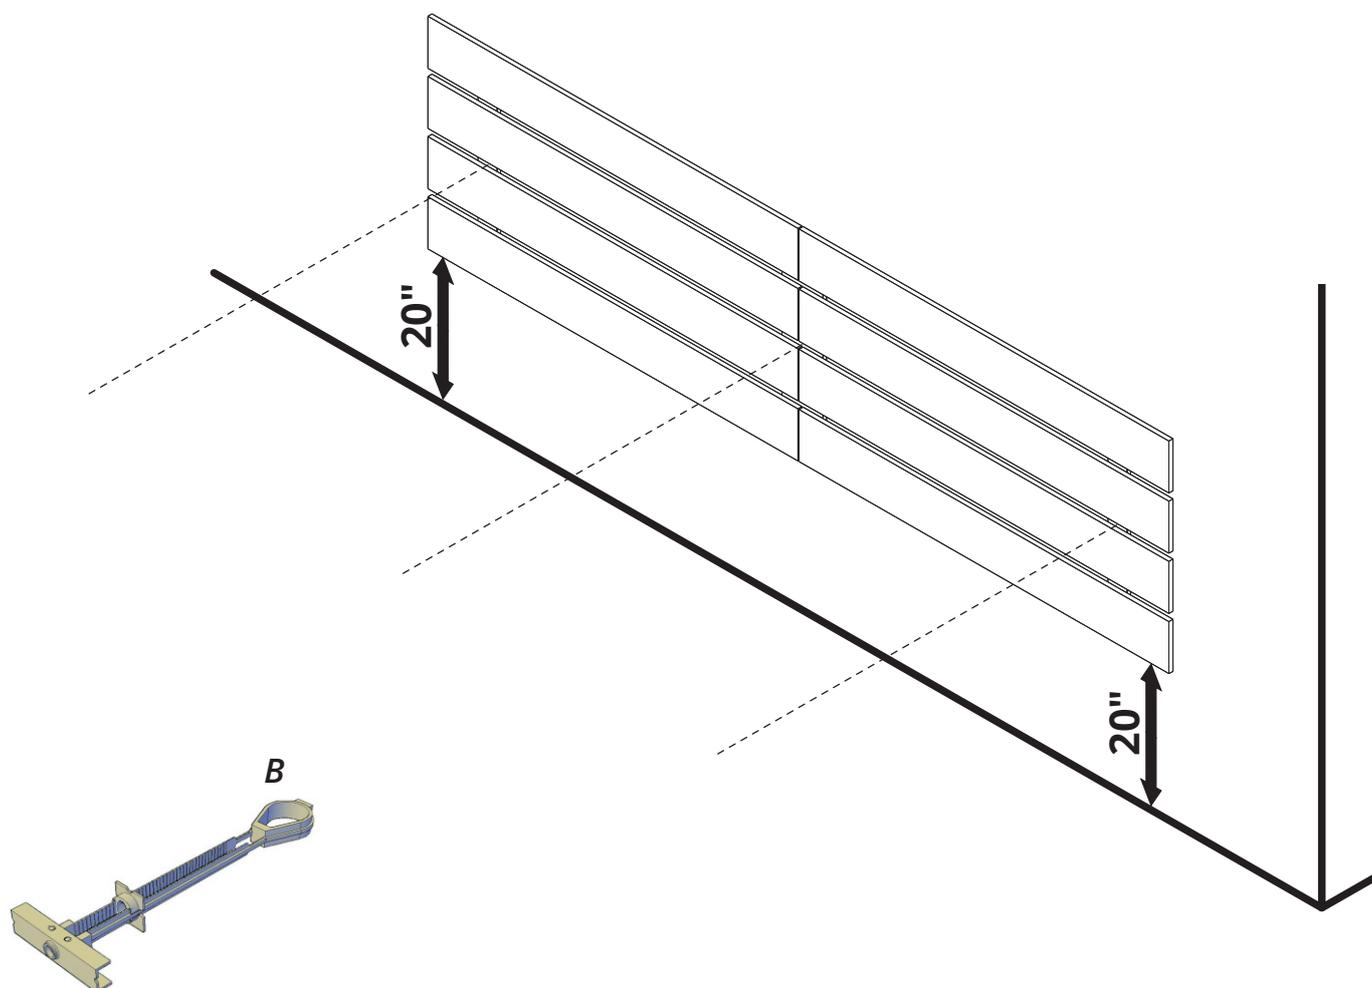

You will need apply the hardware (B) into the hole that you drilled on the wall.

03



B = 03x

Connect the panel on the wall with the hardware (B)

