



Cinch™

Self-adhesive DOOR SWEEPS

IMPORTANT | IMPORTANTE:

Do not install when surface temperature is below 50° F.

No instale cuando la temperatura de la superficie sea inferior a 50 °F (10 °C).

TOOLS NEEDED:

HERRAMIENTAS NECESARIAS:



INSTRUCTIONS :

- Remove existing door weather stripping, ensuring the removal of all residue.
- Clean door surface with a solution of 50% isopropyl alcohol and 50% water.

Measure




- From the inside, measure the width of the door.

Cut



- Measure width of door and cut door sweep to length. Cut metal with hacksaw and vinyl with scissors.

Install

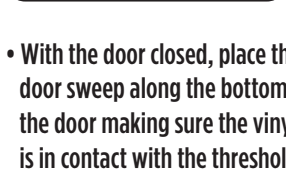

- With the door closed, place the door sweep along the bottom of the door making sure the vinyl is in contact with the threshold ensuring a complete seal. Slowly peel film backing away from door sweep and press lightly as you continue peeling away the backing and pressing onto the door.
- Once in place, apply firm and consistent pressure across the door sweep to adhere to door bottom.

INSTRUCCIONES :

- Retire el burlete existente de la puerta, teniendo cuidado de eliminar todos los residuos del material.
- Limpie la superficie de la puerta con una solución de 50% de alcohol isopropílico y 50% de agua.
- Desde la parte interior, mida el ancho de la puerta.
- Mida el ancho de la puerta y corte la barredora a esa medida. Corte el filete metálico con una segueta y el vinilo con tijera.
- Con la puerta cerrada, coloque la barredora en la parte inferior de la puerta comprobando que el vinilo esté en contacto con el umbral a objeto de garantizar el sellado total. Desprenda la película lentamente de la franja y presione ligeramente a medida que continúa desprendiendo el respaldo y presionando en la puerta.
- Una vez en su lugar, aplique una presión firme y consistente a lo largo de la barredora para adherirla a la parte inferior de la puerta.



QUESTIONS? | PREGUNTAS?

800.654.8454

MDBUILDINGPRODUCTS.COM

