

HZ758500TX

# Francesca Vanity Set Assembly Instructions



**Southern**  
ENTERPRISES

For assistance with assembly, contact:


Southern Enterprises Inc.

Customer Service 1-800-633-5096

[service@seidal.com](mailto:service@seidal.com)

[www.seidal.com](http://www.seidal.com)

**PO# 13224**

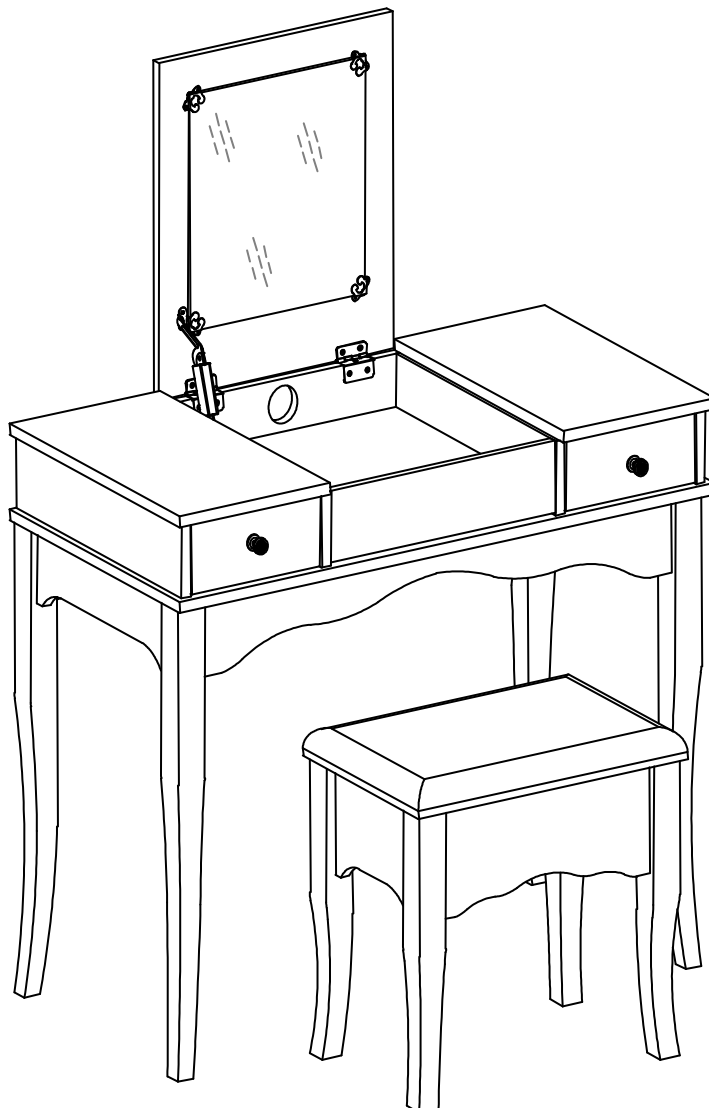




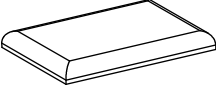






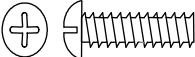




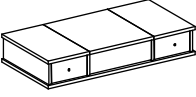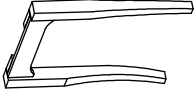

# HZ758500TX
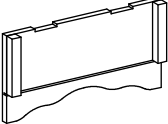
## Francesca Vanity Set

### Parts List

Please review all parts and hardware before disposing of any packaging.  
 Call Customer Service if missing hardware. Do not return to store/retailer.  
 Using a screw that is too long will cause damage. Before beginning assembly,  
 separate each type of screw. Carefully study the screw diagrams below.

You may receive extra hardware with your unit.


<b>A</b> 1pc  Vanity-Top Frame	<b>B</b> 2pcs  Vanity-Side Frame	<b>C</b> 2pcs  Vanity-Apron	<b>D</b> 1pc  Stool-Cushion	<b>E</b> 1pc  Stool-Left Frame	<b>F</b> 1pc  Stool-Right Frame
<b>G</b> 1pc  Stool-Back Frame	<b>H</b> 1pc  Stool-Front Frame	<b>I</b> 1pc  Stool-Bottom Panel	<b>1</b> 2pcs  Knob	<b>2</b> 2pcs  Bolt (1")	<b>3</b> 22pcs  Wood Dowel
<b>4</b> 1pc  Allen Key	<b>5</b> 16pcs  Bolt (1-3/16")	<b>6</b> 6pcs  Screw (M3x9/16")	<b>7</b> 1pc  Hinge	<b>8</b> 4pcs  Screw (M3.5x9/16")	

#### Care and Cleaning Instructions:

Before using, wipe with a clean, dry cloth.  
 Periodically apply furniture wax to renew the finish. Avoid rubbing or scratching the surface with rough or abrasive objects.

For replacement parts or questions, please call Customer Service at 1-800-633-5096.


**Assembly Tool Required**  
**Phillips and Flat Head**

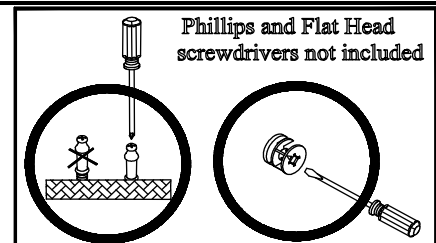

# HZ758500TX

## Francesca Vanity Set

### Assembly Instructions

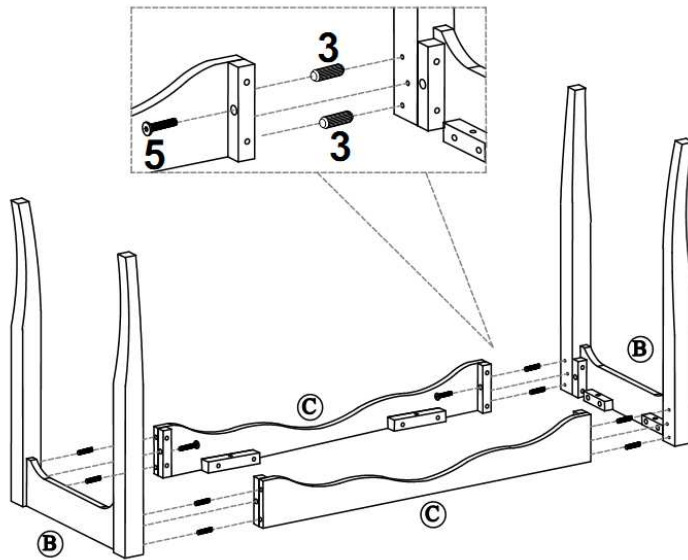


#### Step 1:

Insert Wood Dowels (3) into corresponding holes on Vanity Side Frames (B).

Attach Vanity Aprons (C) to Vanity Side Frames (B) by inserting Wood Dowels (3) attached to Vanity Side Frames (B) into corresponding holes on Vanity Aprons (C).


Insert Bolts (5) into corresponding holes in Vanity Aprons into the threaded holes in Vanity Side Frames (B) and tighten with Allen Wrench (4).

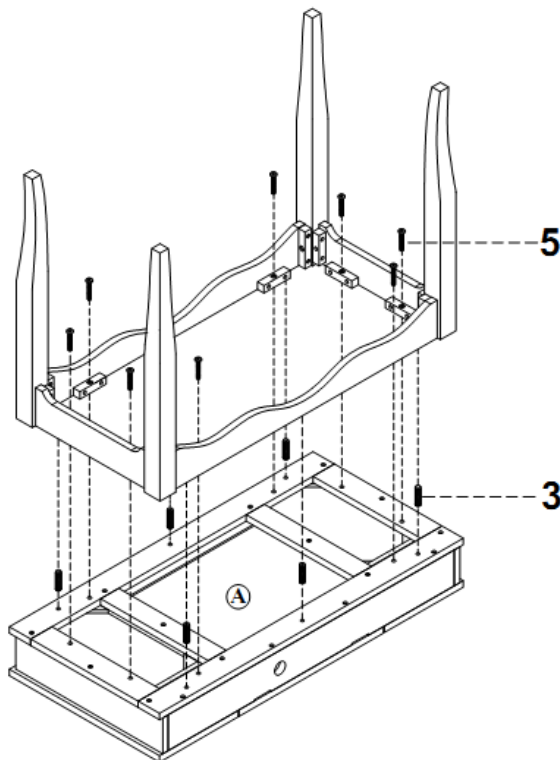

#### Step 2:


Attach assembled unit in step 1 to Vanity Top Frame (A) by inserting Wood Dowels (3) into corresponding holes.

Secure using Bolts (5) and tighten using Allen Wrench (4).

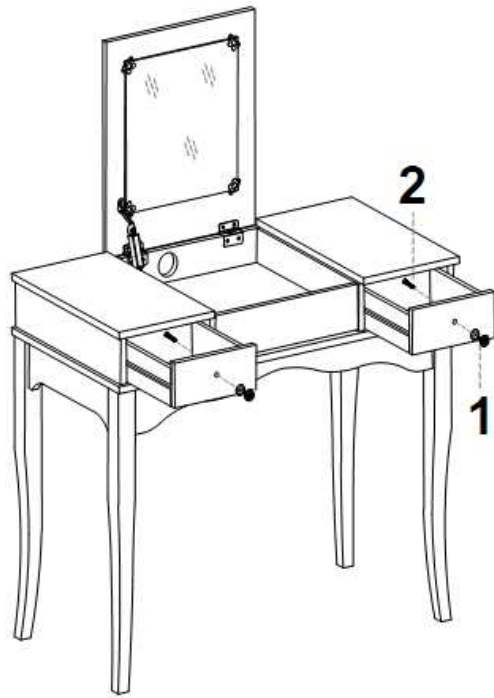

### Step 3:

Attach Knobs (1) using Bolts (2).



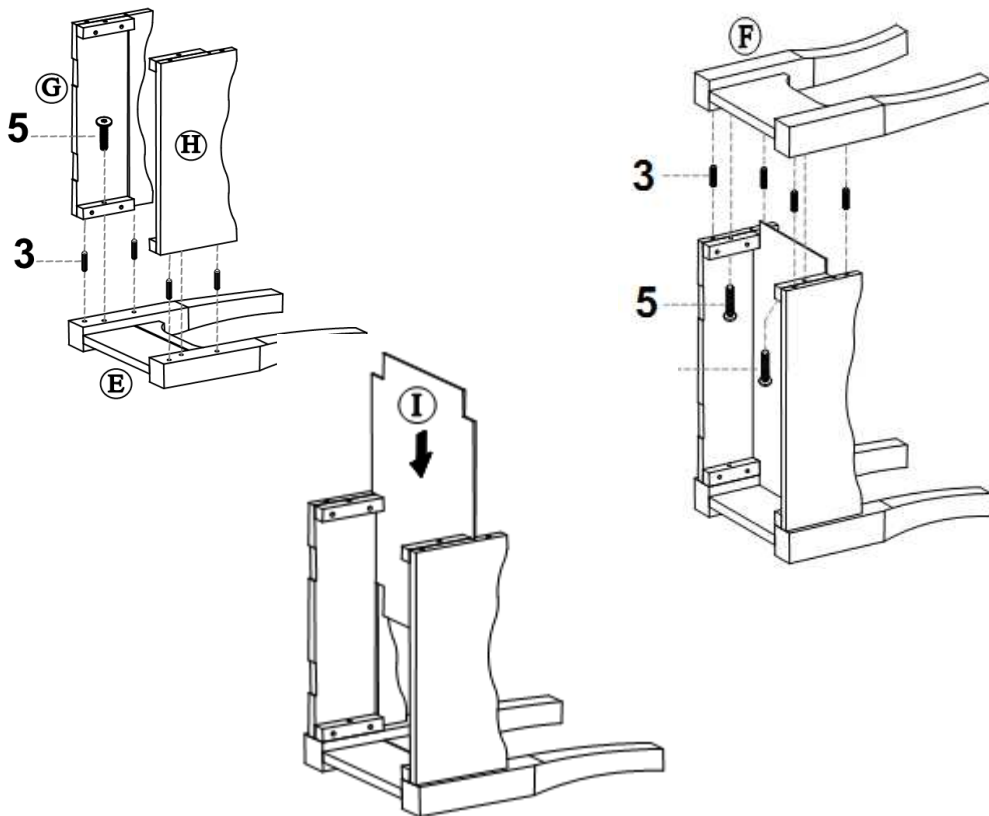


### Step 4:

Attach Stool Back Frame (G) and Front Frame (H) to Left Frame (E) by inserting Wood Dowels (3) into corresponding holes. Secure with Bolts (5). Tighten with Allen Wrench (4).

Insert Stool Bottom Panel (I) into grooves between Back Frame (G) and Front Frame (H).

Attach Right Frame (F) by following same steps used to attach Left Frame (E).

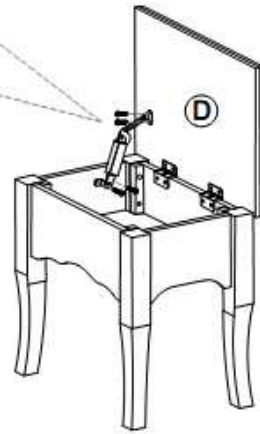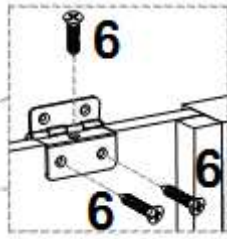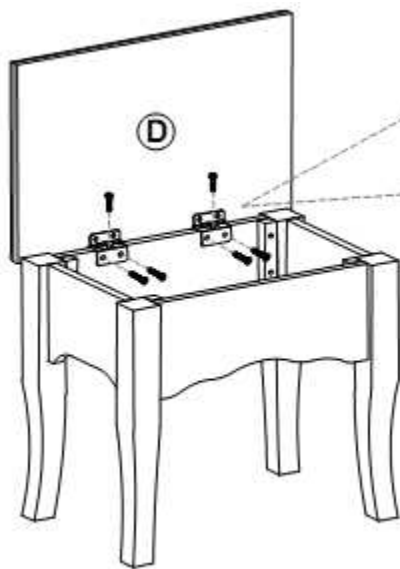

**Step 5:**

Attach Stool Cushion (D) to Stool Frame by using attached hinges on Stool Cushion (D) and Screws (6).

Assemble Hinge (7) to Stool Left Frame and Stool Cushion using Screws (8).

## Parts Replacement Form

### Customer Information

Name \_\_\_\_\_

Address \_\_\_\_\_

City/State/Zip Code \_\_\_\_\_

Phone Number \_\_\_\_\_

Please indicate where you purchased this item: Store/Website/Catalog  
\_\_\_\_\_

Please indicate color/size/style number:  
\_\_\_\_\_

Style No	Parts Letter	Parts Description
Quantity Needed		
_____		
_____		
_____		

Please immediately examine this product carefully. Any request for missing parts or damage replacement must be received within 90 days of your receipt of the product. Replacement, if available, will be honored within this time frame. Parts will not be available for items arriving fully assembled. We do not recommend modifying product(s) and we are not responsible for any damages due to product modification(s). If damages or missing parts are not reported within 90 days of your receipt, we are under no obligation to provide parts or replacement merchandise.

Please contact Southern Enterprises at 800-633-5096 or in Dallas 972-869-0111/ 9am – 4pm Mon-Fri Central time if you have product issues or email us at [service@seidal.com](mailto:service@seidal.com). Please ask for customer service representative for issues involving damages or replacement parts. Please ask for technical assistance representative for any issues with product and assembly/construction.

Please contact the retailer that you purchased from for returns.



**Southern**  
ENTERPRISES

Customer Service

1-800-633-5096

[service@seidal.com](mailto:service@seidal.com)

Southern Enterprises, Inc.

600 Freeport Parkway, Suite 200  
Coppell, Texas 75019