



1

Align hinges' position, drill pilot holes, mortise door jamb to receive hinges.

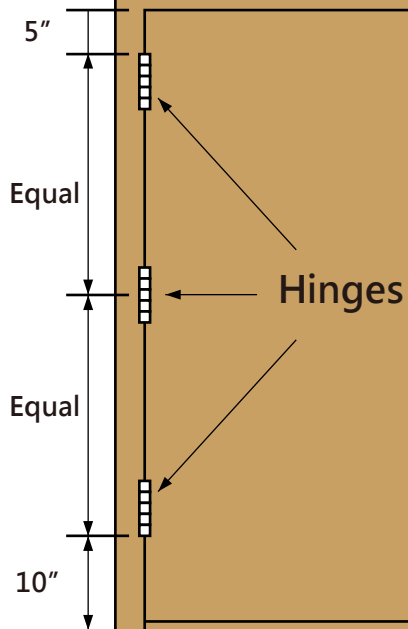


2

Drill pilot holes, mortise door jamb to receive hinges.

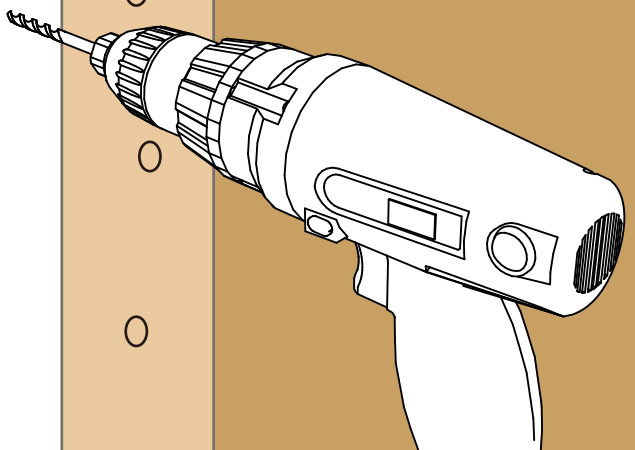

3

Attach hinges to door, then secure with 3 screws included for each hinge.

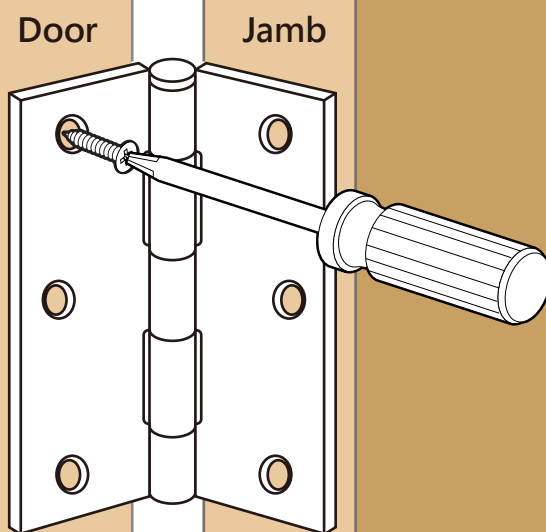

4

Position door hinges on jamb, then secure with 3 screws included for each hinge

