

**SIMPLEHOME**<sup>™</sup>  
— LIFE BY DESIGN —


*Wynden+Hall*<sup>™</sup>  
HOME DECOR  
brooklyn + max<sup>™</sup>

**AVALON / FRANKLIN / LINCOLN**

---

**DELUXE PARSON CHAIR**

MODEL # WS5134-LBL

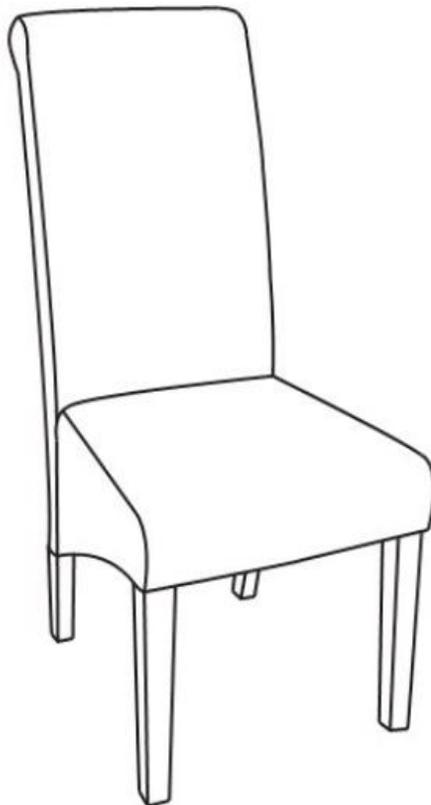

# PRE-ASSEMBLY INFORMATION


## PARTS DESCRIPTION

A



CHAIR BACK  
QTY 1

B

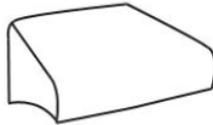

SEAT  
QTY 1

C



FRONT LEG  
QTY 2

**NEED HELP?** For help with assembly or if you are missing a part,  
Please call customer service at 1-866-518-0120 ext. 262 (9 am to 4 pm EST)

# PRE-ASSEMBLY INFORMATION

## HARDWARE DESCRIPTION

1



ALLEN KEY SCREW  
M6 x 50 MM  
QTY 2

2




ALLEN KEY SCREW  
M6 x 60 MM  
QTY 4

3



ALLEN KEY SCREW  
M6 x 100 MM  
QTY 4

4



ALLEN KEY  
5 MM  
QTY 1

5



FLAT WASHER  
Ø18 MM  
QTY 10

6




LOCK WASHER  
Ø10 MM  
QTY 10

**NEED HELP?** For help with assembly or if you are missing a part,  
Please call customer service at 1-866-518-0120 ext. 262 (9 am to 4 pm EST)

# ASSEMBLY

## STEP 1

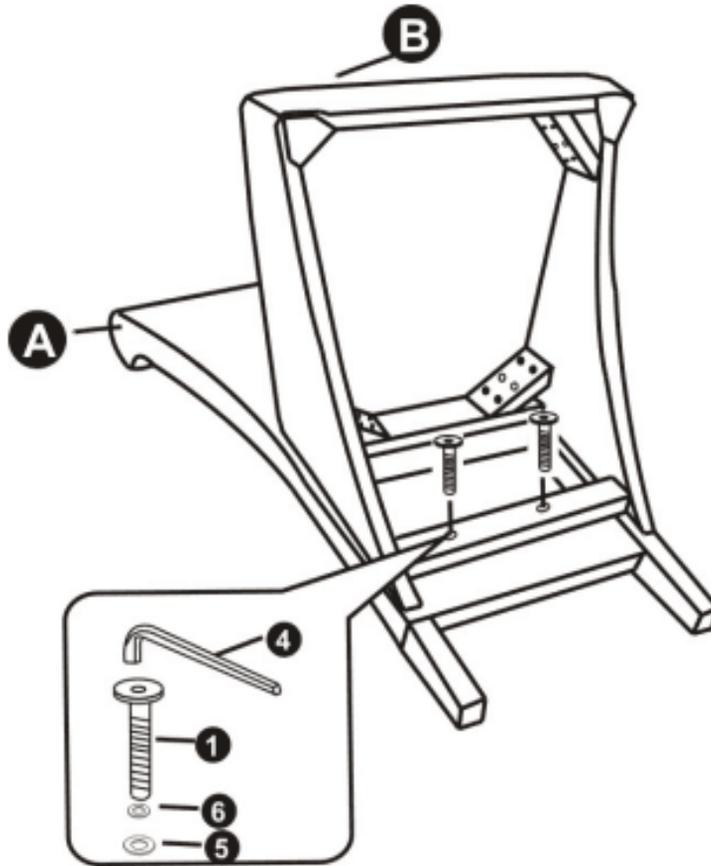


Attach Seat (B) to Chair Back (A) by inserting Allen Key Screws (1) and two Washers each of (5) and (6).

Use Allen Key (4) to tighten. Do not over-tighten.

# ASSEMBLY


## STEP 2

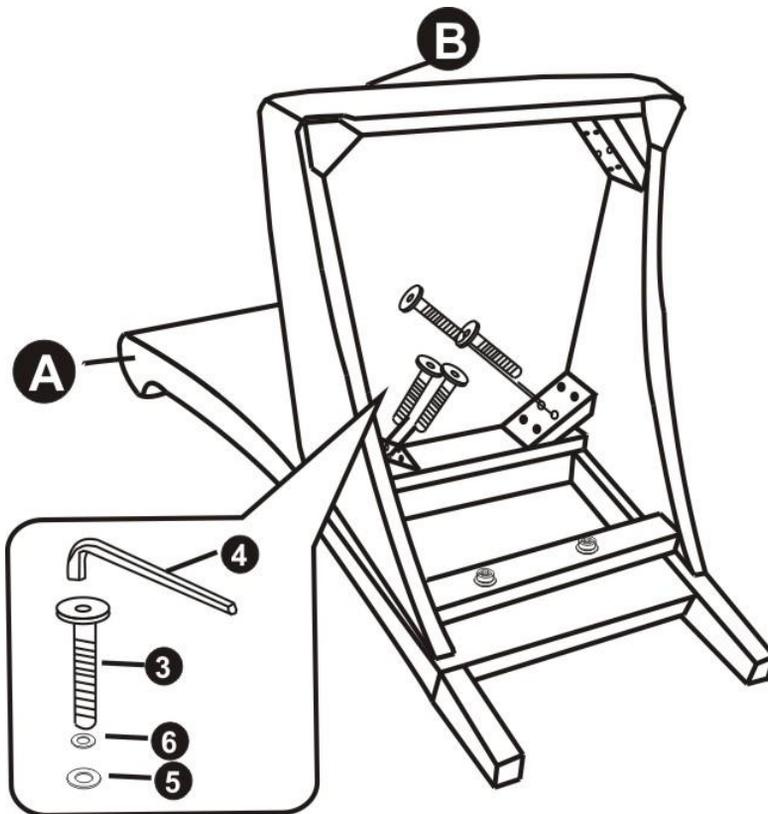

Secure Seat (B) to Chair Back (A) using Allen Keys Screws (3) and four Washers each of (5) and (6).  
Use Allen Key (4) to tighten. Do not over-tighten.

# ASSEMBLY


## STEP 3

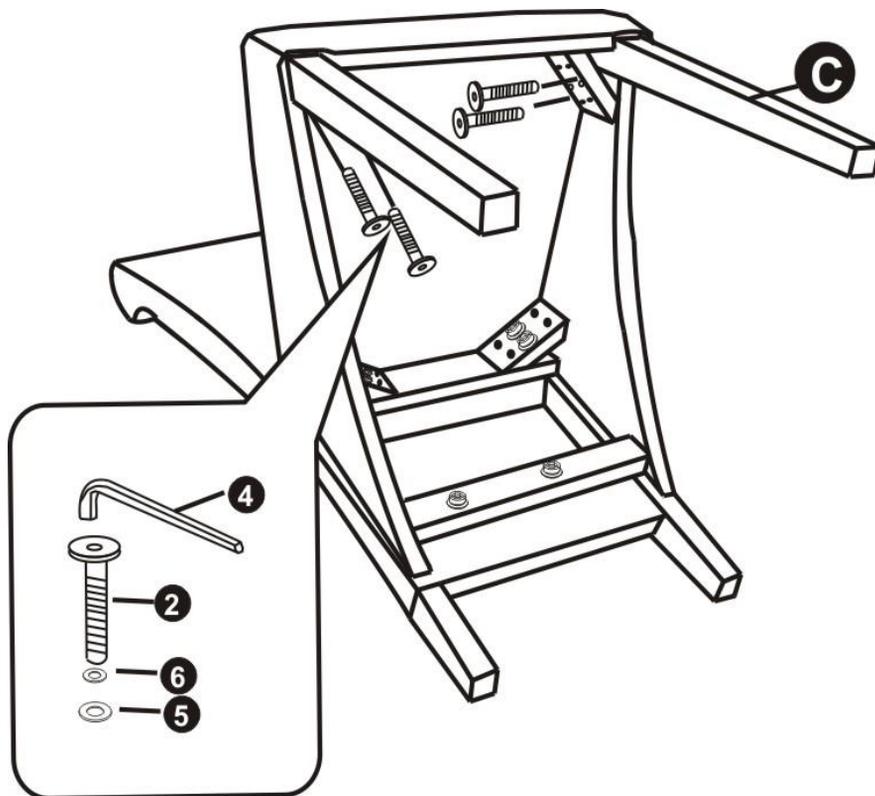

Attach Front Legs (C) to Seat (B) using Allen Keys Screws (2) and four Washers each of (5) and (6).  
Use Allen Key (4) to tighten. Do not over-tighten.

# ASSEMBLY


## STEP 4

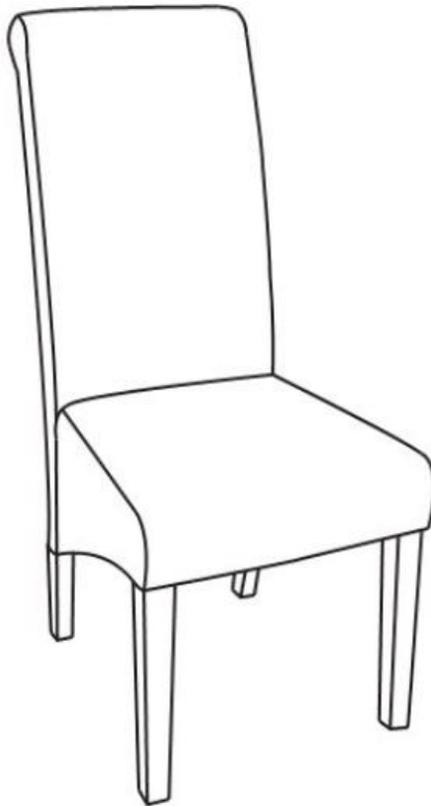

Place Chair on a flat level surface to ensure it is level.  
If it is uneven, adjust either the Seat (B) or Front Legs (C).  
Ensure the Chair is level and then fully tighten all bolts.

# ASSEMBLY

## STEP 5

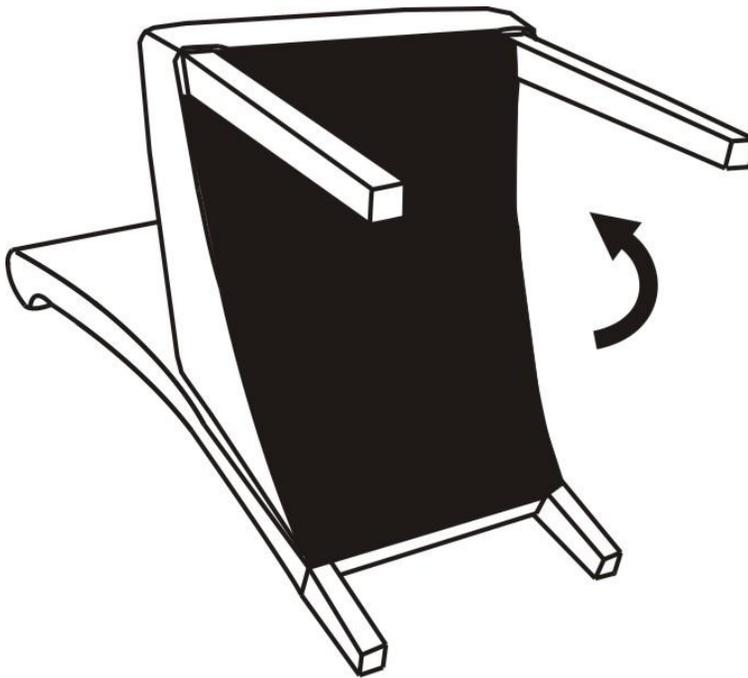

Attach fabric with Velcro to bottom of Seat.