

Stairnose 3/4" Flush-Fit

Installation Products and Accessories



Bruce[®]
hardwood floors


Transitions floor to edge of stair to provide a finished trim.

For use as a stair landings trim, elevated floor perimeters and stair steps.


Installation of Stairnose

1. Install the Stairnose first.
2. Attach Stairnose with nails (6d finish nails) and construction adhesive. When using construction adhesive, weight down the Stairnose evenly to insure proper contact with the subfloor.*
3. Always predrill Stairnose pieces with appropriate size drill bit to avoid cracking or splitting.
4. Apply a bead of recommended wood glue to the groove of the first board and continue installation.

* When installing over radiant heated subfloors, use only construction adhesive to attach Stairnose pieces to the subfloor.

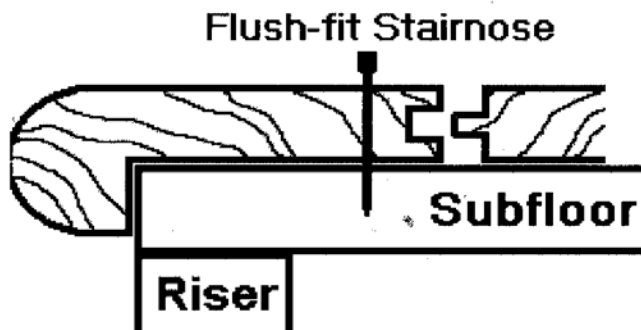

Stairnose 3/4" Flush-Fit

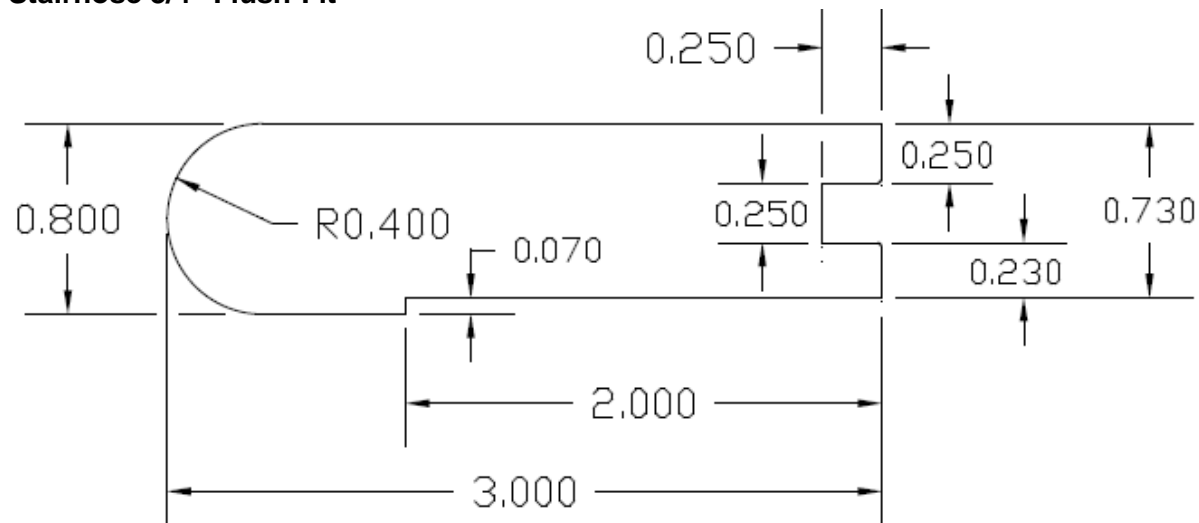

Length = 78"