


## HOW TO INSTALL YOUR STAIR PARTS


### BALUSTER WITH DECORATIVE SHOE

**IMPORTANT - PLEASE READ ALL INSTRUCTIONS BEFORE YOU BEGIN INSTALLATION.**

- These instructions are for a square metal baluster.
- Refer to your local building code for current regulations.

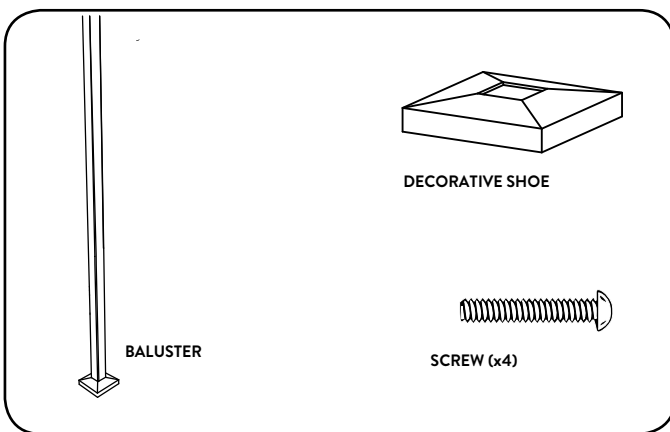


Parts included

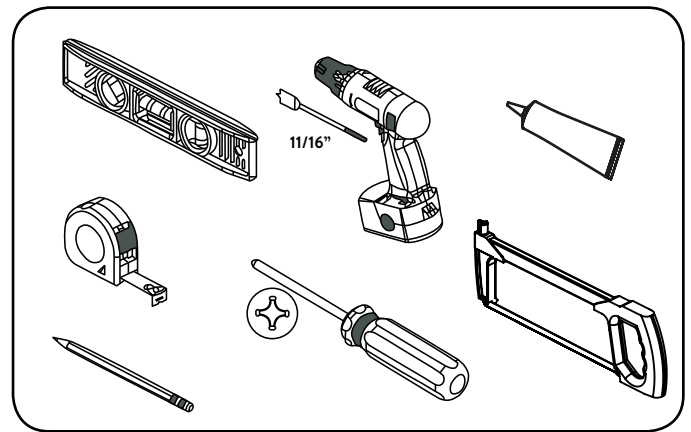


Recommended tools


## 1. Baluster installation

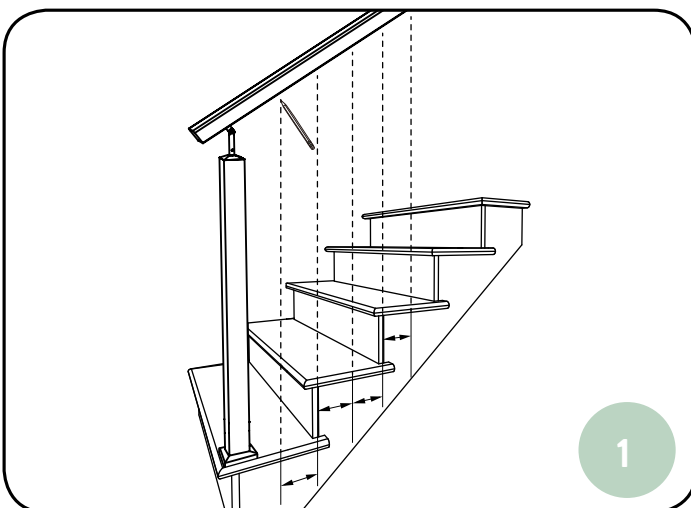


Mark the location of each baluster at an equal distance from one another in accordance with your local building code.

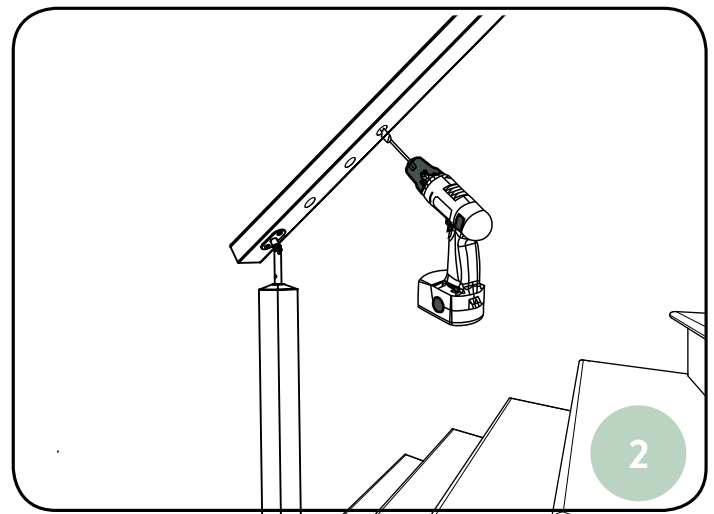


Drill 11/16" pilot holes at each mark, 1" deep.

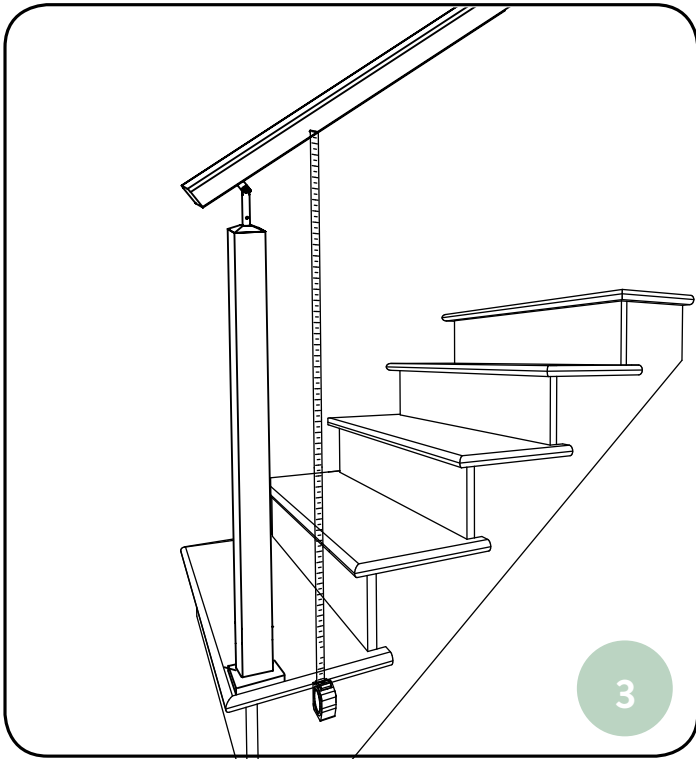


At each baluster location, measure the length between the tread and the lower side of the handrail. Add 3/4" to the measurement for insertion.

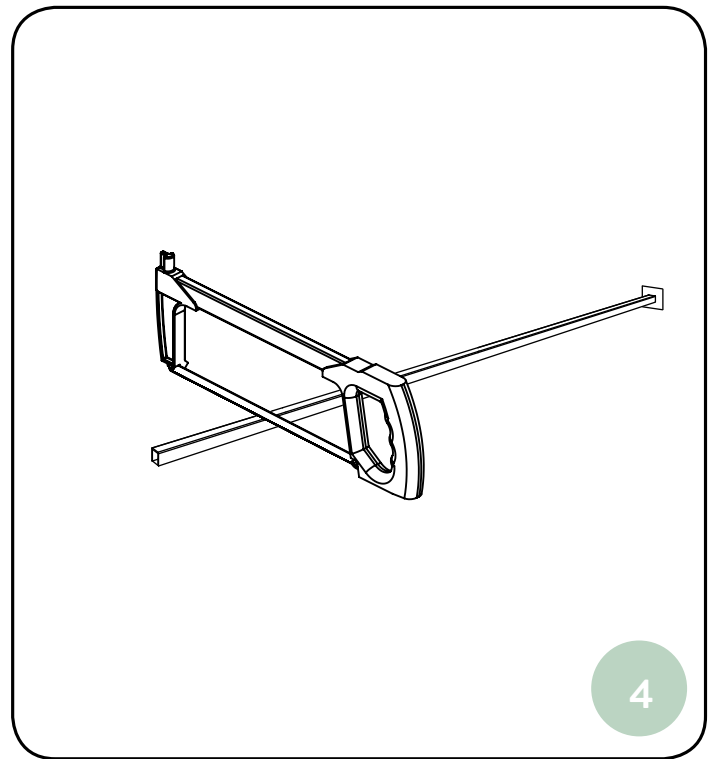


Trim each baluster from the top using a metal saw.

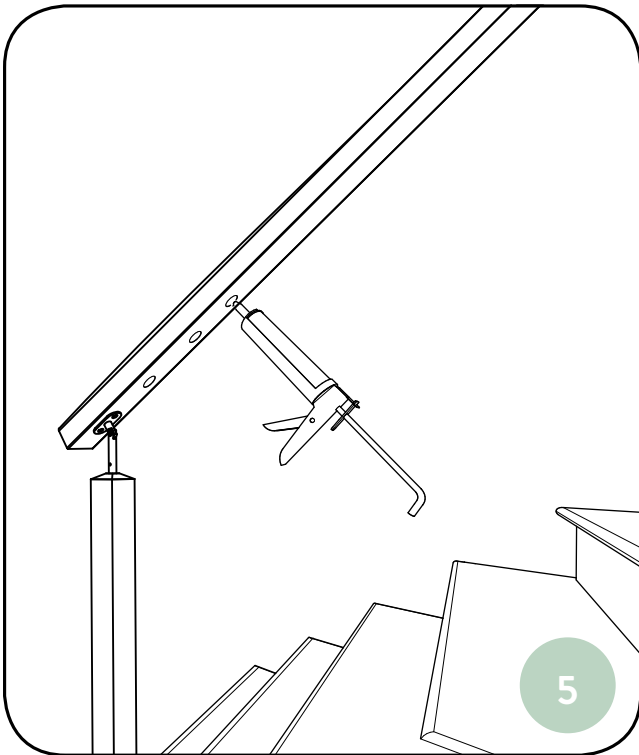



Fill the drilled handrail holes half full with construction adhesive or epoxy.

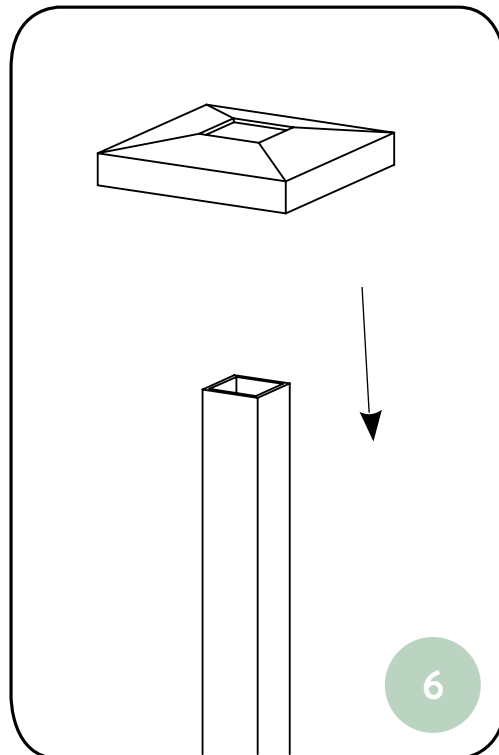

Slide the decorative shoe.

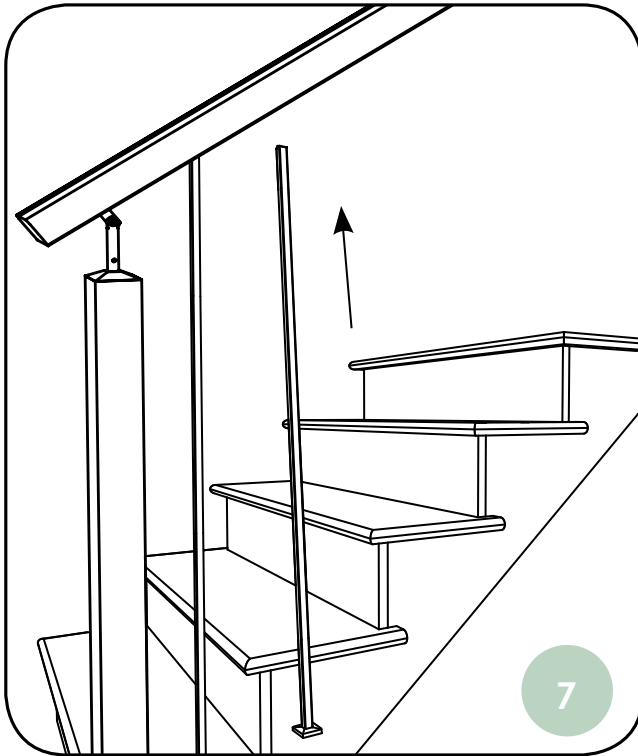

Insert each baluster in the handrail hole. Make a half turn to make sure that adhesive is on all faces of baluster.

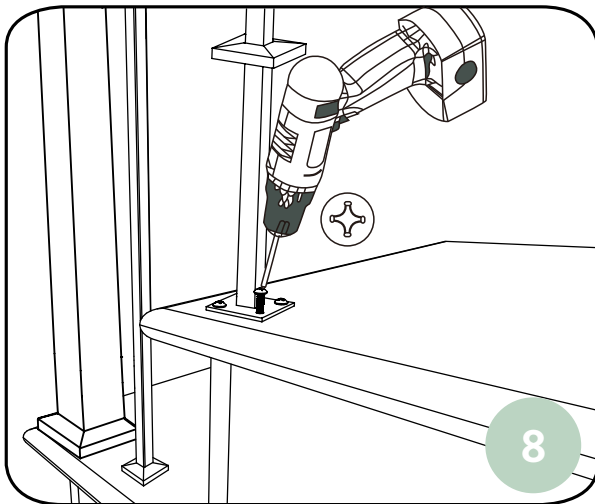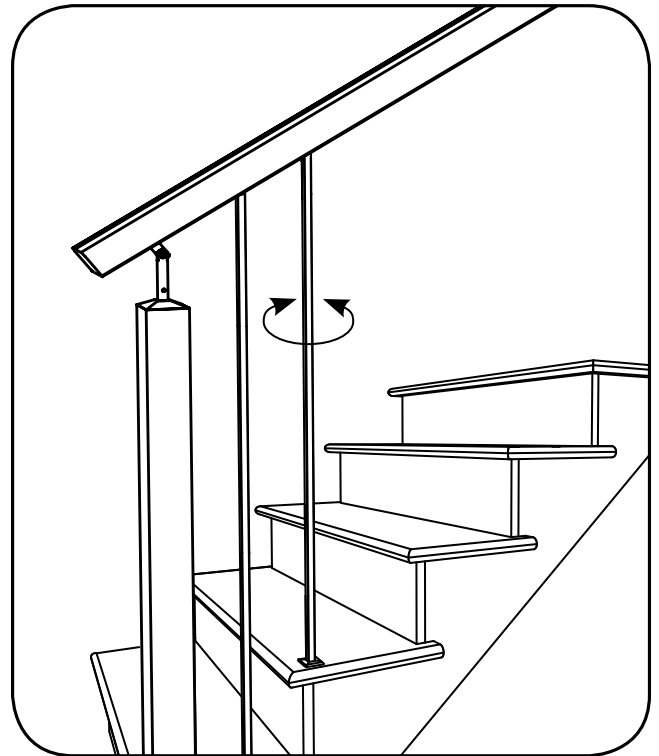

Using a level make sure the balusters are straight then secure using screws.

9

To solidify, do not touch your railing for a period of 24 hours. After 24 hours, remove any protruding dry adhesive with a utility knife.

**DO NOT RETURN TO RETAILER**

If you have any questions, please contact our customer service at:  
[info@colonialelegance.com](mailto:info@colonialelegance.com) or call toll free at: 1-800-361-2030

**VISIT OUR WEB SITE**

[www.colonialelegance.com](http://www.colonialelegance.com)

**\*1 year limited warranty**