

ASSEMBLY INSTRUCTIONS

2025-SC

PARTS LIST

1

Seat



1 PC

2

Backrest



1 PC

3

Metal frame



1 PC


HARDWARE LIST

A



Bolt(M5x4mm) 4PCS

B



Bolt(1/4" x 2-1/8") 4PCS

C



Spring Washer(1/4") 4 PCS

D



Washer(1/4") 4PCS

E




Allen Wrench(4mm) 1PC

F



Allen Wrench(2.5mm) 1PC


Step 1

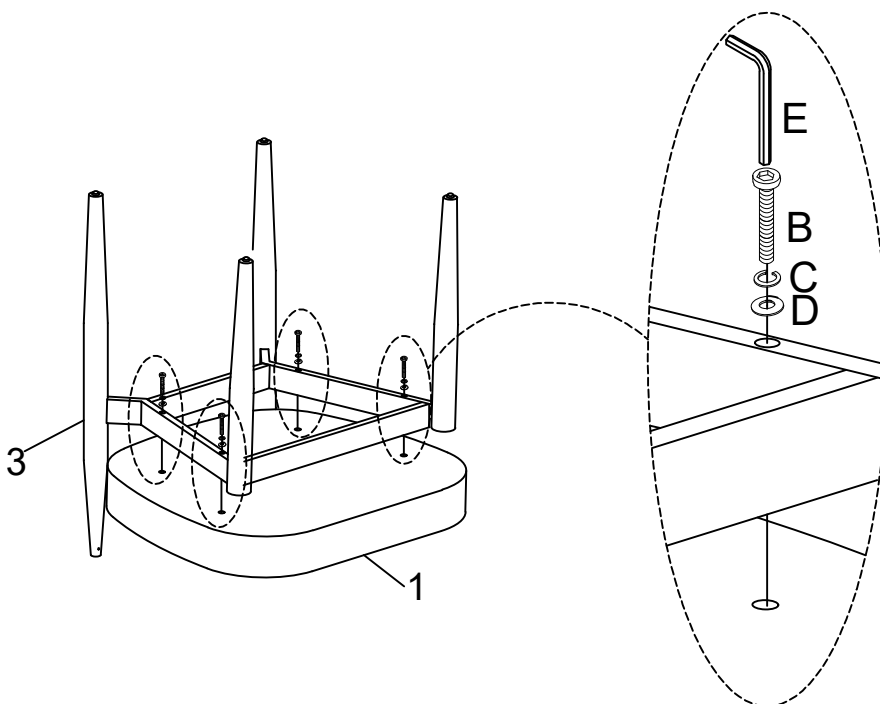


ASSEMBLY INSTRUCTIONS

2025-SC


Step 2

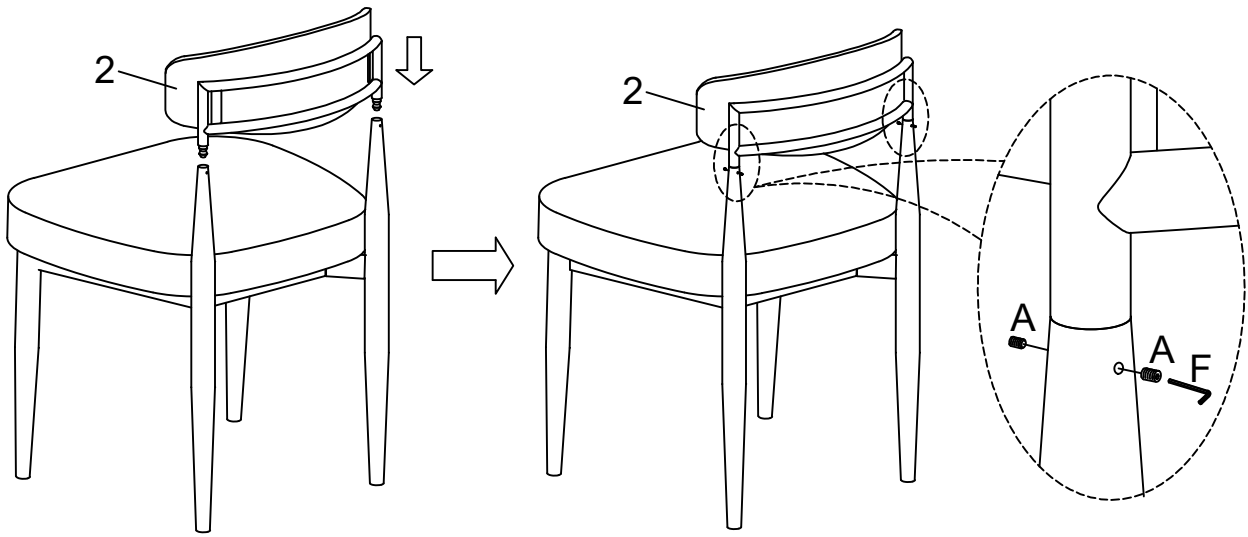

Step 3

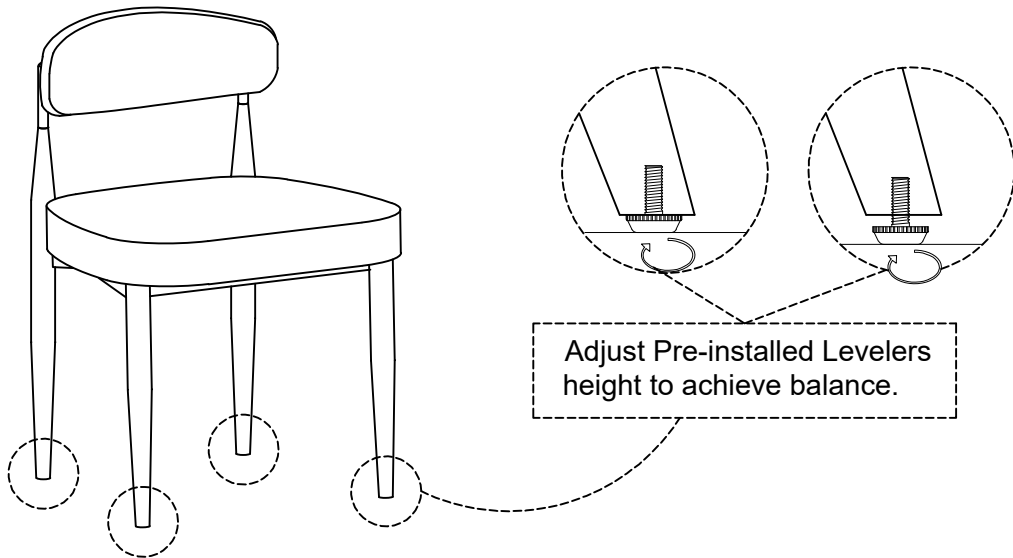





Step 4

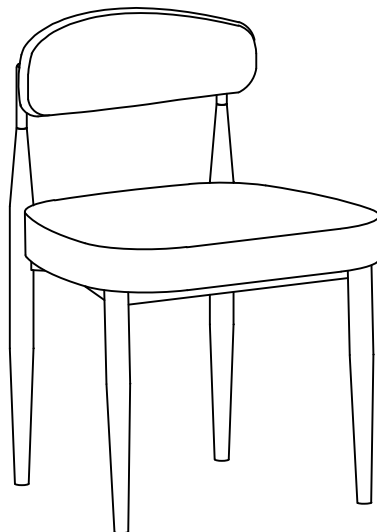






ASSEMBLY INSTRUCTIONS

DT2025-B1
DT2025-B2
DT2025-B3


PARTS LIST

A Table top  1 PC	B Wing Panel  2 PCS	C Pedestal  2 PCS	D Base Ring  1 PC
---	---	--	---

HARDWARE LIST

1  Bolt(1/4" x 7/8") 10PCS	2  Bolt (1/4" x 1-1/4") 8PCS	3  Spring Washer (1/4") 18 PCS
4  Washer(1/4"xØ16) 18PCS	5  Allen Wrench(4mm) 1PC	

Step 1

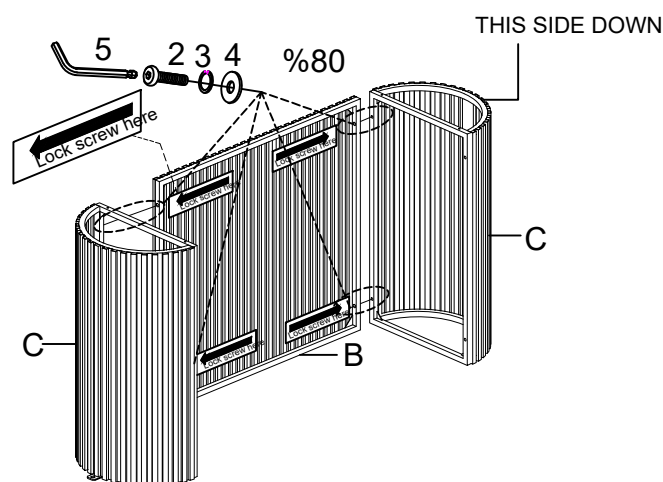


In this step, tighten the screws to 80%.
Note: Do not lock the screws.

ASSEMBLY INSTRUCTIONS


DT2025-B1
DT2025-B2
DT2025-B3

Step 2

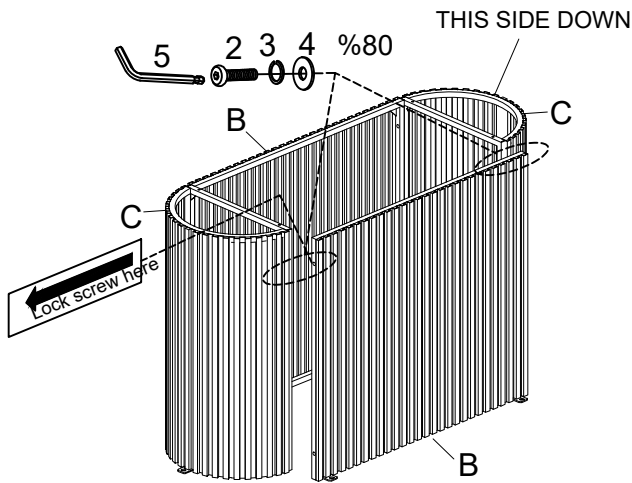


In this step, tighten the screws to 80%.
Note: Do not lock the screws.

Step 3

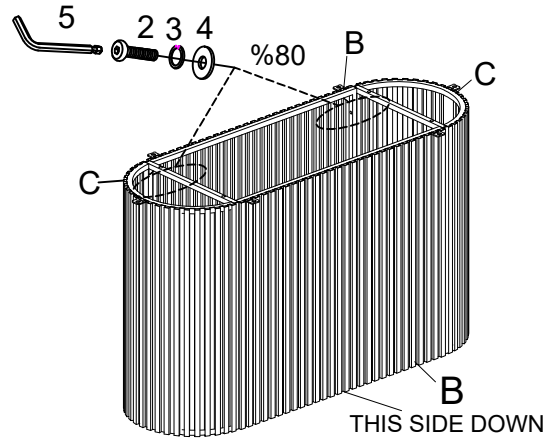

With the assistance of an adult partner, place the base upside down. Then, lock the Wing Panel (B) and Pedestal (C).
In this step, tighten the screws to 80%.
Note: Do not lock the screws.

Step 4

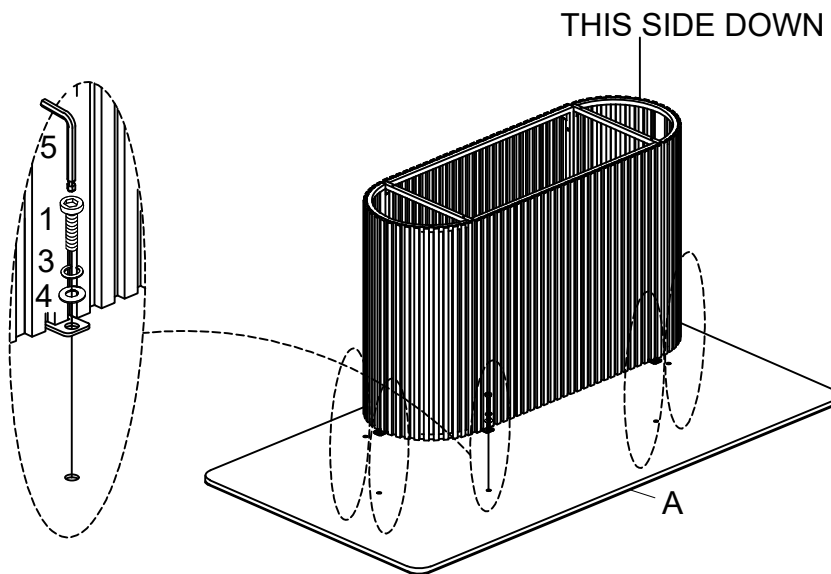


Place the tabletop facedown on a clean, non-marring surface. Attach the table base to the bottom of the tabletop using screws, as shown in the pictures.
Attention: When locking the tabletop, please use Short Bolt(1).


ASSEMBLY INSTRUCTIONS

DT2025-B1
DT2025-B2
DT2025-B3

Step 5

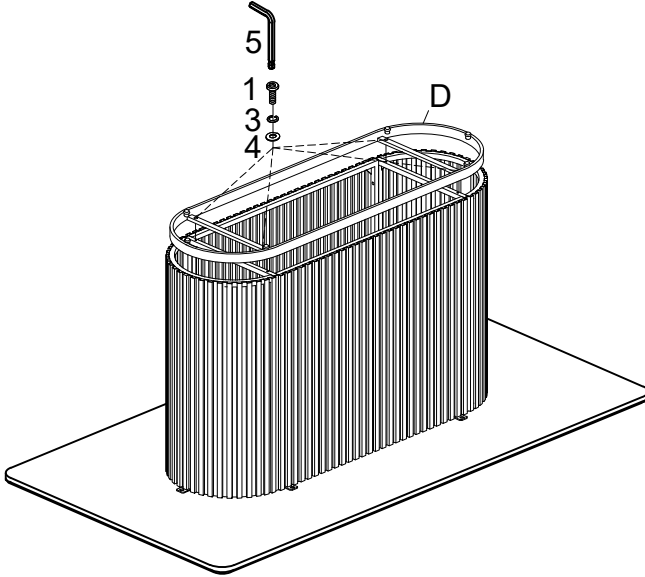

Step 6

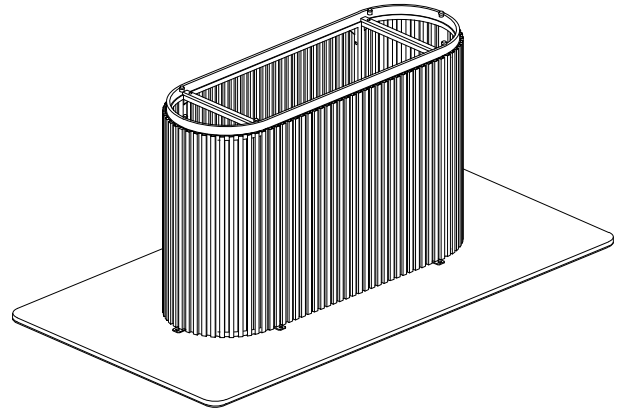

Note: Fully tighten all bolts at this step.

Step 7

