
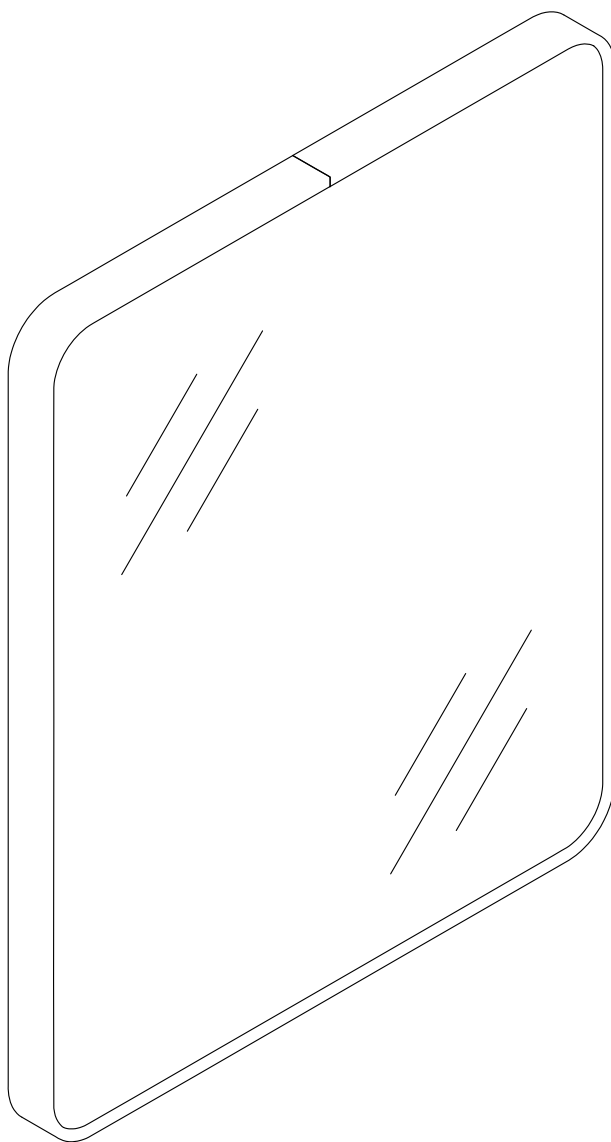


Aluminium Mirror




READ THE INSTRUCTIONS CAREFULLY, familiarize yourself with all the parts as shown in the exploded view. The exploded view will also provide a helpful reference when relating to the location of the various parts and how they are mounted.

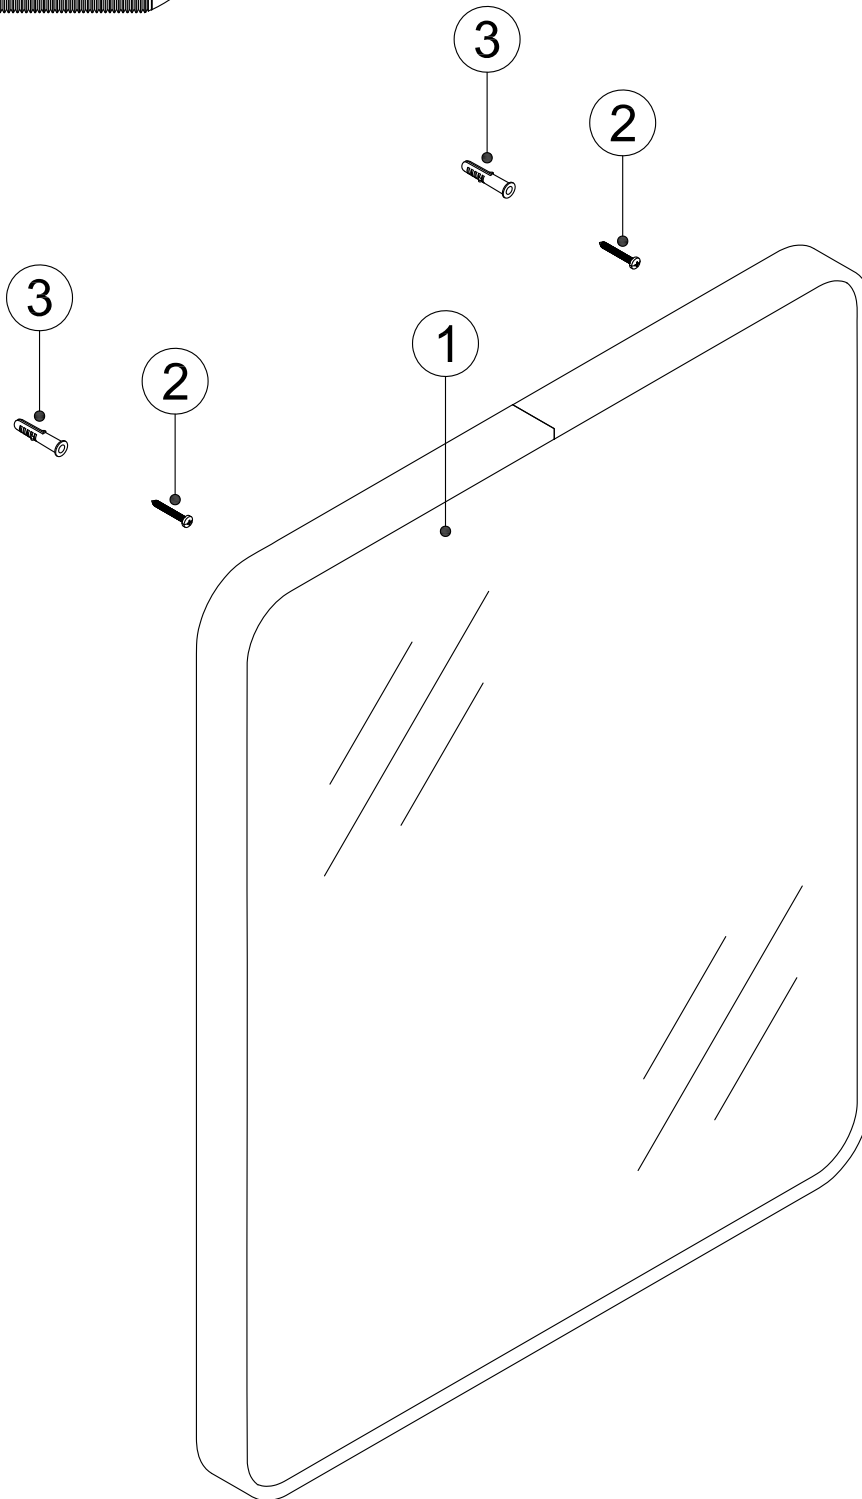

② SCREW 1 1/2"






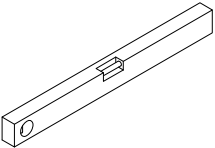
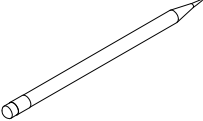

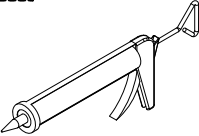


PARTS LIST.
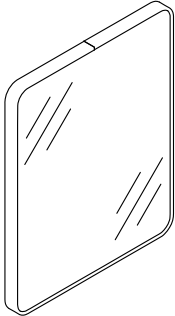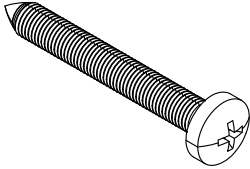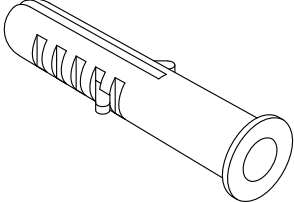
<div>①</div> 	<div>②</div> 	<div>③</div> 
MIRROR(1 PCS)	1 1/2" SCREW(2 PCS)	WALL PLUG(2 PCS)


WARNING: Safety glasses should always be worn when working with drill.

RECOMMENDED TOOLS

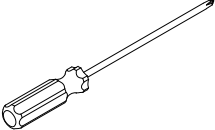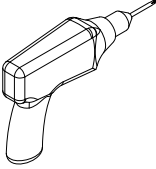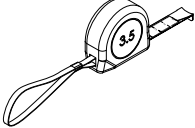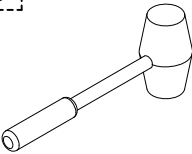
<div>①</div> 	<div>②</div> 	<div>③</div> 	<div>④</div> 	<div>⑤</div>  5/16"
SCREW DRIVERS	DRILL	MEASURE TAPE	RUBBER MALLET	DRILL BITS
<div>⑥</div> 	<div>⑦</div> 	<div>⑧</div> 	<div>⑨</div> 	
LEVEL	PENCIL	SAFETY GLASSES	SILICONE	

**Choose the Mirror direction - vertical or horizontal.
Follow the appropriate diagram below .**

Vertical Assembly


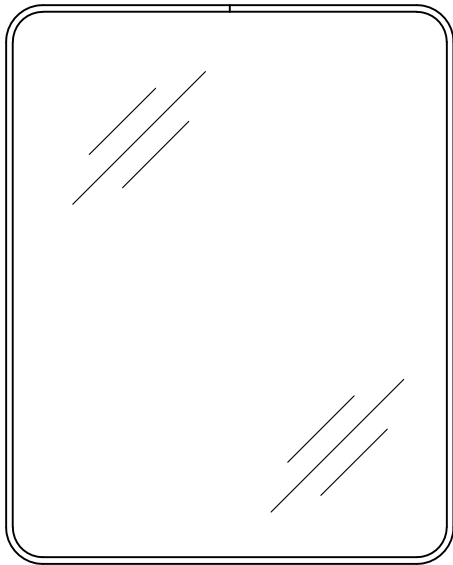


Horizontal Assembly

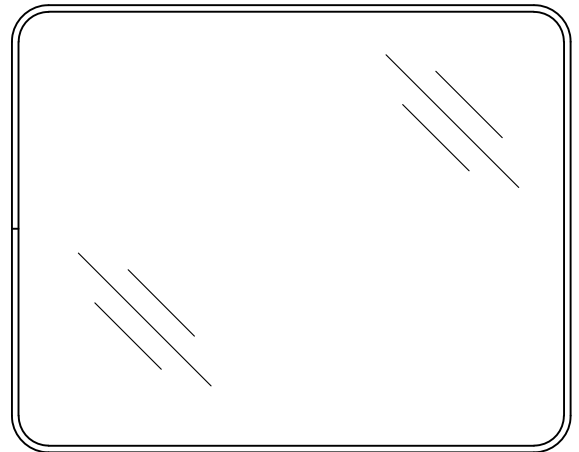

STEP 1


Select the desired position of the mirror. Level and mark the location.

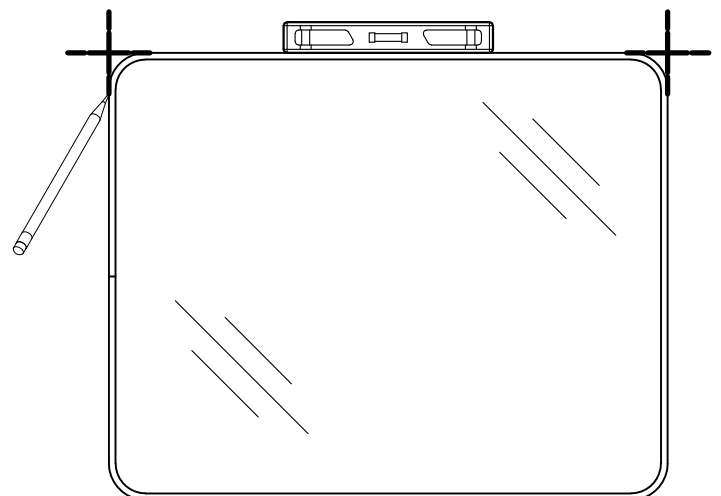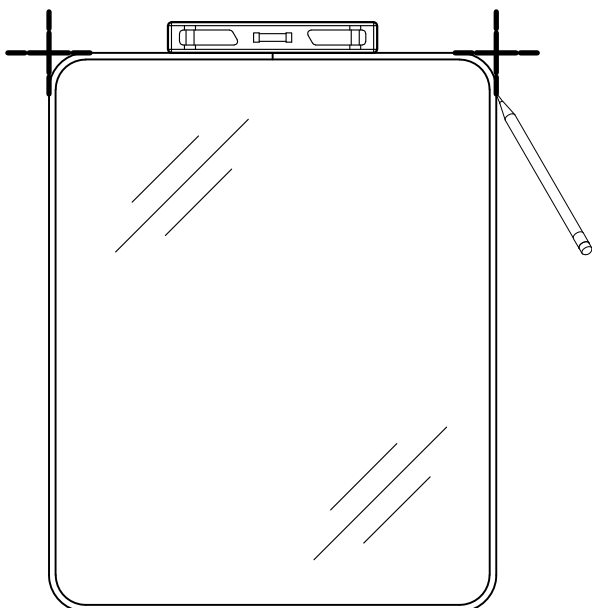

STEP 2

Mark the drilling locations and ensure marking are leveled, based on vertical or horizontal mounting. See chart below.



Model No.	Vertical Assembly ^(A)	Horizontal Assembly ^(A)
2436	4"	7"
3036	4"	7"
4836	4"	7"
3059	4"	7"
3071	4"	7"

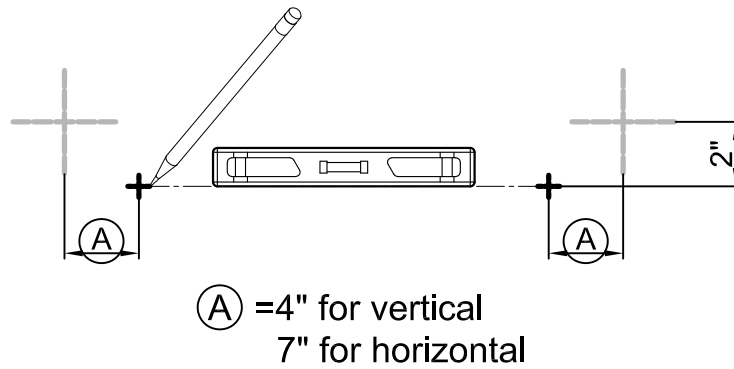

STEP 3


3.1 Drill holes about 1 1/2" deep at each of the marked locations.

3.2 Insert wall plugs ⁽³⁾ .

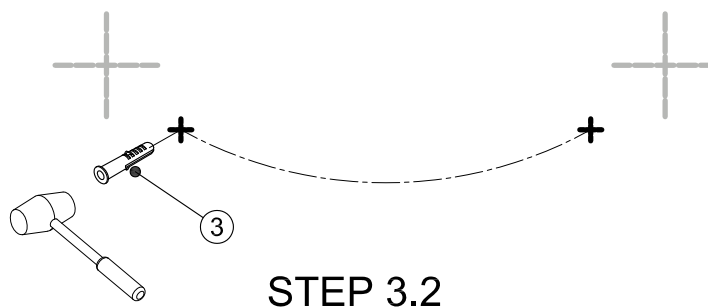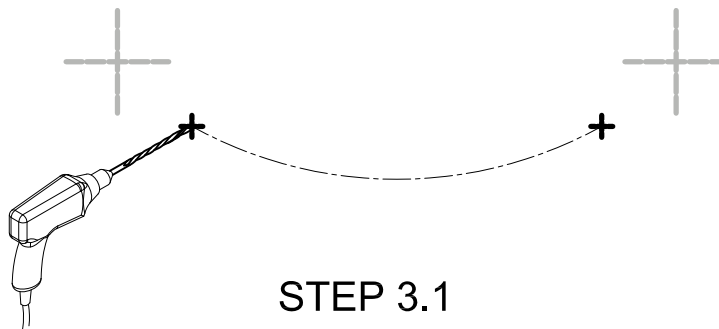

STEP 4

Install Screw ② . Leave a gap of 1/8" between the head of the screw and the wall.

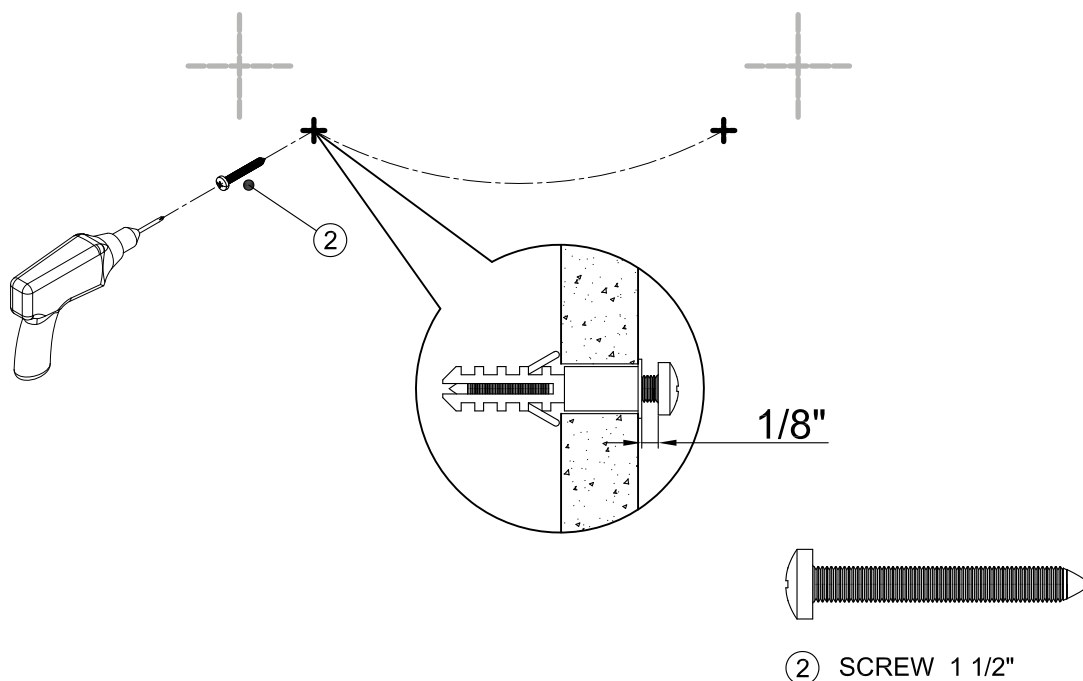

STEP 5

Tear off the double-sided tape film from Pad, place the mirror against the wall and slide it down, as shown in Figure 2.

