

Configurations

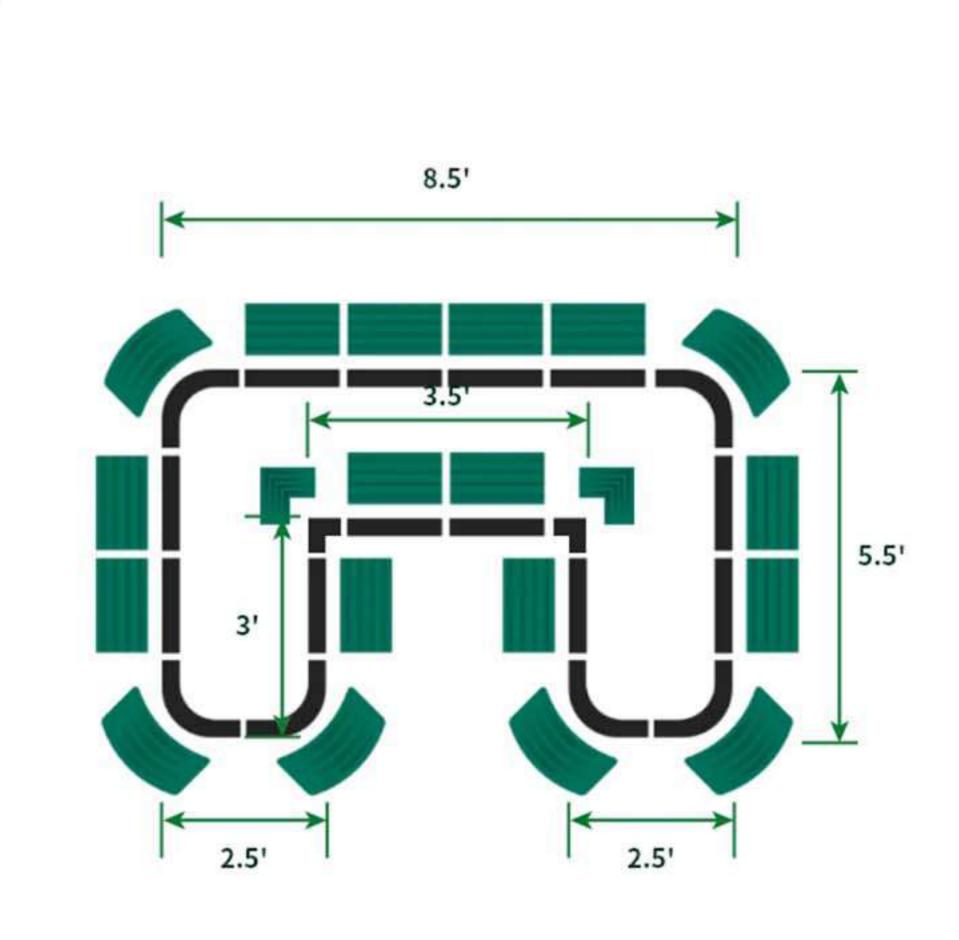


U-Shaped - Standard Size

- Length: 8.5 ft
- Width: 5.5 ft
- Height: 17 in
- Growing Area: 36 sqft
- Cubic Feet: 51
- Cubic Yard: 1.9

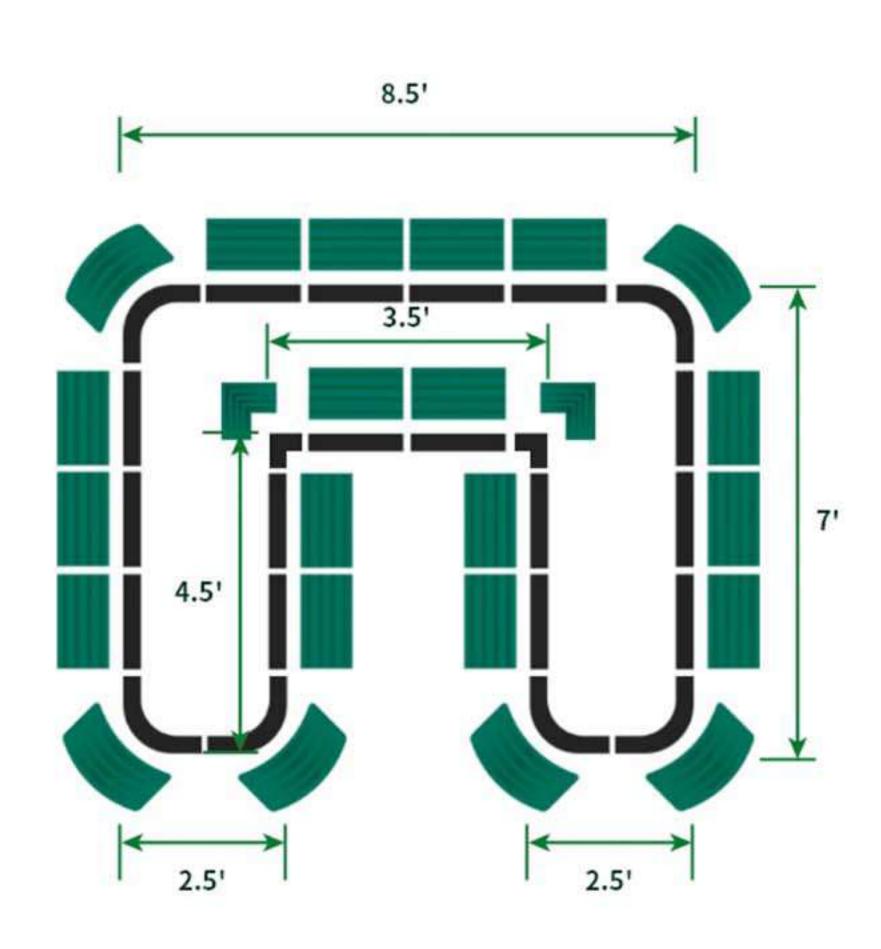

U-Shaped - Large Size

- Length: 8.5 ft
- Width: 7 ft
- Height: 17 in
- Growing Area: 44 sqft
- Cubic Feet: 62
- Cubic Yard: 2.3

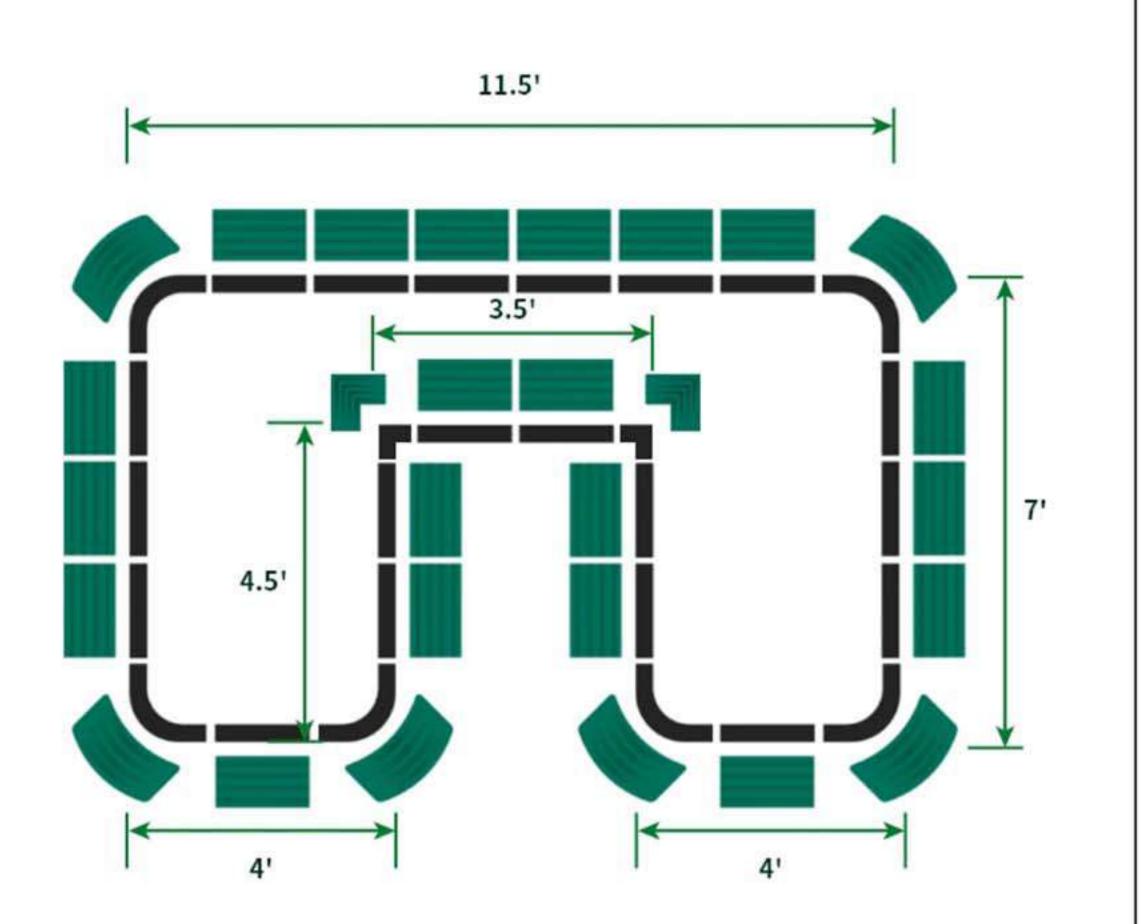

U-Shaped - Jumbo Size

- Length: 11.5 ft
- Width: 7 ft
- Height: 17 in
- Growing Area: 65 sqft
- Cubic Feet: 92
- Cubic Yard: 3.4

Product Photos











Contact Us



+1 (866) 597-1888



hello@vegogarden.com 🐞 www.vegogarden.com





9 Houston, TX 77023



17" Tall U-Shaped Raised Garden Bed Kit


(Note: This manual is designed for all U-Shaped Raised Garden Bed Kits, and the variety of parts & quantity will vary depending on the model that was purchased.)




CHOKING HAZARD: Small parts. Keep product away from children.

Parts List


(This general manual applies to all Vego Garden U-shaped garden beds. The package of a product model may not contain all the parts below. The quantity of parts for each product model may vary.)

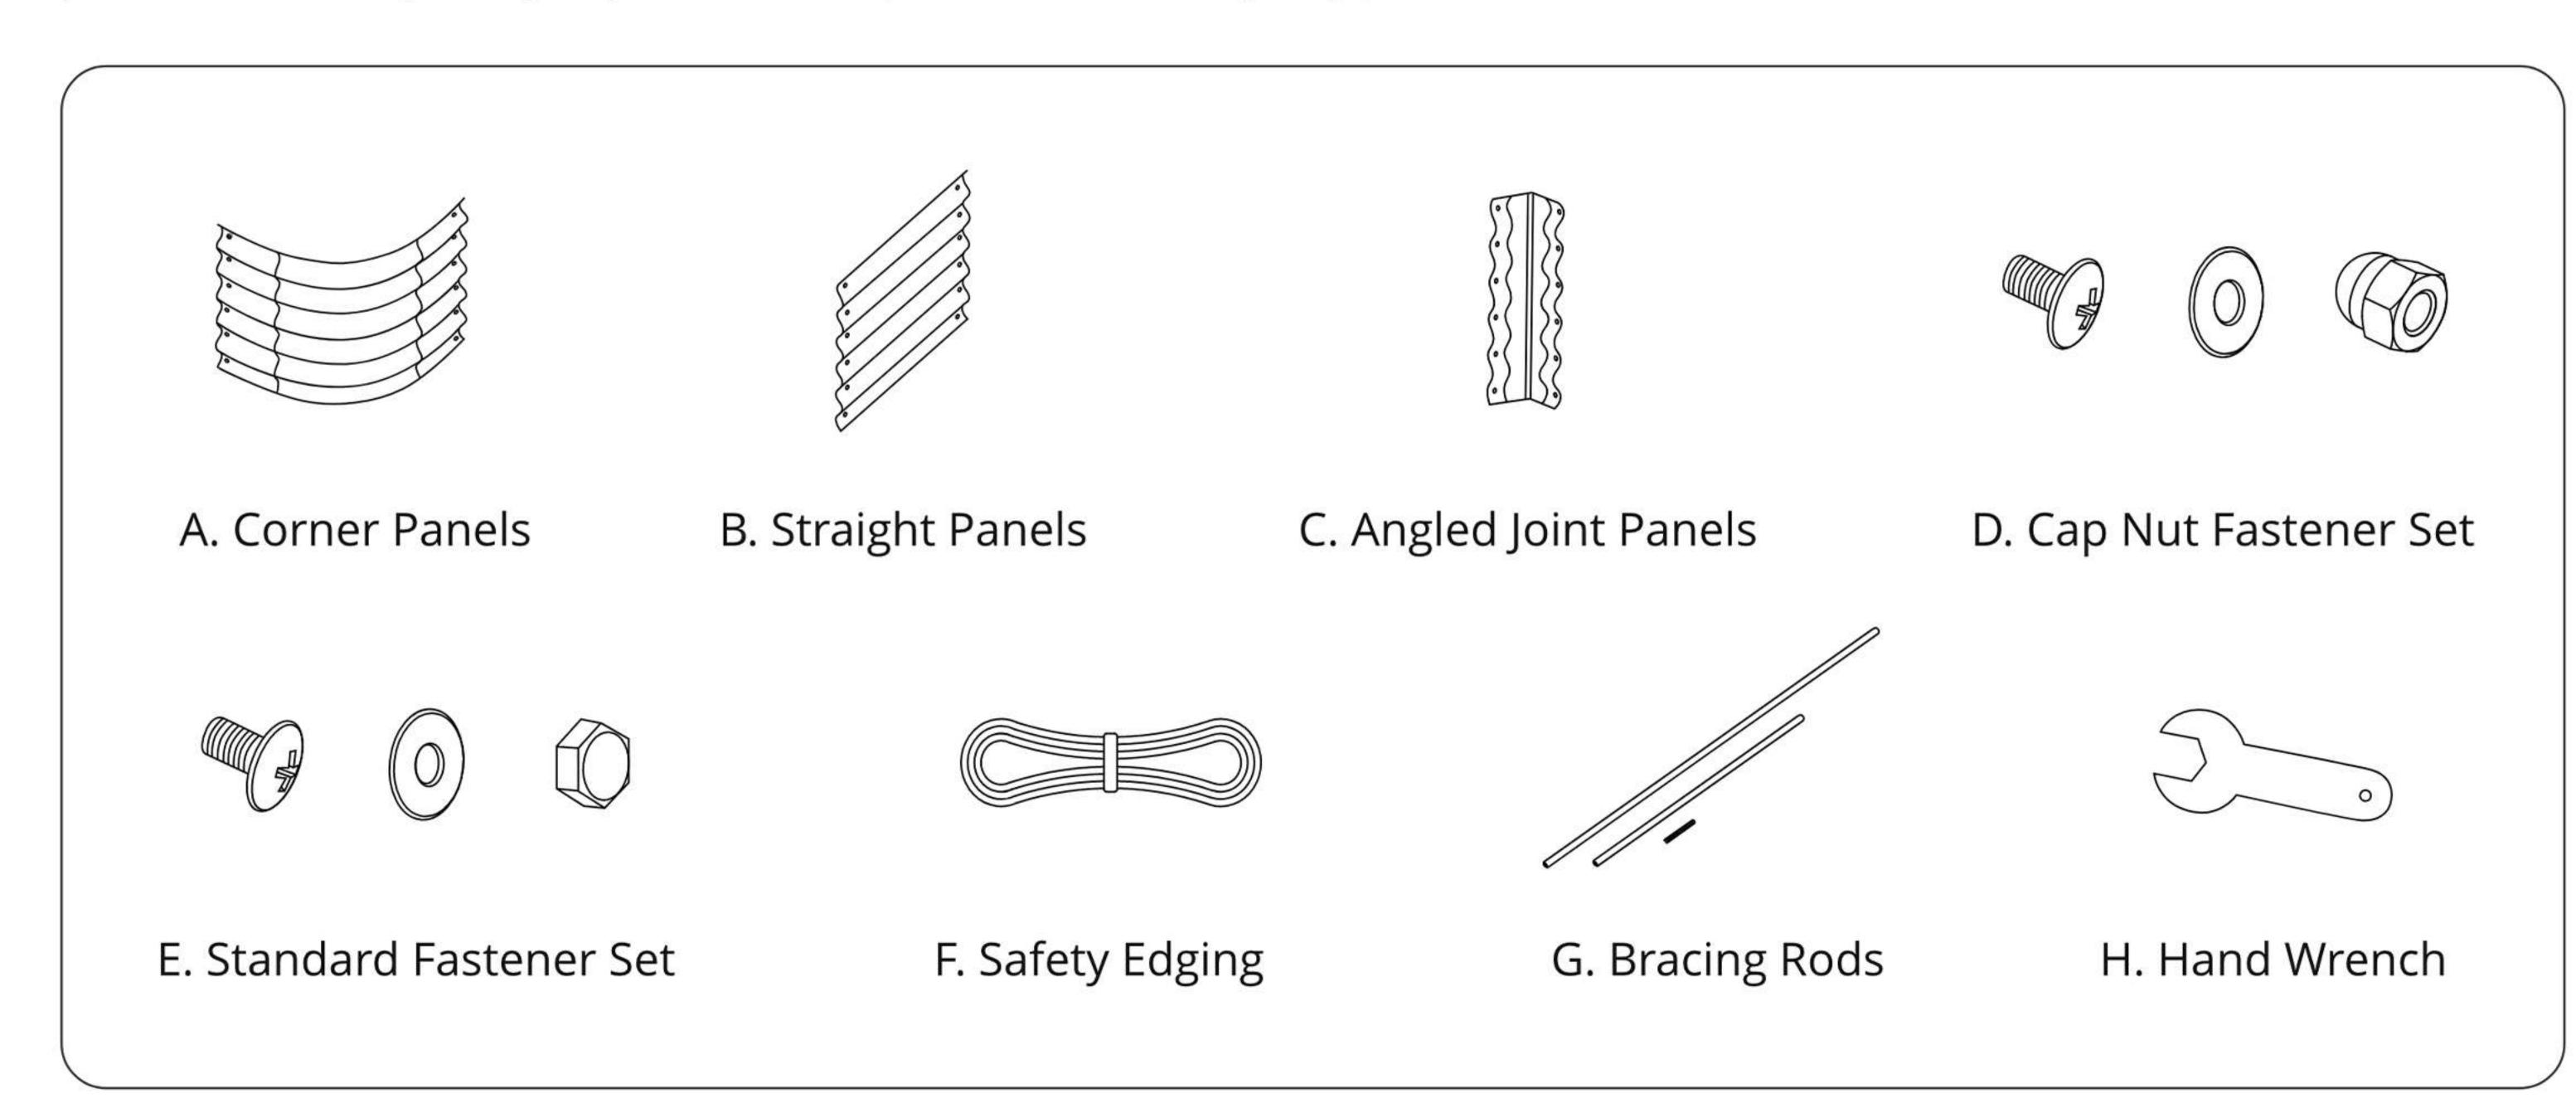


Bracing Rod Installation Guide

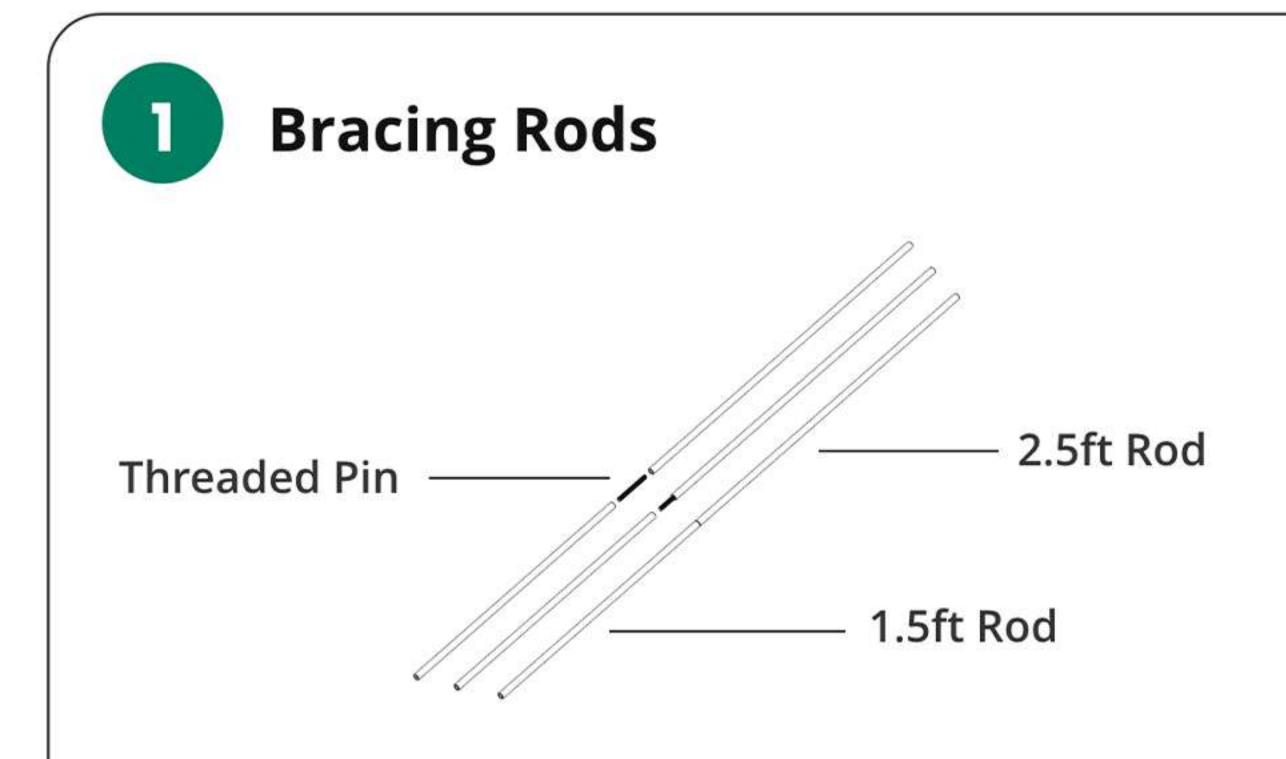


Vego Garden bracing rods are used to reinforce the structure of oversized raised beds. 17" Tall U-Shaped - Standard Size & Large Size include 2.5ft bracing rods. The 17" U-Shaped - Jumbo Size includes 2.5ft and 4ft (2.5ft+1.5ft) bracing rods.

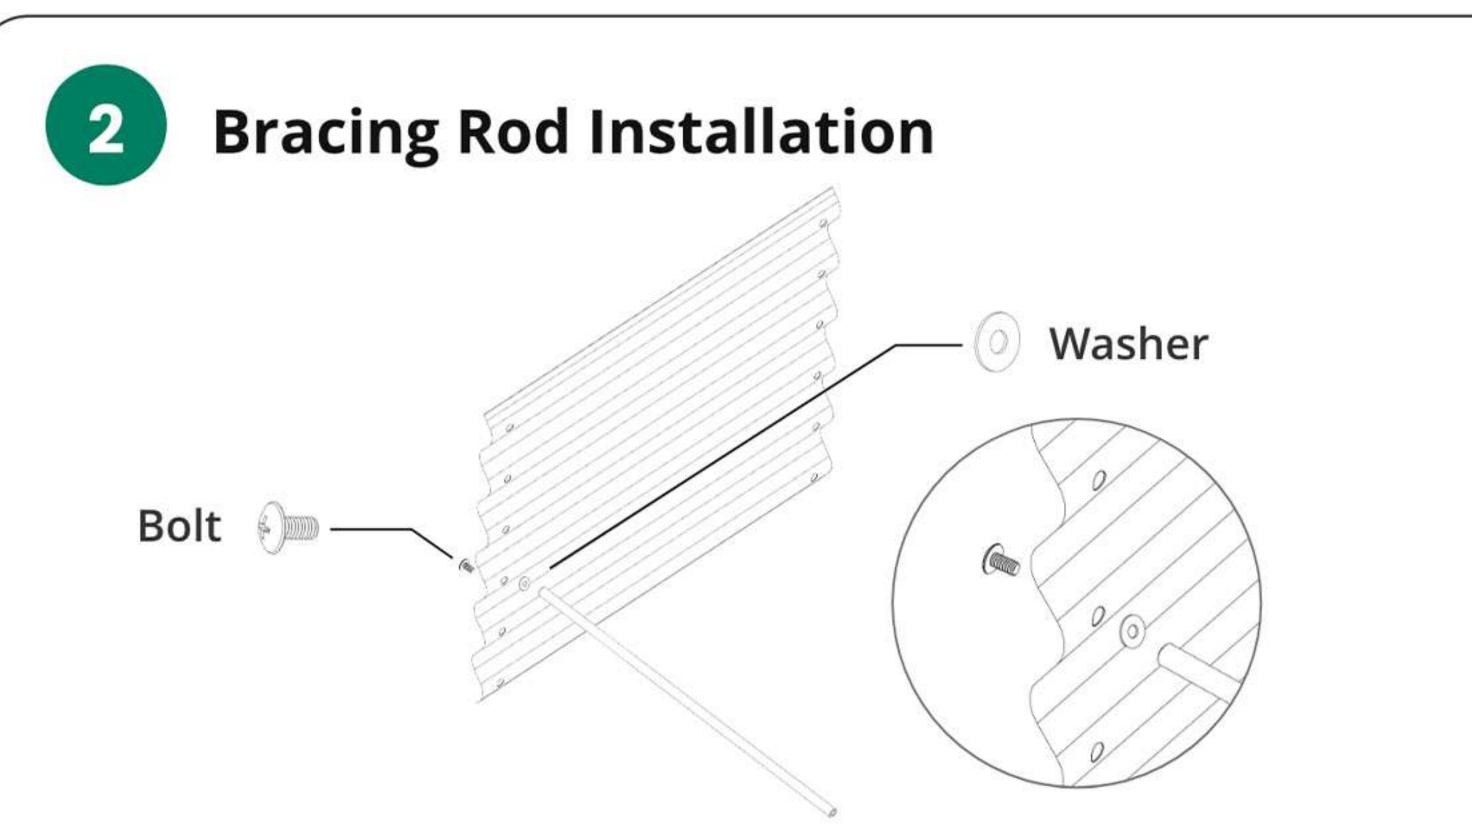


For U-Shape Standard & Large Size, install bracing rods in the **4th** bolt holes from the top; for U-Shape Jumbo size, install bracing rods in the **2nd & 4th** bolt holes from the top. Making sure the rods are in parallel holes. Attach bolt, panel, washer, and rod loosely, then tighten the bolts with the included hand tool for reinforcement. (Note: Bolts and washers used for rod installation are the same as those used to assemble the panels of the raised bed.)

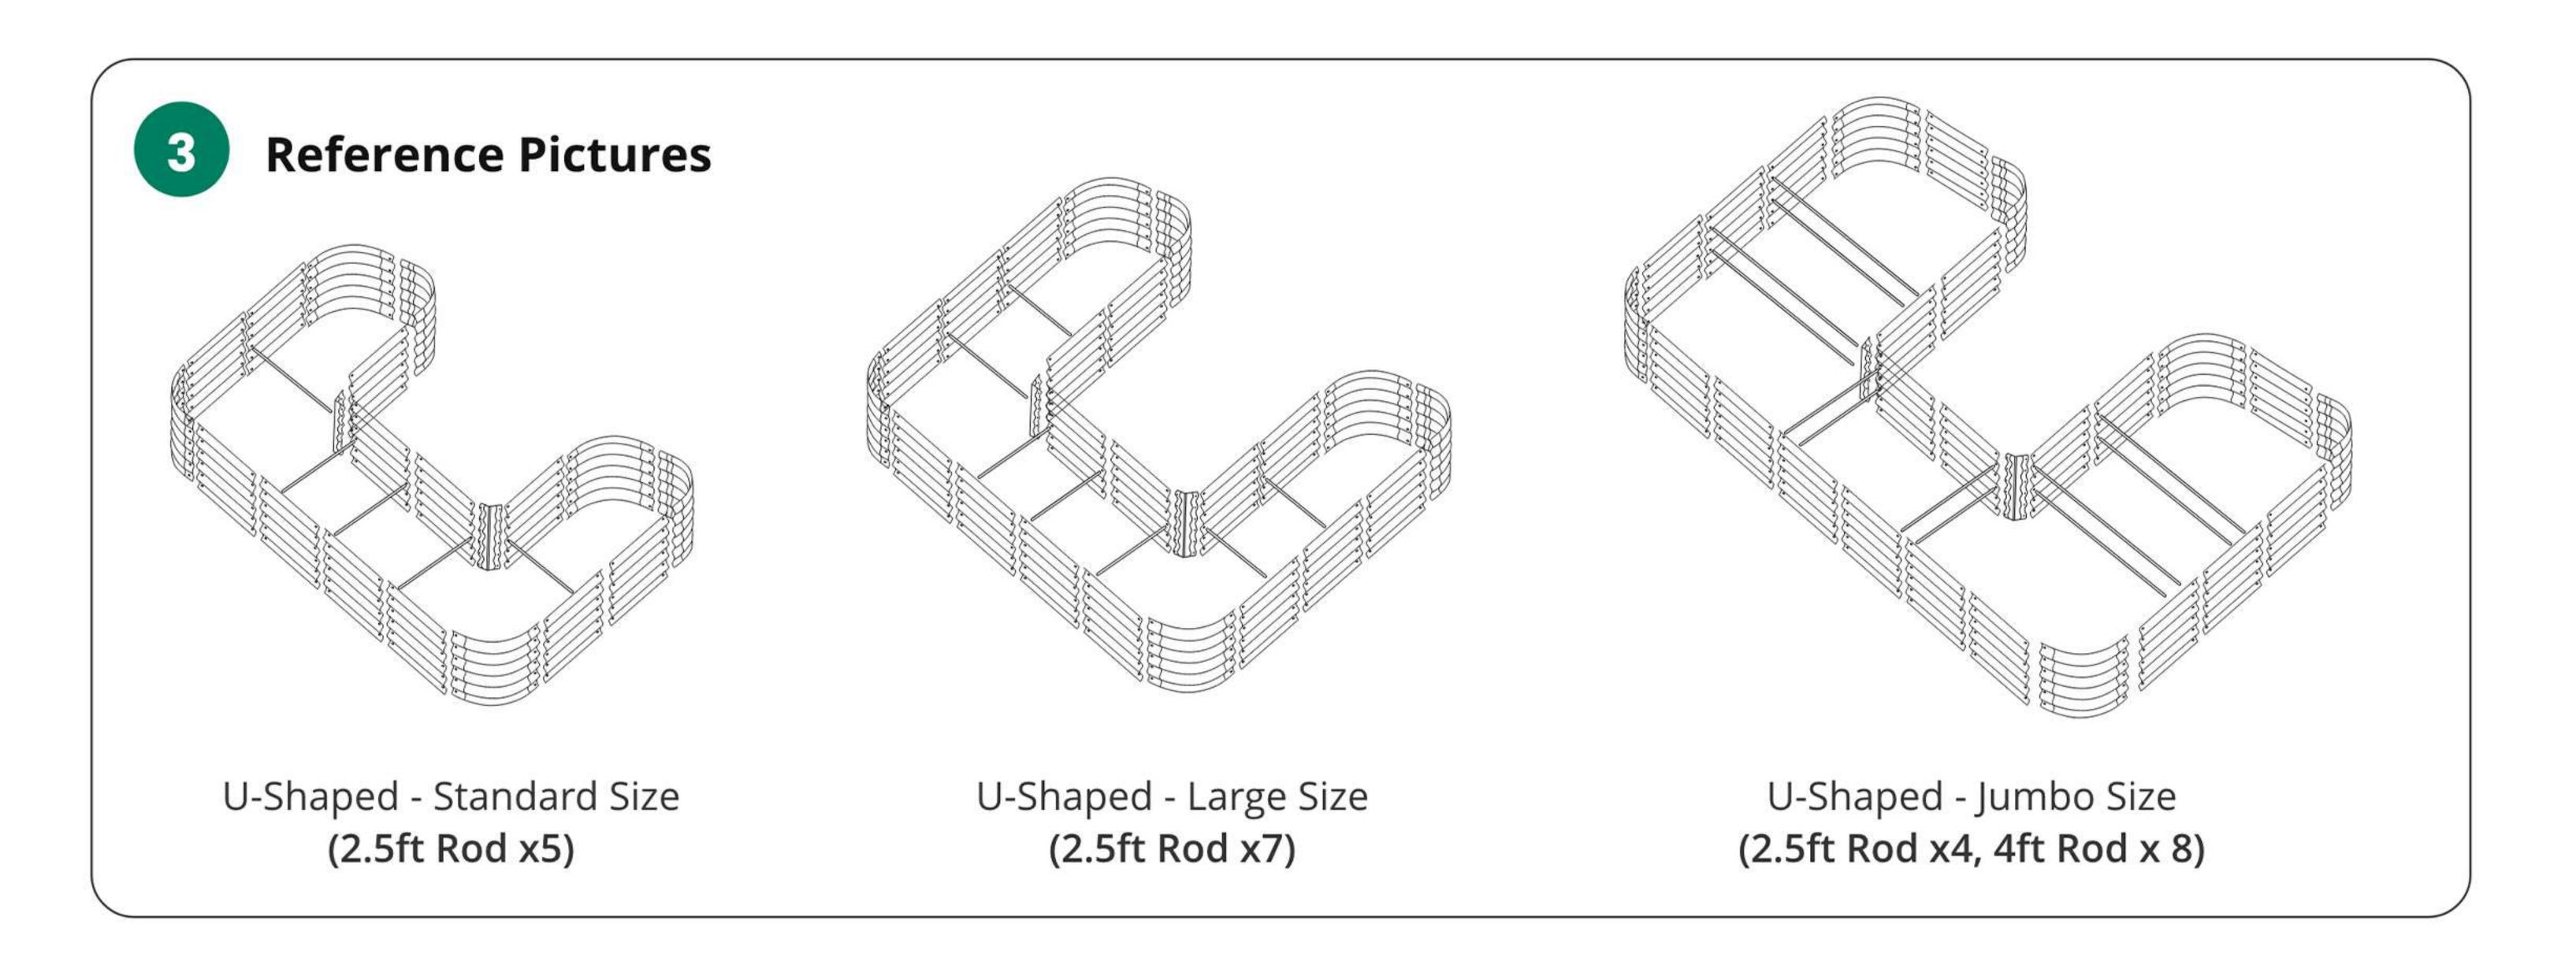


Assembly Guide

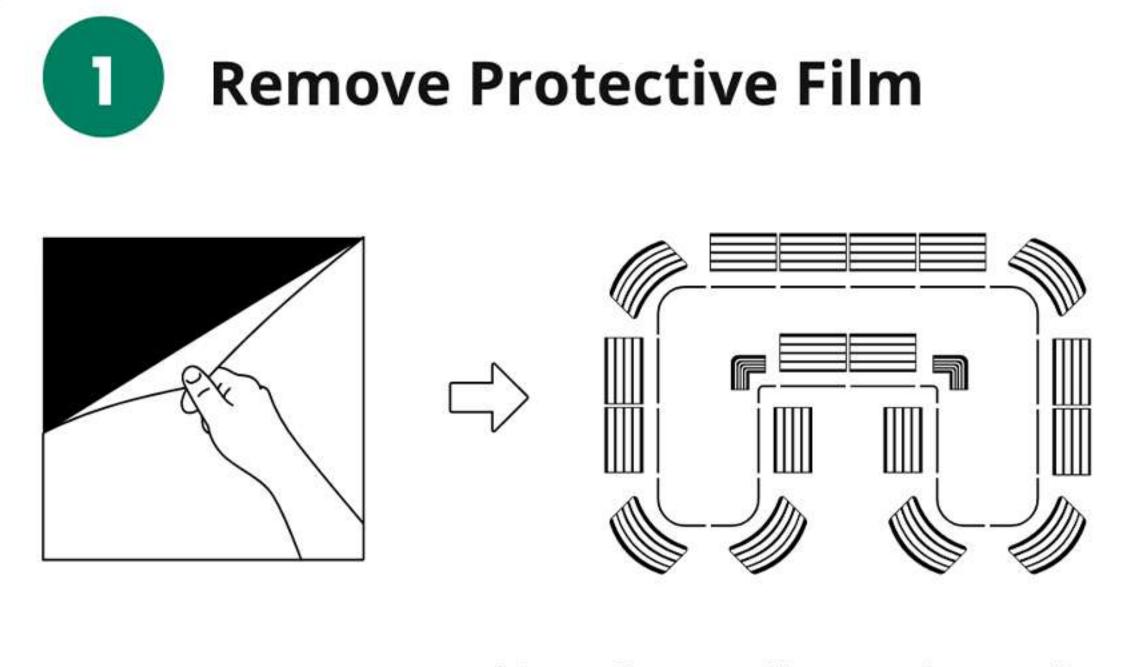


Remove protective films from all panels, and lay panels on a flat surface according to the U-shaped configuration.

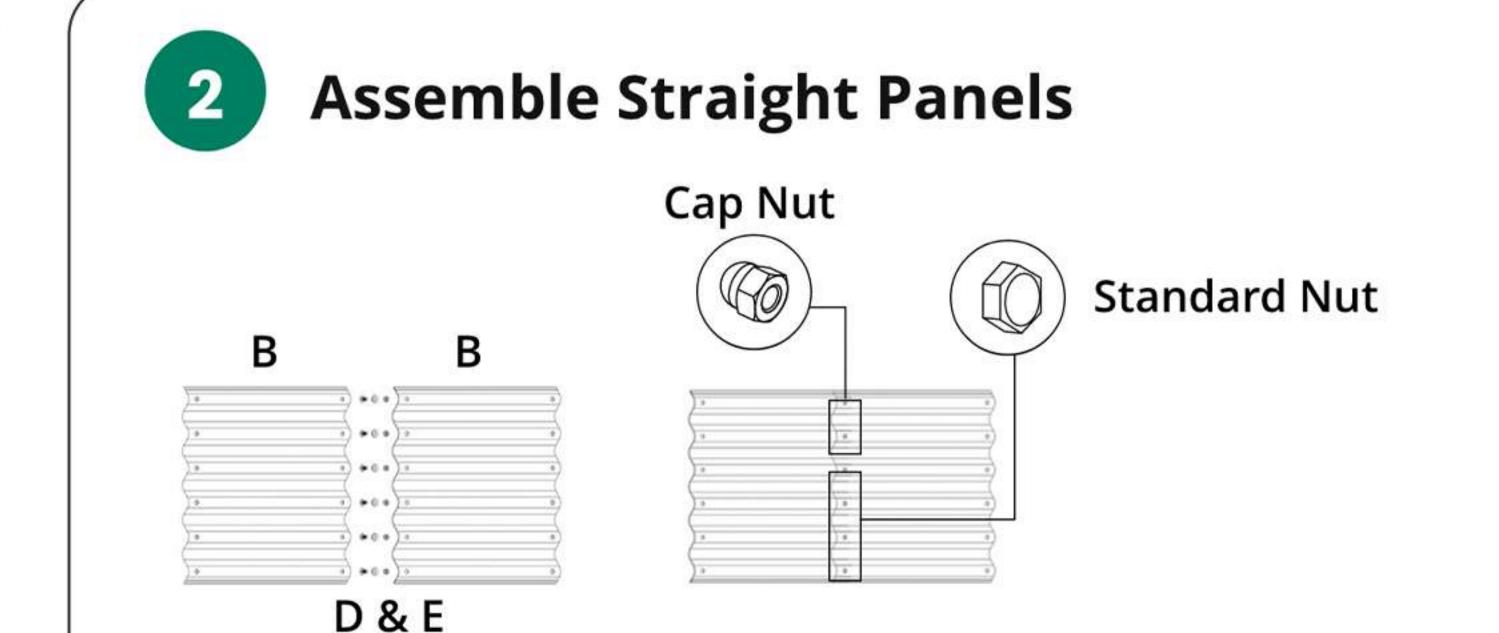


Cap nuts are used for top 2 rows, standard nuts are used for lower 4 rows. Assemble all straight panels: initially attach all washers and nuts loosely, and then tighten up using the included hand wrench and a screwdriver/cordless drill.

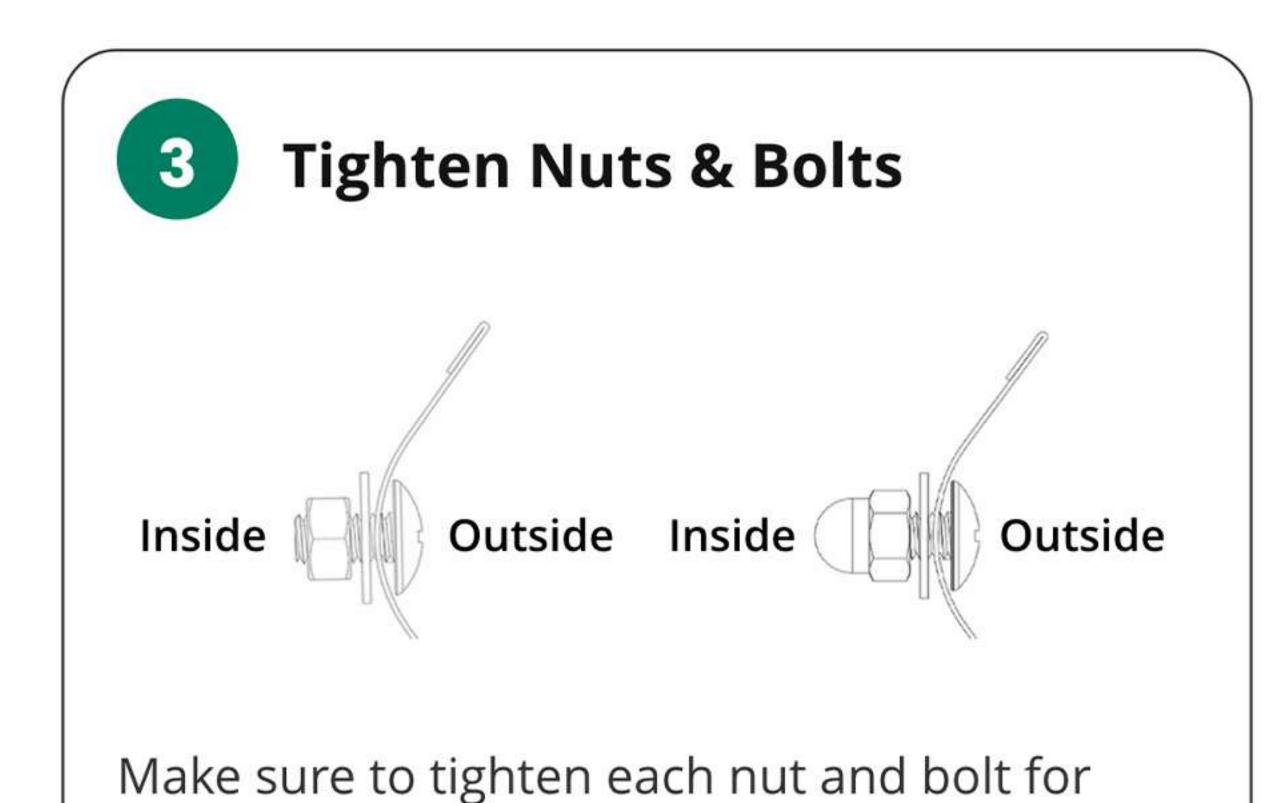

reinforcement of garden raised bed.

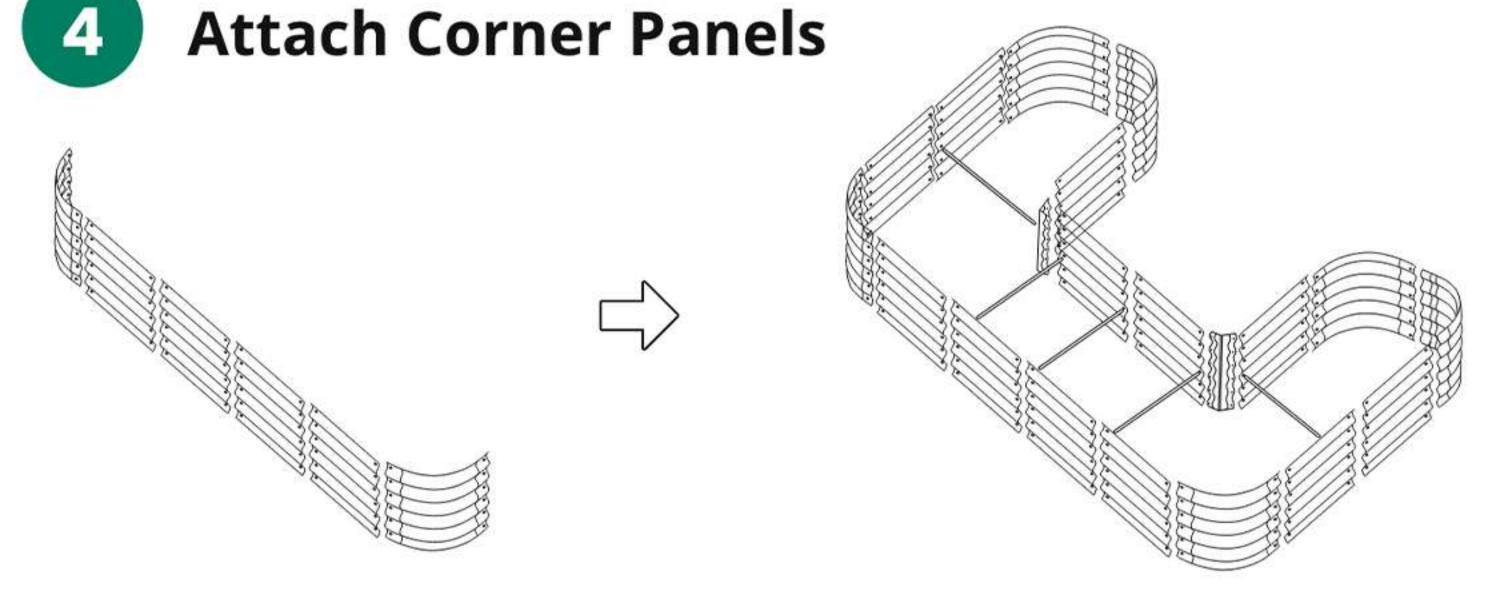

After straight panels are assembled, attach corner panels to straight panels using the same method. Make sure corner panels are attached on the outside of the straight panels. (Please refer to Bracing Rod Installation Guide for rod assembly instructions.)

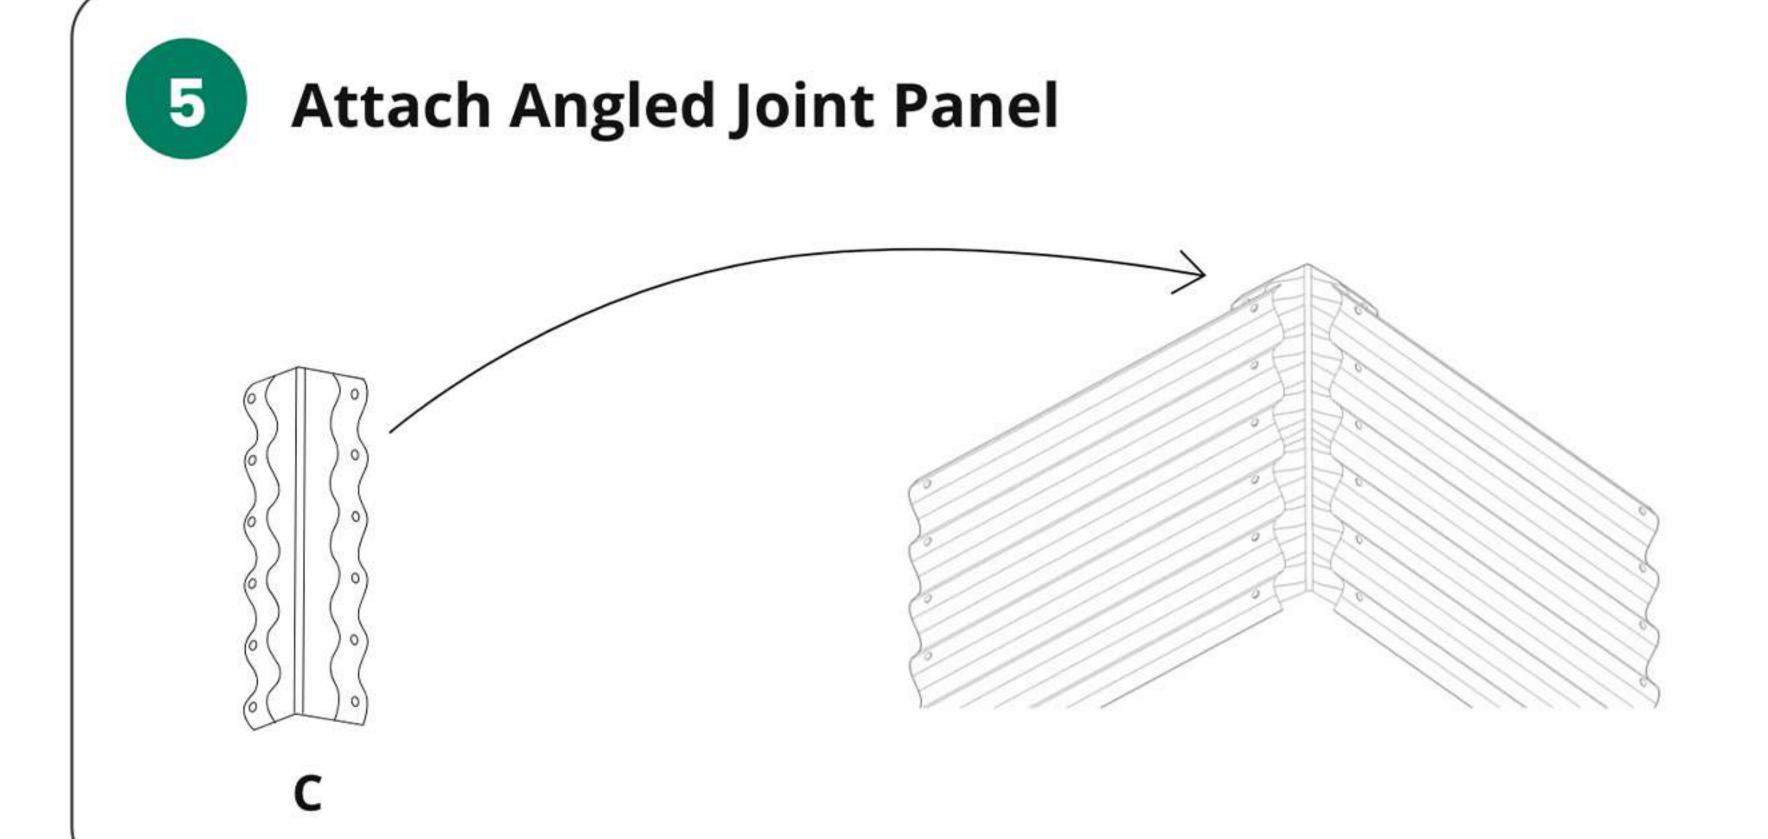

After all straight and corner panels are assembled, attach the angled joint panel to the straight panels using the same method. Make sure to attached the straight panels outside of the angled joint panel. (Please refer to the Bracing Rod Installation Guide for rod assembly instructions.)

