




Attention please:



**Improper use of screws may cause the product surface damage!
Please be careful when installing.**

**To prevent you from confusing the accessories and boards, Please
do not mix the parts of different units when you buy two or more
products at the same time.**

READ AND SAVE THIS INSTRUCTIONS FOR FUTURE USE


ASSEMBLY & INSTRUCTION MANUAL

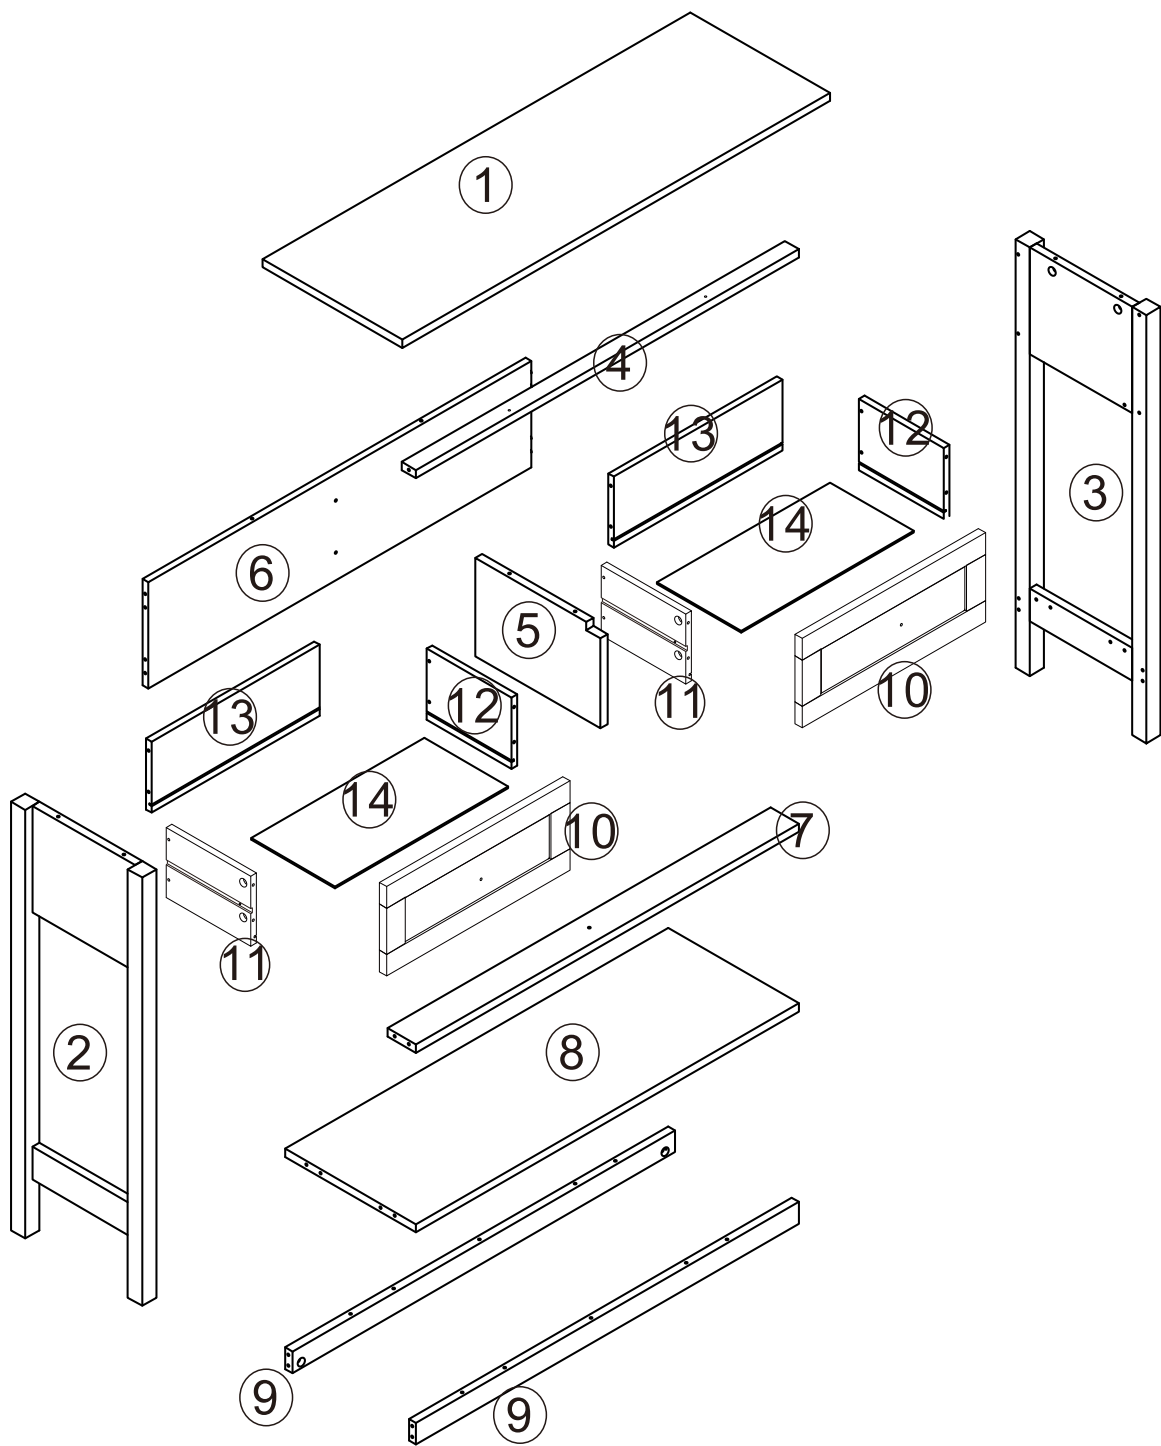


				
Ax34	Bx34	Cx14	Dx8	Ex4
				
Fx6	Gx14	Hx2	Ix4	Jx2
				
Kx2	Lx4	Mx2	Nx2	Ox1
				
Px8	Qx2			

How to use furniture connector cam lock screw and fitting?

Eccentric wheel(A)




Dowel(B)




1

Use screwdriver to attach
dowel into pre-inserted nut

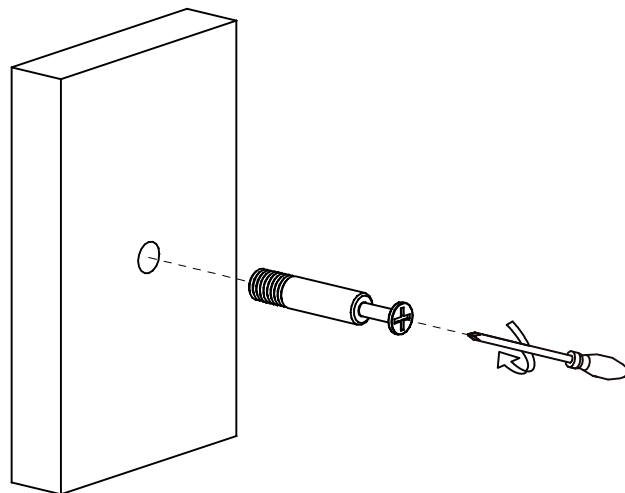


2

Step 1 completed

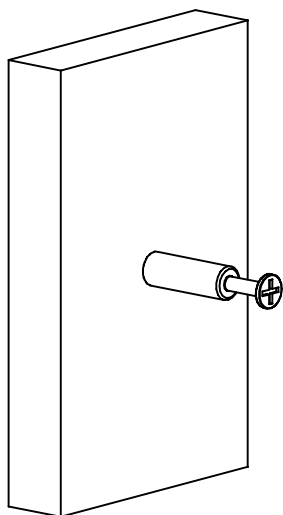


3

Attach dowel into hole on fitting board

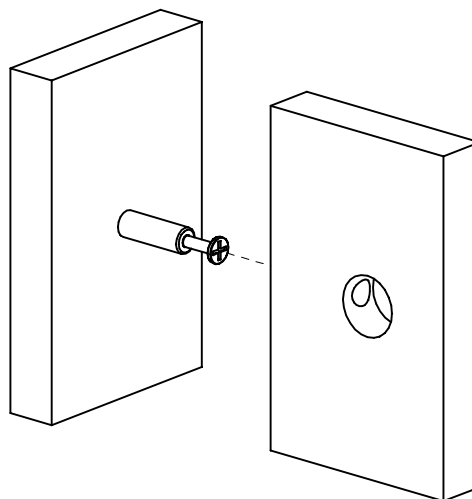


4

Put eccentric wheel (cam lock fitting) into hole

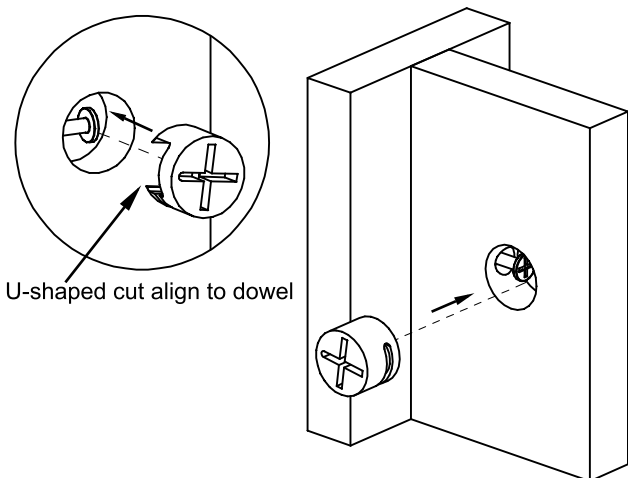


5

Tighten: Turn the eccentric wheel clockwise
Loosen: Turn it anticlockwise

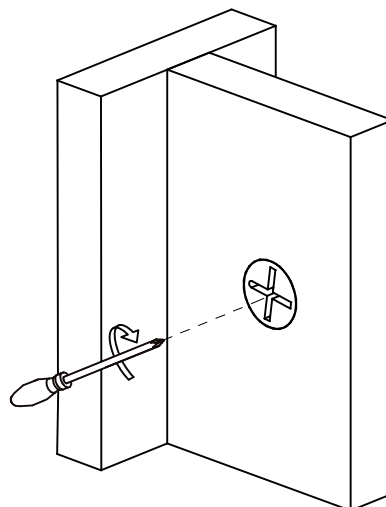


Step 1

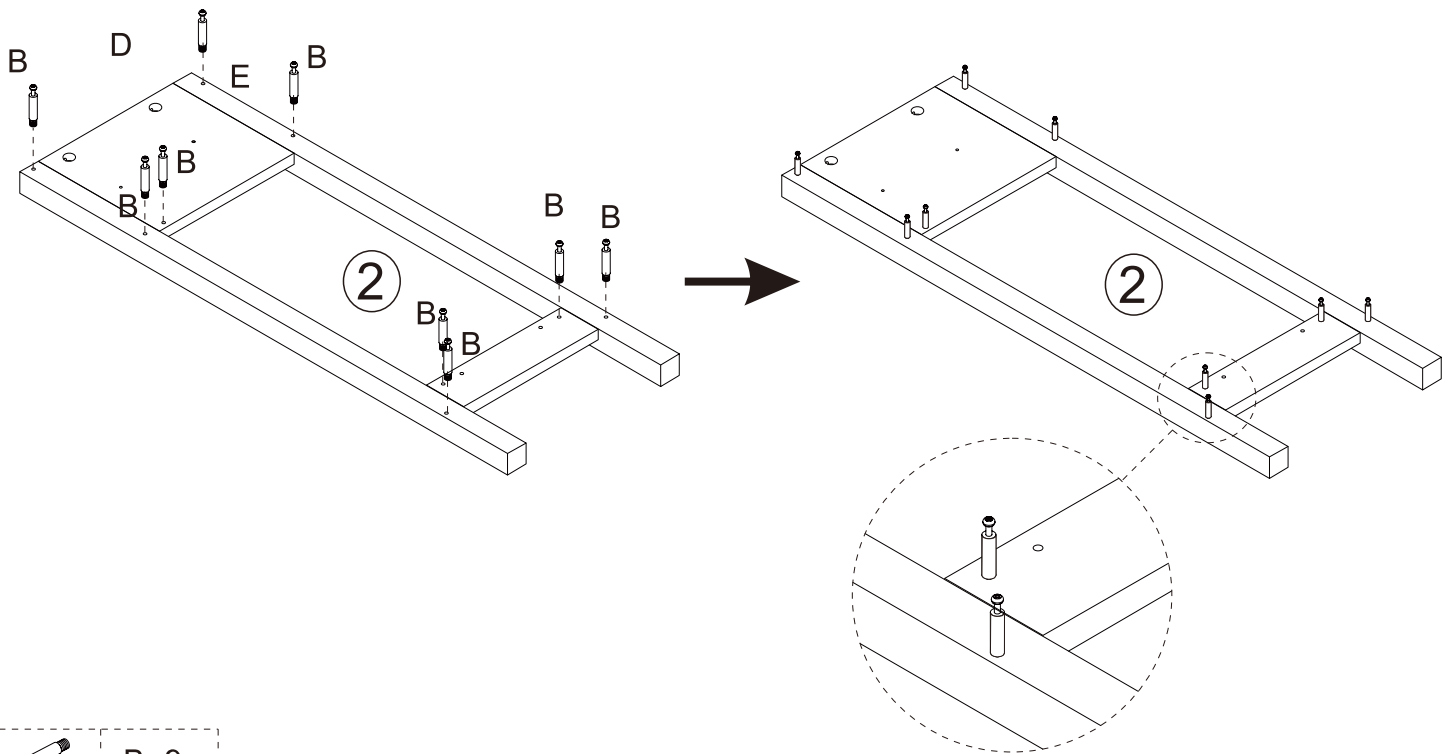

Bx9

Step 2

Note the front and back orientation of the track installation.

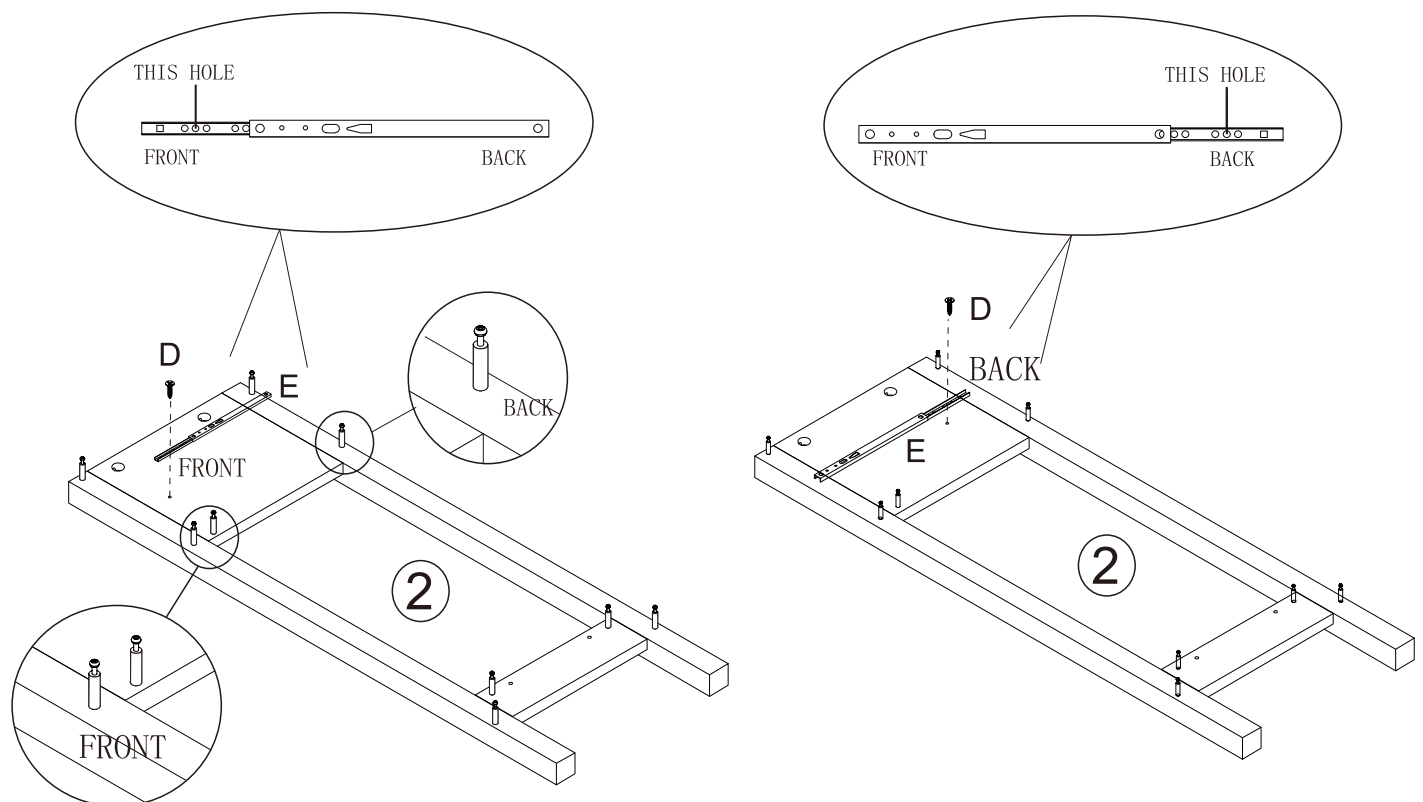


Dx2



Ex1


Step 3

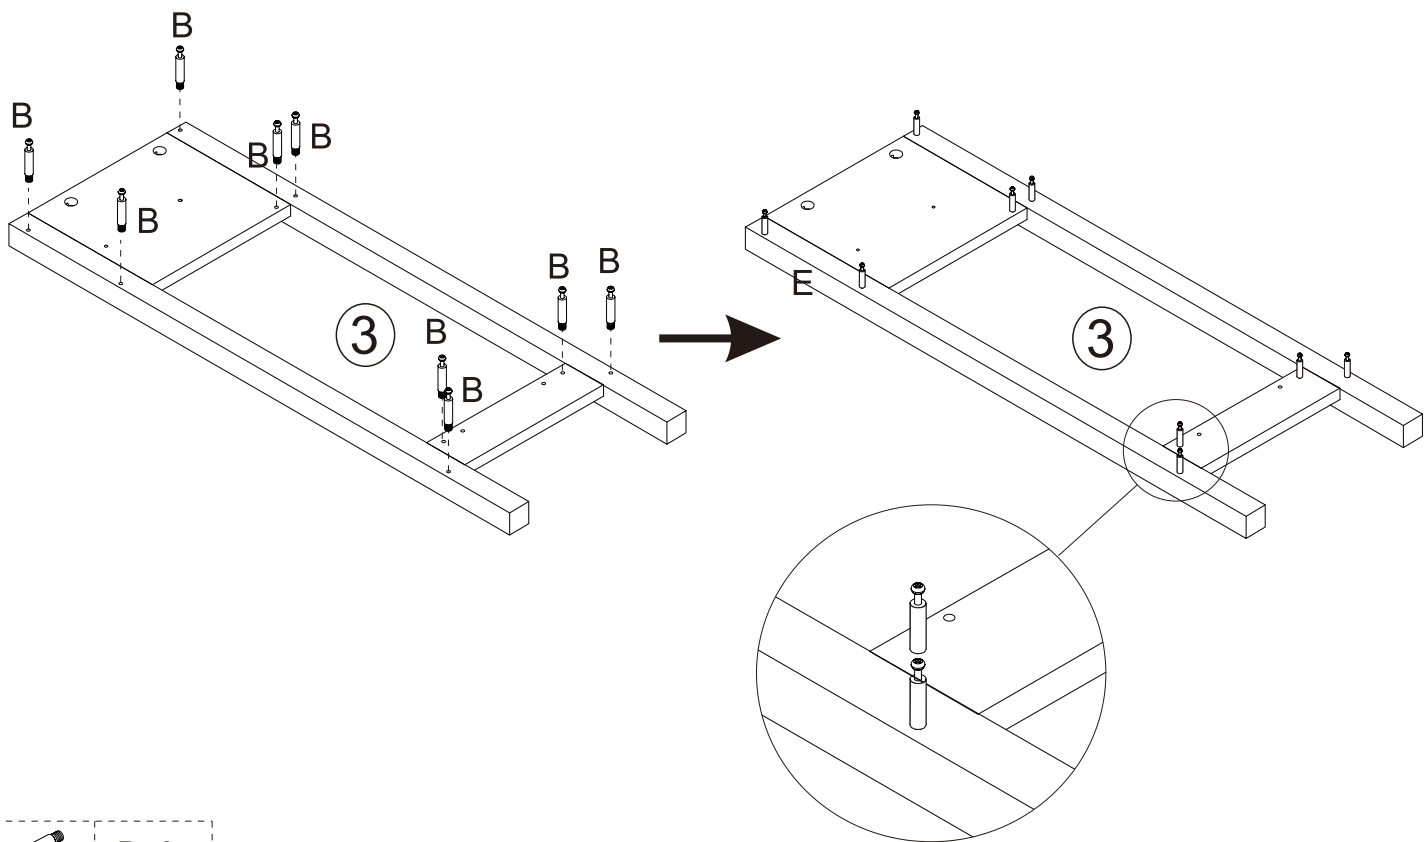

Bx9

Step 4

Note the front and back orientation of the track installation.




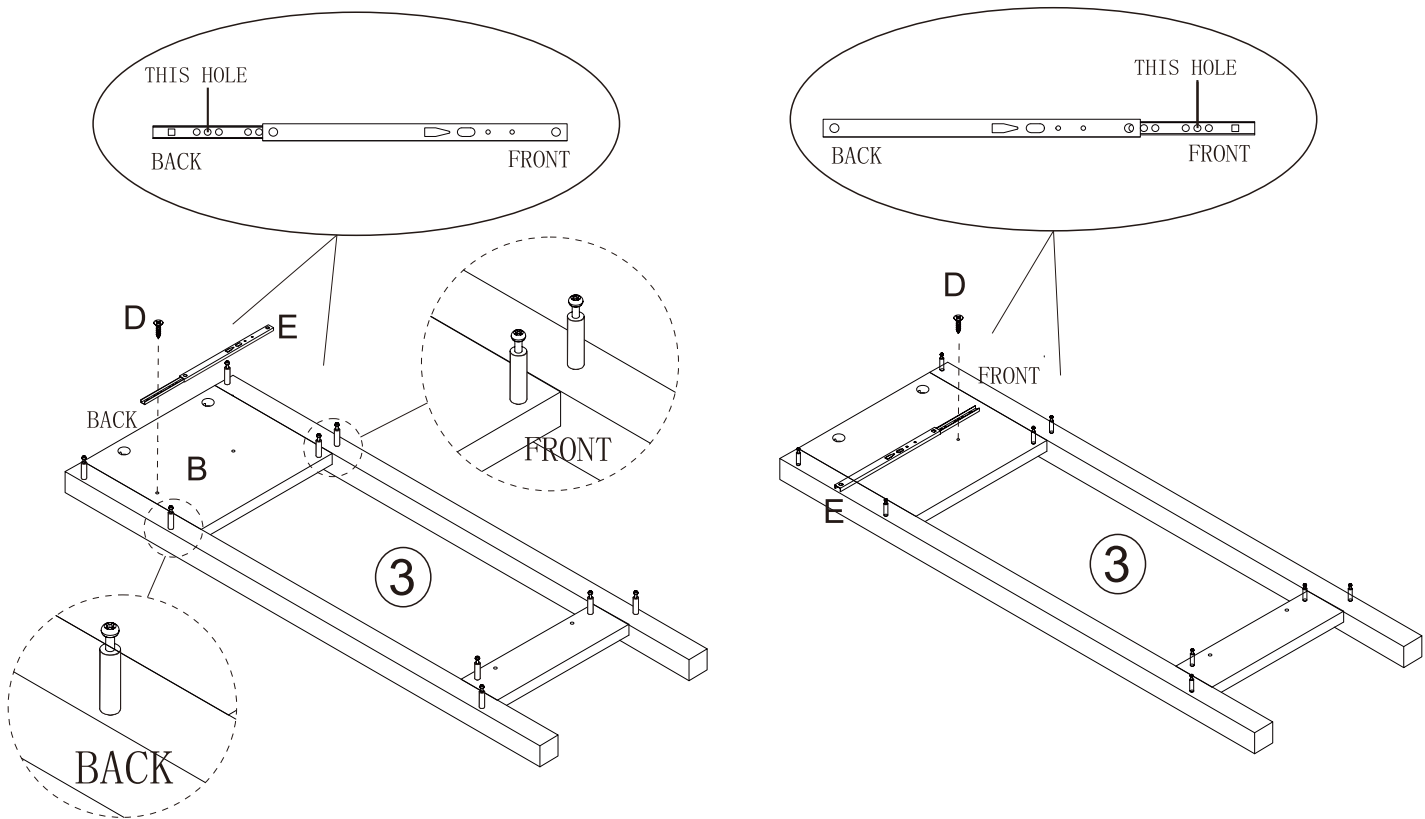


Dx2

Ex1

Step 5





Note the front and back orientation of the track installation.

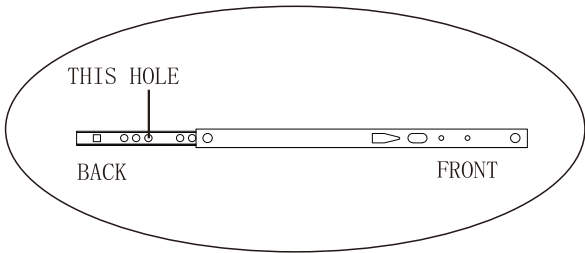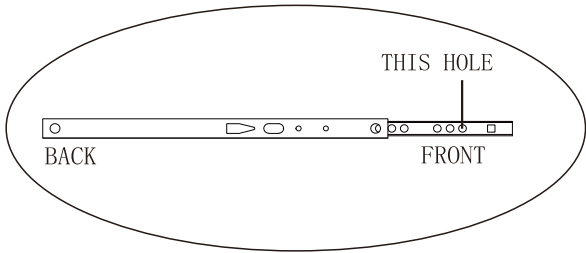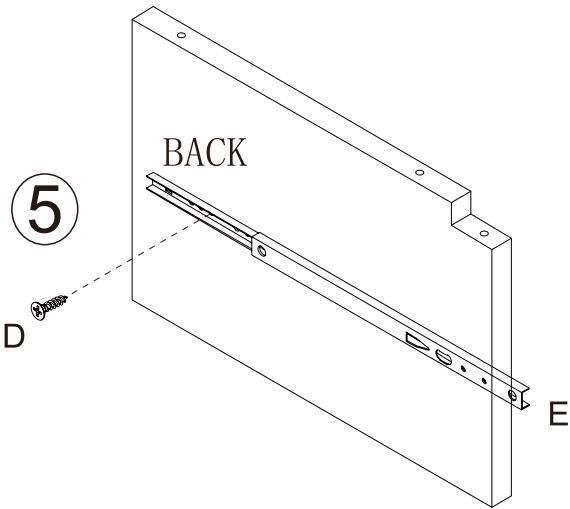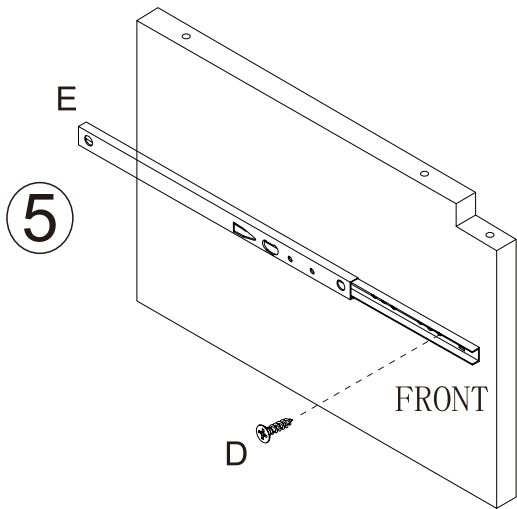

	Dx2
	Ex1


Step 6

Note the front and back orientation of the track installation.

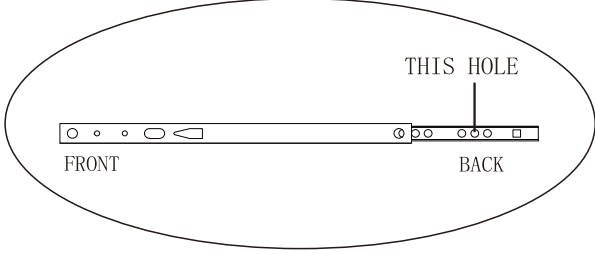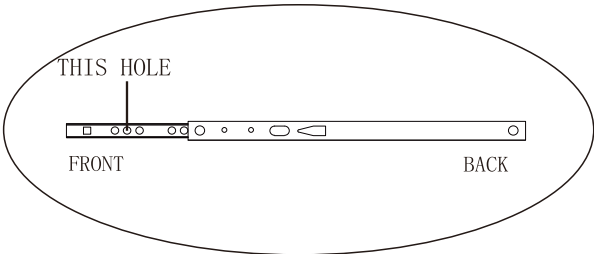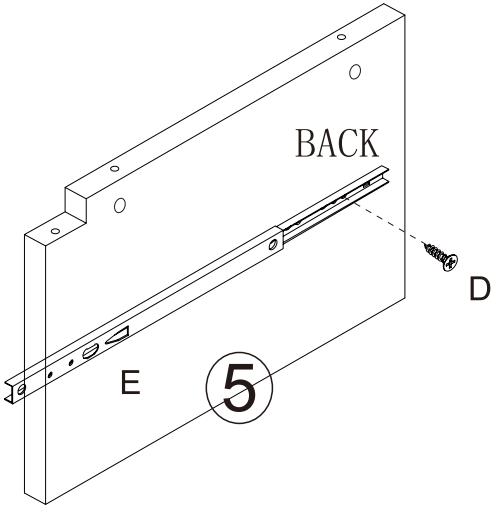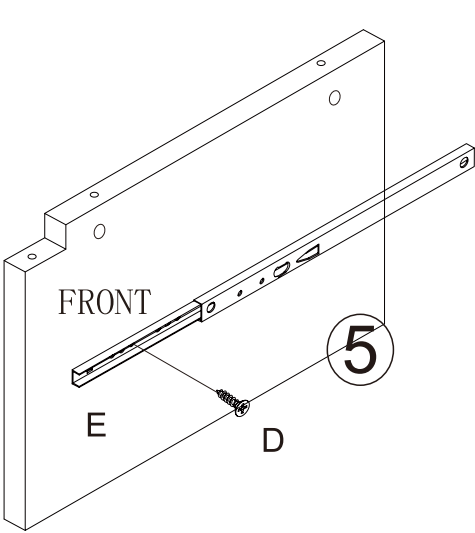


	Dx2
	Ex1

Step 7

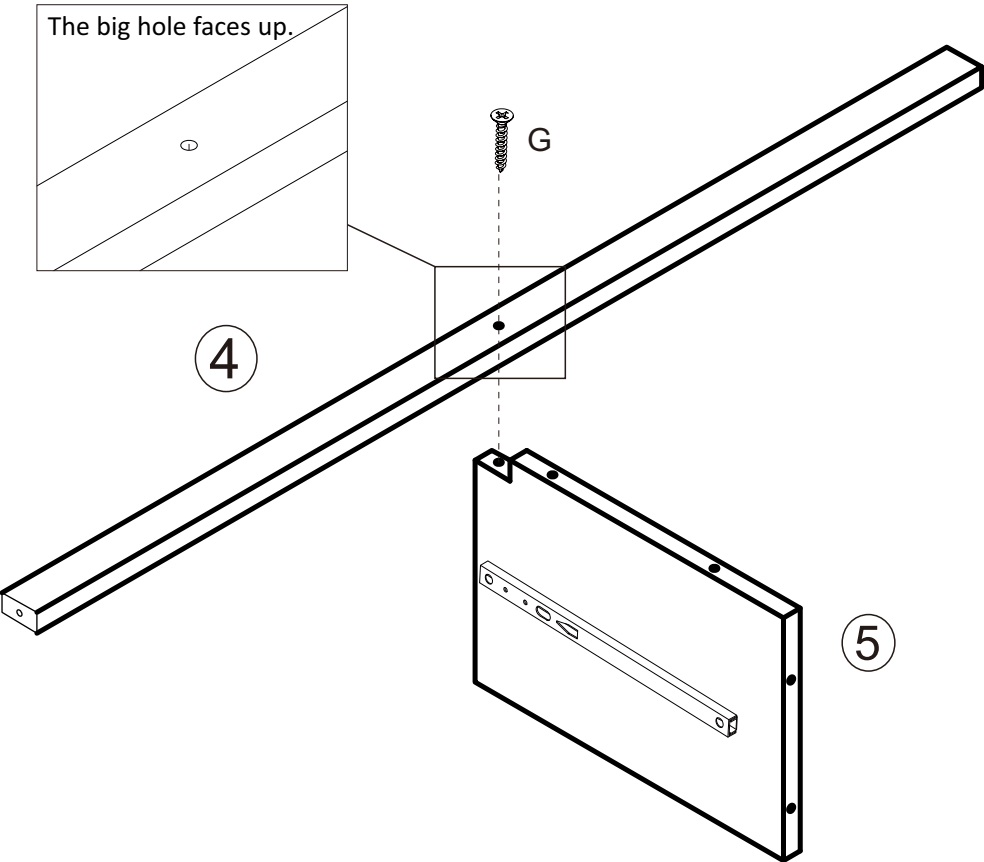


Step 8

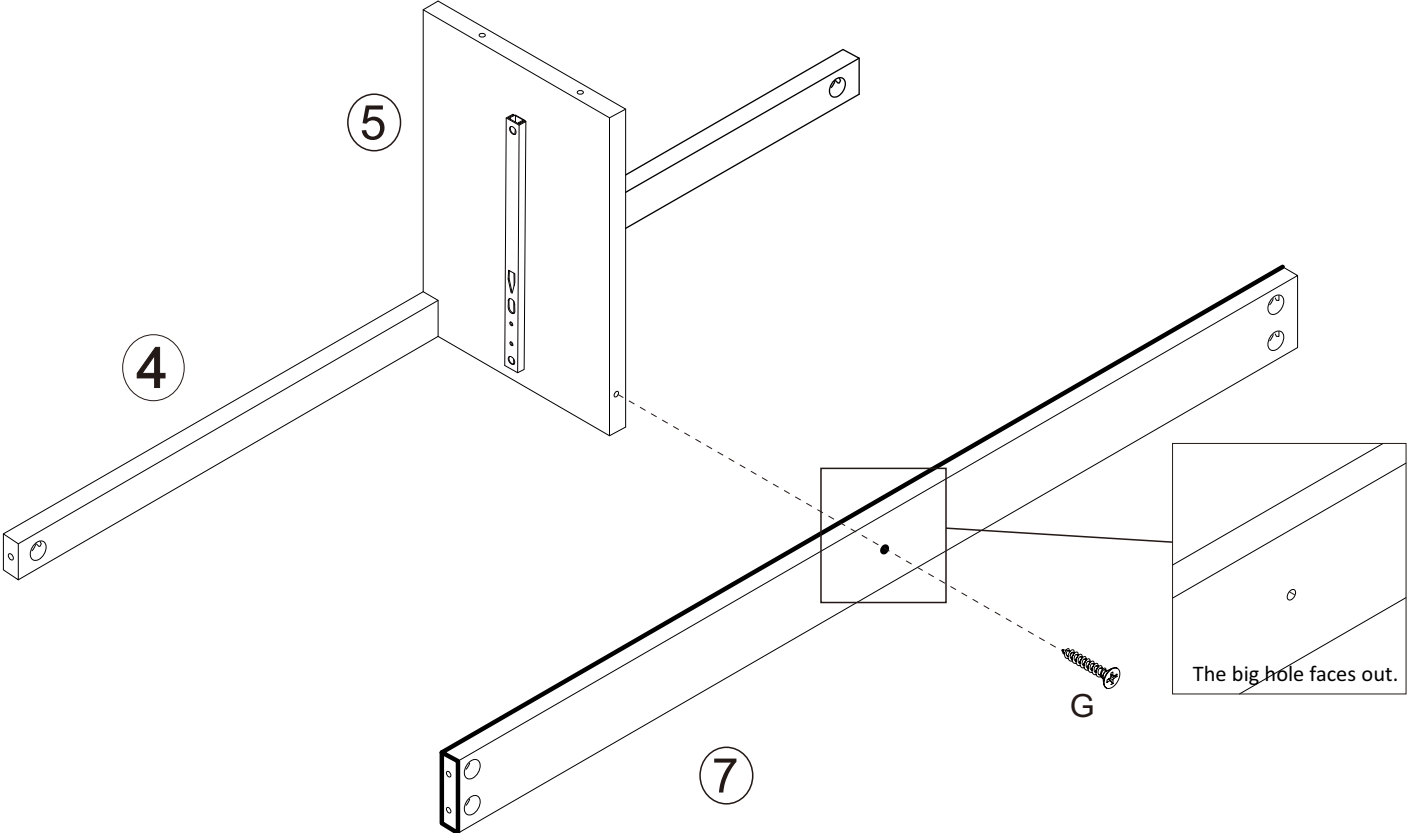



Step 9

Note the installation orientation of part #6.

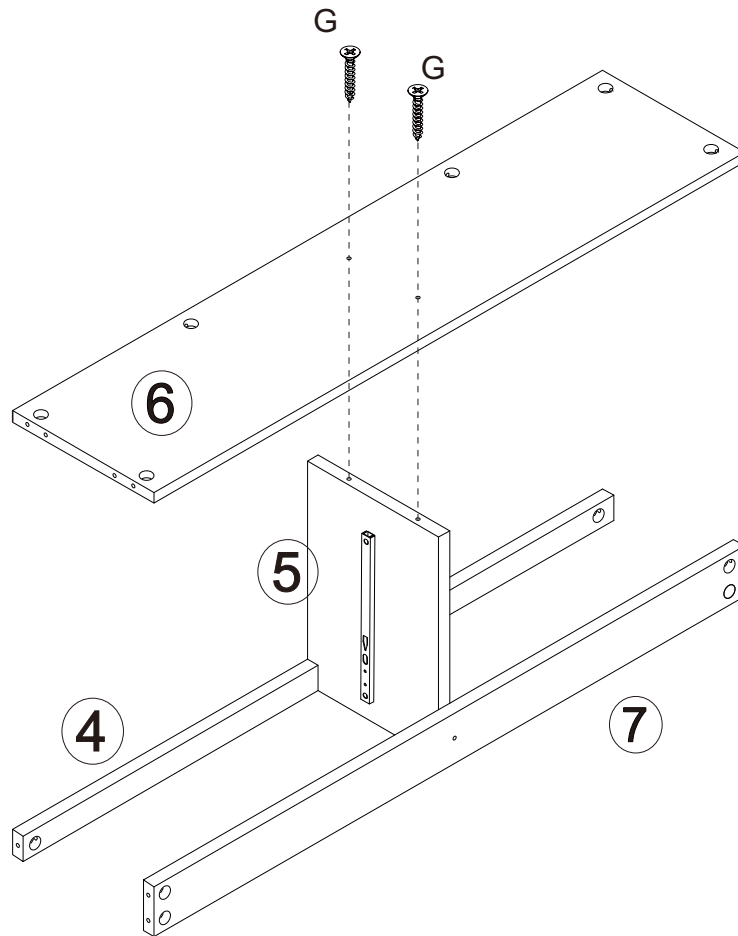

Gx2

Step 10

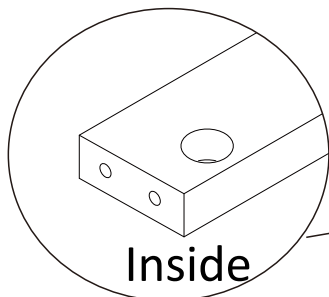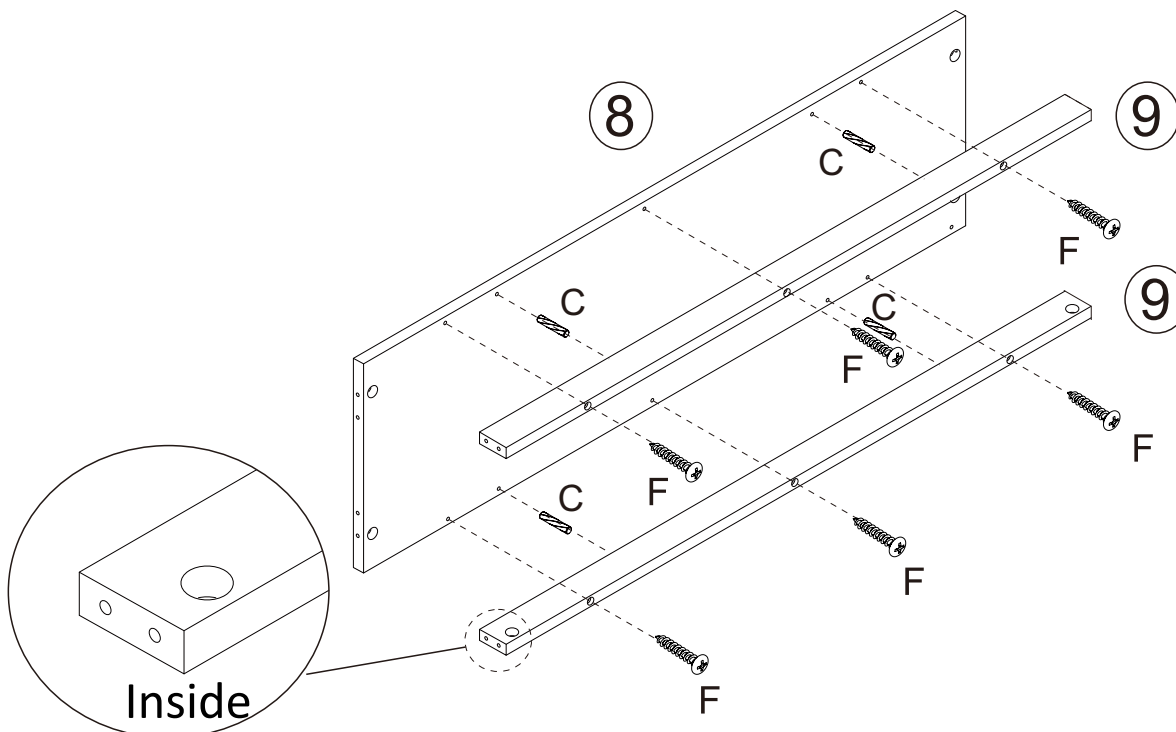


Cx4




Fx6



Step 11

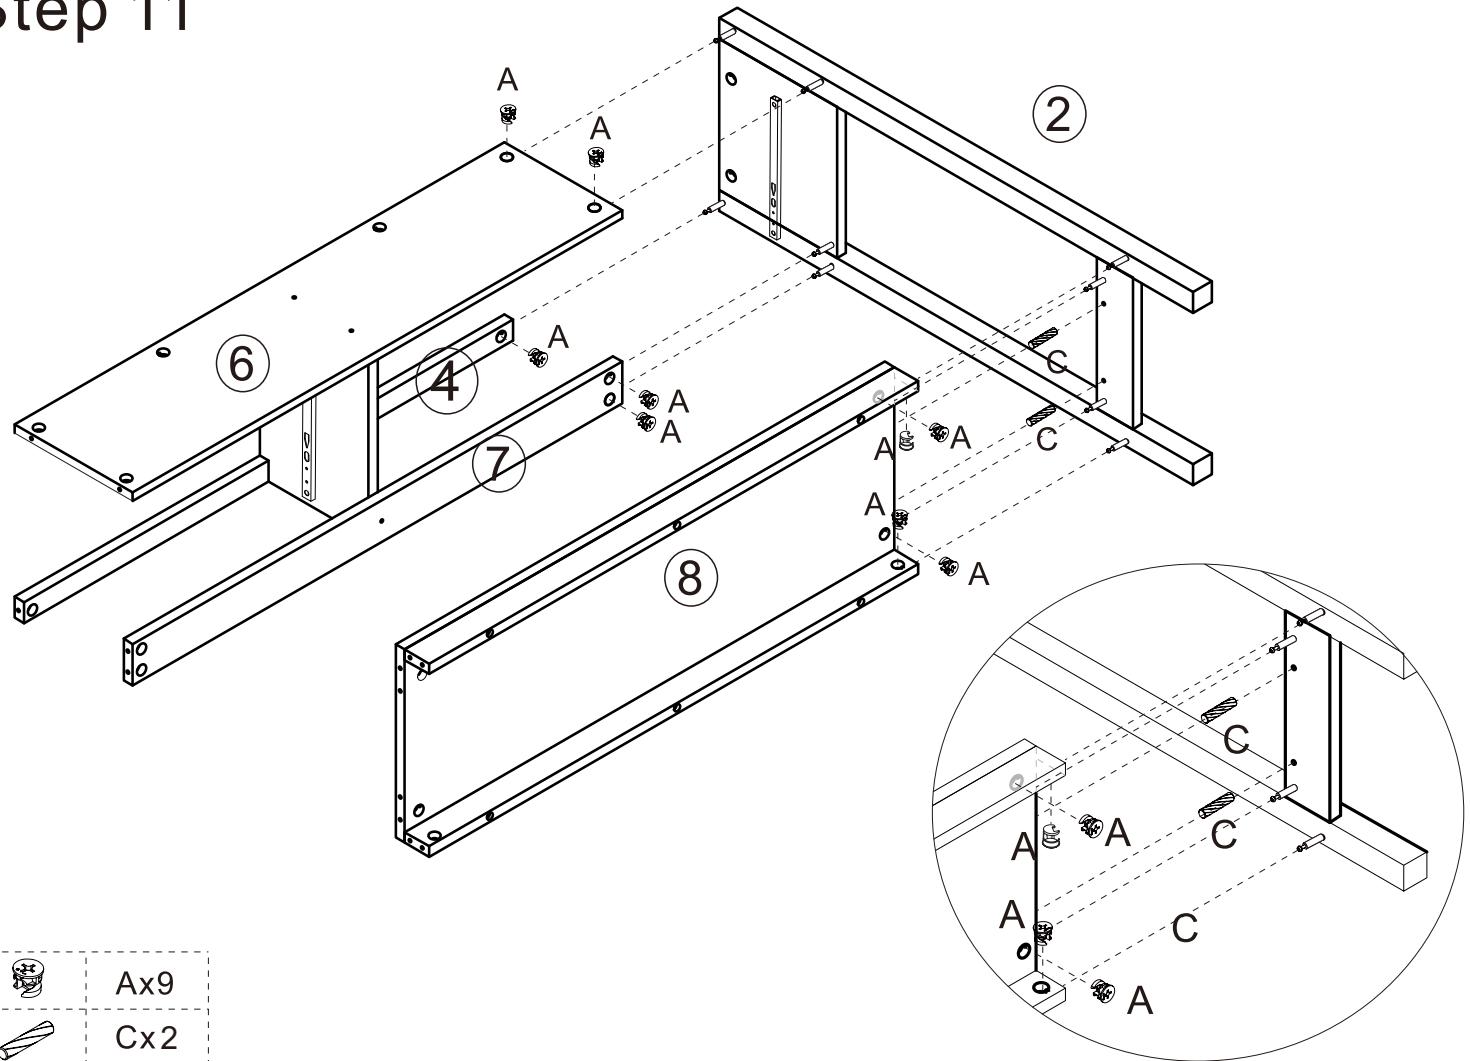

Step 12


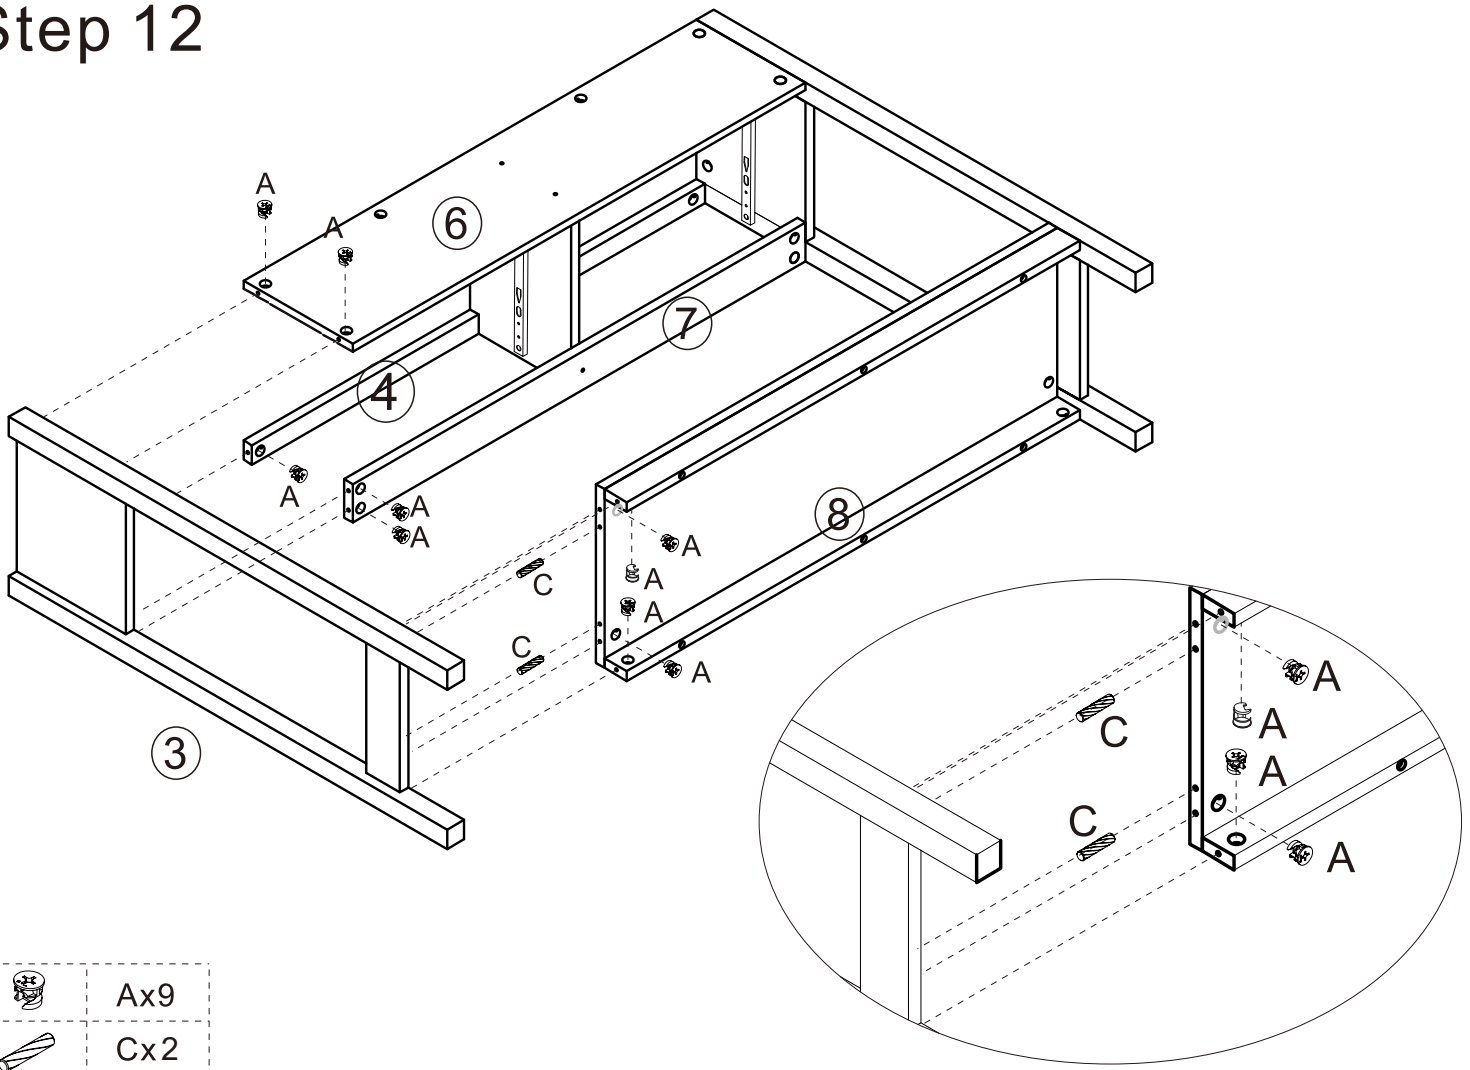


Step 13

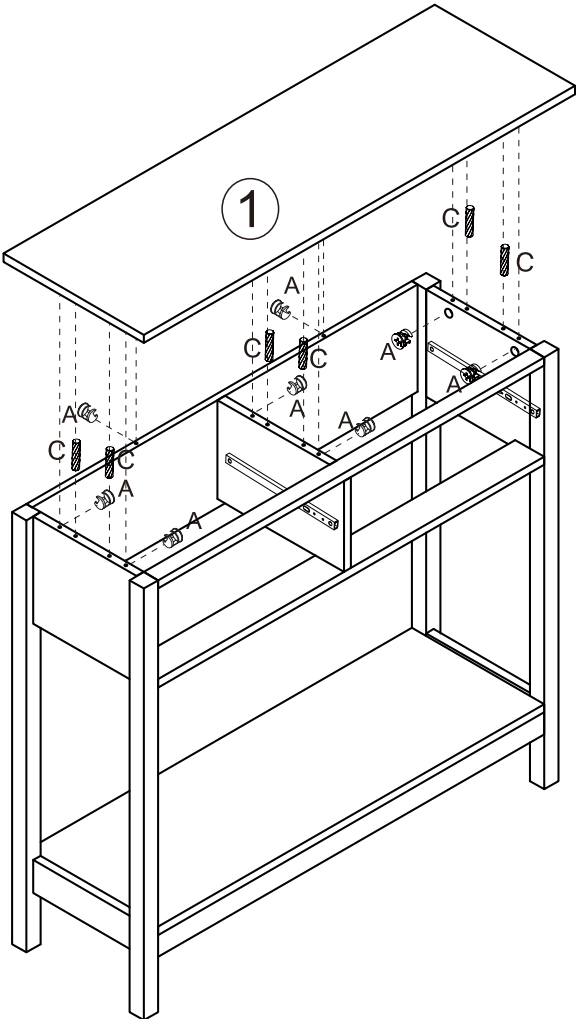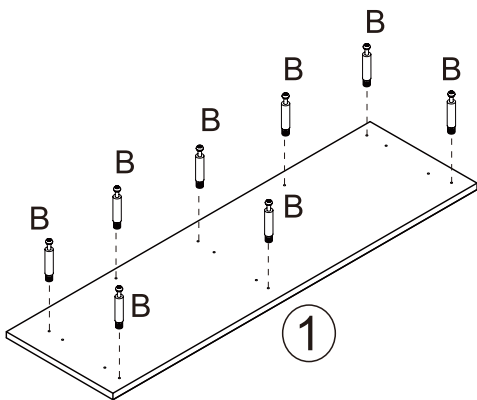

	Ax8
	Bx8
	Cx6




Step 14

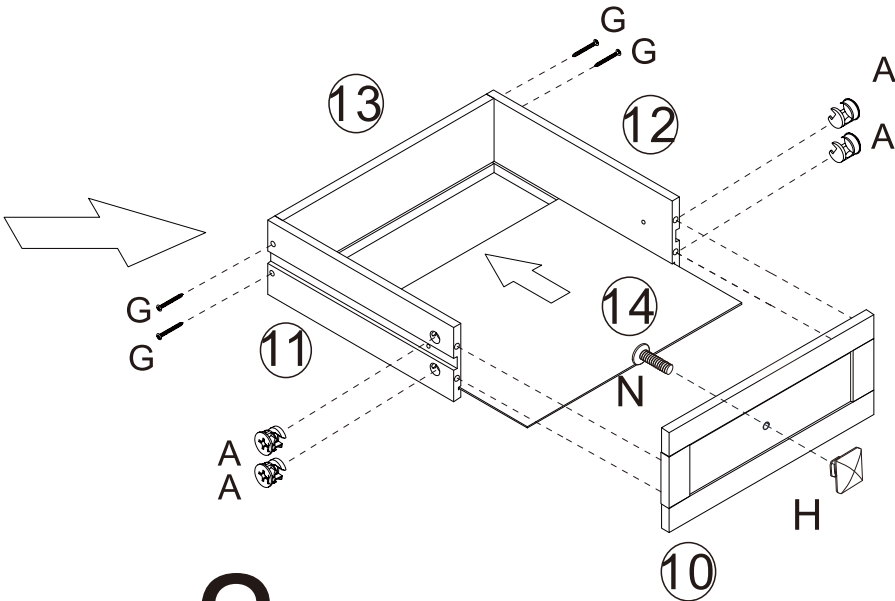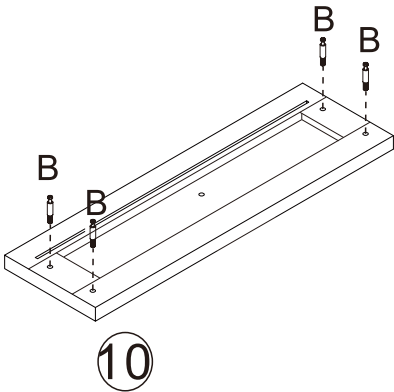

x2

	Ax8		
	Bx8		Hx2
	Gx8		Nx2

Step 15

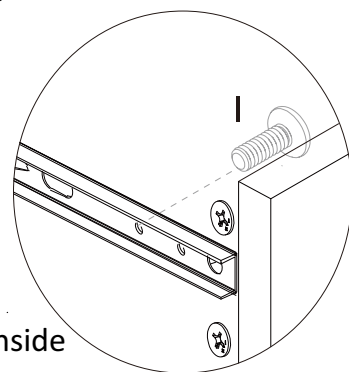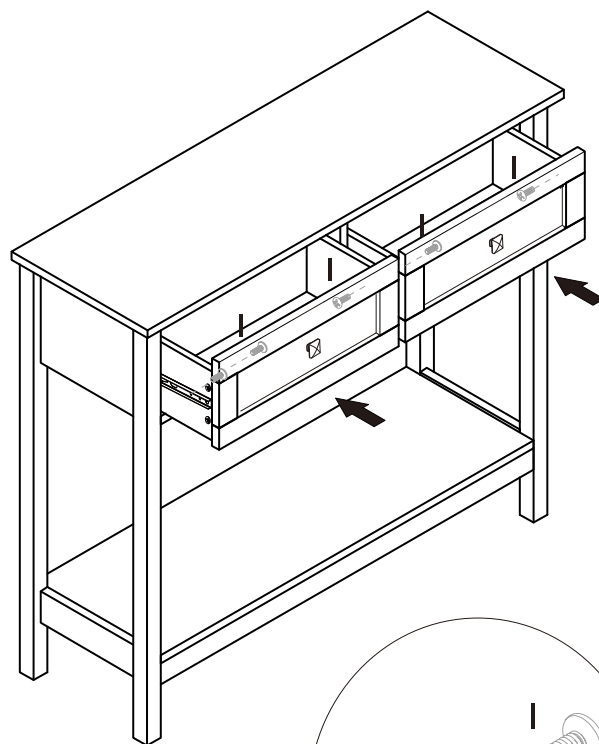
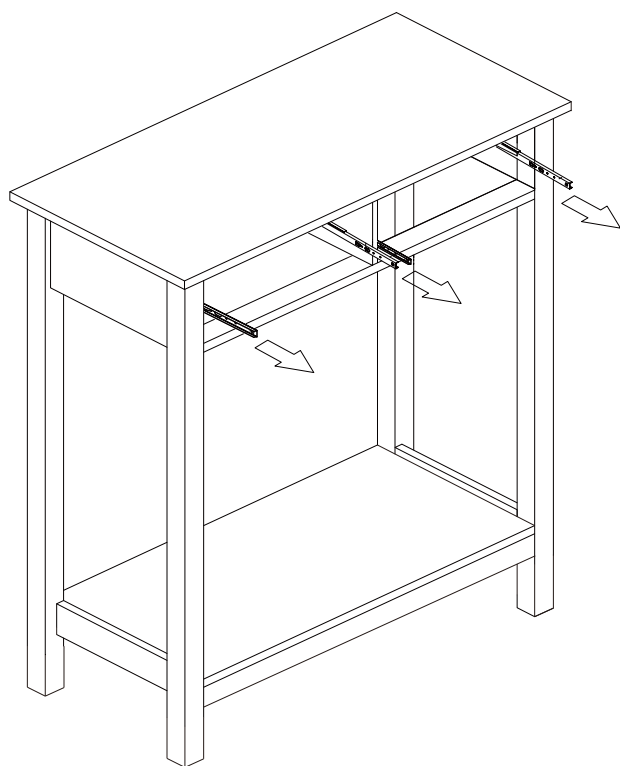


Screw I is screwed outward from the inside of the drawer to connect the track.



Ix4

Step 16

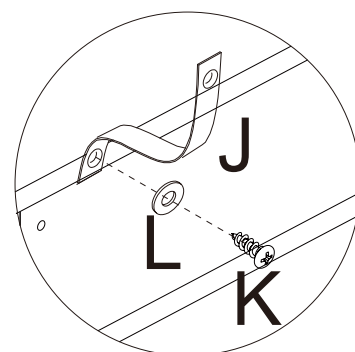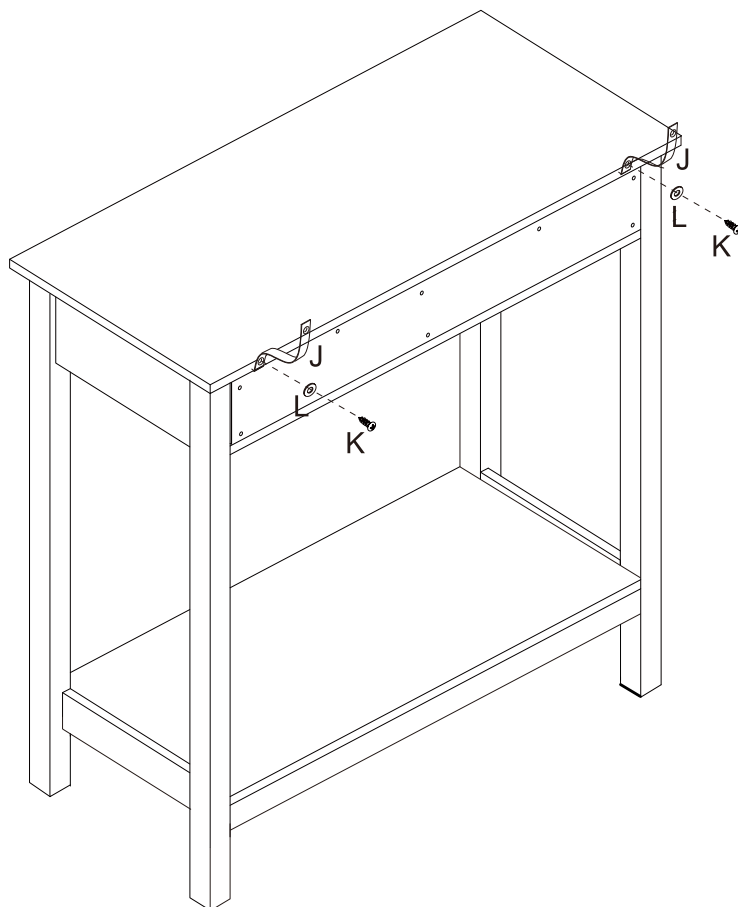

Jx2





Kx2




Lx2


Step 17

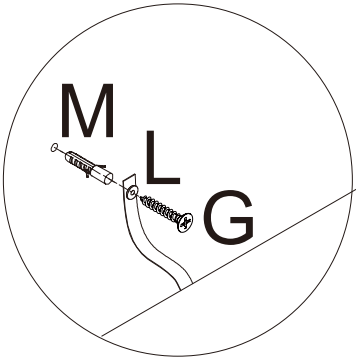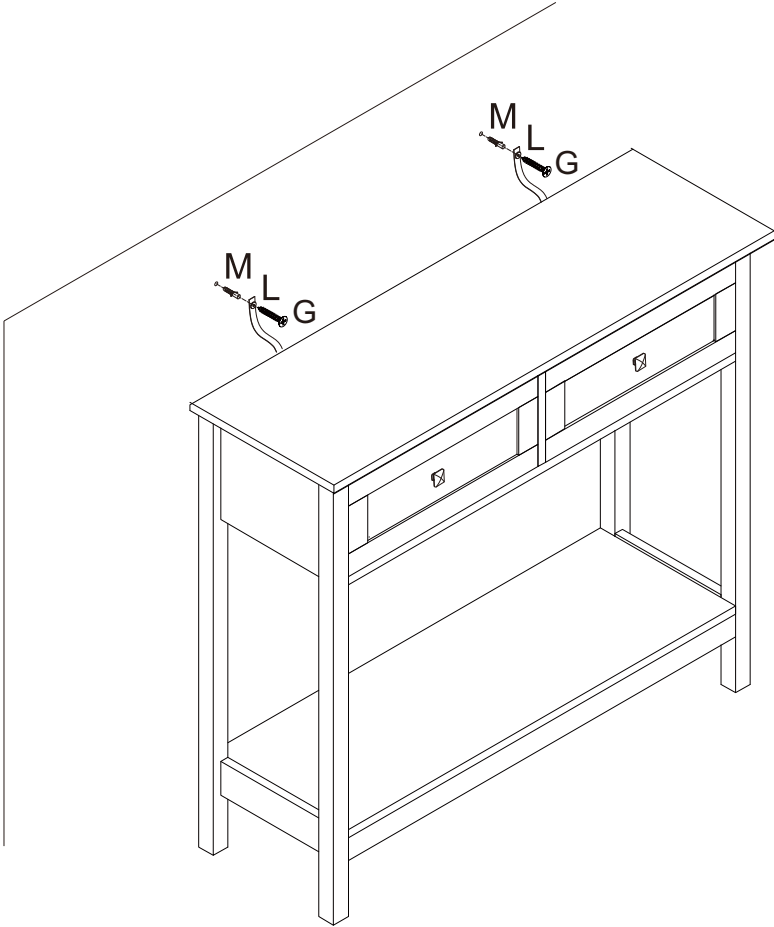

	Gx2
	Lx2
	Mx2

Step 18

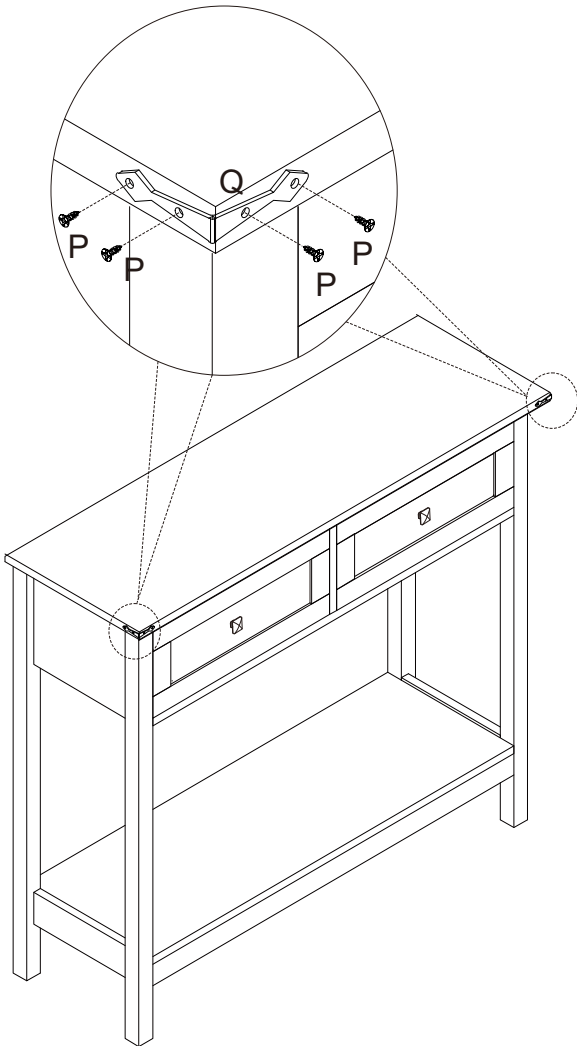

	P x 8
	Q x 2