

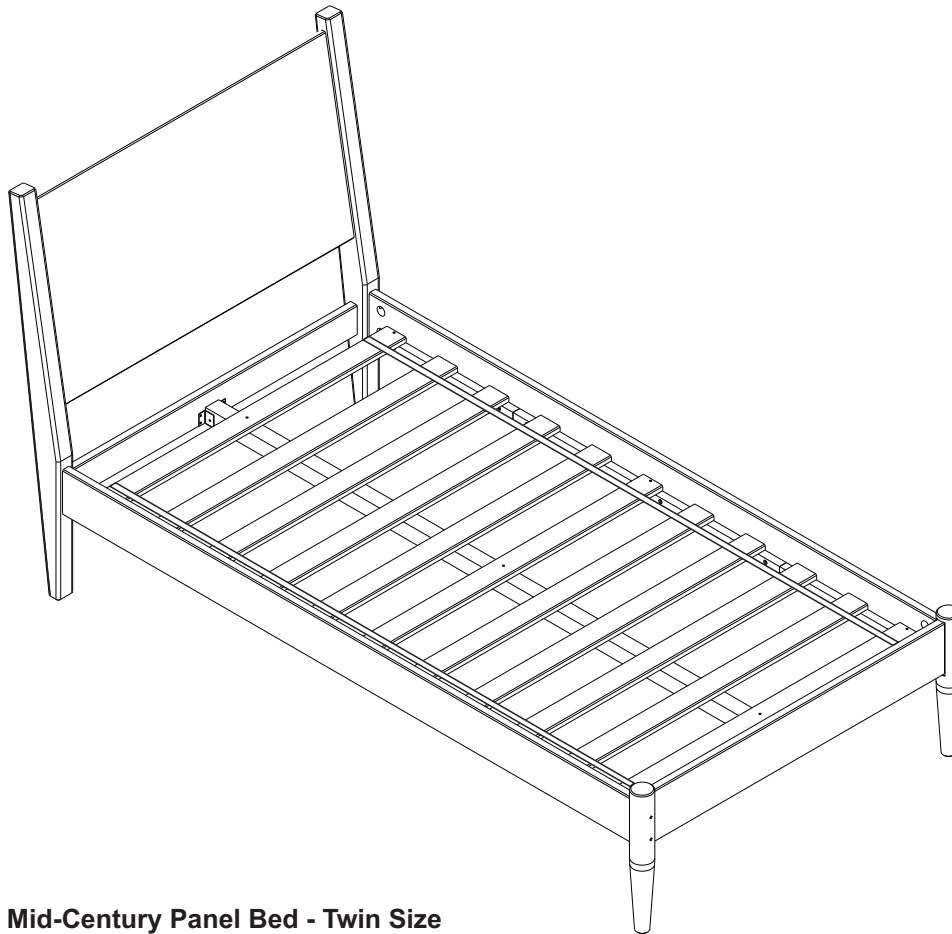
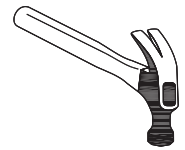


ASSEMBLY INSTRUCTIONS

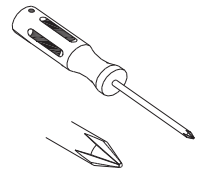


Mid-Century Panel Bed - Twin Size

01:00 Hs

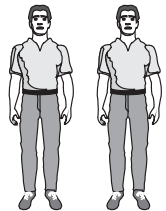

HARDWARE INCLUDED



A - 10,0x50 Wood Dowel
Qty. 20



B - 4,0x40 Screw
Qty. 16




C - 3,5x16 Screw
Qty. 12




D - 3,5x30 Screw
Qty. 12




E - Screw Nut
Qty. 08



F - Allen Key
Qty. 01



H - 1/4x100 Screw
Qty. 08

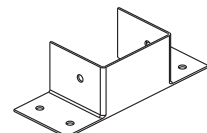


K - Support Bar
Qty. 02




**L - Wood Hole
Cover - Qty. 04**


PARTS INCLUDED

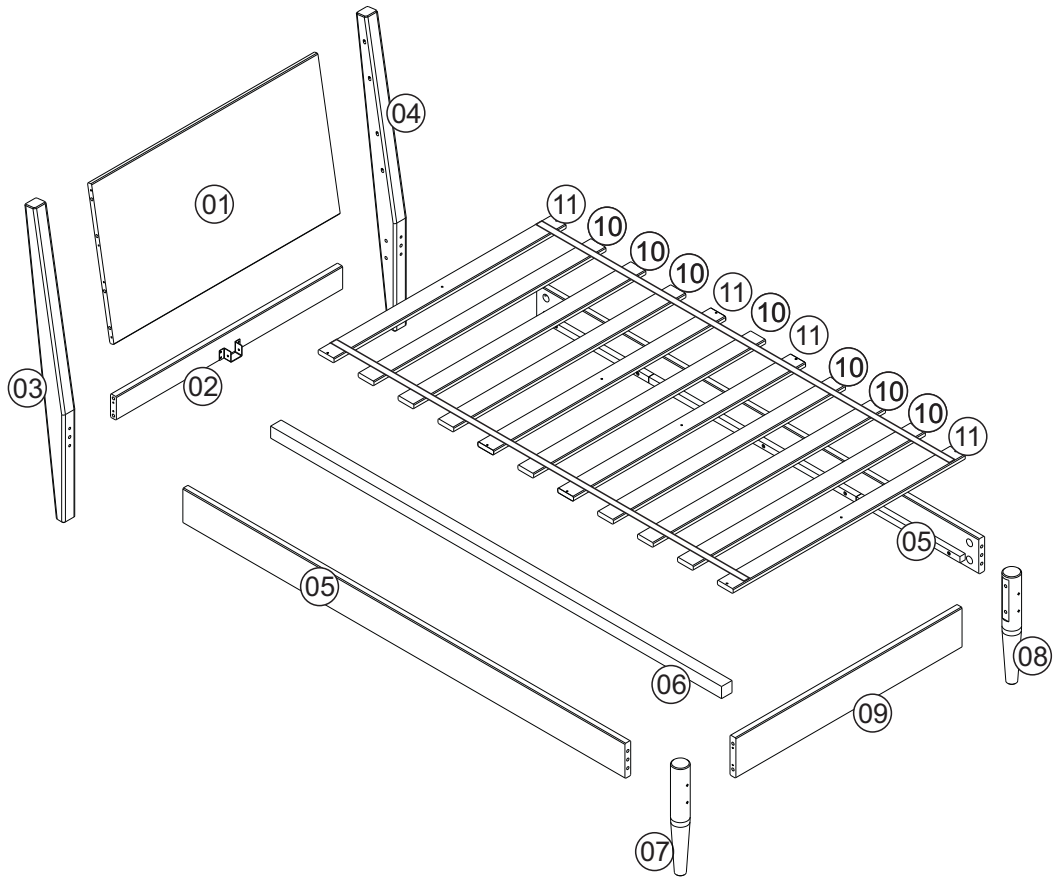

STEP 1

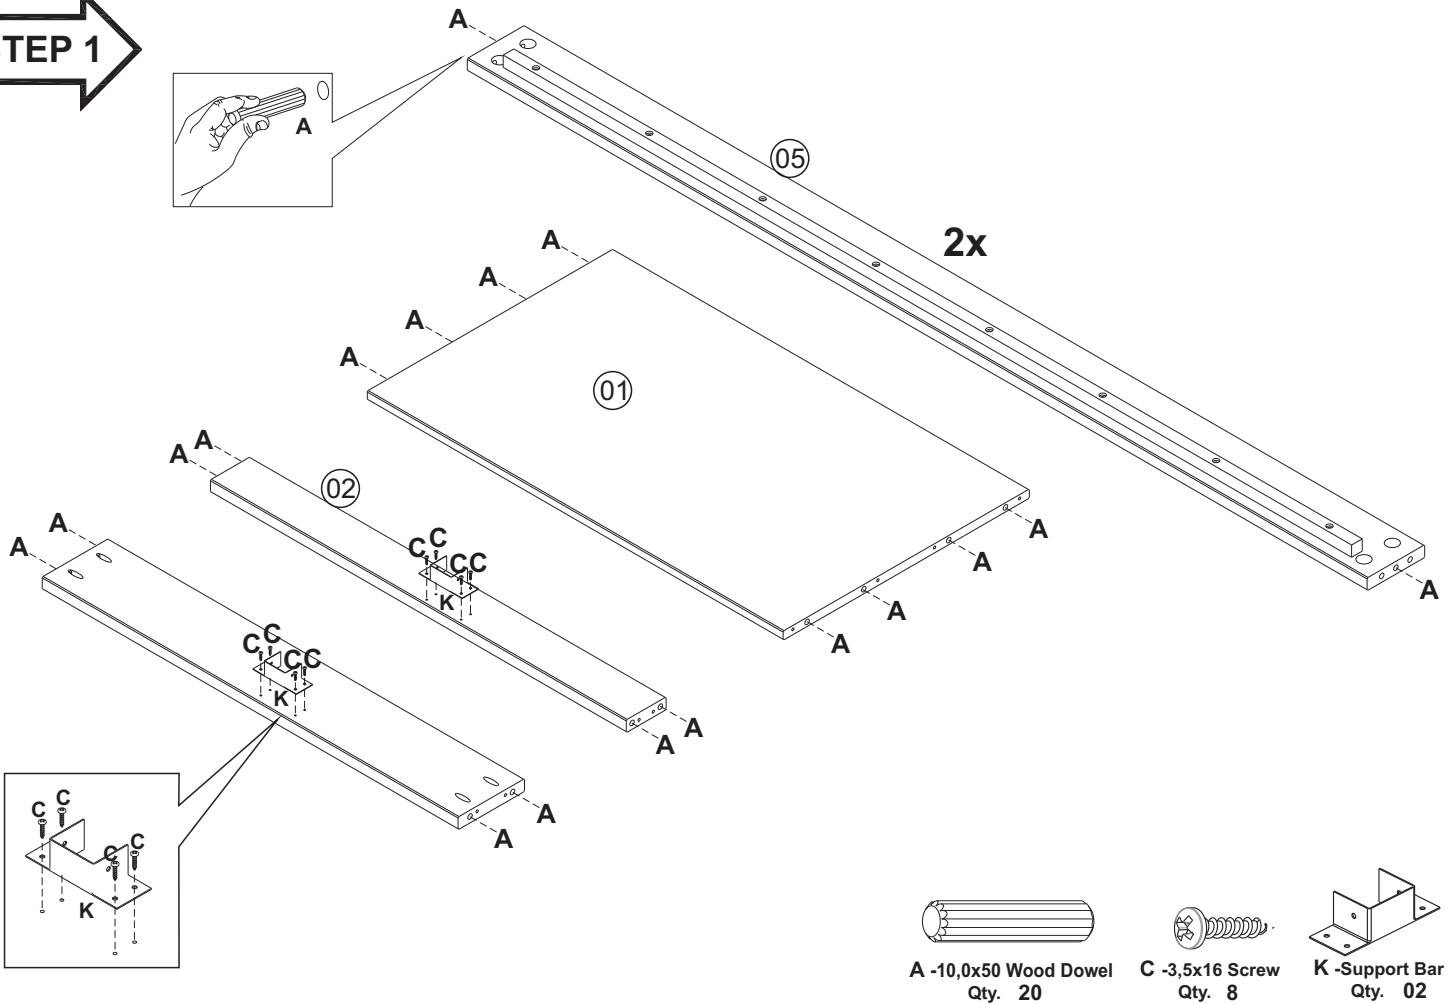


STEP 2

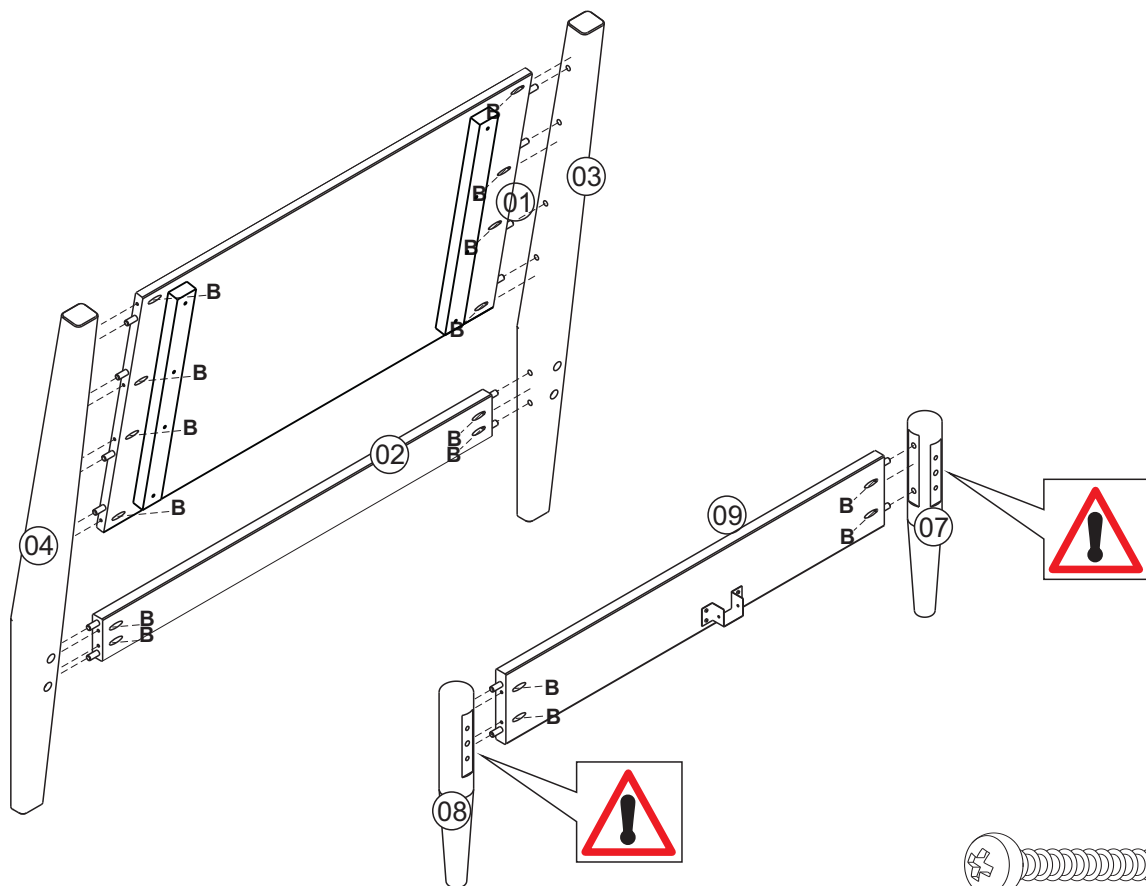

B -4,0x40 Screw
Qty. 16


STEP 3

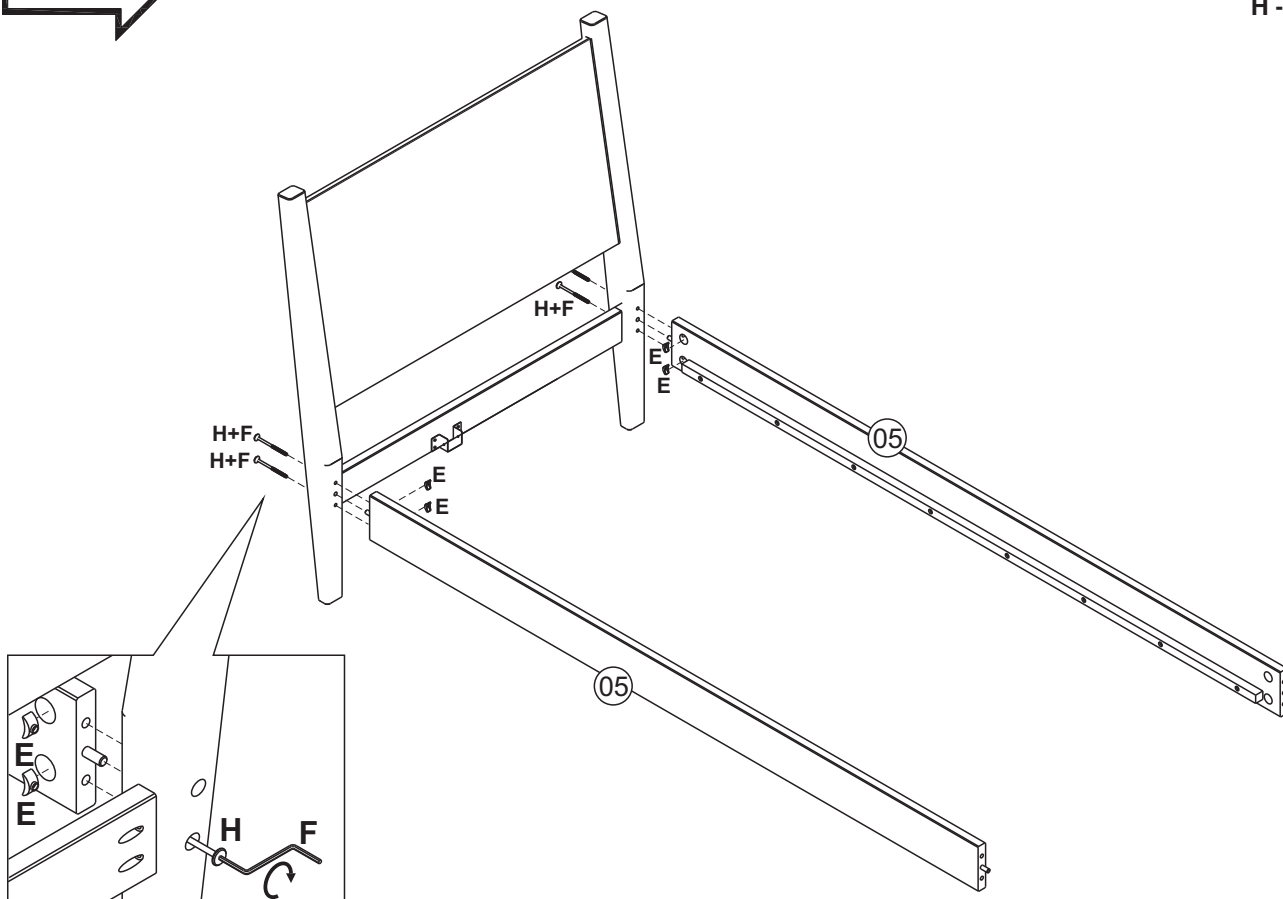

H -1/4x100 Screw
Qty. 04




E -Screw Nut
Qty. 04




F -Allen Key
Qty. 01


STEP 4

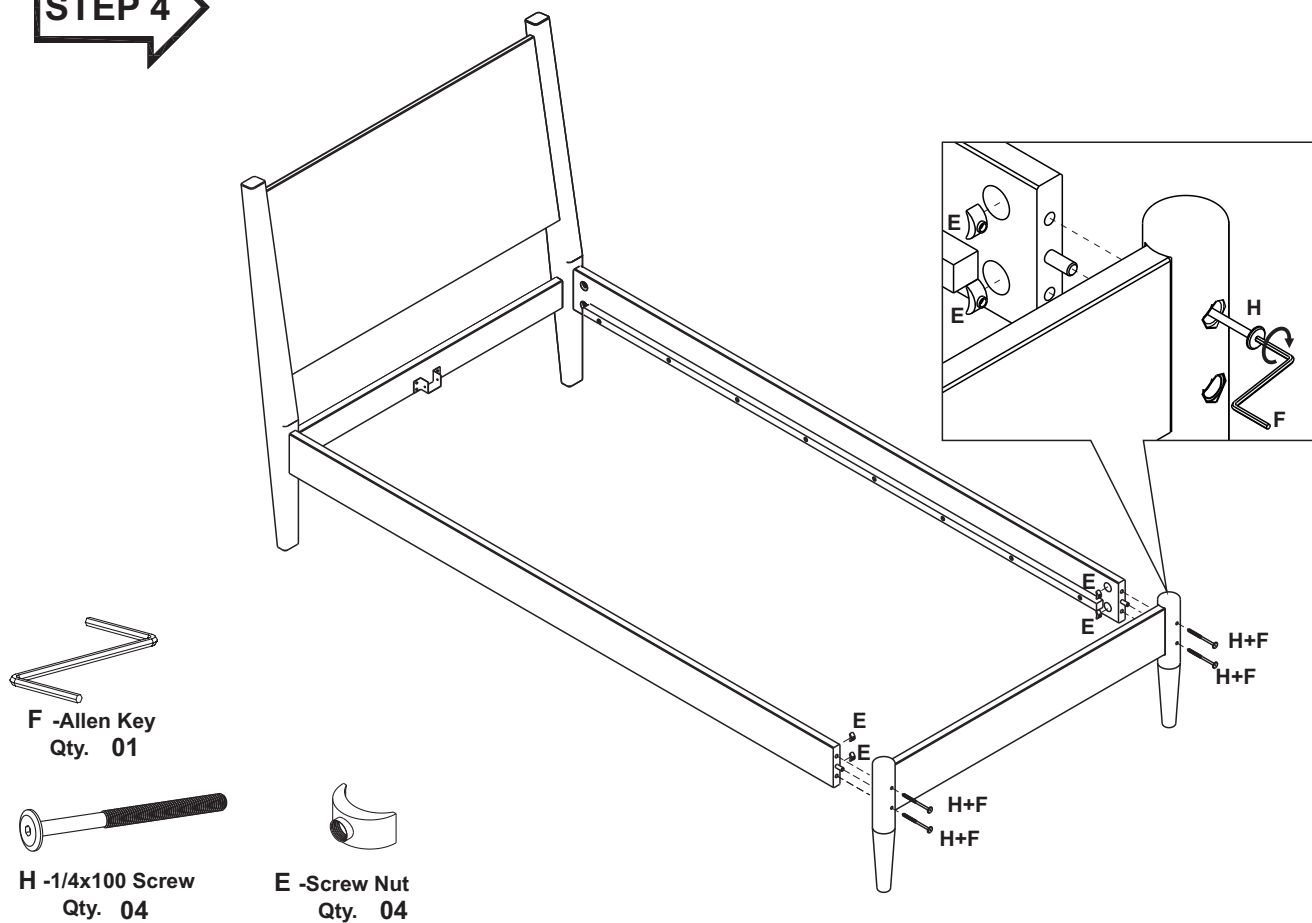

STEP 5

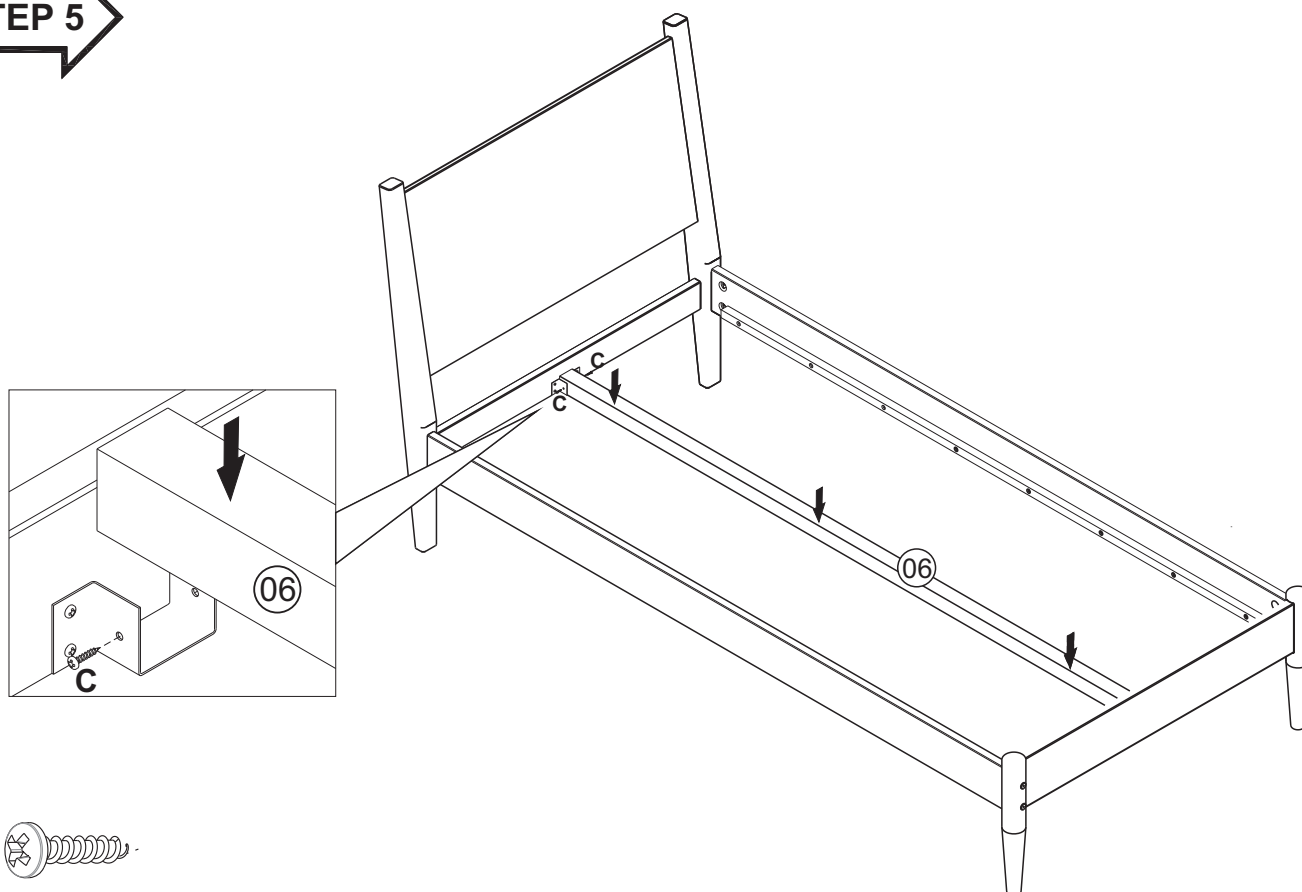


STEP 6

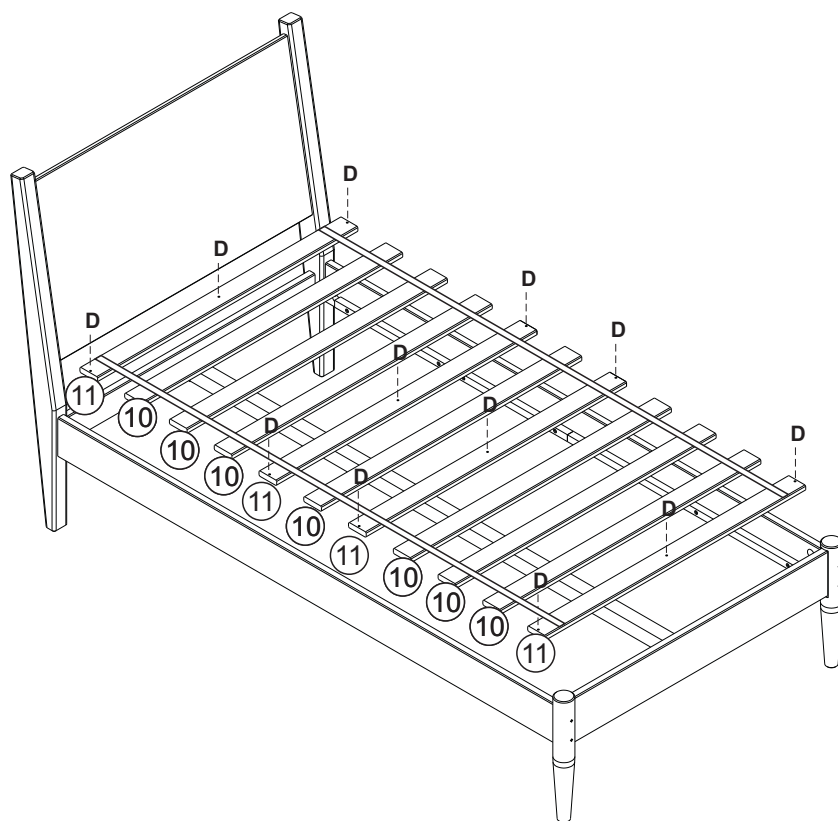

D -3,5x30 Screw
Qty. 12

STEP 7

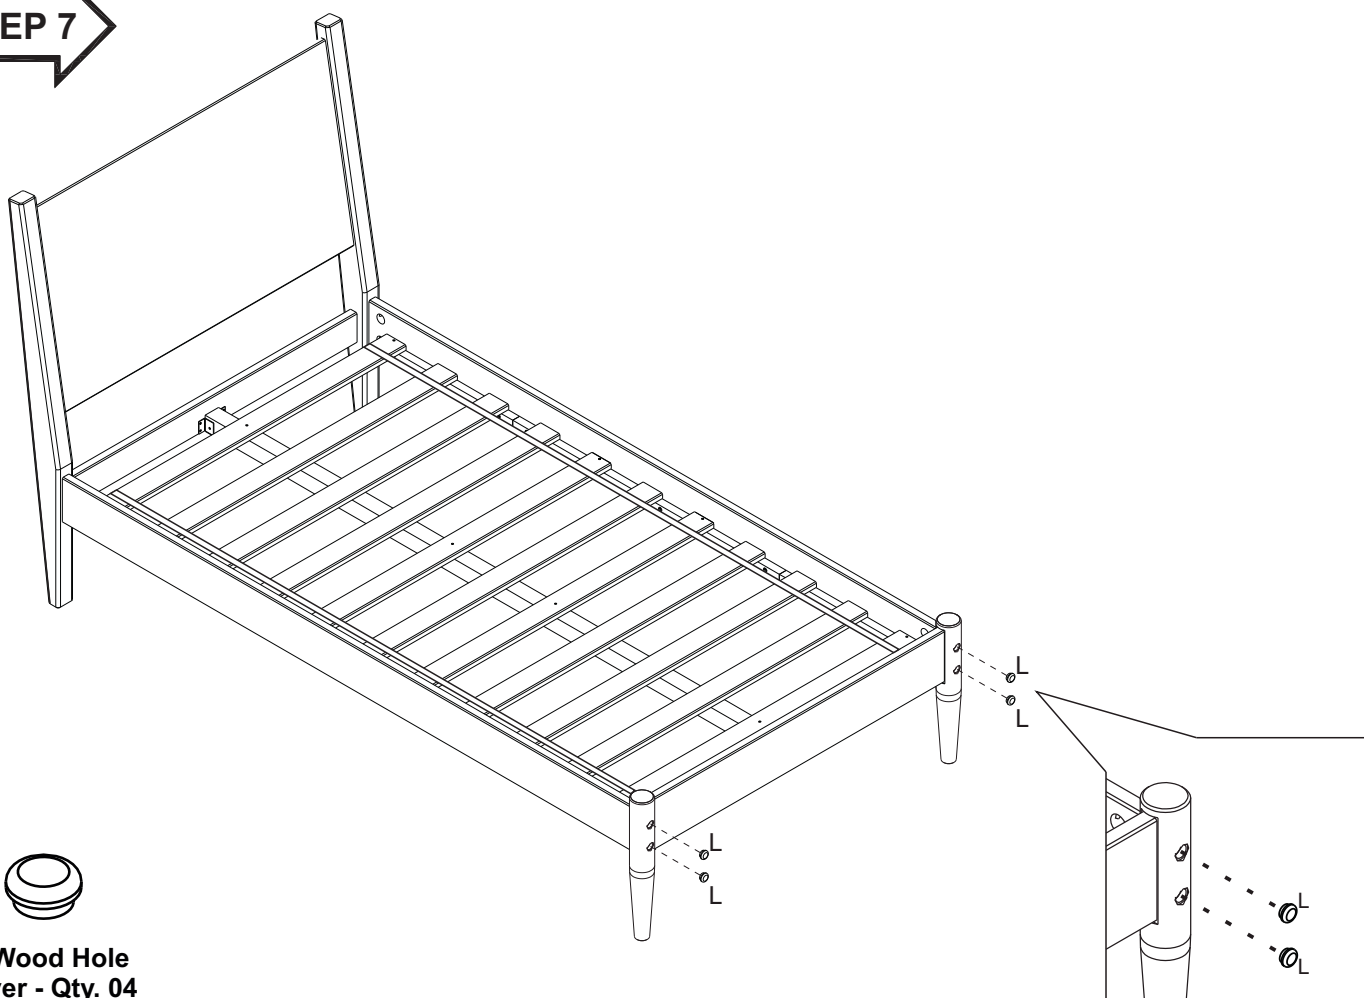

L - Wood Hole
Cover - Qty. 04