



Manufactured by:
Backyard Discovery
3305 Airport Drive, Pittsburg, KS 66762
800-856-4445

Basepoint Business Centre: Rivermead Drive, Westlea, Swindon SN5 7EX Phone: 0800-118-2476
J.P. Coenstraat 7, The Bridge, The Hague, 2595 WP, Netherlands Phone: 08005678990

16x12 NORWOOD GAZEBO

MODEL # : 2206038



WARNING

Cancer and Reproductive Harm
www.P65Warnings.ca.gov



Please visit www.backyarddiscovery.com

For the most up to date assembly manual, to register your product, or to order replacement parts *Para obtener instrucciones en español, visite*
www.backyarddiscovery.com



EASY STEP-BY-STEP
3D INTERACTIVE INSTRUCTIONS
DOWNLOAD THE FREE APP



Made in China

INS-2206038-A-16x12 NORWOOD GAZEBO-ENG 7-27-23





OWNER'S MANUAL - BASIC SETUP DIMENSIONS & ASSEMBLY NOTES

It is critically important that you start with square and level footings, concrete pad or deck to attach your structure


- Pay close attention to the items needed for each step. Make sure you are using the correct hardware for each step. Using incorrect hardware may result in improper assembly
- Remember to double check for underground utilities and overhead electrical lines

Post mounts are provided with your structure which allows you to permanently install your structure to a pre-existing or new wood or concrete surface. See Anchor Instructions for further details and recommendations.

- The hardware to attach the post mounts to the structure is included.
- The hardware to mount the structure permanently to a concrete surface is included.
- The hardware to mount the structure permanently to a wood deck is NOT included and will need to be purchased separately. You must ensure there is ample structural support under the deck before permanently attaching.

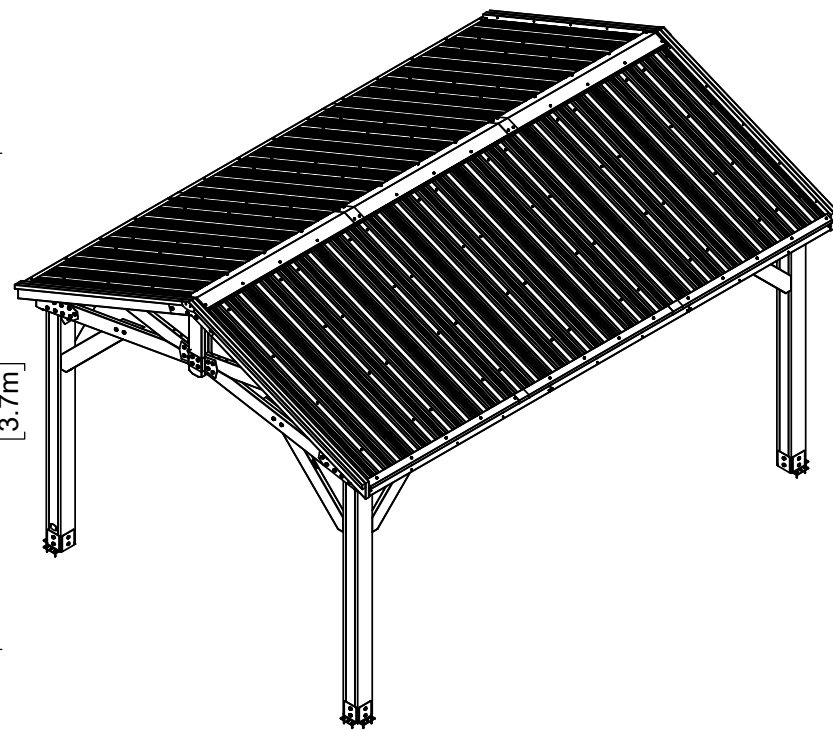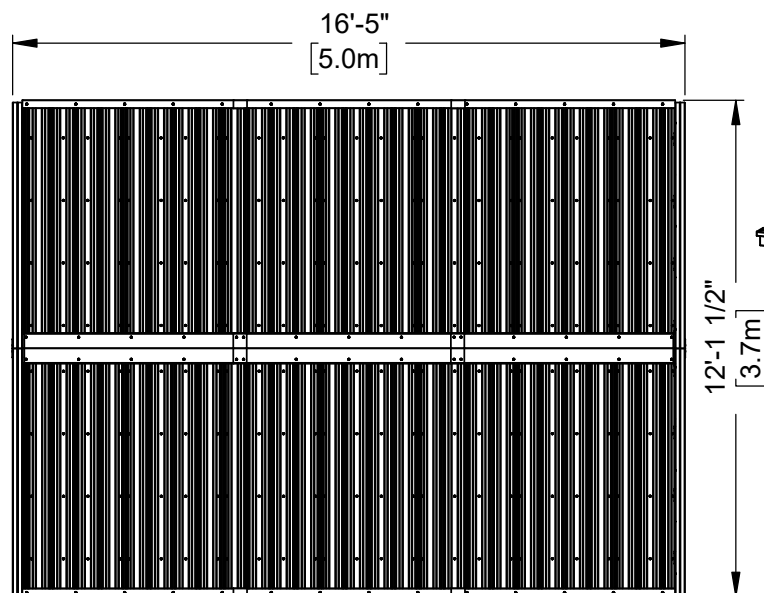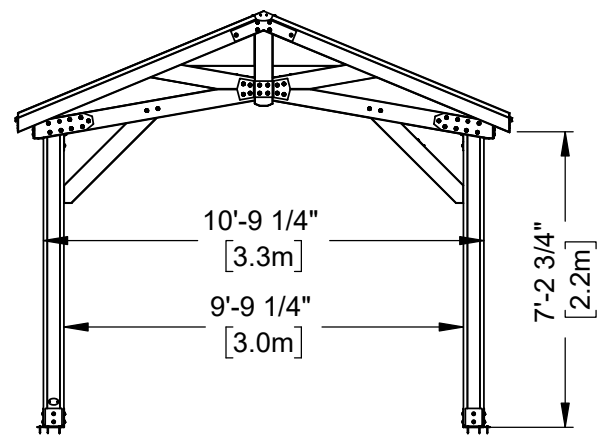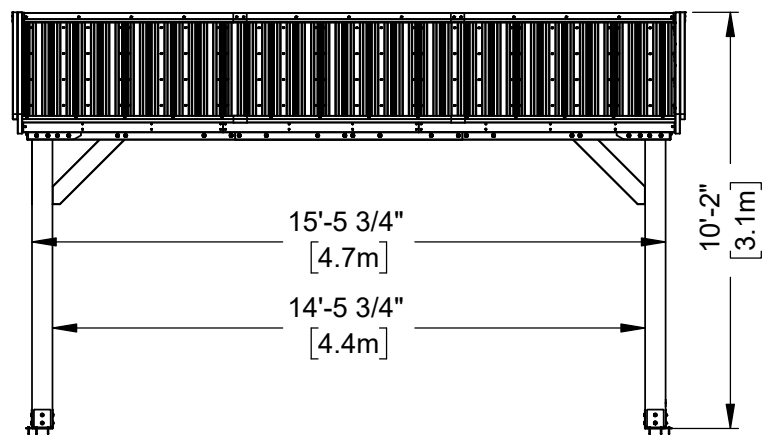


OWNER'S MANUAL - ANCHORING LAYOUT

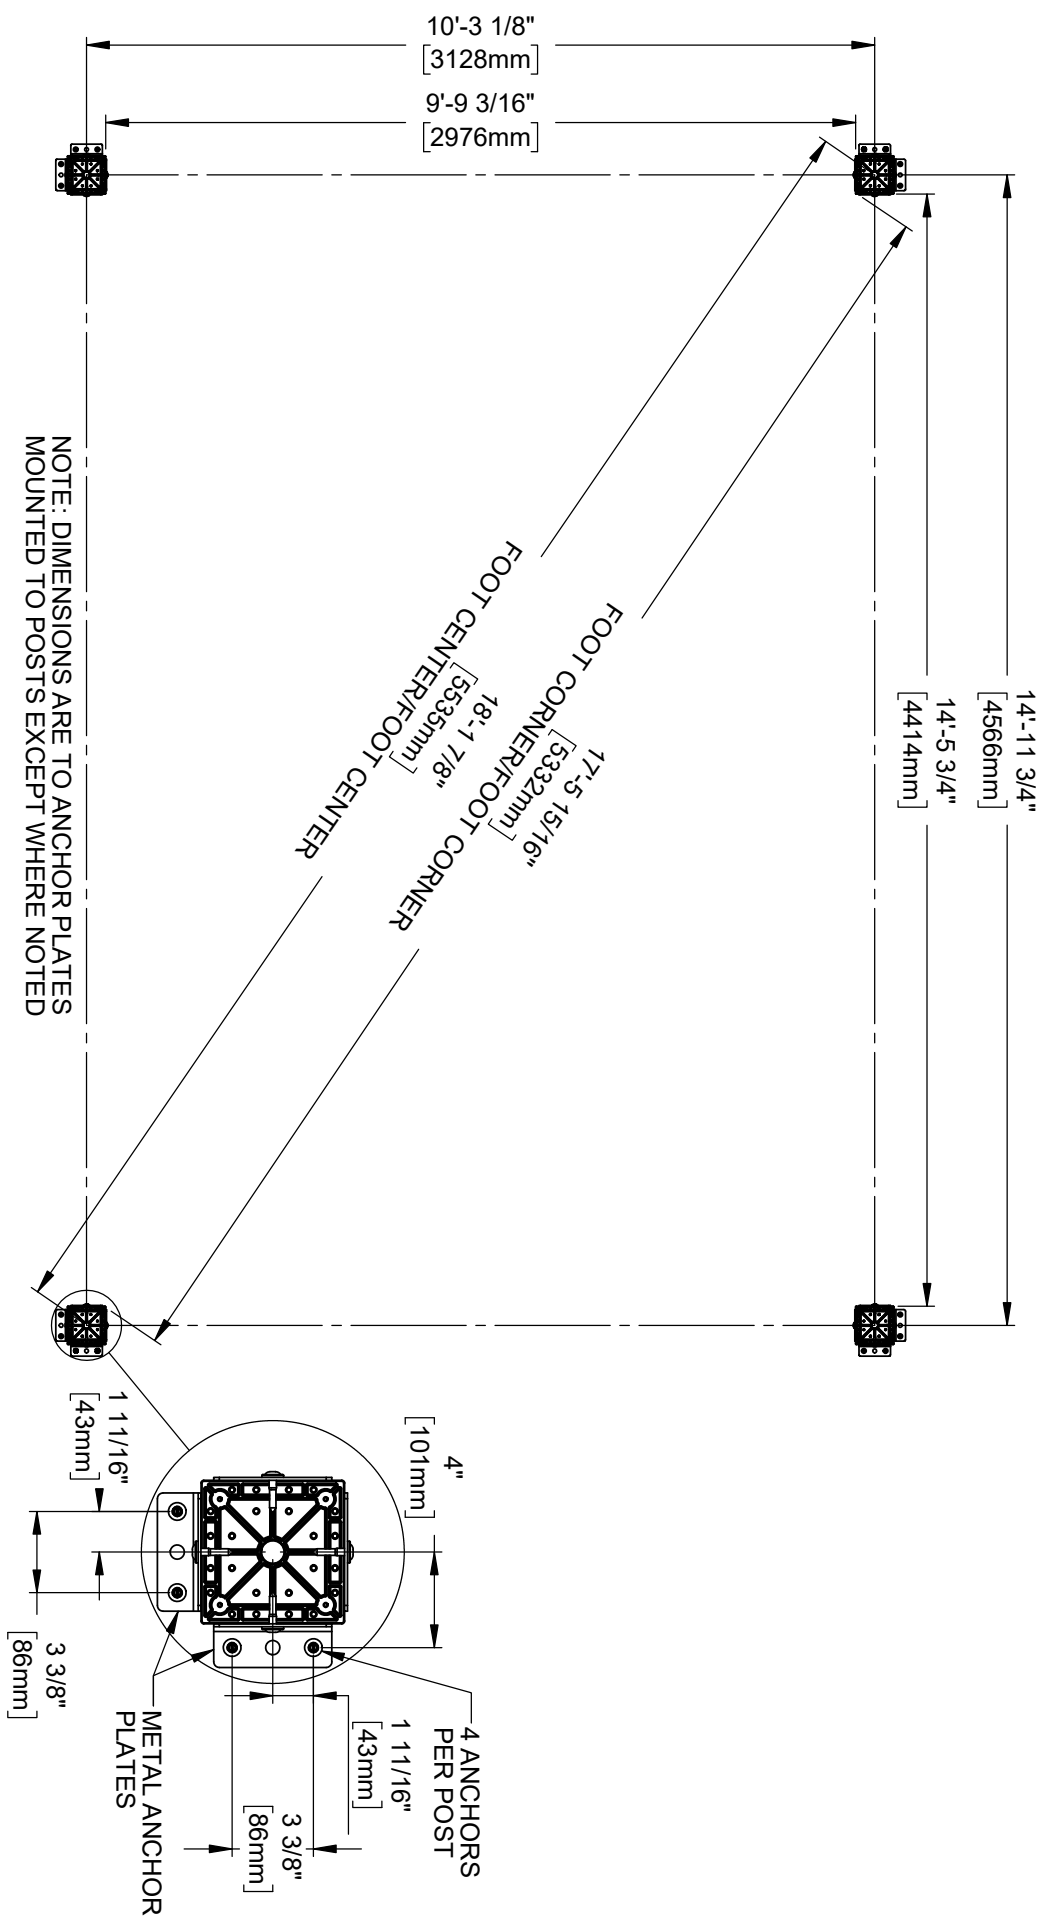


OWNER'S MANUAL - PARTS IDENTIFICATION


Wood Components (Not to Scale)



D01 | GABLE BOARD - W4L16850
(x4) | 1 3/8"x5 1/4"x24 1/4" (36x134x615)



D02 | TOP RAIL - W4L16851
(x4) | 1 3/8"x5 1/4"x27 5/8" (36x134x703)



D03 | TOP RAIL - W4L16852
(x4) | 1 3/8"x5 1/4"x66 5/8" (36x134x1692)



D04 | CORBEL - W4L16853
(x4) | 1 3/8"x5 1/4"x35 7/8" (36x134x910)




D05 | GABLE BOARD - W4L16854
(x2) | 1 3/8"x1 1/2"x5 1/4" (36x38x134)



D06 | CORBEL - W4L16855
(x3) | 1 3/8"x5 1/4"x45 5/8" (36x134x1160)




D07 | TOP RAIL - W4L16856
(x4) | 1 3/8"x5 1/4"x61" (36x134x1549)




D08 | TOP RAIL - W4L16857
(x2) | 1 3/8"x5 1/4"x66 5/8" (36x134x1692)




E01 | RAFTER - W4L16858
(x8) | 1 3/8"x3 3/8"x76 3/8" (36x86x1941)



E02 | TRUSS - W4L16859
(x4) | 1 7/16"x1 15/16"x74 15/16" (36x50x1902)



E03 | SHEATHING BOARD - W4L16860
(x8) | 1 3/8"x5 1/4"x75 1/8" (36x134x1907)



E04 | SHEATHING BOARD - W4L16861
(x8) | 1 3/8"x3 3/8"x57 3/8" (36x86x1458)




E05 | RAFTER - W4L16862
(x8) | 1 3/8"x3 3/8"x76 3/8" (36x86x1941)



E06 | ACCESSORY TRUSS - W4L16863
(x8) | 1 3/8"x3 3/8"x73 13/16" (36x86x1875)



E07 | SHEATHING BOARD - W4L16864
(x8) | 1 3/8"x3 3/8"x58 5/8" (36x86x1490)



E08 | RAFTER - W4L16865
(x6) | 1 3/8"x3 3/8"x76 3/8" (36x86x1941)



G01 | COVER BOARD - W4L16917
(x2) | 1"x5 1/4"x89 1/2" (24x134x2274)

OWNER'S MANUAL - PARTS IDENTIFICATION

Wood Components (Not to Scale)



AD01 | RAFTER - W4L16866
(x2) | 1"x4"x74 3/4" (24x102x1900)



AD02 | RAFTER - W4L16867
(x2) | 1"x4"x66 3/8" (24x102x1686)



AD03 | RAFTER - W4L16868
(x2) | 1"x4"x41 5/8" (24x102x1057)



H01 | FASCIA - W4L16869
(x2) | 1"x3 3/8"x57 3/8" (24x86x1458)



H02 | FASCIA - W4L16870
(x2) | 1"x3 3/8"x58 5/8" (24x86x1490)




H03 | FASCIA - W4L16871
(x2) | 1"x3 3/8"x58 3/8" (24x86x1482)



H04 | FASCIA - W4L16872
(x1) | 1"x3 3/8"x57 3/8" (24x86x1458)



H05 | FASCIA - W4L16873
(x2) | 1"x3 3/8"x75 1/8" (24x86x1907)



H06 | FASCIA - W4L16874
(x2) | 1"x3 3/8"x41 7/8" (24x86x1064)



H07 | FASCIA - W4L16875
(x1) | 1"x3 3/8"x57 3/8" (24x86x1458)



H08 | NOTCHED SUPPORT BOARD - W4L16915
(x2) | 1"x3 3/8"x89 1/2" (24x86x2274)



J09 | RIDGE CAP STIFFENER - W4L16876
(x4) | 1"x2 3/8"x53 7/8" (24x60x1367)




J10 | RIDGE CAP STIFFENER - W4L16877
(x2) | 1"x2 3/8"x83 1/2" (24x60x2121)

OWNER'S MANUAL - PARTS IDENTIFICATION


Wood Components (Not to Scale)




P01 | POST - W2A03501
(x2) | 6"x6"x89 1/2" (152x152x2274)



P02 | POST - W2A03502
(x2) | 6"x6"x89 1/2" (152x152x2274)




GP1 | GABLE PANEL - W2A03499
(x2) | 2 13/16"x5 1/4"x80 3/16" (72x134x2037)



GP2 | GABLE PANEL - W2A03500
(x2) | 2 13/16"x5 1/4"x80 3/16" (72x134x2037)




CA01 | CORBEL - W2A03504
(x1) | 1 7/16"x5 3/8"x46 1/16" (36x136x1160)

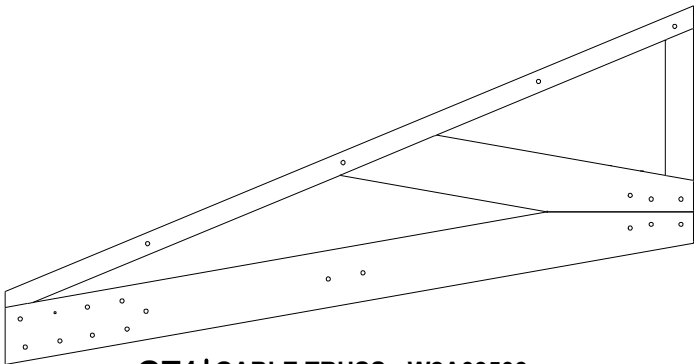

GT1 | GABLE TRUSS - W2A03503
(x4) | 1 7/16"x33 5/8"x64 9/16" (36x854x1640)


OWNER'S MANUAL - PARTS IDENTIFICATION

Hardware Components

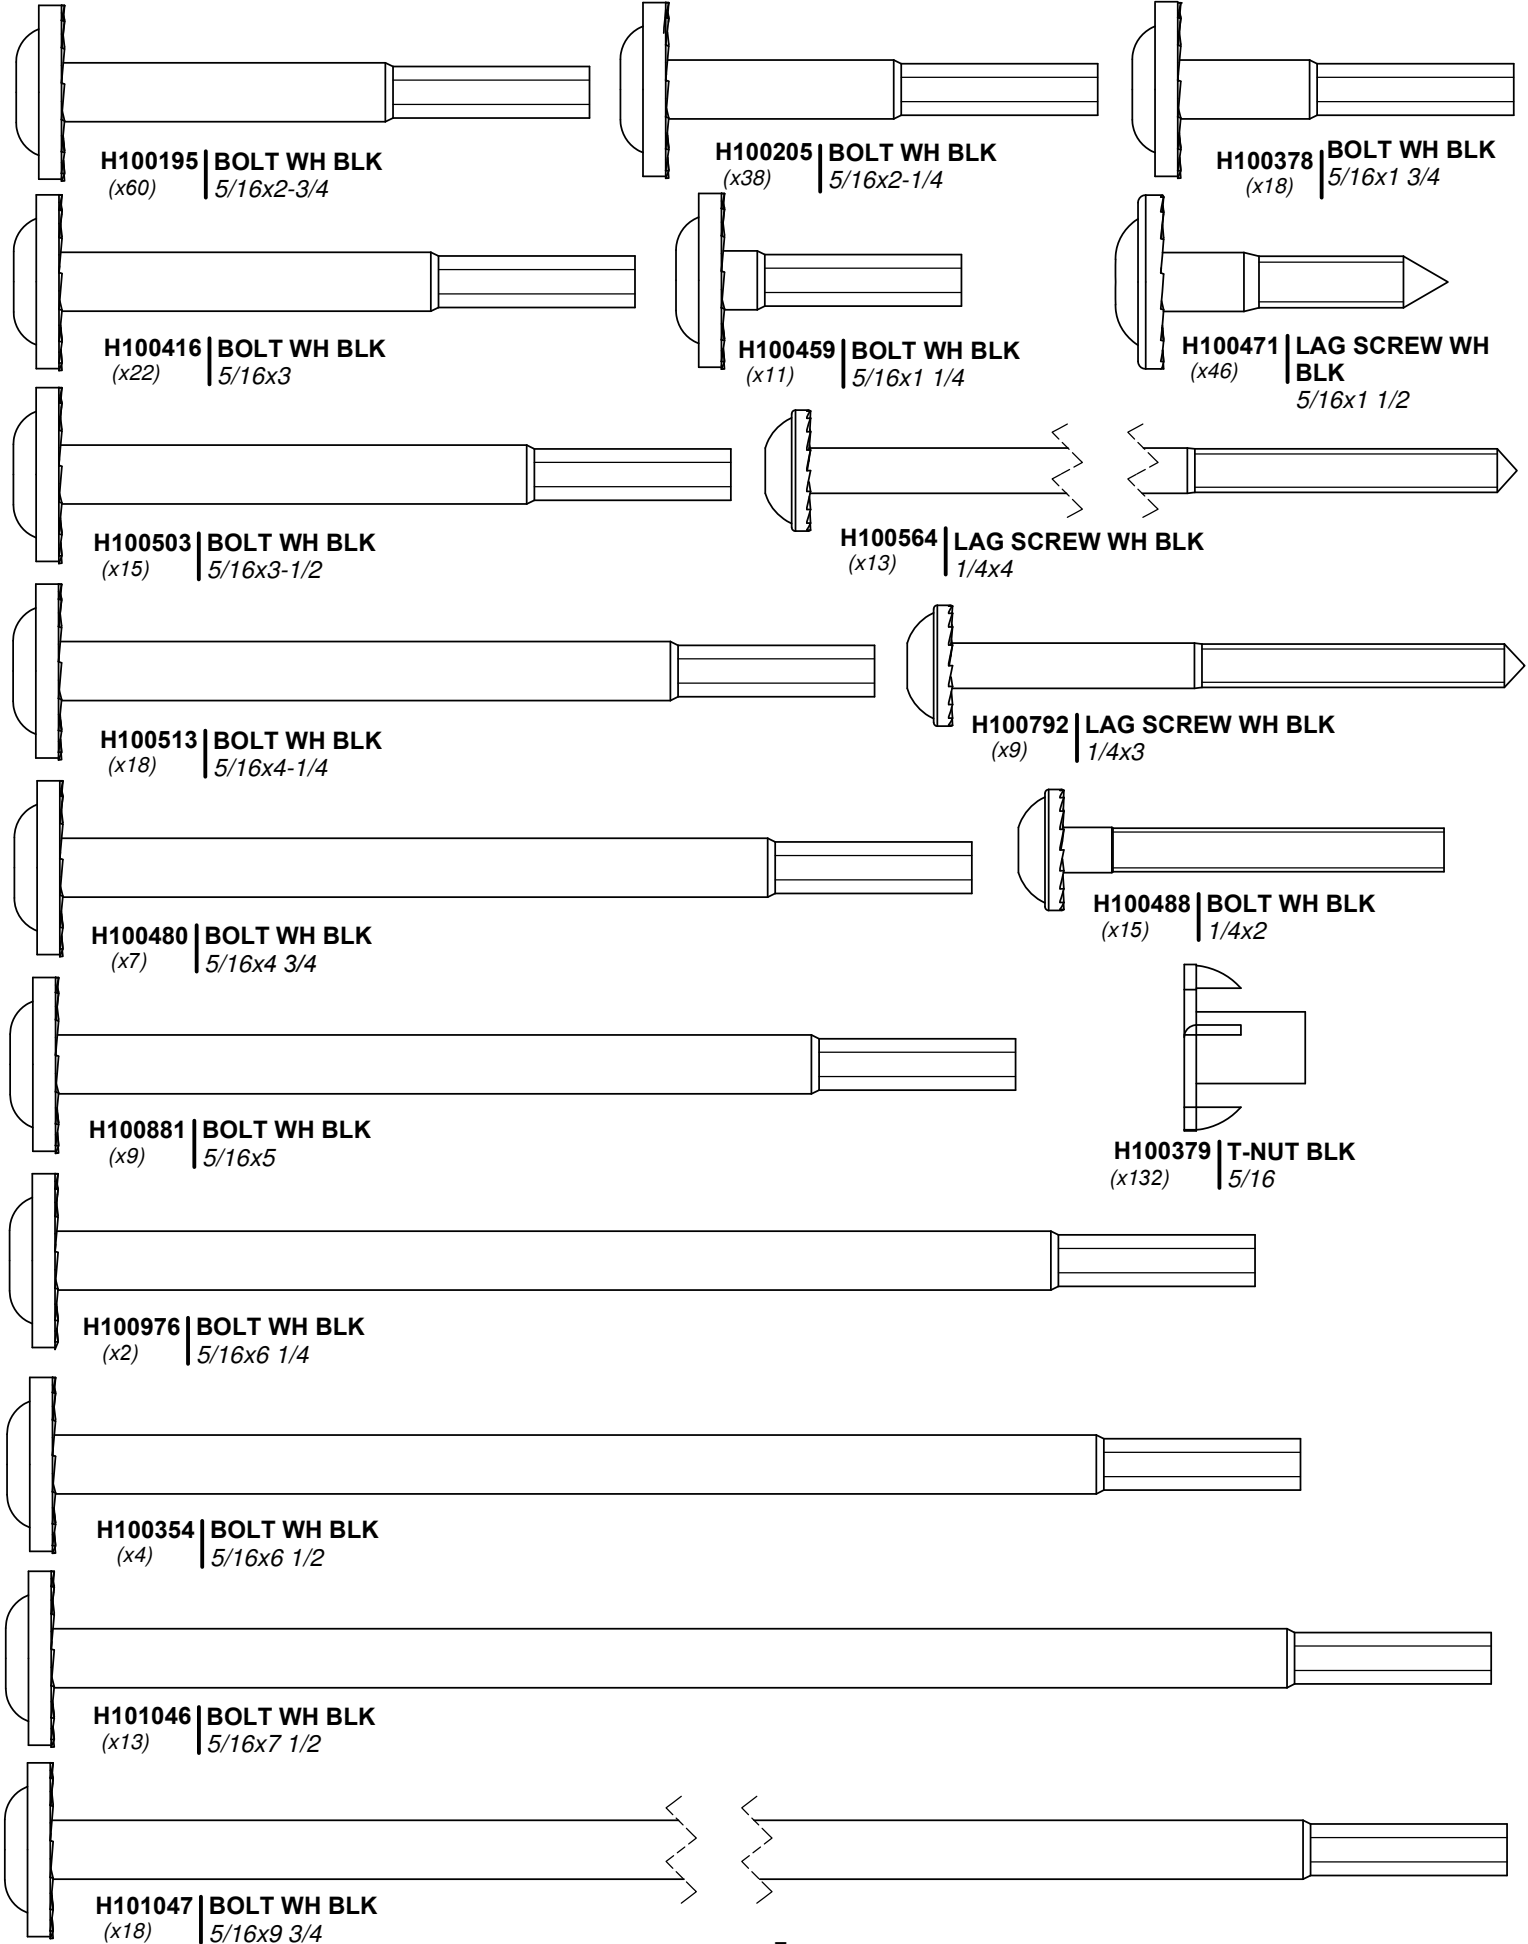


OWNER'S MANUAL - PARTS IDENTIFICATION


Hardware Components




H100201 | SCREW PFH BLK
(64) | 8x2-1/2




H100483 | SCREW PFH BLK
(x4) | 8x2 1/4




H100391 | SCREW PFH BLK
(x216) | 8x2




H100200 | SCREW PFH BLK
(x24) | 8x1 1/2




H100382 | SCREW PFH BLK
(x9) | 8x1 3/4



H100392 | SCREW PWH BLK
(x28) | 8x3/4




H100833 | SCREW WOODGRIP
(x250) | 10x3/4




H100759 | SCREW TAPPING
(x30) | 1/4x3/4




H100823 | SCREW PWH BLK
(x30) | 8x1-1/2

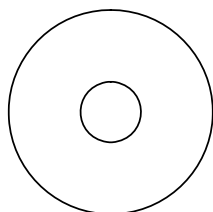


H100478 | WASHER FLAT BLK
(96) | 8x27

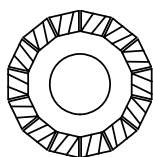


H100198 | WASHER LOCK EXT BLK
(x124) | 8x19

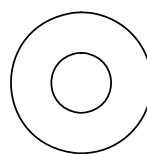


H100630 | WASHER FLAT BLK
(x33) | 8x19

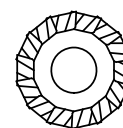

H100405 | WASHER LOCK EXT BLK
(x22) | 6x15




H100120 | SCREW CONCRETE ANCHOR
(x18) | 1/4x2




H100479 | NUT LOCK BLK
(x90) | 5/16




H100653 | NUT LOCK BLK
(x15) | 1/4

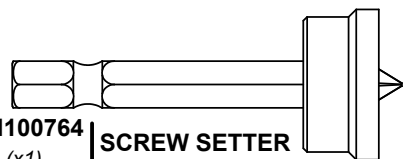


H100764 | SCREW SETTER
(x1) |




H100659 | LAG SCREW BLK
(x4) | 5/16x1 1/2

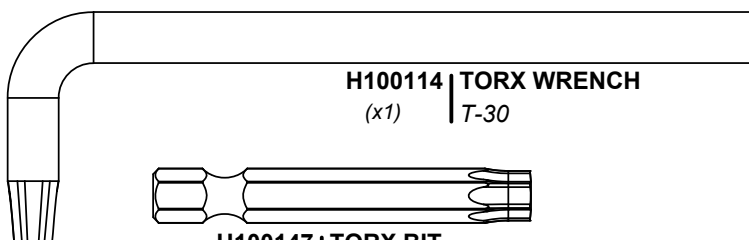

H100114 | TORX WRENCH
(x1) | T-30



H100147 | TORX BIT
(x1) | T-30




H101106 | HEX DRIVER
(x1) | 5/16




H101100 | MAGNETIC DRIVER
(x1) |

OWNER'S MANUAL - PARTS IDENTIFICATION


Accessory Components (Not to Scale)

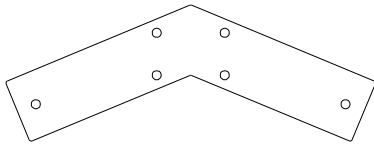


A4M01130
(x2) | GABLE BRACKET

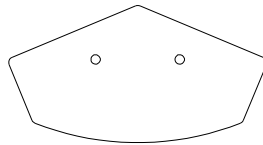


A4M01147
(x2) | PEAK SEAM BRACKET

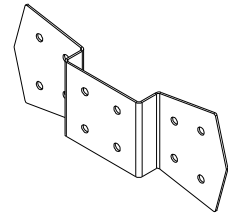


A4M01129
(x4) | GABLE BRACKET




A4M00978
(x8) | POST PLATE




A4M00977
(x8) | POST ANCHORING PLATE




A6P00308
(x4) | 6x6 POST FOOT

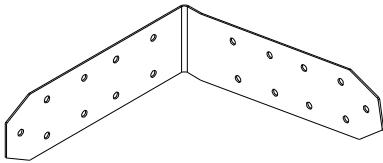


A4M01301
(x2) | RIGHT OUTSIDE BRACKET

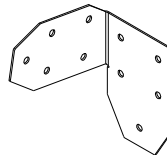


A4M01232
(x2) | LEFT ANGLE BRACKET




A4M01752
(x14) | RAFTER CLIP

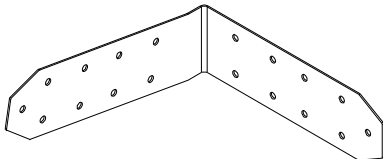

A4M01302
(x2) | LEFT OUTSIDE BRACKET

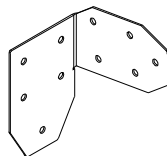


A4M01233
(x2) | RIGHT ANGLE BRACKET




A4M01148
(x2) | TRUSS BRACKET



A100241
(x1) | BYD ID TAG
(SMALL)
WITHOUT AGES

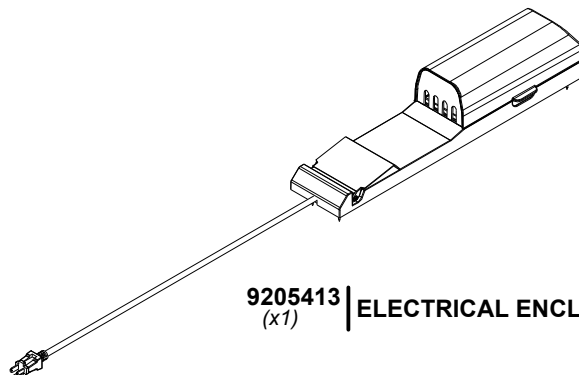











9205413
(x1) | ELECTRICAL ENCLOSURE

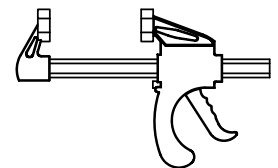

A6P00460
(x2) | 6" QUICK RELEASE
BAR CLAMP

OWNER'S MANUAL - PARTS IDENTIFICATION

Accessory Components (Not to Scale)

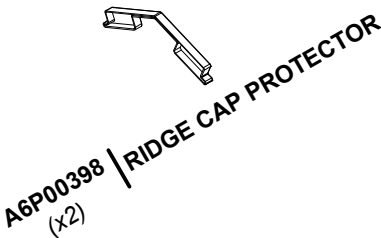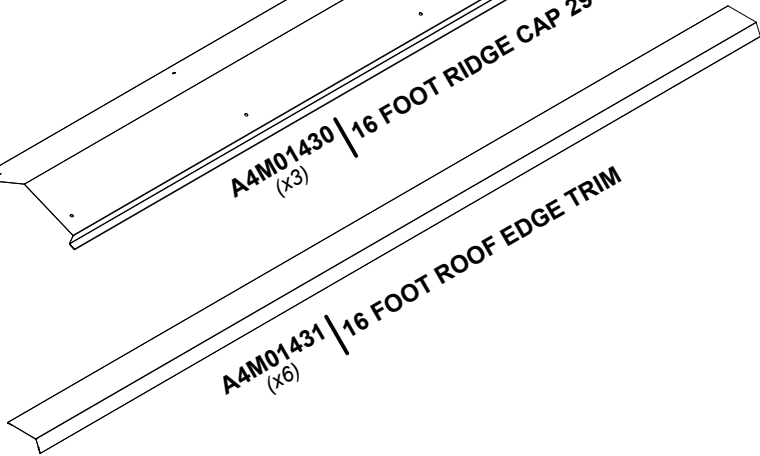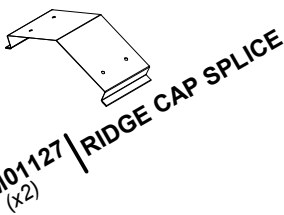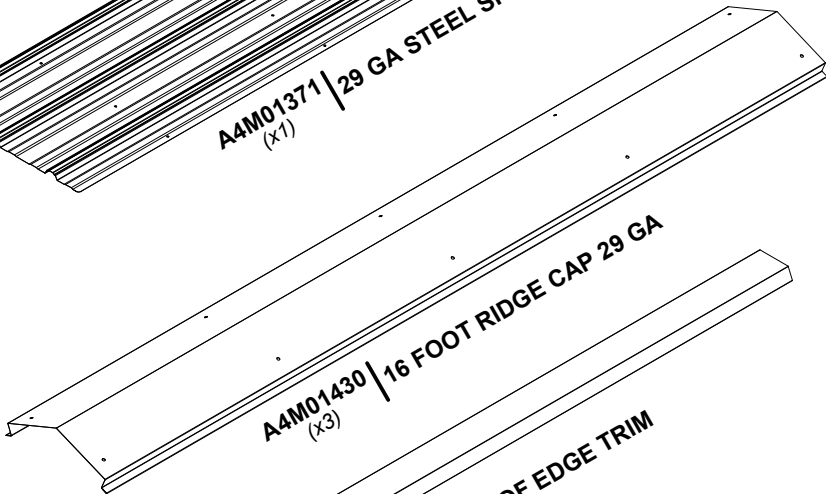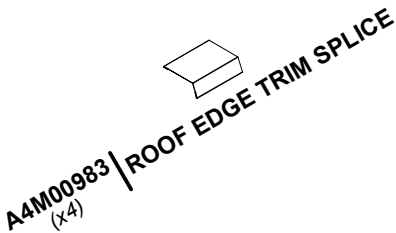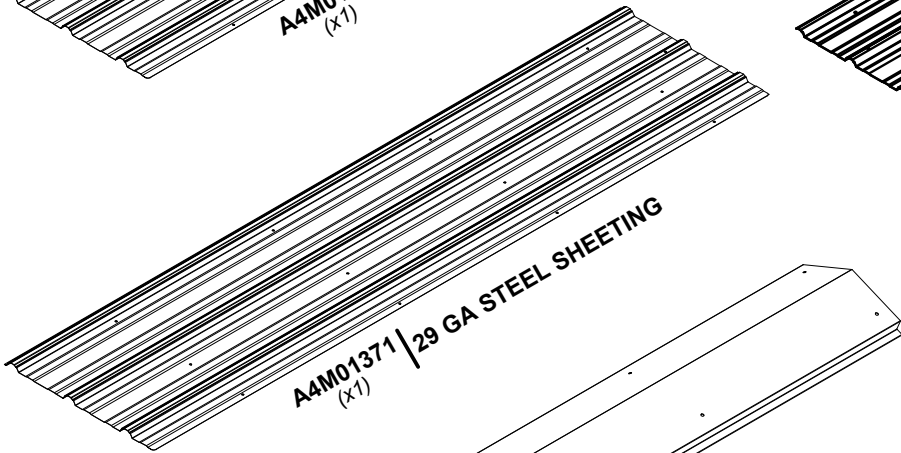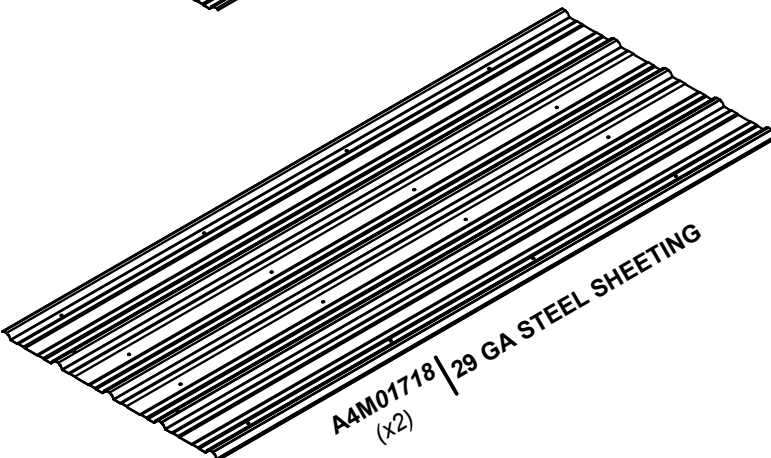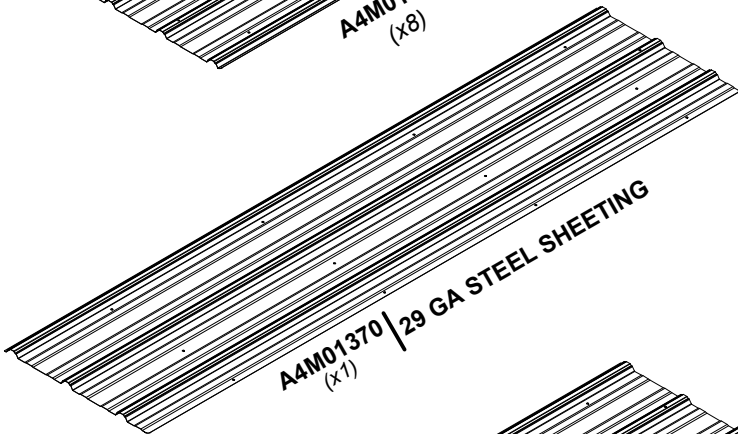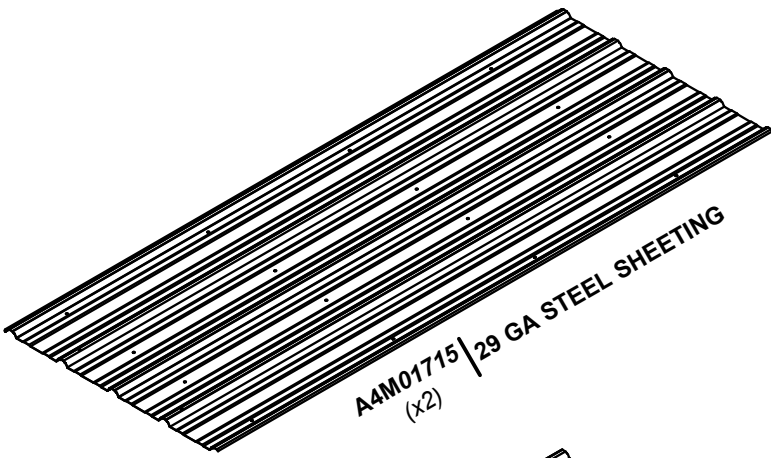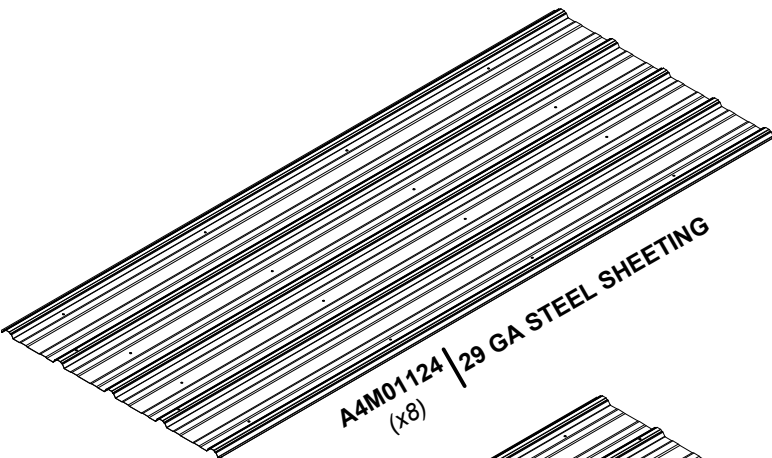

PRE-ASSEMBLY STEP 1 - SORTING PARTS

It is critical for ease of assembly that you take the time to sort and organize the wood and hardware.

WOOD PARTS:


- Organize wood parts by the three-digit, alpha-numeric number stamped on each board (ex. P01).
- If there are multiple boards with the same stamped number, stack those pieces together.
- Stamps can be found on the flat surface of the boards or on the end of the boards.
- Allow yourself plenty of room - the wood pieces can take up a significant amount of space.

NOTE: CARTONS ARE NOT ORGANIZED BY BOARD NUMBER.



HARDWARE PARTS:

- We recommend that you have a separate table to organize the hardware.
- Hardware bags are printed with a seven-digit, alpha-numeric part number.
- You can organize your hardware by part number or group by hardware type (i.e. bolts, nuts, etc.).
- During assembly you only need to reference the last four digits of the number.

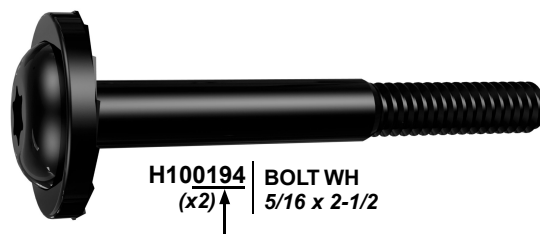

PRE-ASSEMBLY STEP 2 - TOOLS REQUIRED



Cordless Drill or
Electric Drill




Drill Attachments:
Phillips Head



1/8", 3/16", 3/8" &
7/16" Drill Bits



Phillips Screw Driver



Open End Wrenches
1/2" & 9/16"




3/8" Drive Ratchet, 1/2" &
7/16" STD Sockets 1/2" & 7/16"
Deep Sockets




Claw Hammer



Rubber Mallet -
Optional

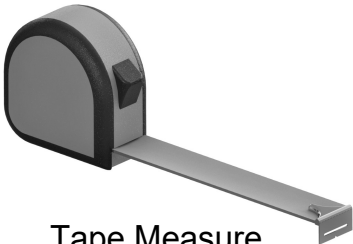

Tape Measure

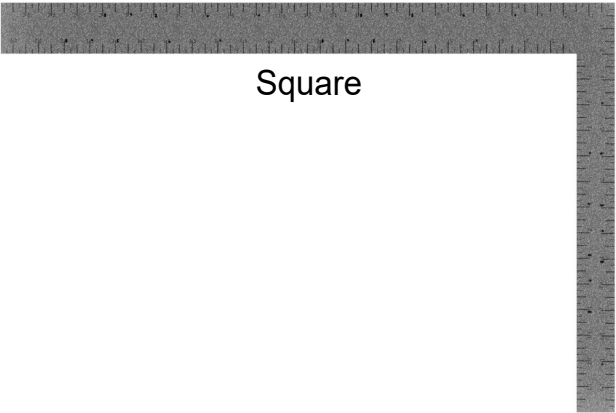

Square



Level 24"

PRE-ASSEMBLY STEP 3 - CHOOSE YOUR ASSEMBLY METHOD

There are several types of assembly instructions available to you.


1. Printed Assembly Manual included with your set
2. BILT APP - 3D interactive instructions
3. Combination of the Printed Manual and BILT APP (Note: Step numbers can differ between the two methods)



Scan for easy 3D instructions

Download the BILT app
before you begin



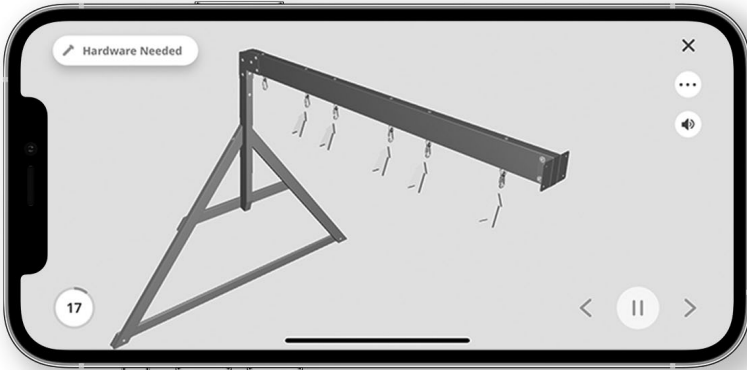


STEP 4 - POST ASSEMBLY

QTY	PART NUMBER	DESCRIPTION
8	H100200	SCREW PFH 8 X 1 1/2 BLK



P01 | POST - W2A03501
(x1) | 6"x6"x89 1/2" (152x152x2274)





A6P00308 | 6x6 POST FOOT
(x2)



P02 | POST - W2A03502
(x1) | 6"x6"x89 1/2" (152x152x2274)

FOR EASE OF ASSEMBLY, WE RECOMMEND
USING SAW HORSES FOR STEPS 4 - 11.

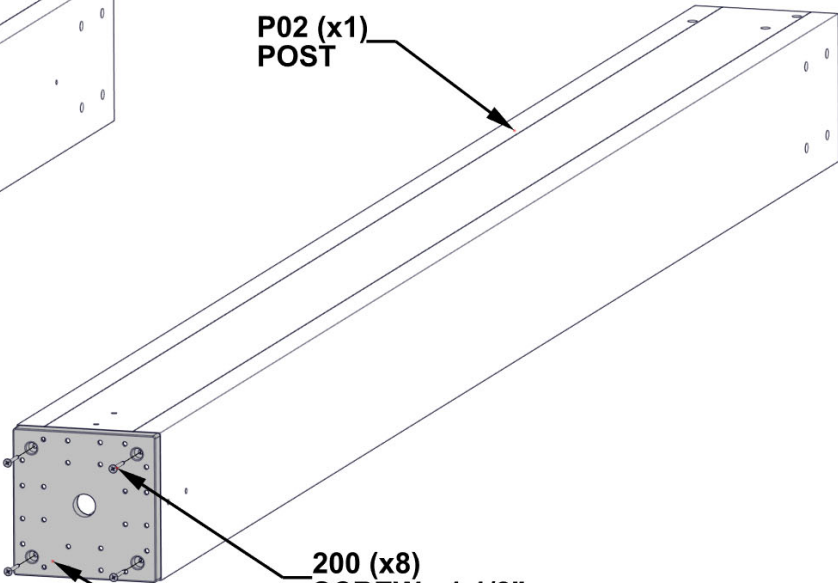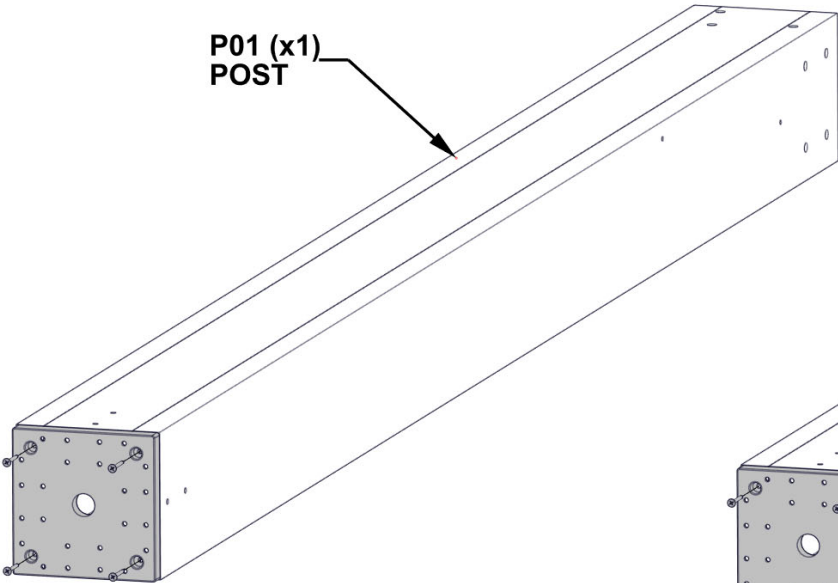

ALIGN POST FOOT AND DRILL
1/8" PILOT HOLES FOR THE
ATTACHMENT OF HARDWARE.

308 (x2)
6x6 POST FOOT

STEP 5 - GABLE ASSEMBLY

QTY	PART NUMBER	DESCRIPTION
2	H100483	SCREW PFH 8 X 2 1/4 BLK




D01 | GABLE BOARD - W4L16850
(x1) | 1 3/8"x5 1/4"x24 1/4" (36x134x615)





D05 | GABLE BOARD - W4L16854
(x1) | 1 3/8"x1 1/2"x5 1/4" (36x38x134)

**ALIGN D05 WITH D01 ENSURING
THAT BOTTOM FACES ARE
FLUSH. DRILL 1/8" PILOT HOLES
IN D01 USING D05 AS TEMPLATE.**

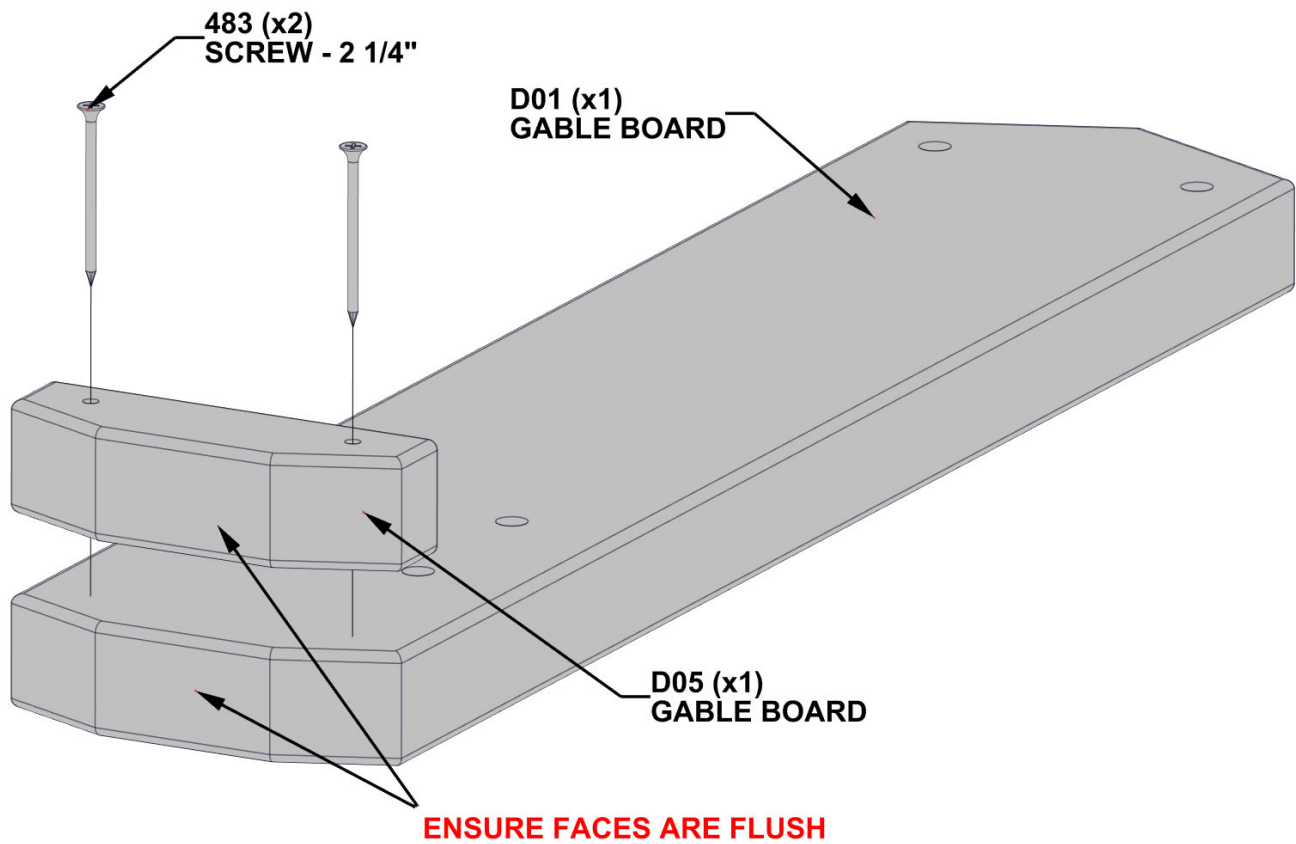


STEP 6 - GABLE ASSEMBLY

QTY	PART NUMBER	DESCRIPTION
4	H100478	WASHER FLAT 8X27 BLK
4	H100479	NUT LOCK 5/16 BLK
4	H100881	BOLT WH 5/16 X 5 BLK

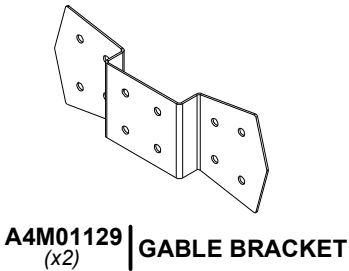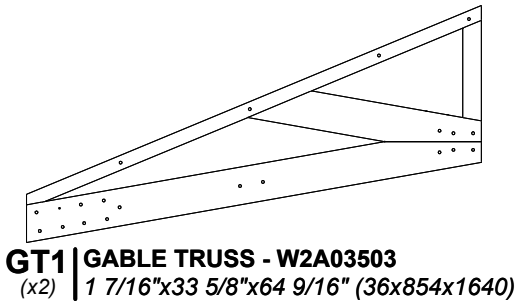


IF NEEDED FOR EASE OF ASSEMBLY, USE METAL BRACKET AS A GUIDE AND DRILL THROUGH USING A 7/16" - (10mm) DRILL BIT, THEN ASSEMBLE.

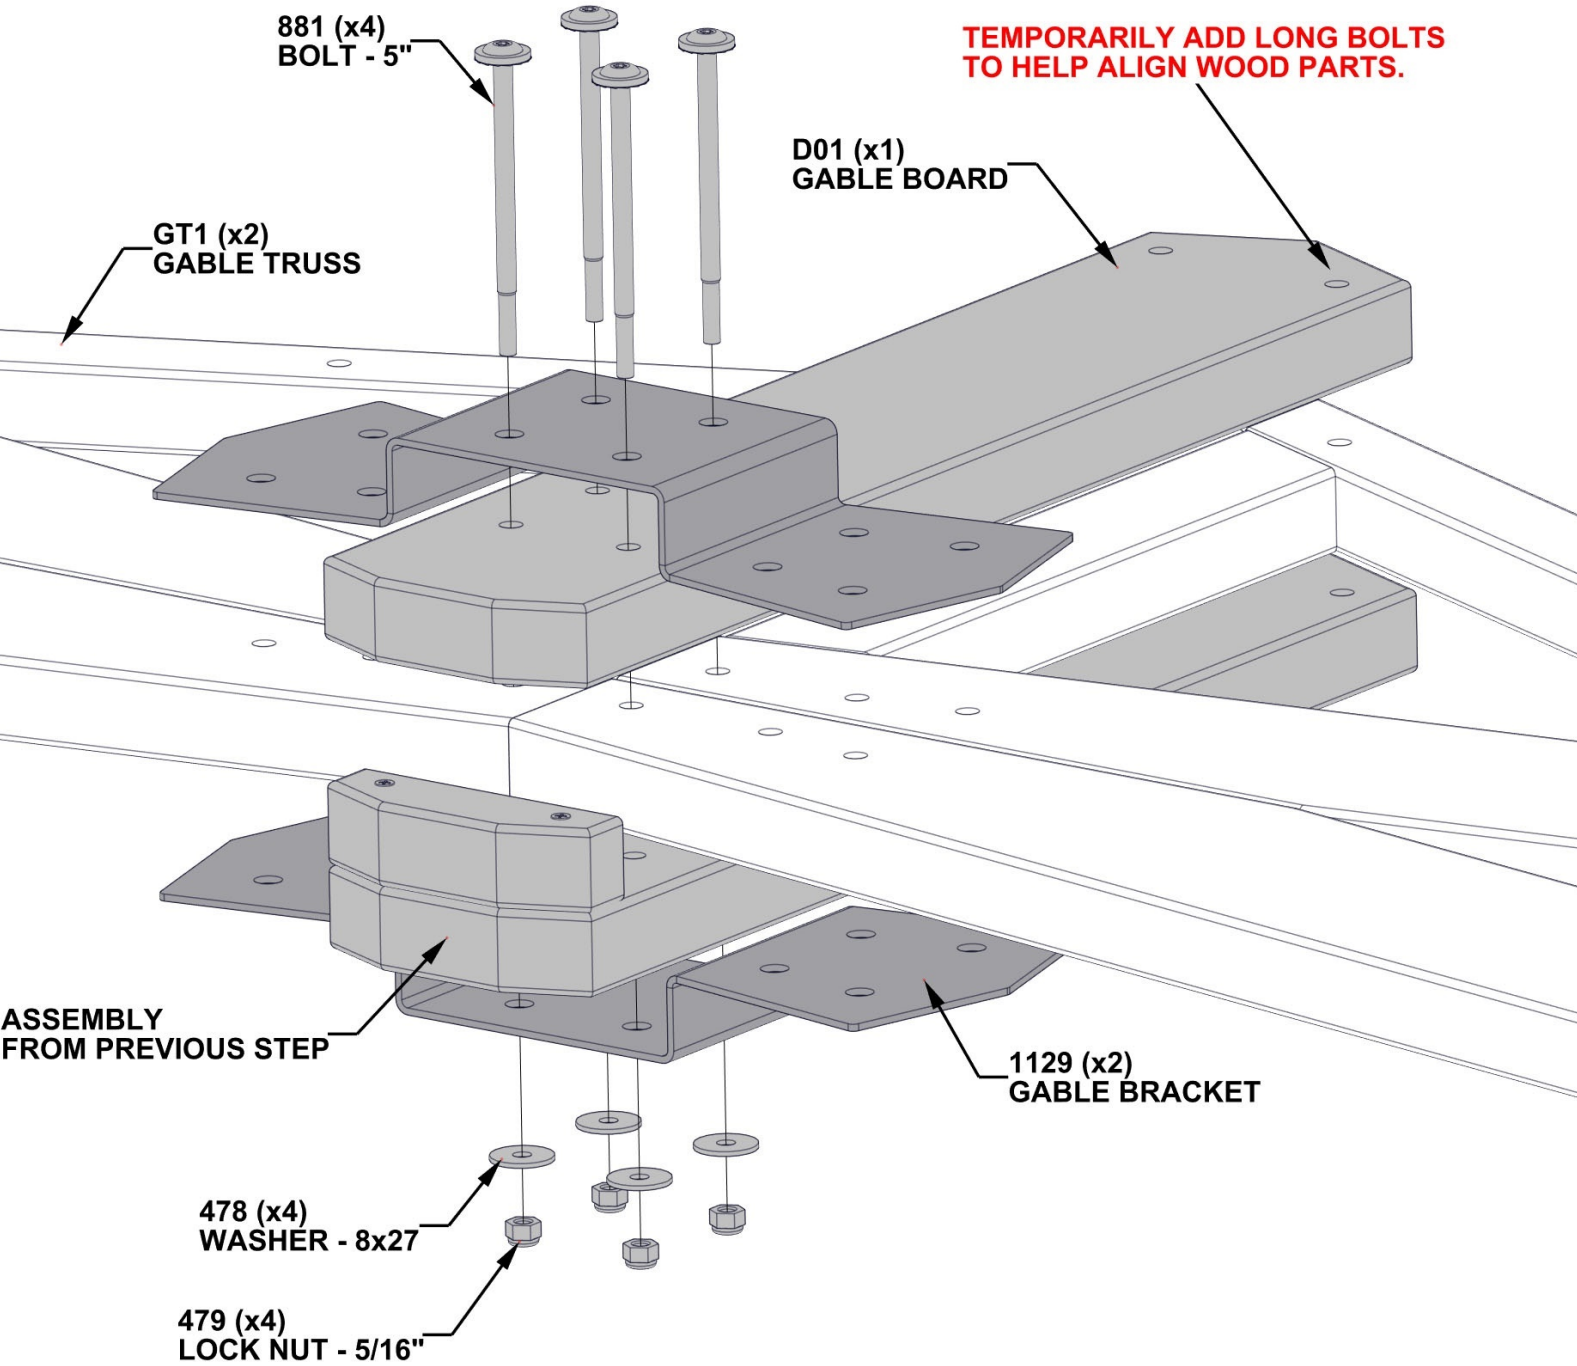

STEP 7 - GABLE ASSEMBLY

QTY	PART NUMBER	DESCRIPTION
8	H100205	BOLT WH 5/16 X 2 1/4 BLK
8	H100478	WASHER FLAT 8X27 BLK
8	H100479	NUT LOCK 5/16 BLK

IF NEEDED FOR EASE OF ASSEMBLY, USE METAL BRACKET AS A GUIDE AND DRILL THROUGH USING A 7/16" - (10mm) DRILL BIT, THEN ASSEMBLE.

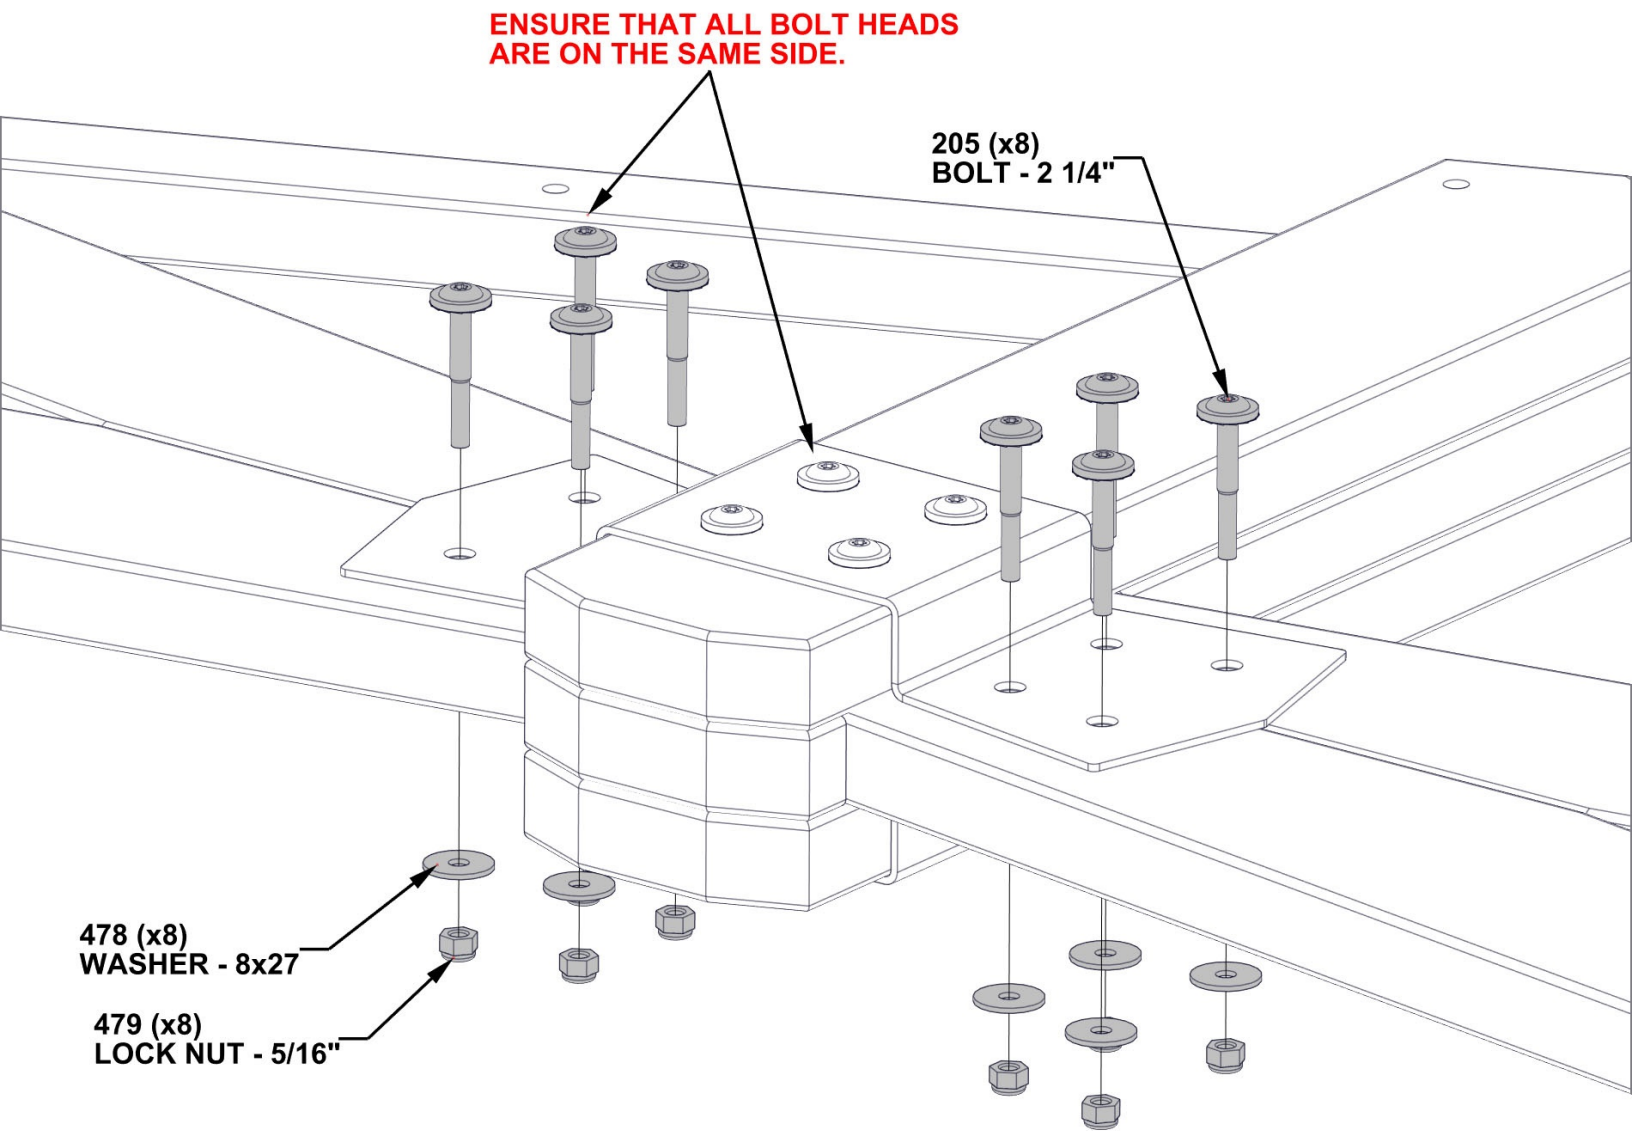

STEP 8A - GABLE ASSEMBLY

P01 | POST - W2A03501
(x1) | 6"x6"x89 1/2" (152x152x2274)


D02 | TOP RAIL - W4L16851
(x1) | 1 3/8"x5 1/4"x27 5/8" (36x134x703)

D07 | TOP RAIL - W4L16856
(x1) | 1 3/8"x5 1/4"x61" (36x134x1549)

A4M01232 | LEFT ANGLE BRACKET
(x1)

A4M01302 | LEFT OUTSIDE BRACKET
(x1)

QTY	PART NUMBER	DESCRIPTION
5	H100205	BOLT WH 5/16 X 2 1/4 BLK
8	H100379	T-NUT 5/16 BLK
5	H100416	BOLT WH 5/16 X 3 BLK
1	H100471	LAG SCREW WH 5/16 X 1 1/2 BLK
10	H100478	WASHER FLAT 8X27 BLK
9	H100479	NUT LOCK 5/16 BLK
1	H100659	LAG SCREW HEX 5/16x1 1/2 BLK
3	H101046	BOLT WH 5/16 X 7 1/2 BLK
4	H101047	BOLT WH 5/16 X 9 3/4 BLK

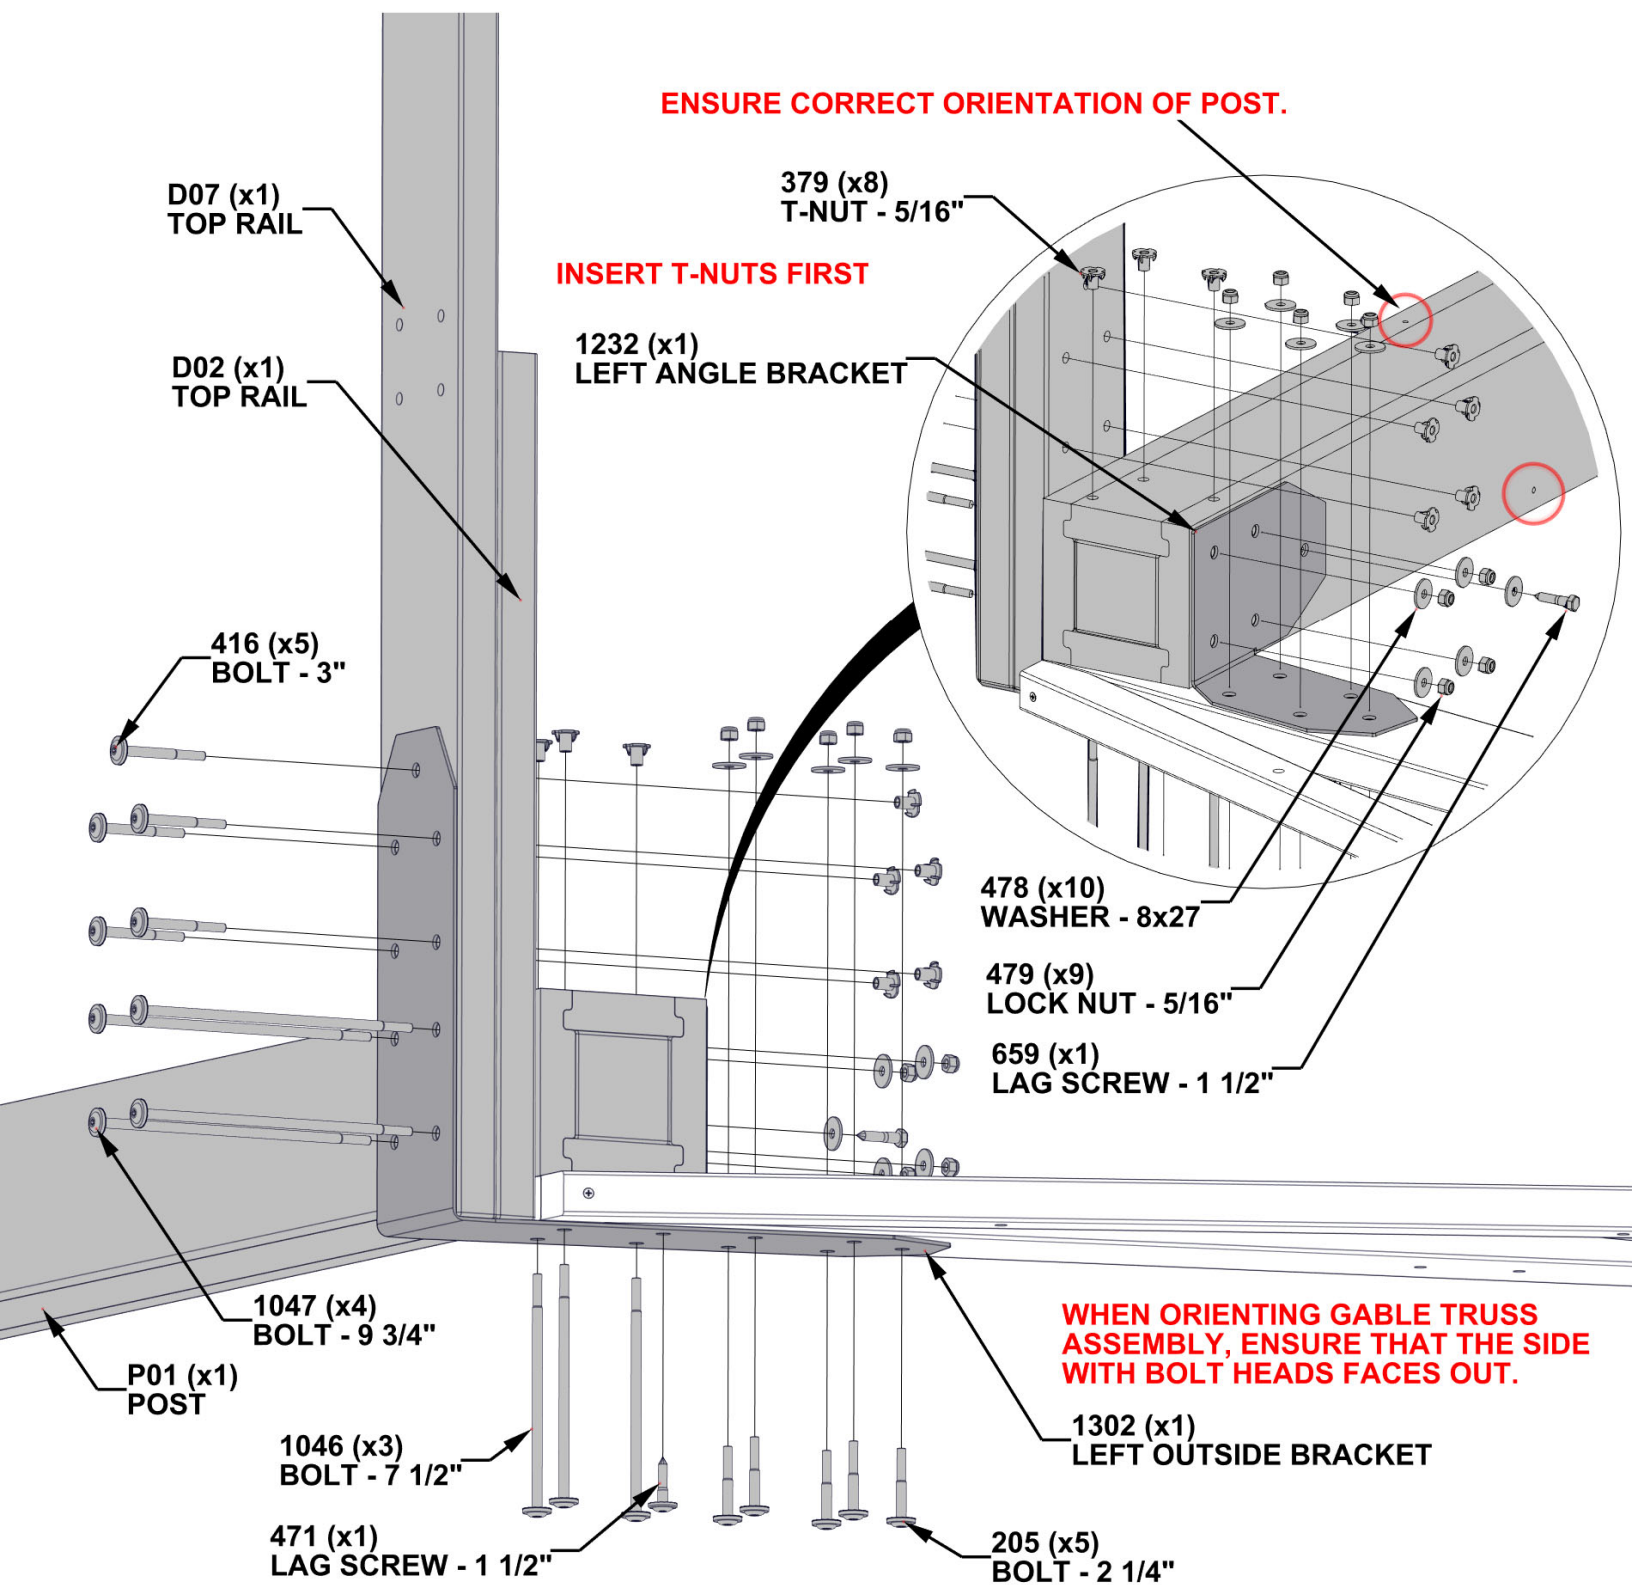

STEP 8B - GABLE ASSEMBLY

P02 | POST - W2A03502
(x1) | 6"x6"x89 1/2" (152x152x2274)

D02 | TOP RAIL - W4L16851
(x1) | 1 3/8"x5 1/4"x27 5/8" (36x134x703)

D07 | TOP RAIL - W4L16856
(x1) | 1 3/8"x5 1/4"x61" (36x134x1549)

A4M01233 | RIGHT ANGLE
(x1) | BRACKET

A4M01301 | RIGHT OUTSIDE
(x1) | BRACKET

QTY	PART NUMBER	DESCRIPTION
5	H100205	BOLT WH 5/16 X 2 1/4 BLK
8	H100379	T-NUT 5/16 BLK
5	H100416	BOLT WH 5/16 X 3 BLK
1	H100471	LAG SCREW WH 5/16 X 1 1/2 BLK
10	H100478	WASHER FLAT 8X27 BLK
9	H100479	NUT LOCK 5/16 BLK
1	H100659	LAG SCREW HEX 5/16x1 1/2 BLK
3	H101046	BOLT WH 5/16 X 7 1/2 BLK
4	H101047	BOLT WH 5/16 X 9 3/4 BLK

ENSURE CORRECT ORIENTATION OF POST.

INSERT T-NUTS FIRST

379 (x8)
T-NUT - 5/16"

1233 (x1)
RIGHT ANGLE BRACKET

D07 (x1)
TOP RAIL

D02 (x1)
TOP RAIL

416 (x5)
BOLT - 3"

479 (x9)
LOCK NUT - 5/16"

478 (x10)
WASHER - 8x27

659 (x1)
LAG SCREW - 1 1/2"

**WHEN ORIENTING GABLE TRUSS
ASSEMBLY, ENSURE THAT THE SIDE
WITH BOLT HEADS FACES OUT.**

1301 (x1)
RIGHT OUTSIDE BRACKET

1047 (x4)
BOLT - 9 3/4"

P02 (x1)
POST

1046 (x3)
BOLT - 7 1/2"

205 (x5)
BOLT - 2 1/4"

471 (x1)
LAG SCREW - 1 1/2"

STEP 9 - GABLE ASSEMBLY

QTY	PART NUMBER	DESCRIPTION
4	H100195	BOLT WH 5/16 X 2 3/4 BLK
4	H100198	WASHER LOCK EXT 8X19 BLK
4	H100379	T-NUT 5/16 BLK
2	H100405	WASHER LOCK EXT 6X15 BLK
2	H100792	LAG SCREW WH 1/4 X 3 BLK




CA01 | CORBEL - W2A03504
(x1) | 1 7/16"x5 3/8"x46 1/16" (36x136x1160)




D06 | CORBEL - W4L16855
(x3) | 1 3/8"x5 1/4"x45 5/8" (36x134x1160)

TWO D06 BOARDS WILL BE USED FOR OTHER END GABLE.

INSERT T-NUTS FIRST

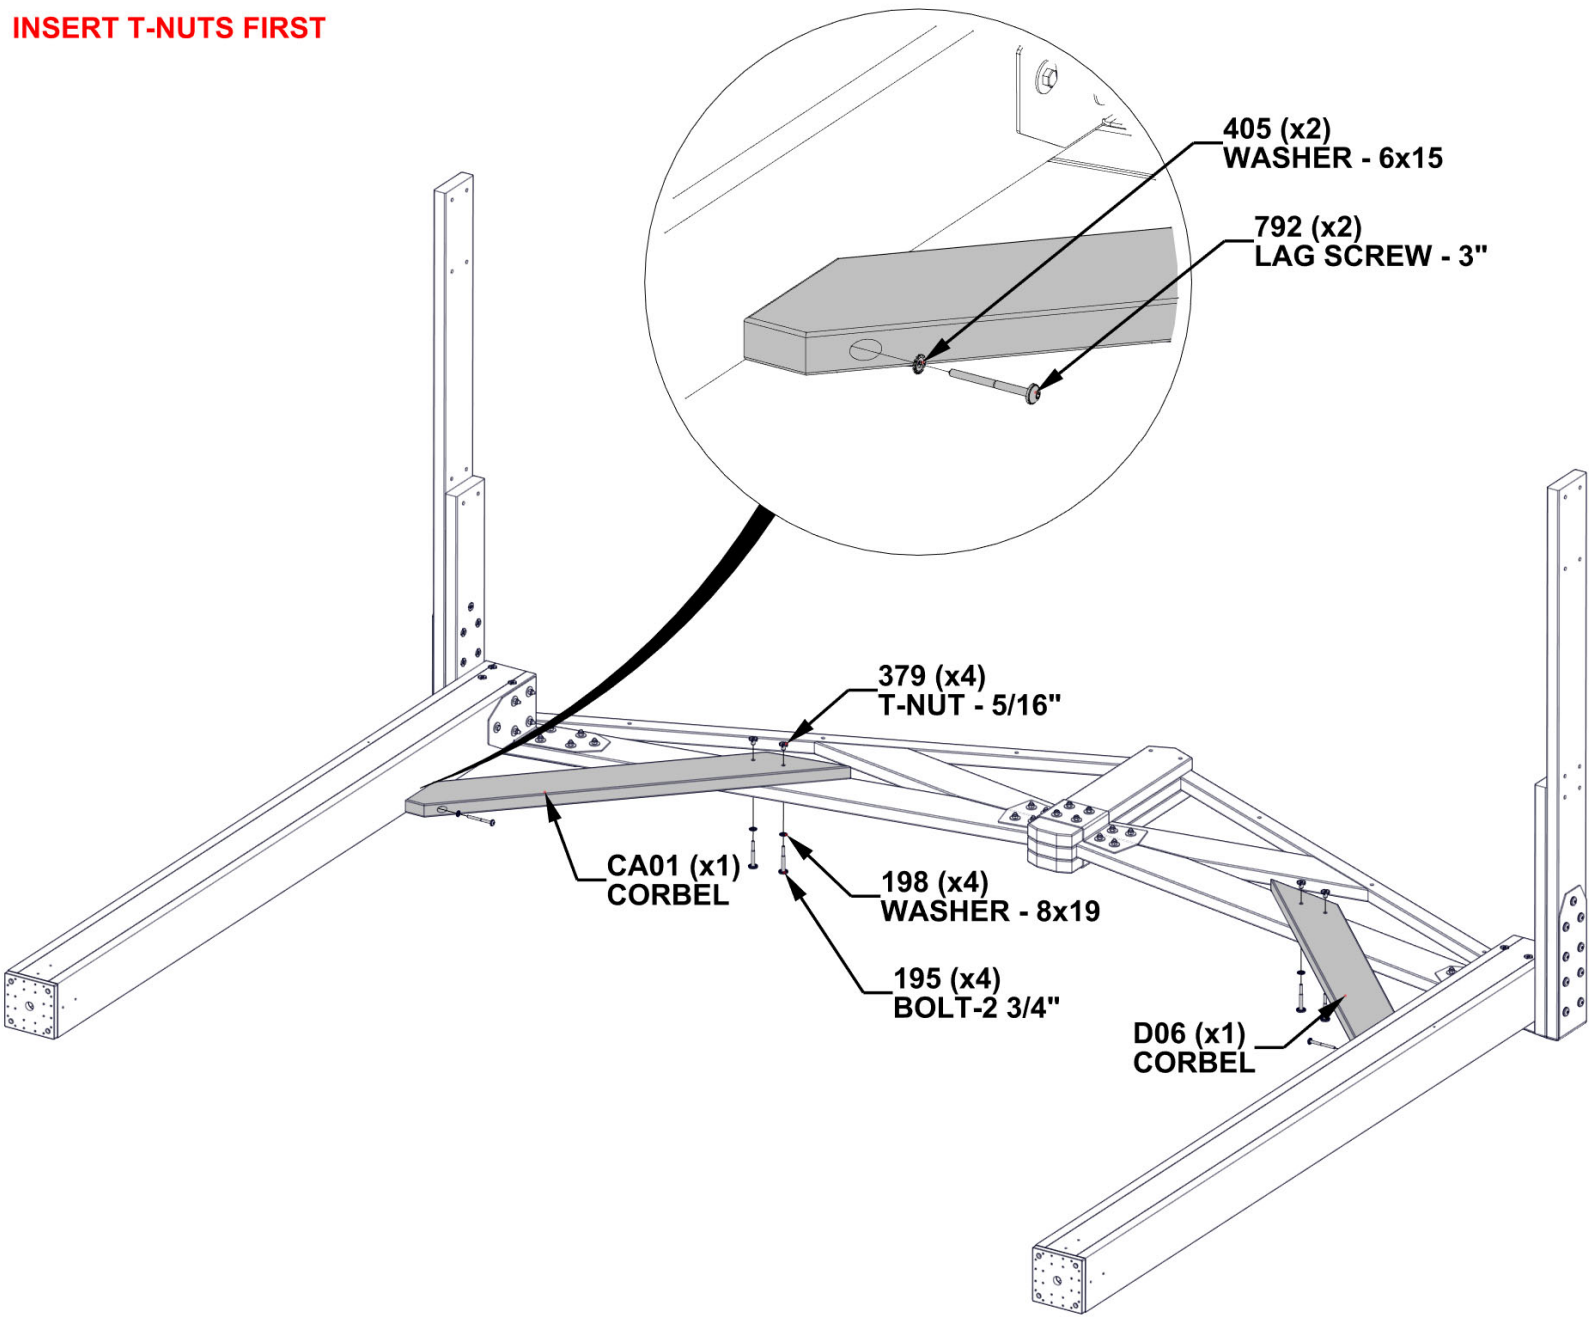

STEP 10 - GAZEBO ASSEMBLY




D03 | TOP RAIL - W4L16852
(x2) | 1 3/8"x5 1/4"x66 5/8" (36x134x1692)



D04 | CORBEL - W4L16853
(x2) | 1 3/8"x5 1/4"x35 7/8" (36x134x910)

QTY	PART NUMBER	DESCRIPTION
8	H100195	BOLT WH 5/16 X 2 3/4 BLK
16	H100198	WASHER LOCK EXT 8X19 BLK
4	H100201	SCREW PFH 8 X 2 1/2 BLK
32	H100379	T-NUT 5/16 BLK
2	H100405	WASHER LOCK EXT 6X15 BLK
8	H100513	BOLT WH 5/16 X 4 1/4 BLK
2	H100792	LAG SCREW WH 1/4 X 3 BLK

INSERT T-NUTS FIRST

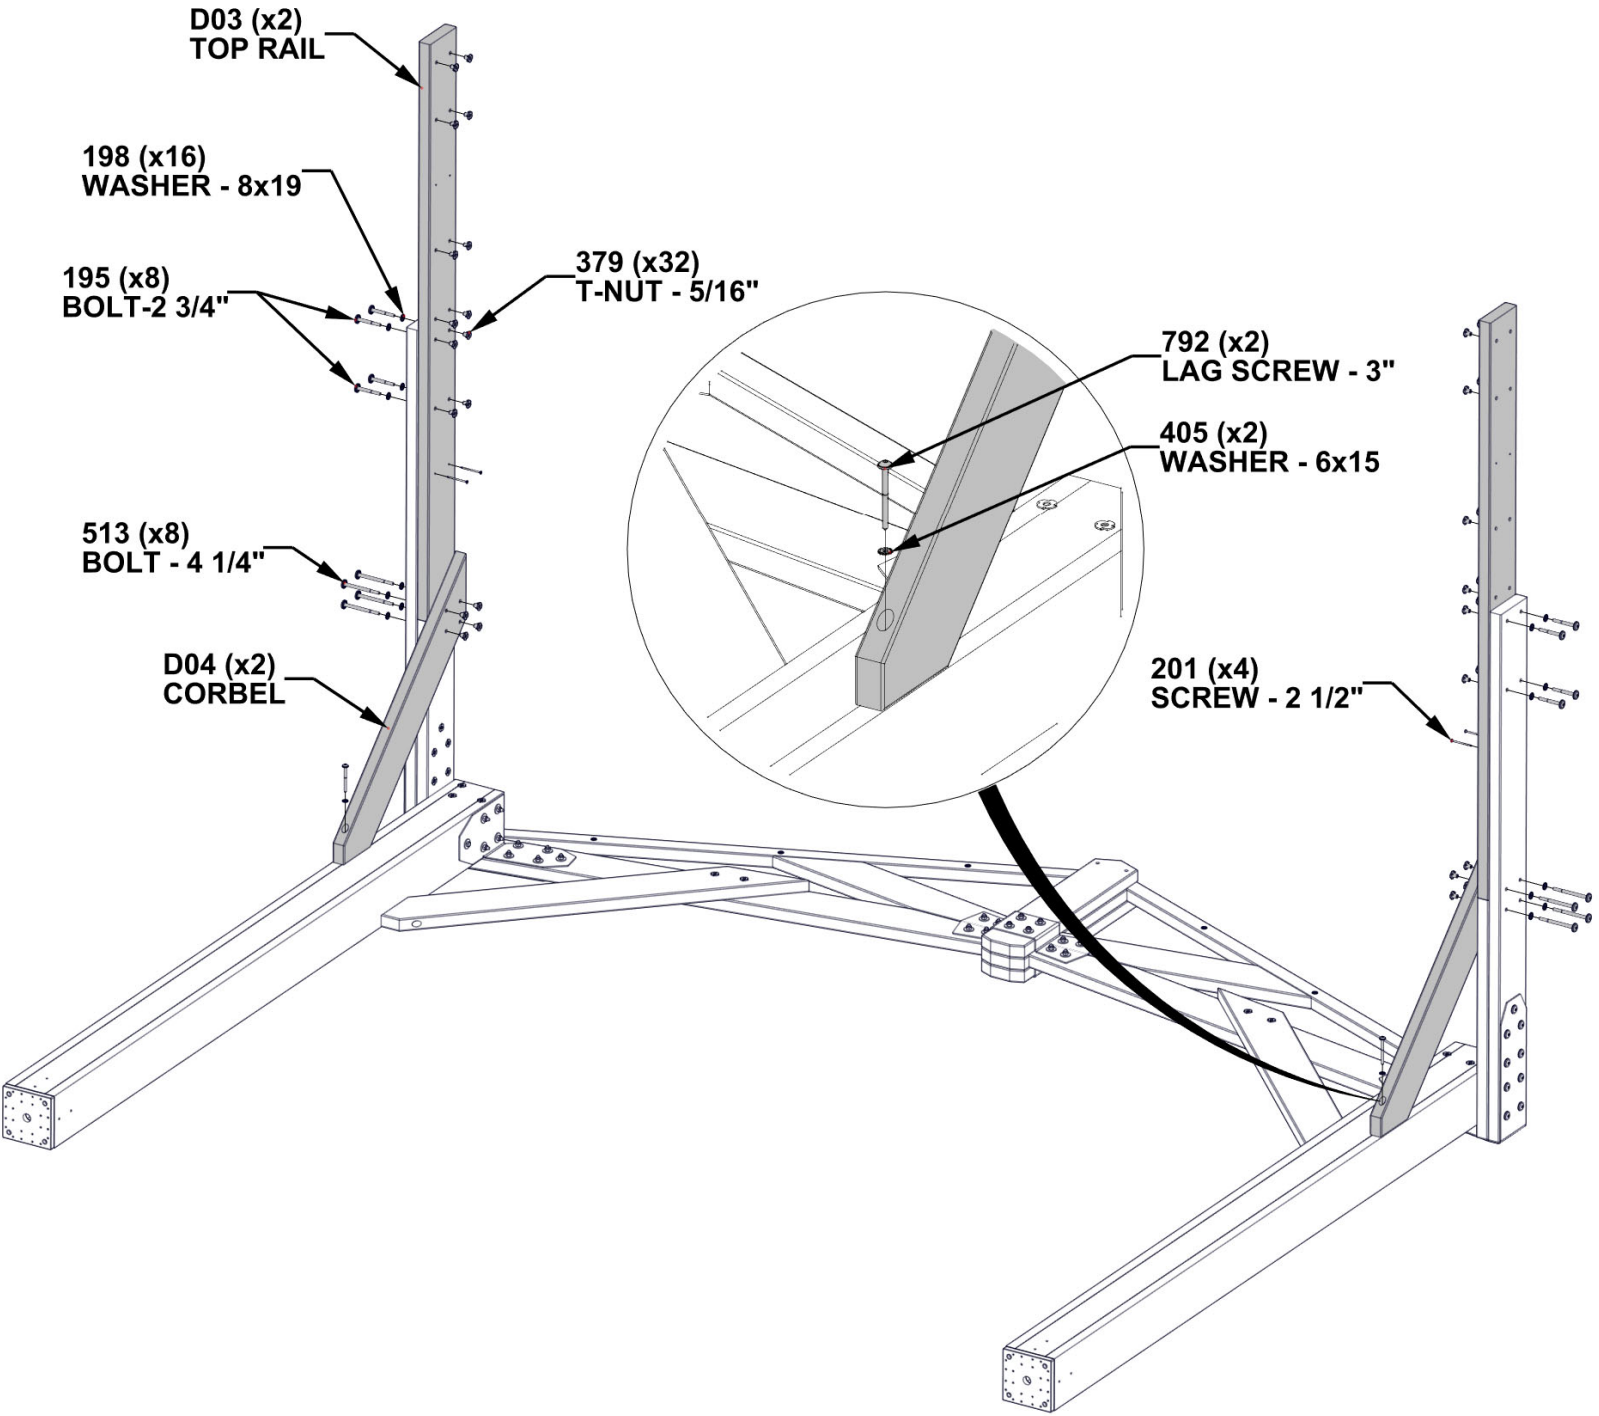


**REPEAT POST AND GABLE ASSEMBLY
STEPS 4 THROUGH 10**

STEP 11 - GAZEBO ASSEMBLY




H08 | NOTCHED SUPPORT BOARD - W4L16915
(x2) 1"x3 3/8"x89 1/2" (24x86x2274)

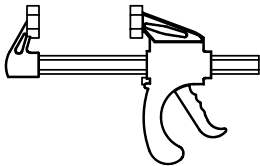


A6P00460 | 6" QUICK RELEASE
(x2) BAR CLAMP

USING THE INCLUDED CLAMPS AND H08 BOARDS, STAND UP ONE GABLE END AND SECURELY CLAMP AS SHOWN. ADDITIONAL HELPERS ARE RECOMMENDED FOR THIS STEP.

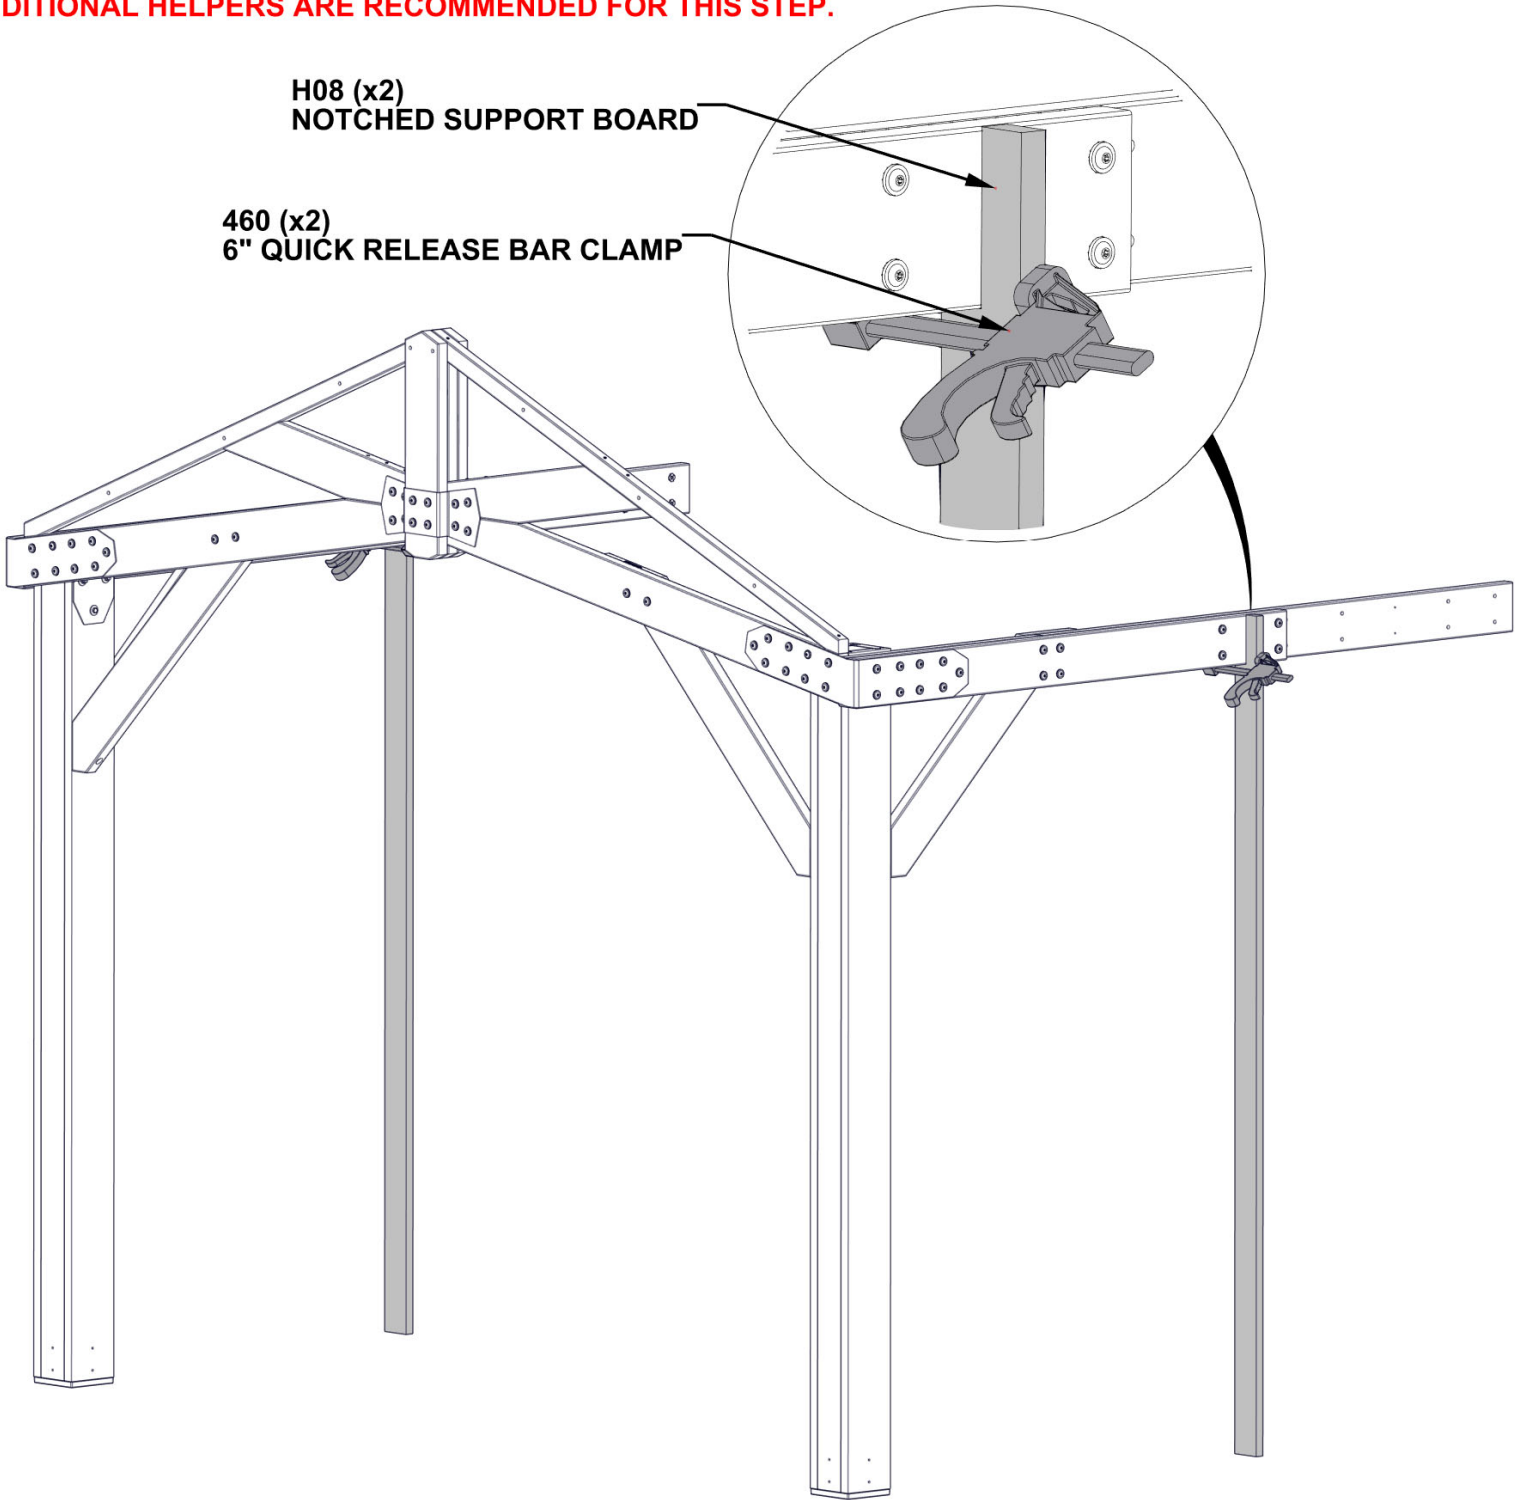


STEP 12 - GAZEBO ASSEMBLY

QTY	PART NUMBER	DESCRIPTION
16	H100195	BOLT WH 5/16 X 2 3/4 BLK
16	H100198	WASHER LOCK EXT 8X19 BLK
4	H100201	SCREW PFH 8 X 2 1/2 BLK



D08 TOP RAIL - W4L16857
(x2) 1 3/8"x5 1/4"x66 5/8" (36x134x1692)

INSERT T-NUTS FIRST

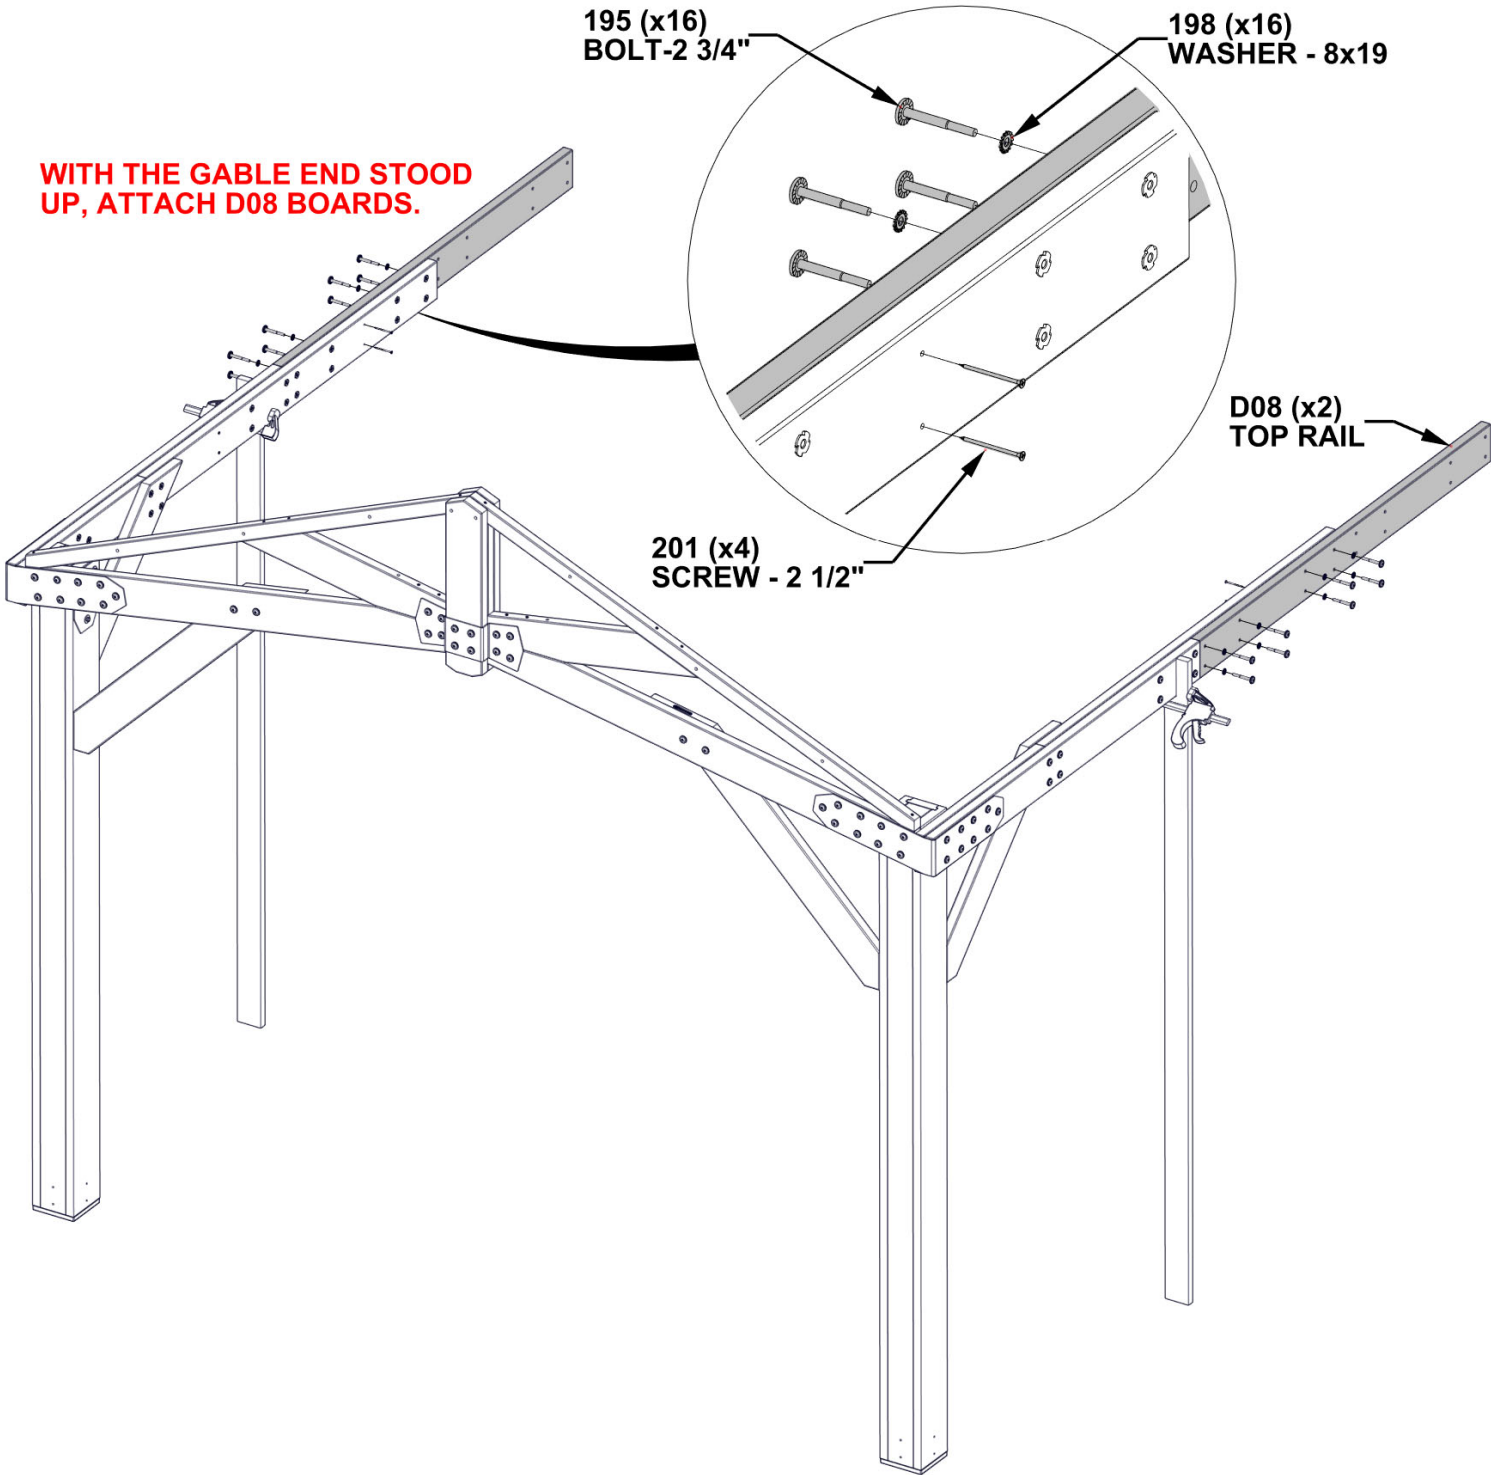


STEP 13 - GAZEBO ASSEMBLY

QTY	PART NUMBER	DESCRIPTION
16	H100195	BOLT WH 5/16 X 2 3/4 BLK
16	H100198	WASHER LOCK EXT 8X19 BLK
4	H100201	SCREW PFH 8 X 2 1/2 BLK

INSERT T-NUTS FIRST

STAND UP OTHER GABLE END AND ATTACH HARDWARE AS SHOWN. ONCE ALL HARDWARE IS SECURELY ATTACHED, REMOVE CLAMPS AND H08 BOARDS.

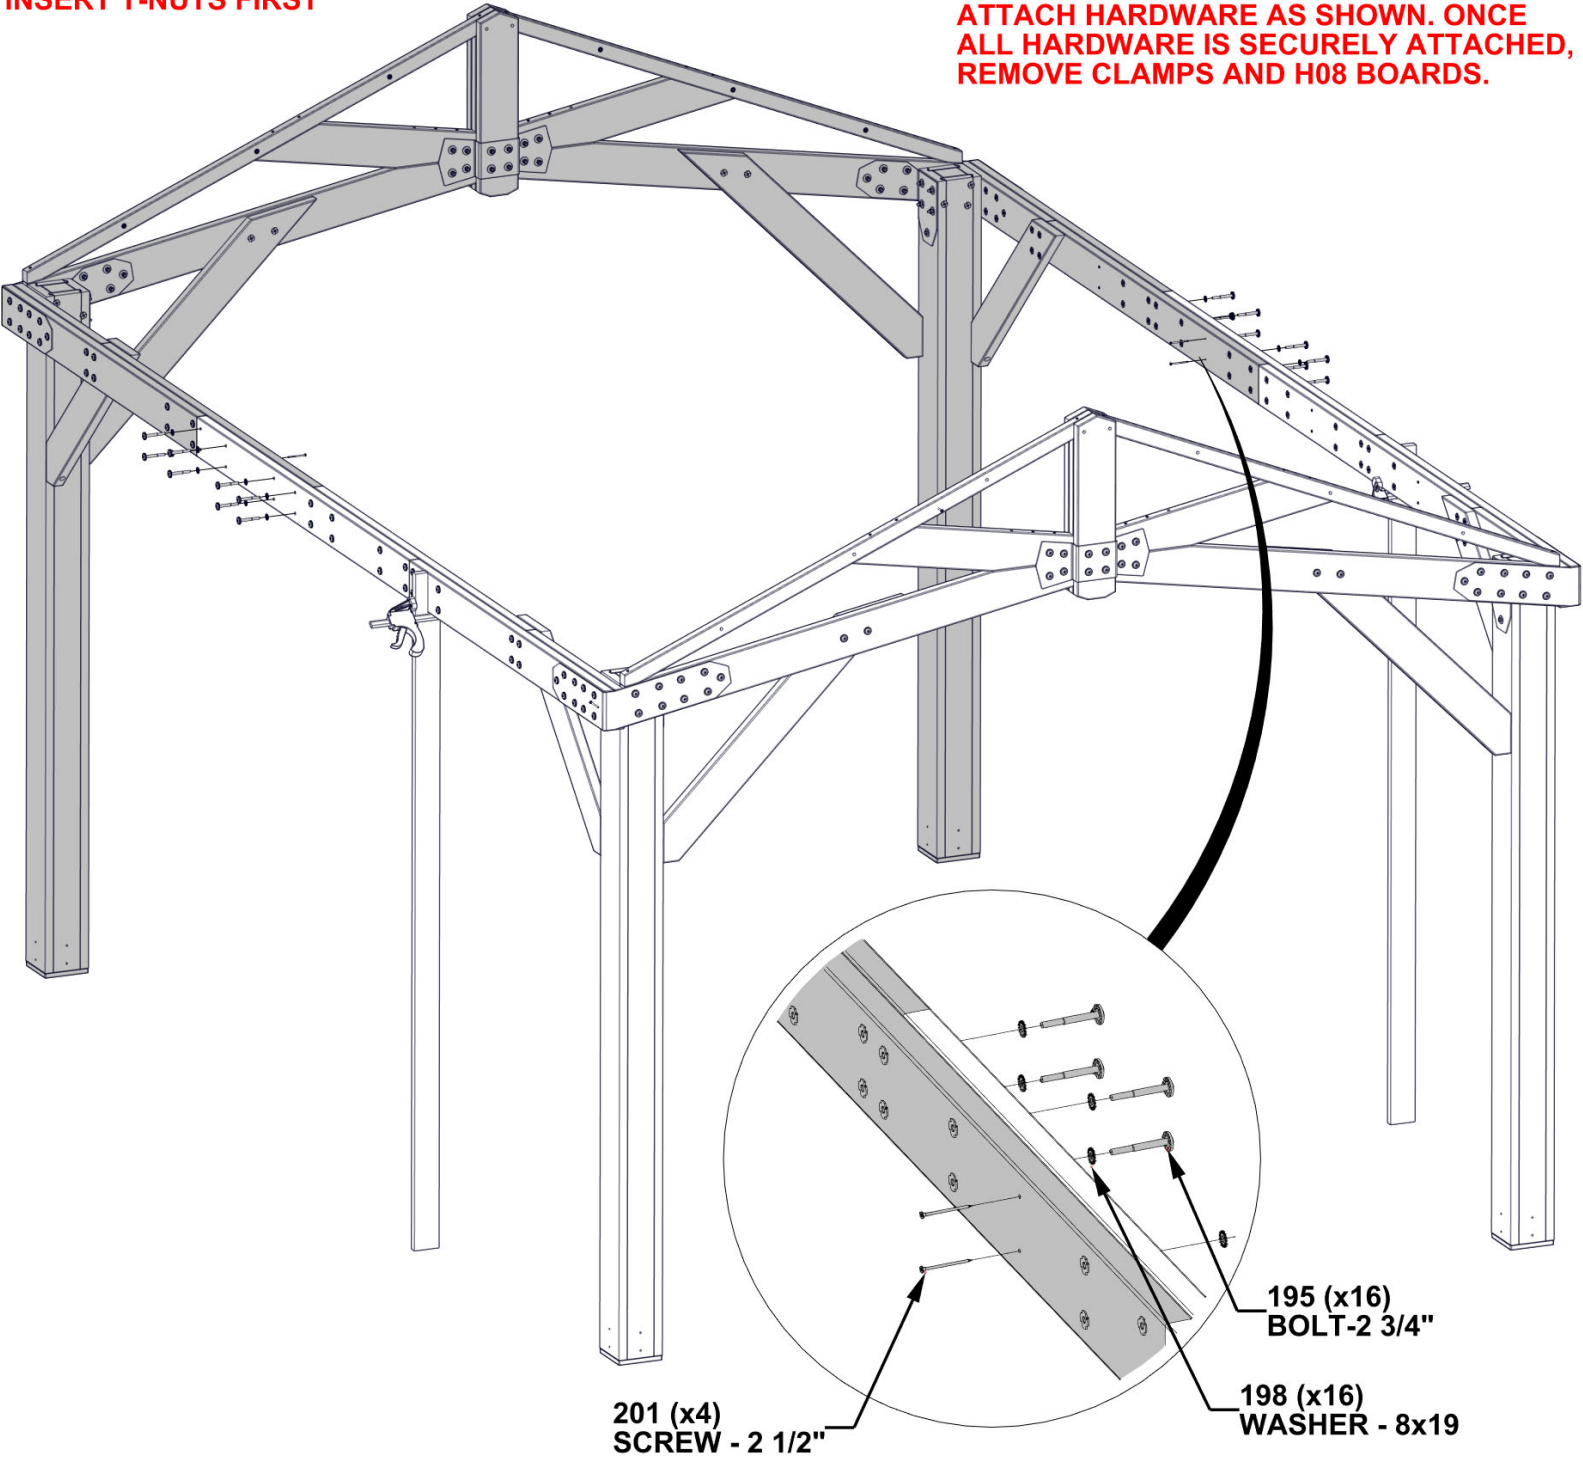


STEP 14 - GAZEBO ASSEMBLY

QTY	PART NUMBER	DESCRIPTION
16	H100201	SCREW PFH 8 X 2 1/2 BLK




E02 | TRUSS - W4L16859
(x4) 1 7/16"x1 15/16"x74 15/16" (36x50x1902)

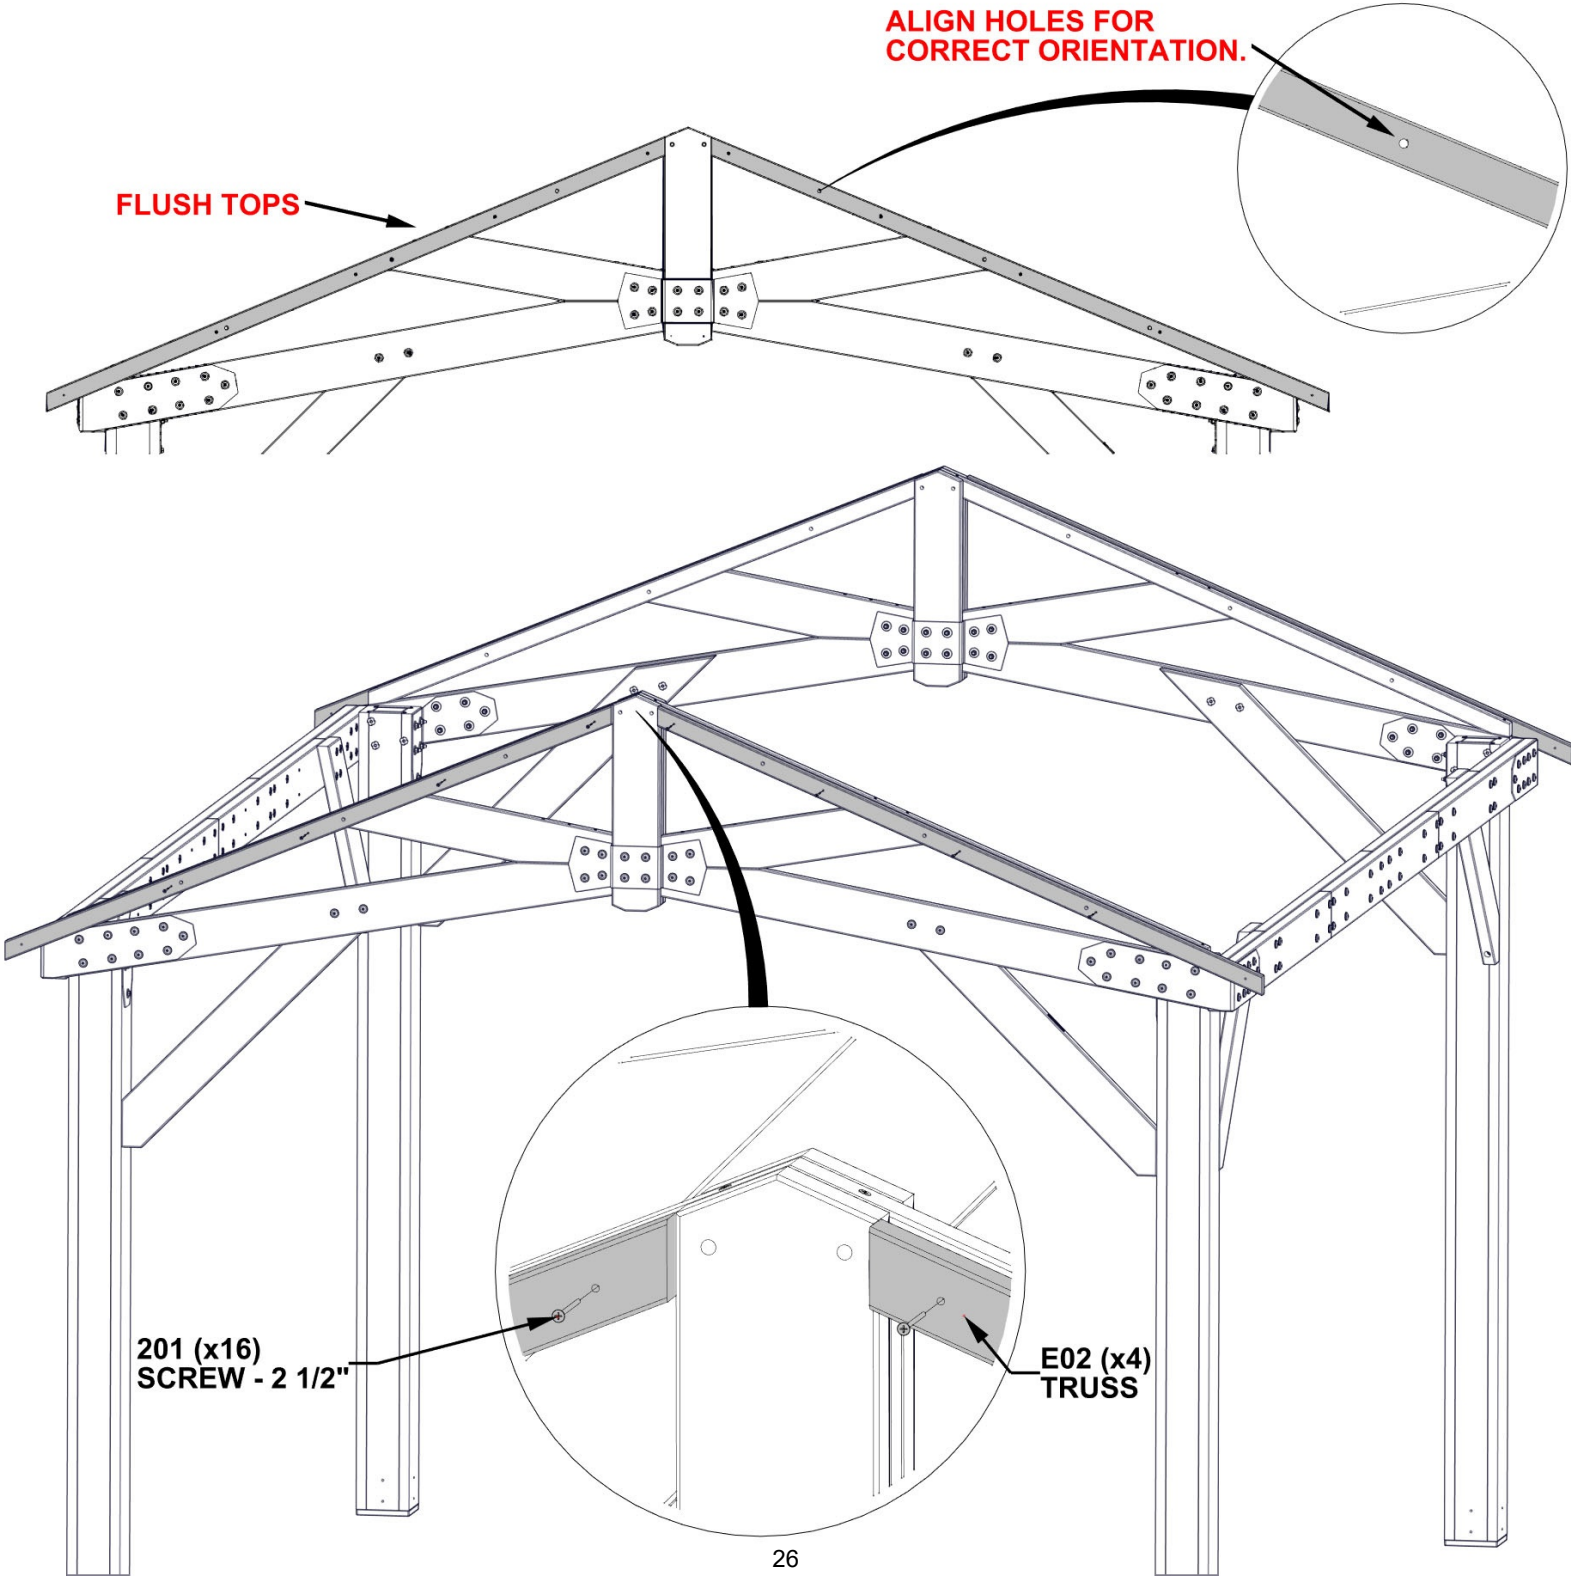


STEP 15 - GAZEBO ASSEMBLY

QTY	PART NUMBER	DESCRIPTION
4	H100201	SCREW PFH 8 X 2 1/2 BLK
12	H100405	WASHER LOCK EXT 6X15 BLK
12	H100564	LAG SCREW WH 1/4 X 4 BLK




GP1 | GABLE PANEL - W2A03499
(x2) | 2 13/16"x5 1/4"x80 3/16" (72x134x2037)



GP2 | GABLE PANEL - W2A03500
(x2) | 2 13/16"x5 1/4"x80 3/16" (72x134x2037)


TEMPORARILY INSERT 354 BOLTS TO
ALIGN GABLE PANEL WITH GABLE.

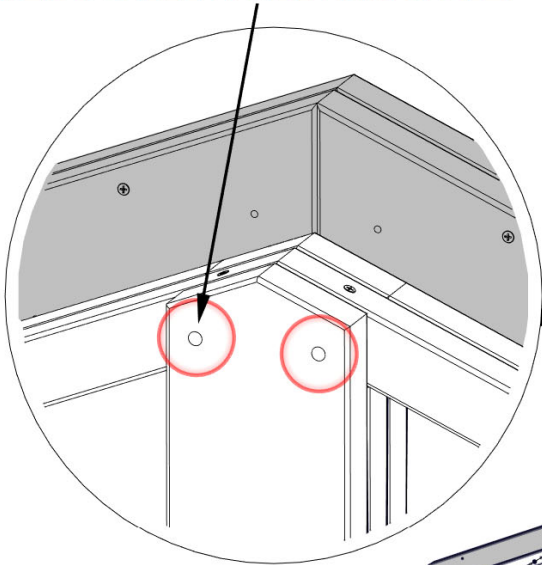

405 (x12)
WASHER - 6x15


564 (x12)
LAG SCREW - 4"

201 (x4)
SCREW - 2 1/2"

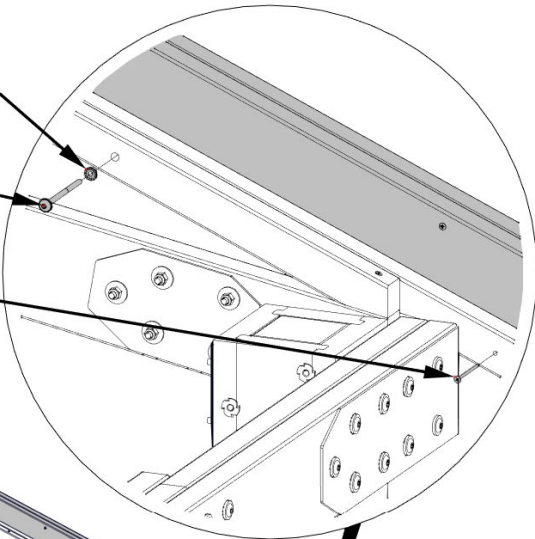


GP1 (x2)
GABLE PANEL

GP2 (x2)
GABLE PANEL

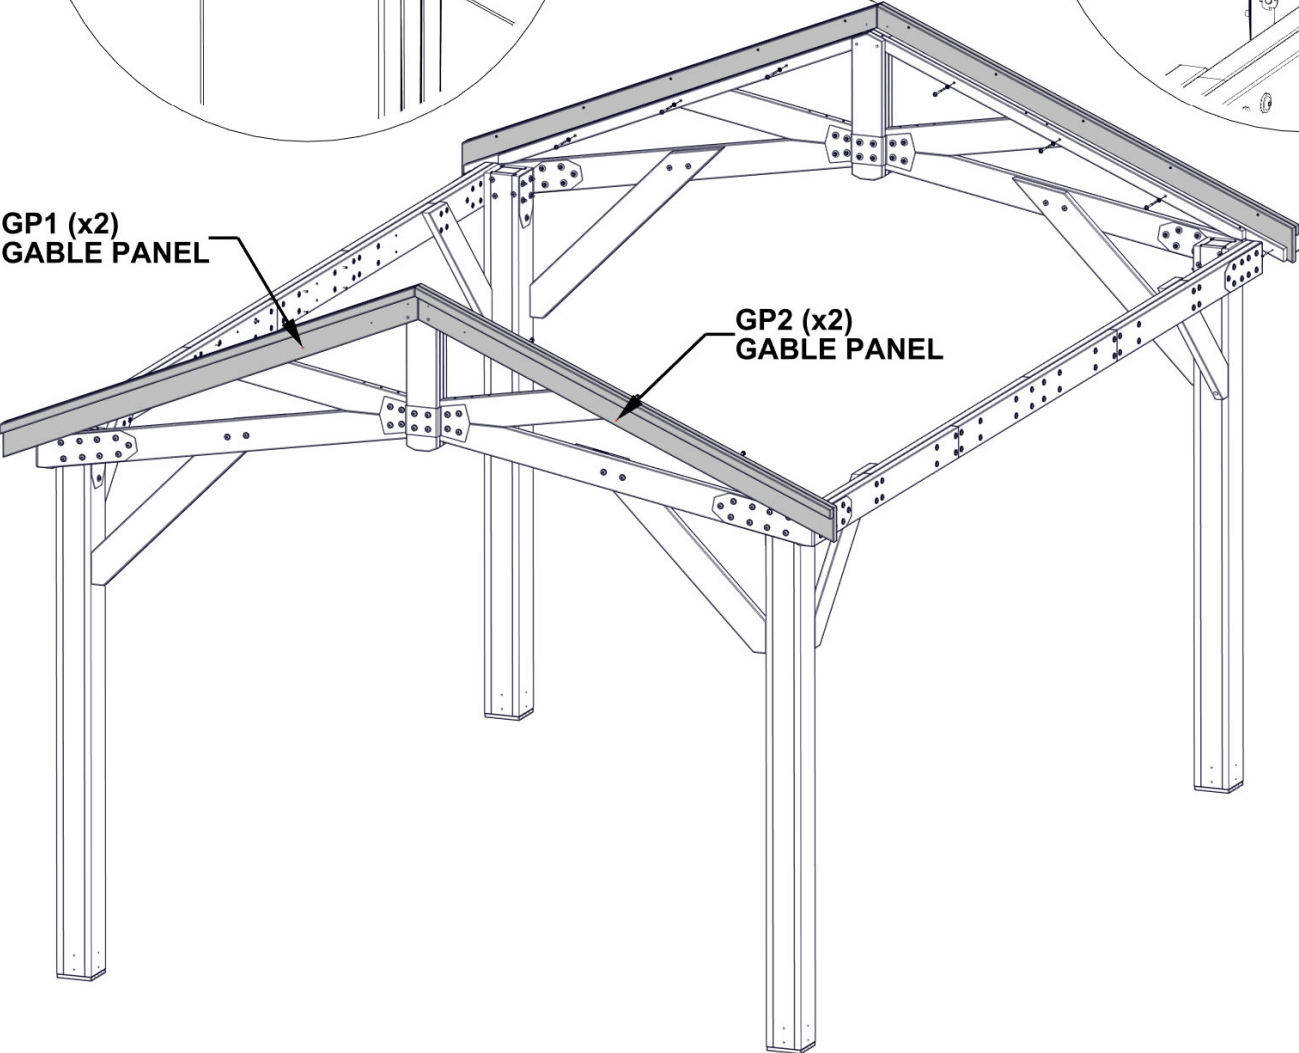


STEP 16 - GAZEBO ASSEMBLY


QTY	PART NUMBER	DESCRIPTION
4	H100200	SCREW PFH 8 X 1 1/2 BLK
4	H100354	BOLT WH 5/16 X 6 1/2 BLK
8	H100471	LAG SCREW WH 5/16 X 1 1/2 BLK
4	H100478	WASHER FLAT 8X27 BLK
4	H100479	NUT LOCK 5/16 BLK

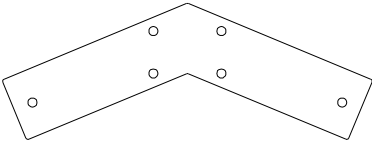


A4M01130 | GABLE BRACKET
(x2)



A4M01148 | TRUSS BRACKET
(x2)



A4M01147 | PEAK SEAM BRACKET
(x2)

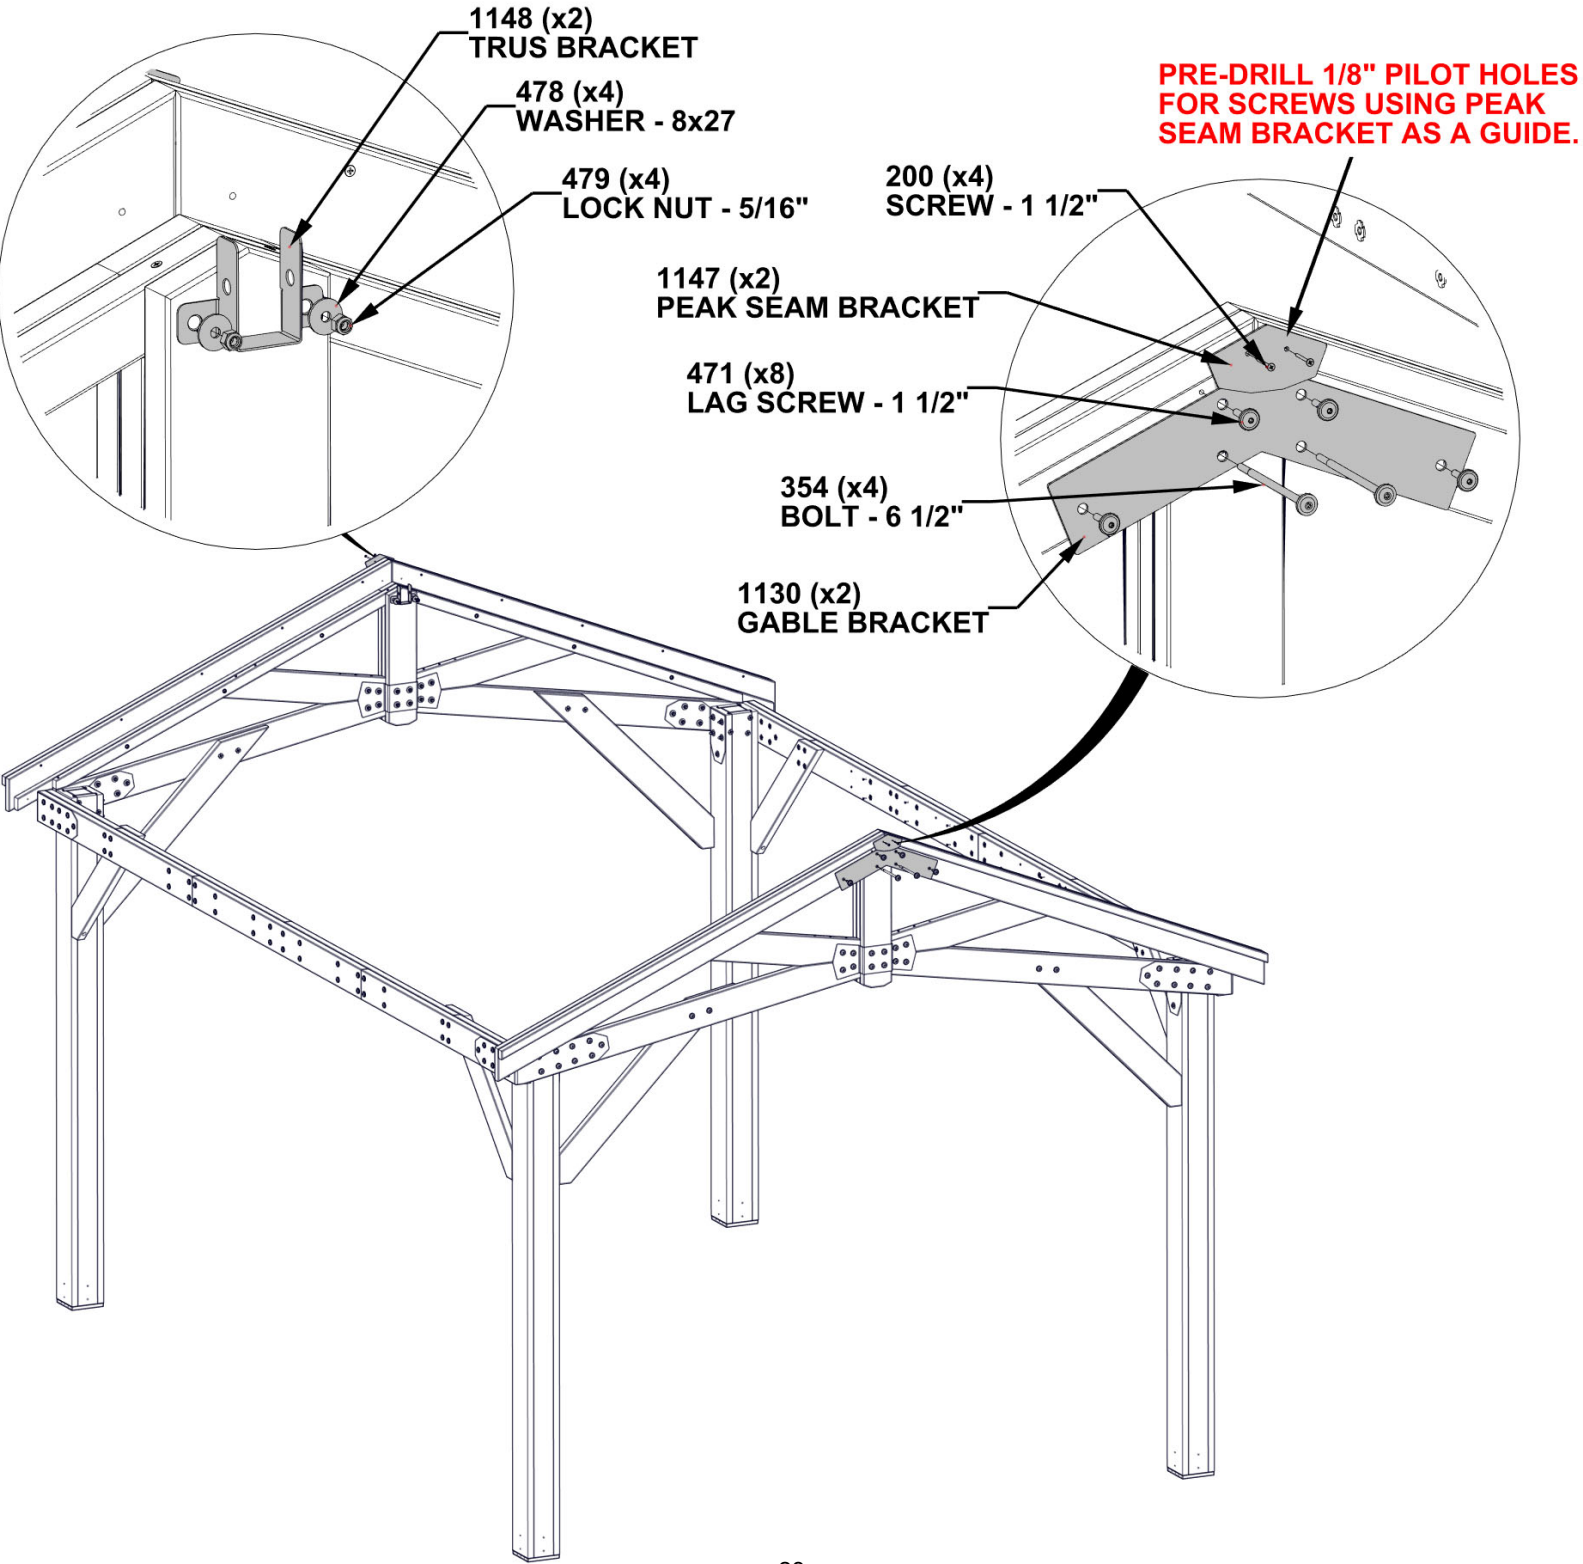

STEP 17 - RAFTER ASSEMBLY


QTY	PART NUMBER	DESCRIPTION
10	H100198	WASHER LOCK EXT 8X19 BLK
26	H100379	T-NUT 5/16 BLK
8	H100382	SCREW PFH 8 X 1 3/4 BLK
10	H100459	BOLT WH 5/16 X 1 1/4 BLK

AD01 | RAFTER - W4L16866
(x2) | 1"x4"x74 3/4" (24x102x1900)

AD02 | RAFTER - W4L16867
(x2) | 1"x4"x66 3/8" (24x102x1686)

AD03 | RAFTER - W4L16868
(x2) | 1"x4"x41 5/8" (24x102x1057)

INSERT T-NUTS FIRST

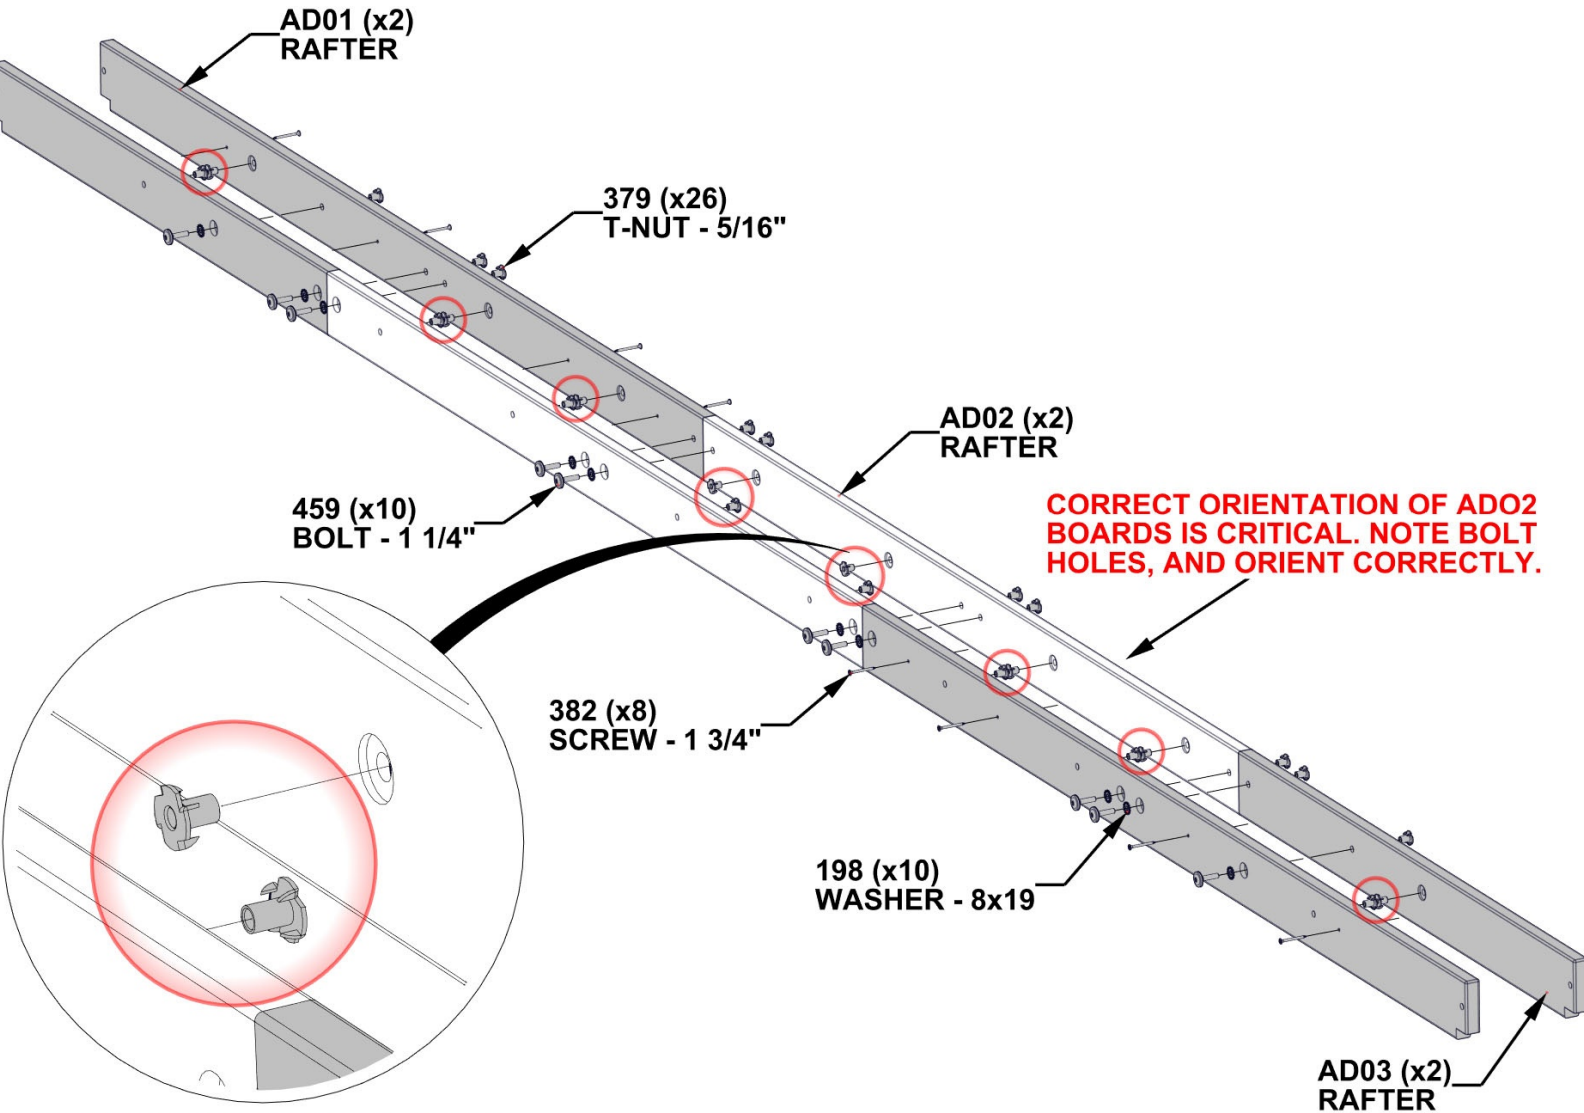


INSERT INTERIOR T-NUTS BEFORE ANY OTHER HARDWARE IS ATTACHED.

STEP 18 - RAFTER ASSEMBLY

QTY	PART NUMBER	DESCRIPTION
2	H100195	BOLT WH 5/16 X 2 3/4 BLK
2	H100478	WASHER FLAT 8X27 BLK
2	H100479	NUT LOCK 5/16 BLK



RAFTER ASSEMBLY FROM PREVIOUS STEP

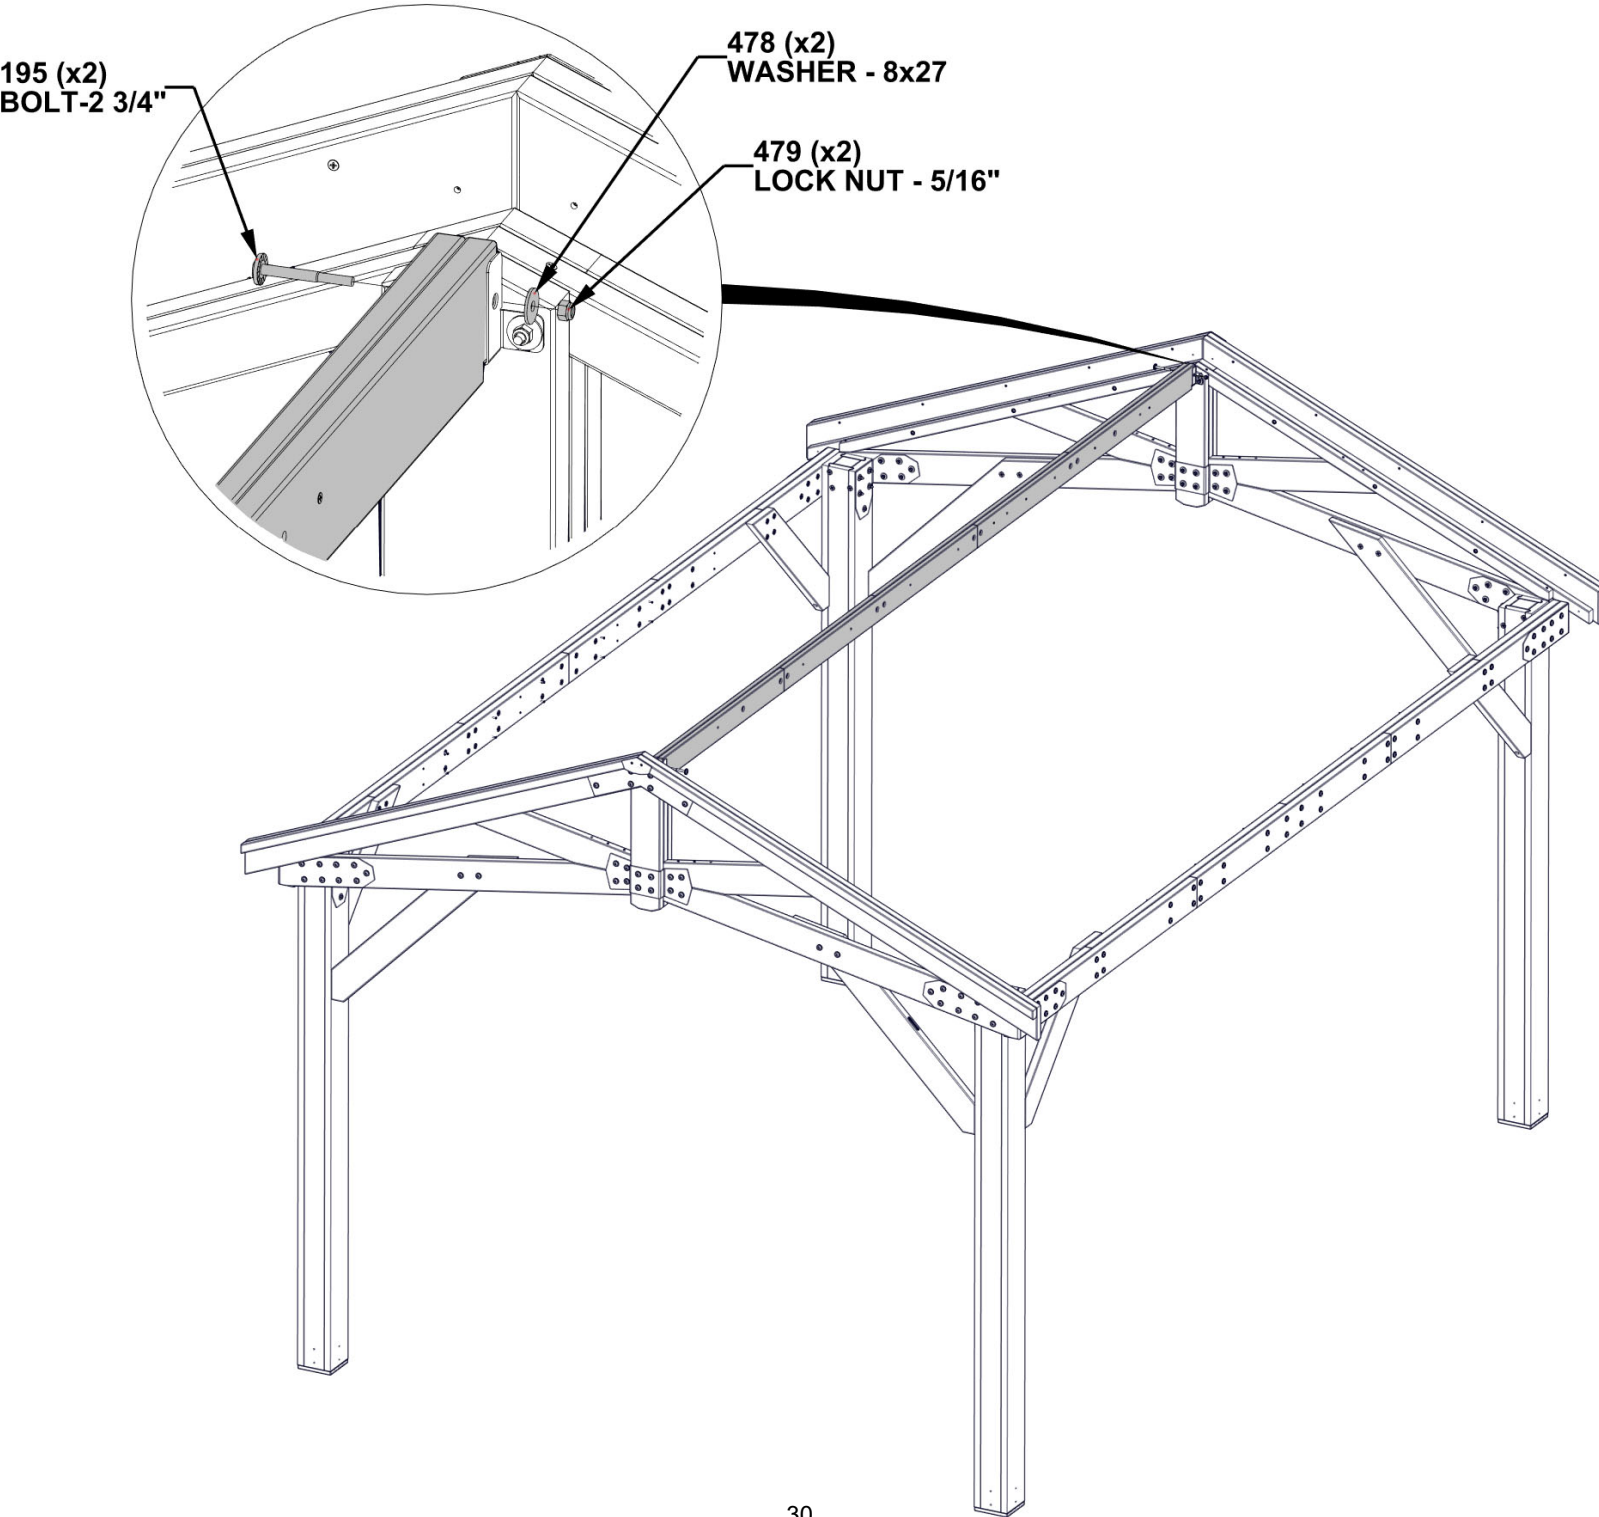

STEP 19 - ROOF PANEL ASSEMBLY

QTY	PART NUMBER	DESCRIPTION
4	H100198	WASHER LOCK EXT 8X19 BLK
44	H100391	SCREW PFH 8 X 2 BLK
4	H100478	WASHER FLAT 8X27 BLK
4	H100479	NUT LOCK 5/16 BLK
4	H100503	BOLT WH 5/16 X 3 1/2 BLK

H01 | FASCIA - W4L16869
(x1) | 1"x3 3/8"x57 3/8" (24x86x1458)

H03 | FASCIA - W4L16871
(x1) | 1"x3 3/8"x58 3/8" (24x86x1482)

H05 | FASCIA - W4L16873
(x1) | 1"x3 3/8"x75 1/8" (24x86x1907)

H02 | FASCIA - W4L16870
(x1) | 1"x3 3/8"x58 5/8" (24x86x1490)

H04 | FASCIA - W4L16872
(x1) | 1"x3 3/8"x57 3/8" (24x86x1458)


H06 | FASCIA - W4L16874
(x1) | 1"x3 3/8"x41 7/8" (24x86x1064)

E05 | RAFTER - W4L16862
(x4) | 1 3/8"x3 3/8"x76 3/8" (36x86x1941)

E08 | RAFTER - W4L16865
(x3) | 1 3/8"x3 3/8"x76 3/8" (36x86x1941)


E01 | RAFTER - W4L16858
(x4) | 1 3/8"x3 3/8"x76 3/8" (36x86x1941)

ROOF PANEL A

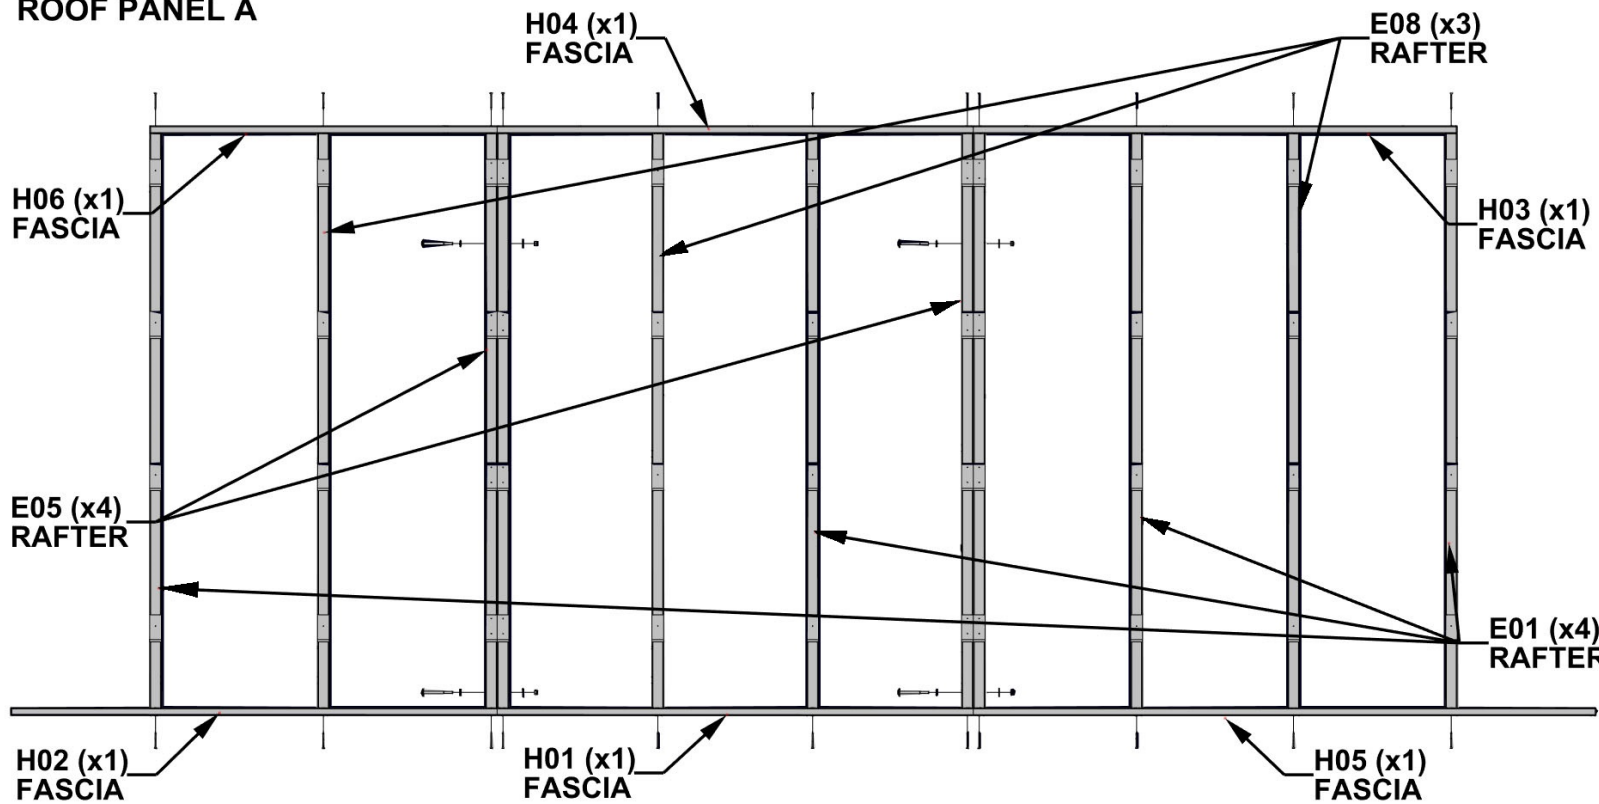

ENSURE ALL RAFTERS ARE PLACED CORRECTLY.

ENSURE H04 IS ORIENTED CORRECTLY. CHECK MEASUREMENTS FROM BOLT HOLE TO END OF BOARD AND ORIENT AS SHOWN.

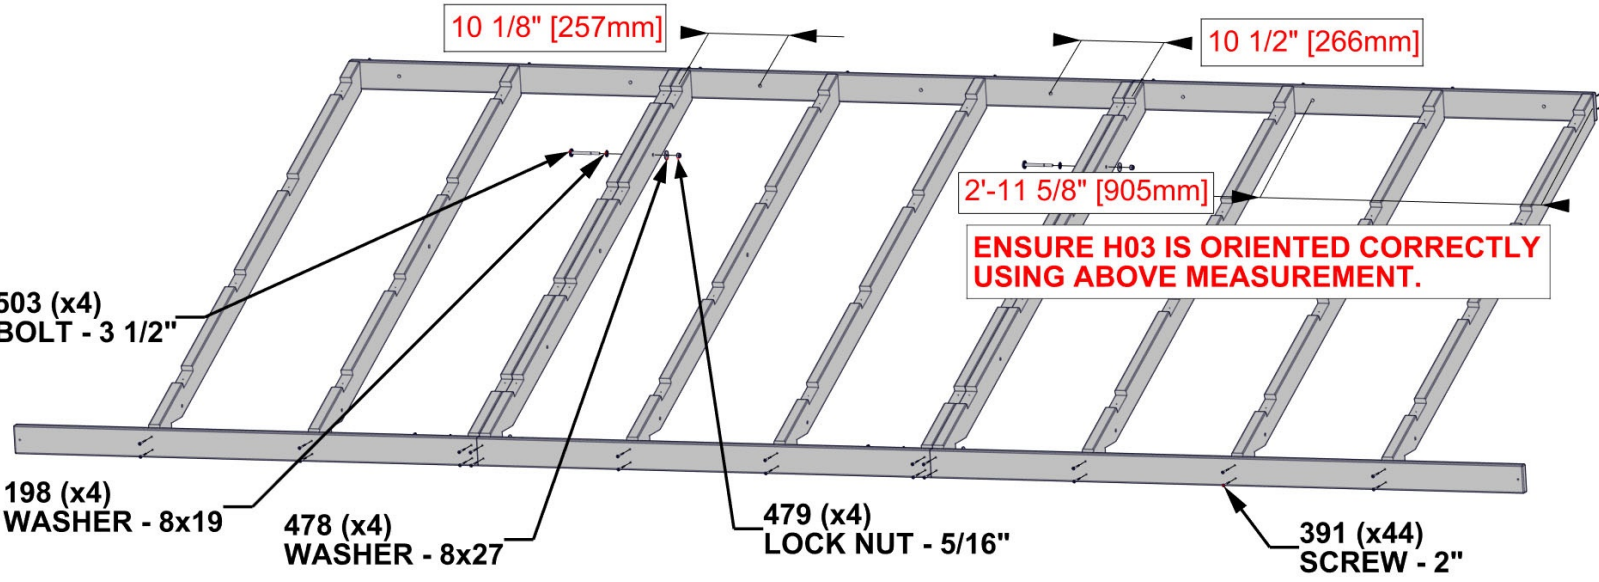

STEP 20A - ROOF PANEL ASSEMBLY

QTY	PART NUMBER	DESCRIPTION
60	H100391	SCREW PFH 8 X 2 BLK



E03 | SHEATHING BOARD - W4L16860
(x4) 1 3/8"x5 1/4"x75 1/8" (36x134x1907)




E04 | SHEATHING BOARD - W4L16861
(x4) 1 3/8"x3 3/8"x57 3/8" (36x86x1458)



E07 | SHEATHING BOARD - W4L16864
(x4) 1 3/8"x3 3/8"x58 5/8" (36x86x1490)

ROOF PANEL A

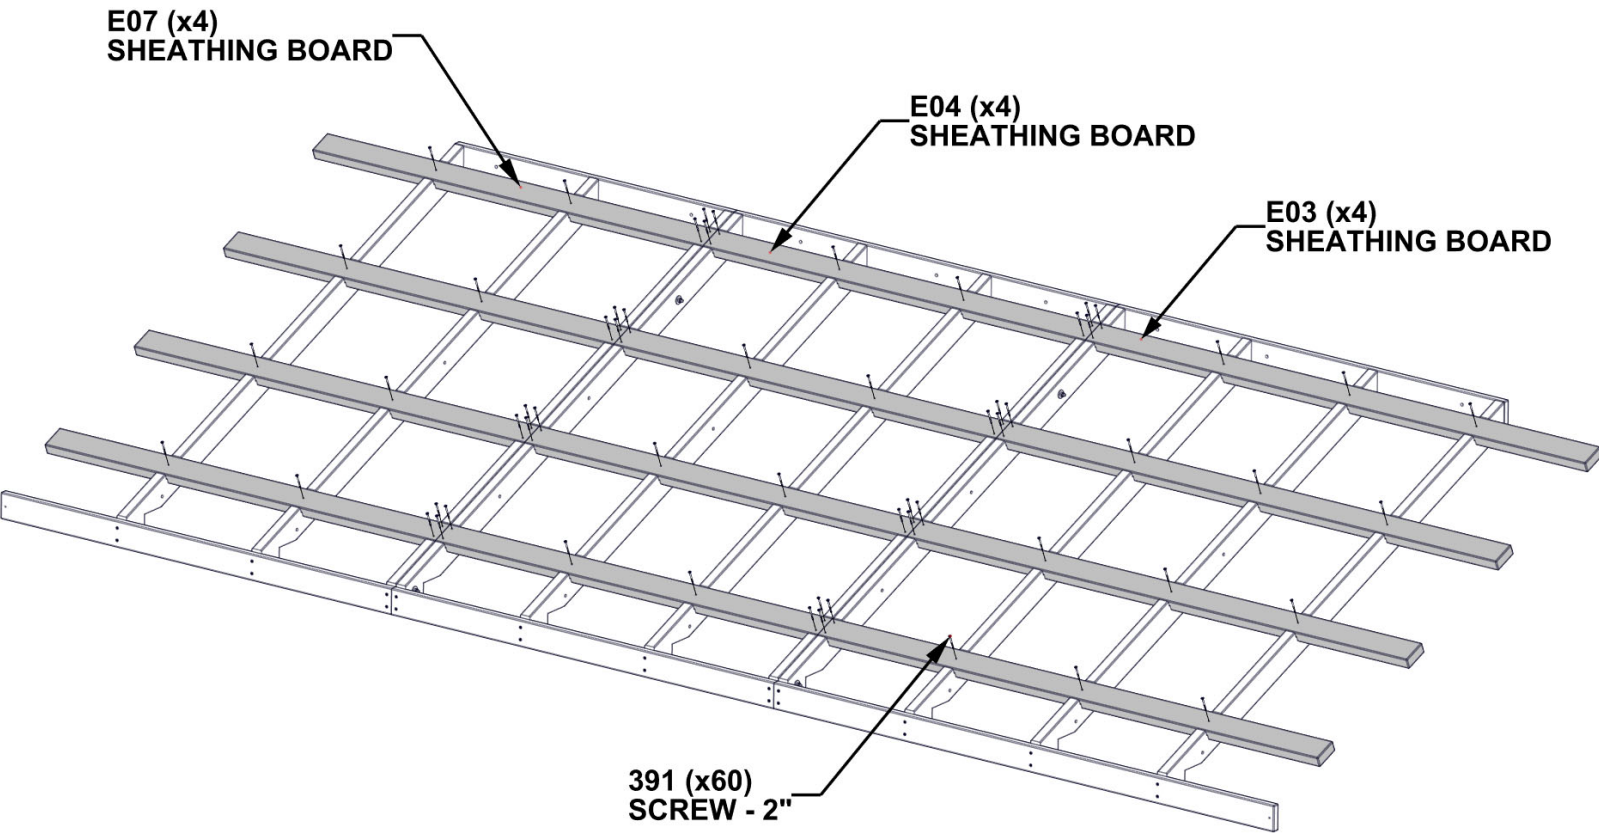


STEP 20B - ROOF PANEL ASSEMBLY

ROOF PANEL A

TIP: LOOSEN HARDWARE TO ADJUST FOR SQUARING IF NEEDED

CRITICAL:

- SQUARE UNIT BEFORE PROCEEDING TO NEXT STEPS.
- THE BELOW DIMENSIONS ARE CRITICAL TO THE FINAL ROOF ASSEMBLY.
- MEASUREMENTS SHOULD BE HELD WITHIN $\pm 1/4"$.
- MEASUREMENTS OUTSIDE OF TOLERANCE WILL LEAD TO THE INABILITY TO ASSEMBLY THE ROOF.

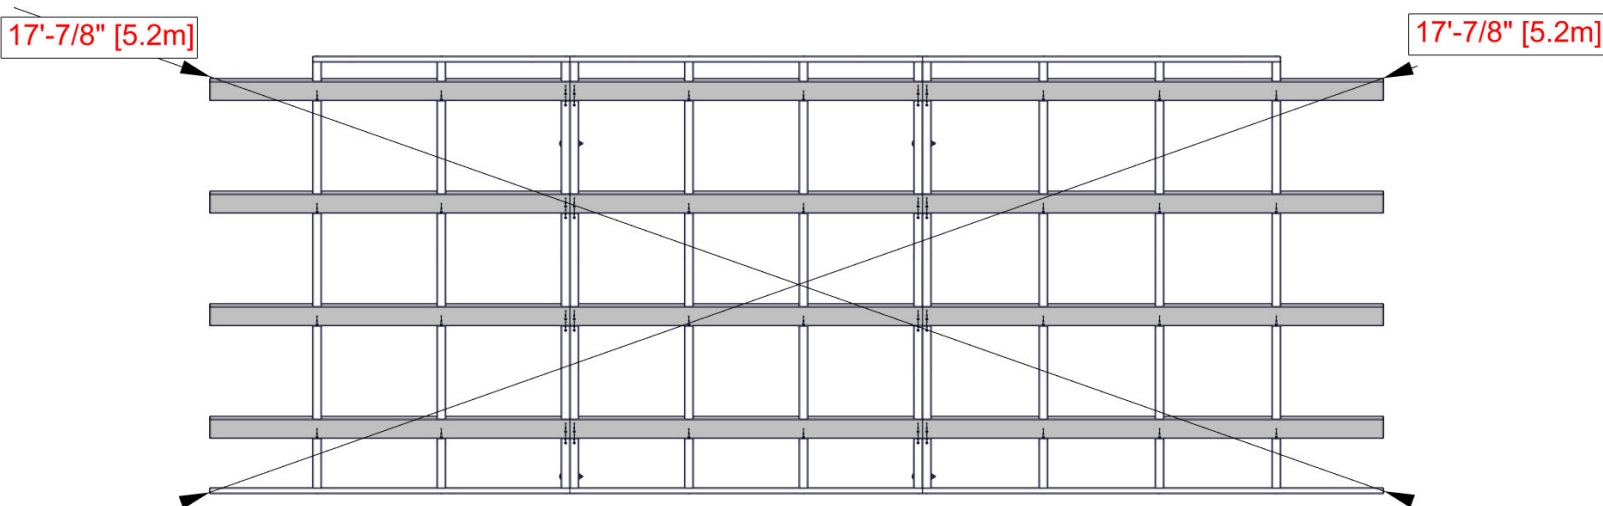

STEP 21 - ROOF PANEL ASSEMBLY

ROOF PANEL A


USE THIS PAGE TO FAMILIARIZE YOURSELF WITH THE ROOF PANEL AND ASSIST YOU IN STEPS 22-24.

TIPS:


- REMOVE PROTECTIVE BLUE FILM
- START AT THE END INDICATED AND ASSEMBLE IN THE DIRECTION OF THE ARROW

GLOVES SHOULD BE WORN WHEN HANDLING ROOF PANELS: EDGES ARE SHARP.

THE PRE-DRILLED HOLES ON EACH PANEL SHOULD ALWAYS BE POSITIONED ON THE RIDGE SIDE.

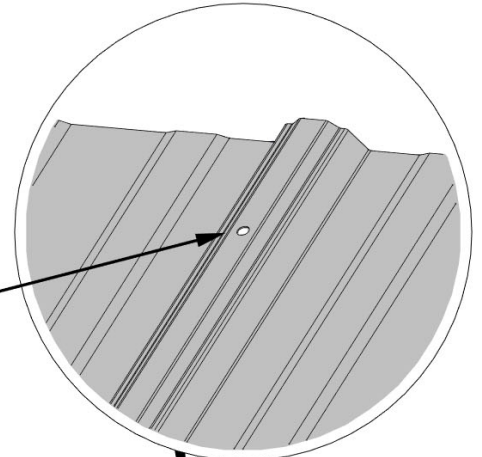


RIDGE

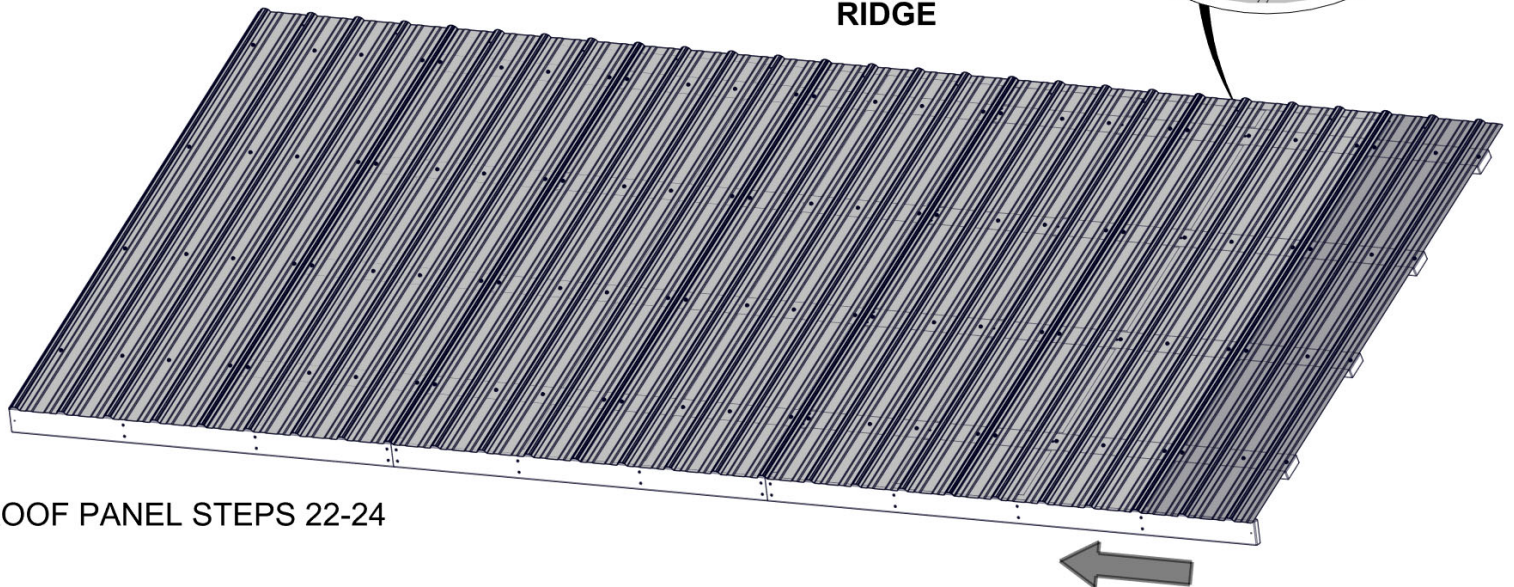

ROOF PANEL STEPS 22-24

STEP 22 - ROOF PANEL ASSEMBLY

QTY	PART NUMBER	DESCRIPTION
44	H100833	SCREW WOODGRIP 10-16 x 3/4

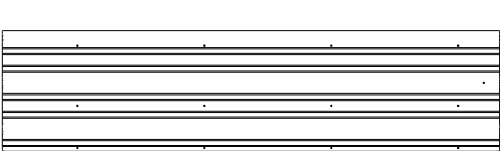

A4M01371 (x1) 29 GA STEEL SHEETING




A4M01124 (x1) 29 GA STEEL SHEETING




A4M01715 (x1) 29 GA STEEL SHEETING


ROOF PANEL A

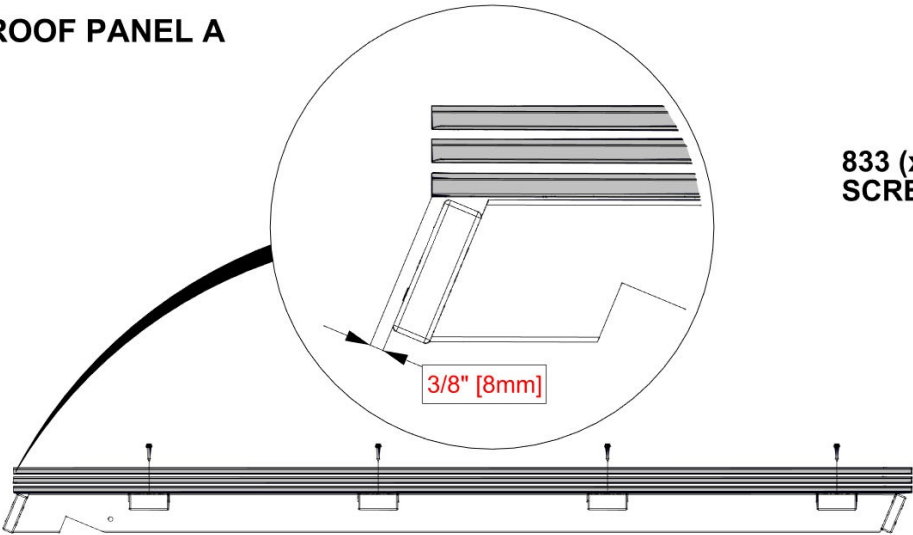

MAKE SURE YOUR ROOF PANEL IS SQUARE BEFORE MOVING ON.

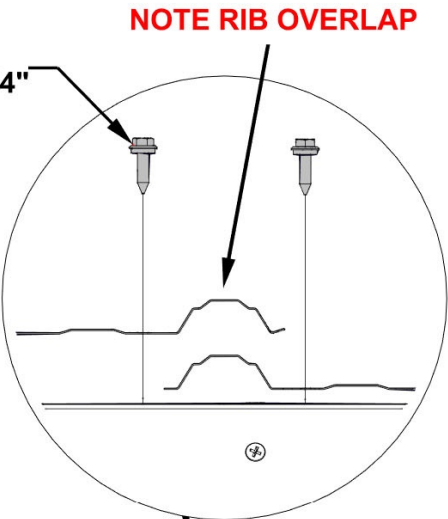

833 (x44) SCREW - 3/4"

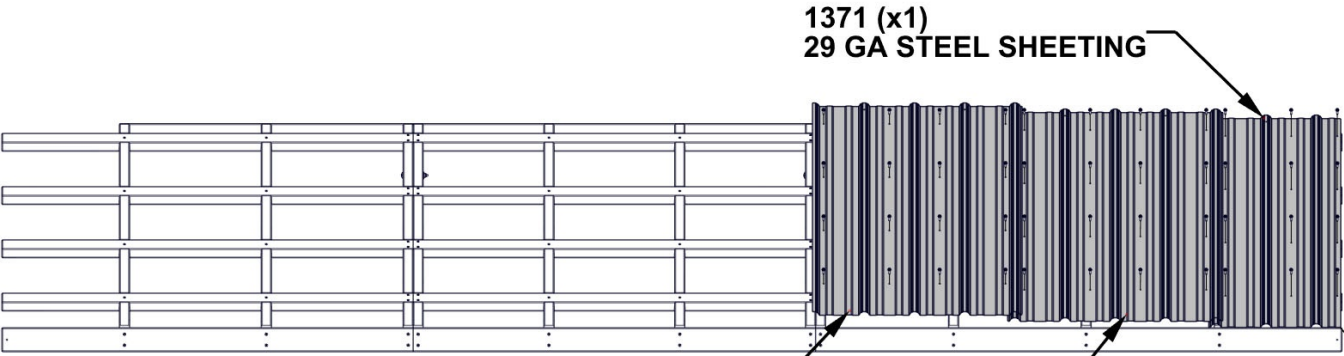


1371 (x1) 29 GA STEEL SHEETING

1715 (x1) 29 GA STEEL SHEETING

ENSURE CORRECT PLACEMENT OF 1715 STEEL SHEETING.

1124 (x1) 29 GA STEEL SHEETING

HOLD SHEETING INSIDE OF FRAME MEASURING FROM RIB AS SHOWN.

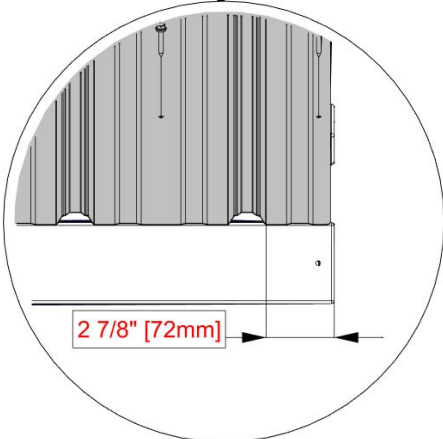

2 7/8" [72mm]

STEP 23 - ROOF PANEL ASSEMBLY

QTY	PART NUMBER	DESCRIPTION
32	H100833	SCREW WOODGRIP 10-16 x 3/4




A4M01124
(x1) | 29 GA STEEL SHEETING



A4M01715
(x1) | 29 GA STEEL SHEETING

ROOF PANEL A

833 (x32)
SCREW - 3/4"

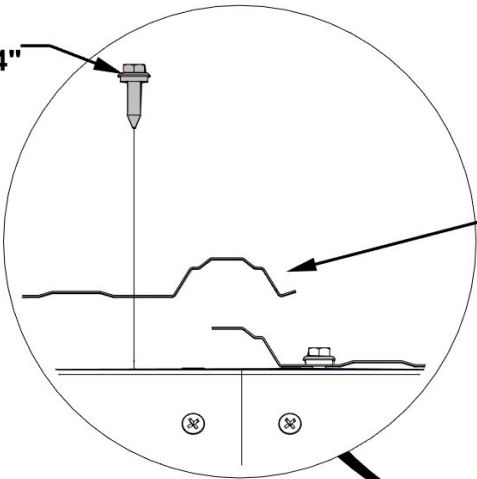


NOTE RIB OVERLAP

ENSURE CORRECT PLACEMENT
OF 1715 STEEL SHEETING.

1715 (x1)
29 GA STEEL SHEETING

1124 (x1)
29 GA STEEL SHEETING

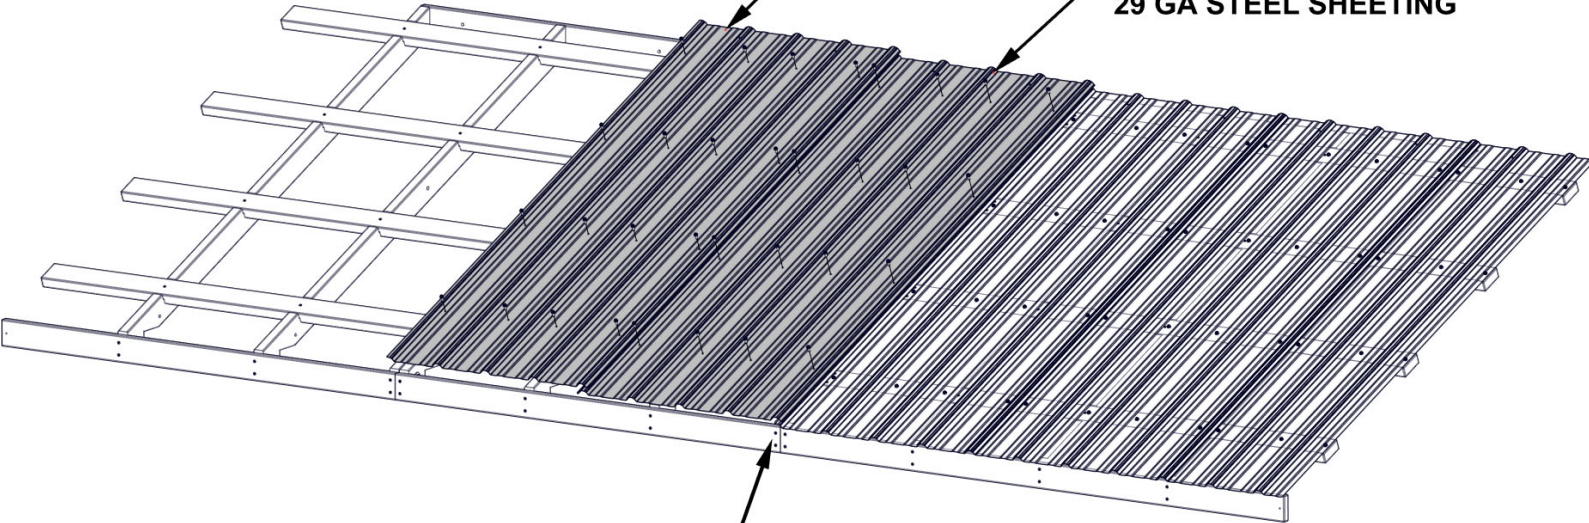

FLUSH ENDS OF ALL SHEETS



STEP 24 - ROOF PANEL ASSEMBLY

QTY	PART NUMBER	DESCRIPTION
32	H100833	SCREW WOODGRIP 10-16 x 3/4



A4M01124 (x2) | 29 GA STEEL SHEETING

ROOF PANEL A

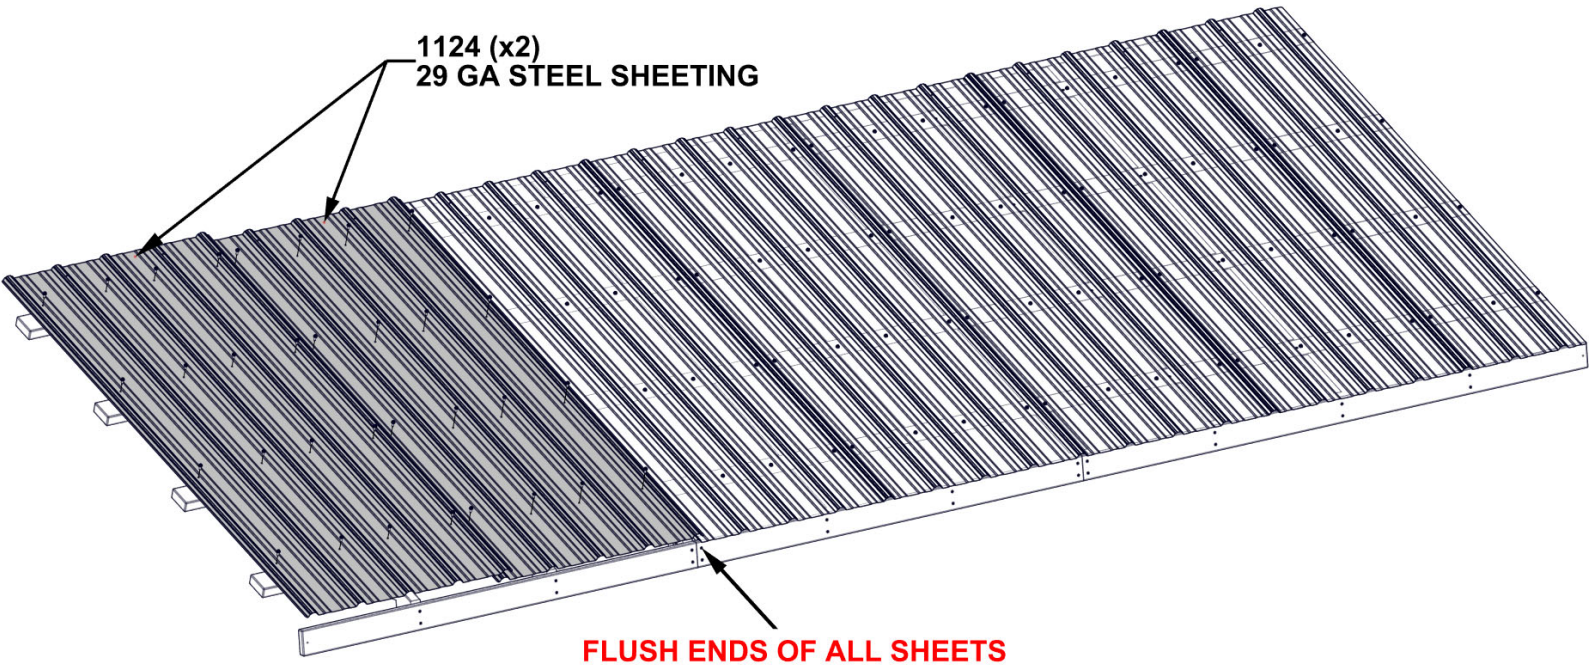
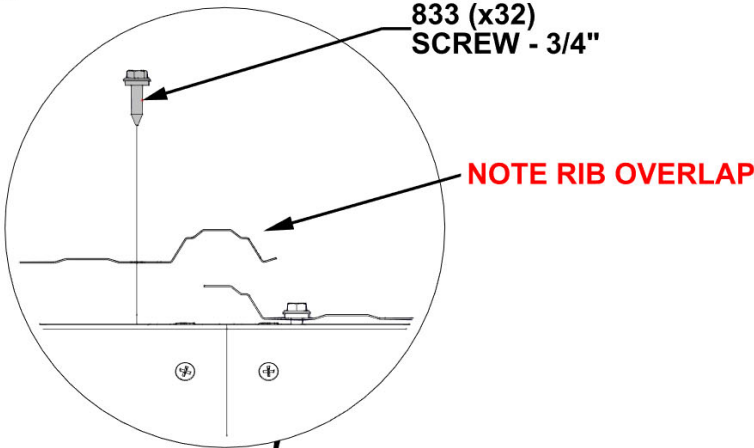


STEP 25 - ROOF PANEL ASSEMBLY

ROOF PANEL A

SEPARATE ROOF PANEL AT THIS TIME FOR EASE OF ASSEMBLING.

REMOVE HARDWARE AND SET TO THE SIDE AS IT WILL BE USED AGAIN AFTER BOTH ROOF PANELS ARE INSTALLED.

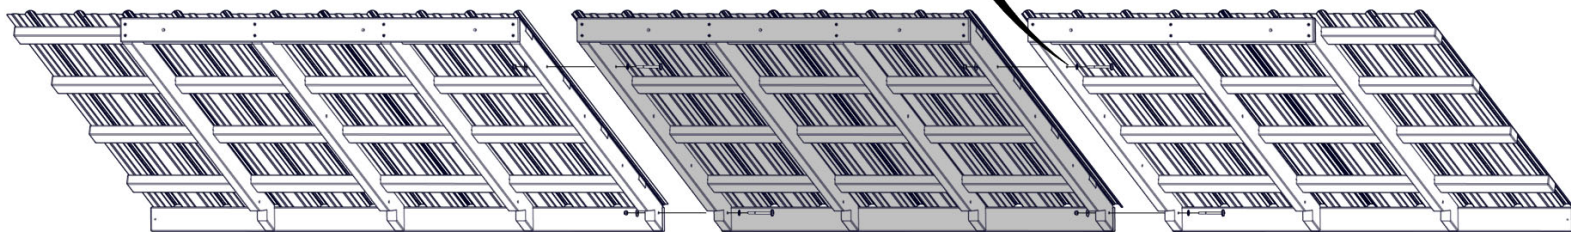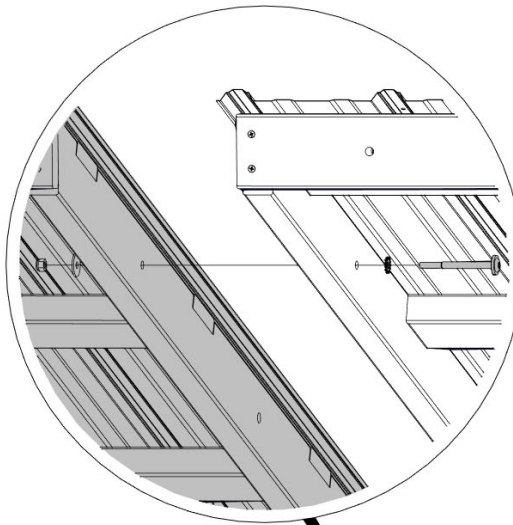

SECTION 1

SECTION 2

SECTION 3

STEP 26 - ROOF PANEL ASSEMBLY

QTY	PART NUMBER	DESCRIPTION
4	H100198	WASHER LOCK EXT 8X19 BLK
44	H100391	SCREW PFH 8 X 2 BLK
4	H100478	WASHER FLAT 8X27 BLK
4	H100479	NUT LOCK 5/16 BLK
4	H100503	BOLT WH 5/16 X 3 1/2 BLK

H01 | FASCIA - W4L16869
(x1) | 1"x3 3/8"x57 3/8" (24x86x1458)

H02 | FASCIA - W4L16870
(x1) | 1"x3 3/8"x58 5/8" (24x86x1490)

H03 | FASCIA - W4L16871
(x1) | 1"x3 3/8"x58 3/8" (24x86x1482)

H05 | FASCIA - W4L16873
(x1) | 1"x3 3/8"x75 1/8" (24x86x1907)

H06 | FASCIA - W4L16874
(x1) | 1"x3 3/8"x41 7/8" (24x86x1064)


H07 | FASCIA - W4L16875
(x1) | 1"x3 3/8"x57 3/8" (24x86x1458)

E01 | RAFTER - W4L16858
(x4) | 1 3/8"x3 3/8"x76 3/8" (36x86x1941)

E05 | RAFTER - W4L16862
(x4) | 1 3/8"x3 3/8"x76 3/8" (36x86x1941)


E08 | RAFTER - W4L16865
(x3) | 1 3/8"x3 3/8"x76 3/8" (36x86x1941)

ROOF PANEL B

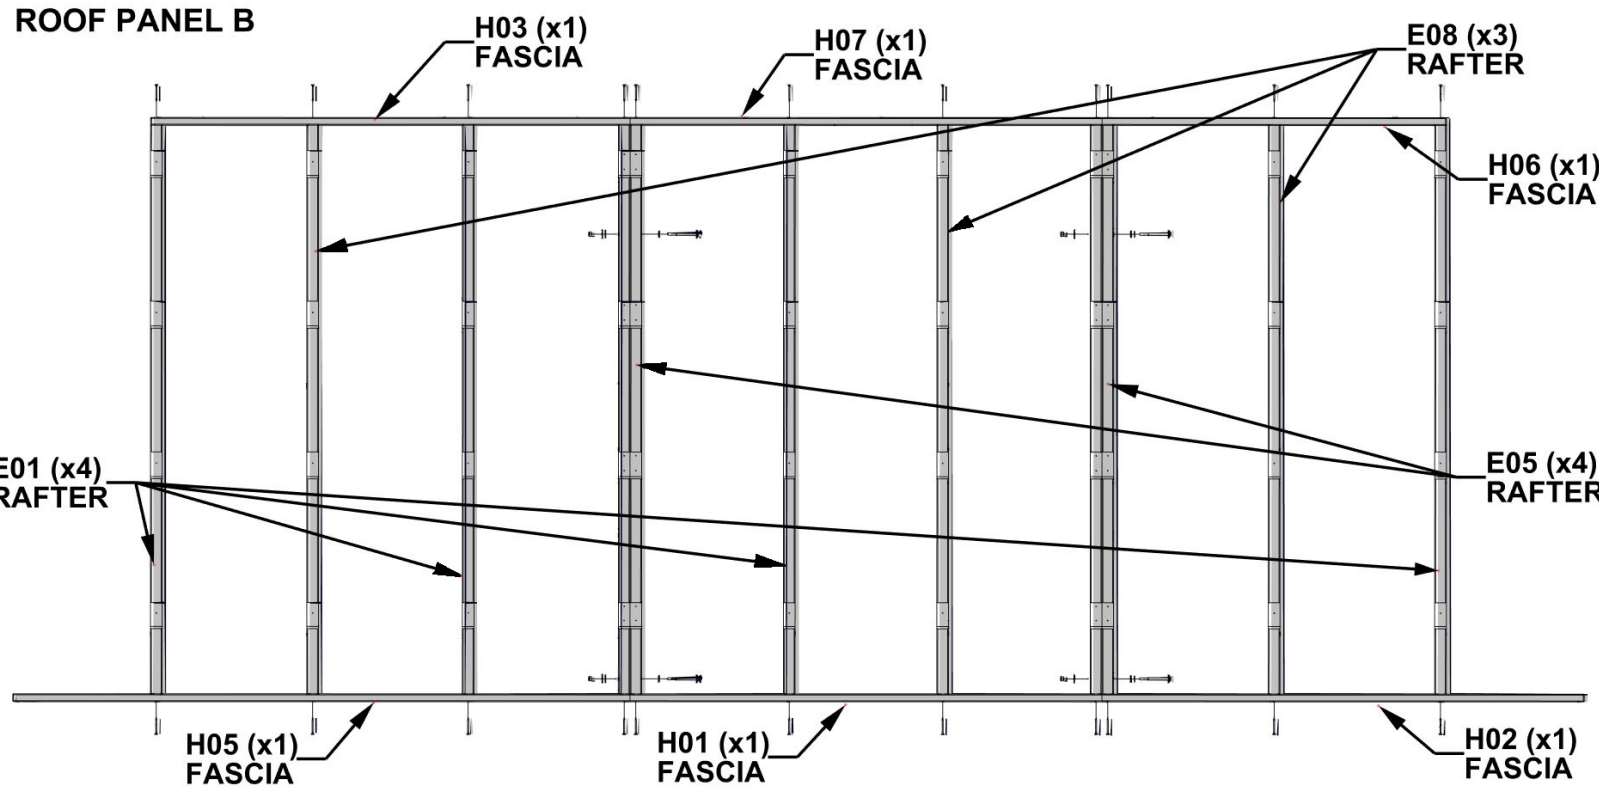

ENSURE ALL RAFTERS ARE PLACED CORRECTLY.

ENSURE H07 IS ORIENTED CORRECTLY. CHECK MEASUREMENTS FROM BOLT HOLE TO END OF BOARD AND ORIENT AS SHOWN.

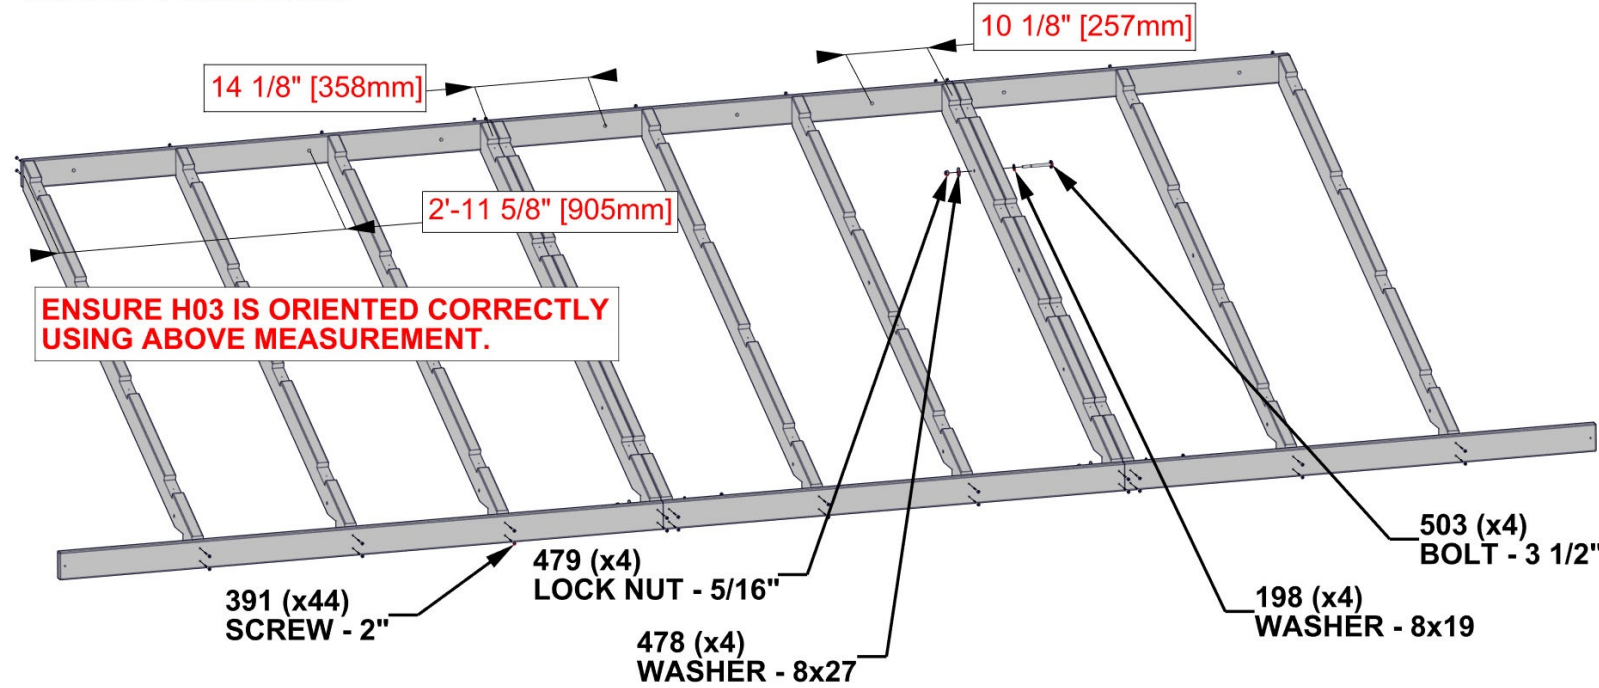

STEP 27A - ROOF PANEL ASSEMBLY

QTY	PART NUMBER	DESCRIPTION
60	H100391	SCREW PFH 8 X 2 BLK



E03 | SHEATHING BOARD - W4L16860
(x4) 1 3/8"x5 1/4"x75 1/8" (36x134x1907)




E04 | SHEATHING BOARD - W4L16861
(x4) 1 3/8"x3 3/8"x57 3/8" (36x86x1458)



E07 | SHEATHING BOARD - W4L16864
(x4) 1 3/8"x3 3/8"x58 5/8" (36x86x1490)

ROOF PANEL B

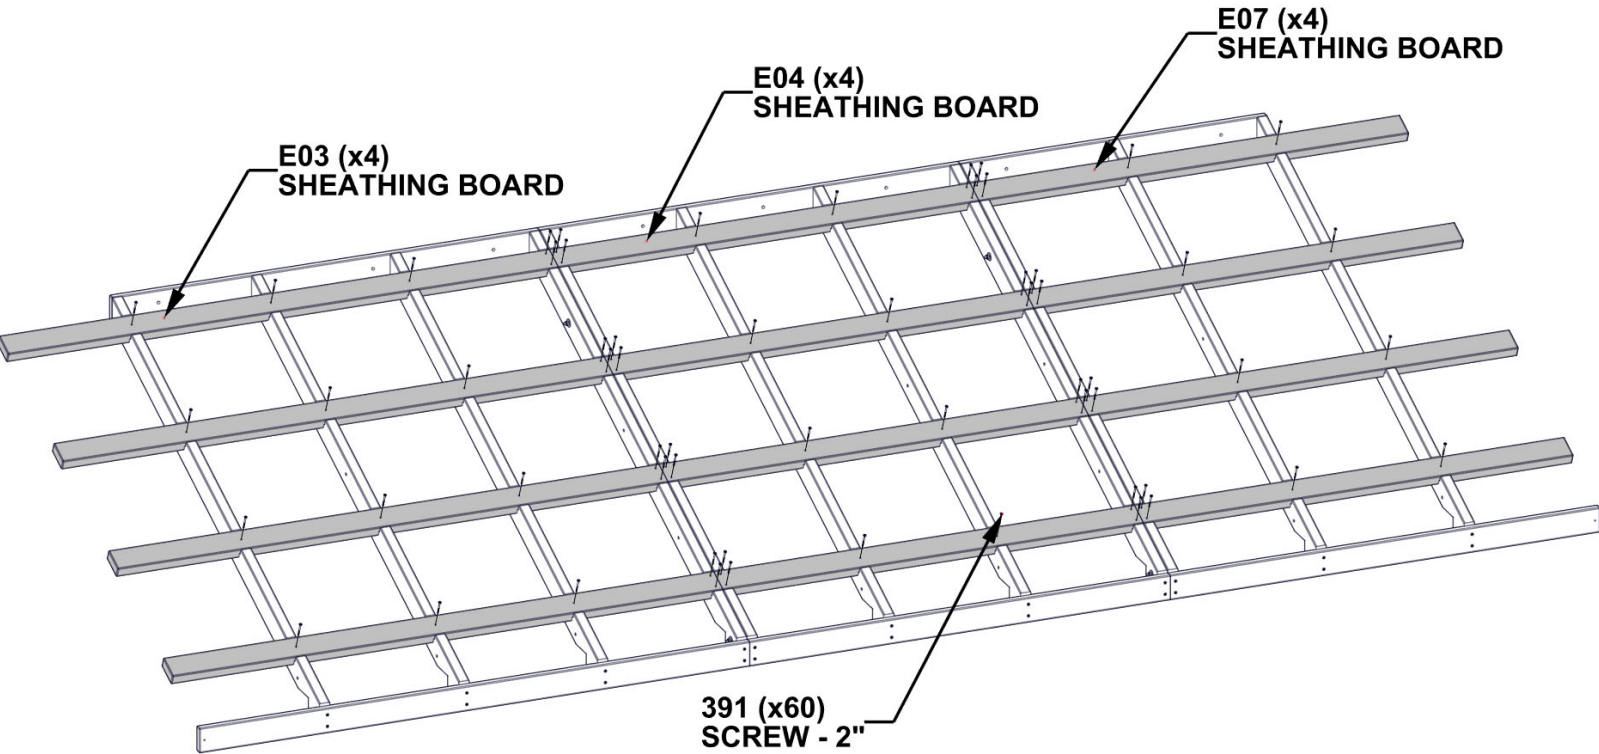


STEP 27B - ROOF PANEL ASSEMBLY

ROOF PANEL B

TIP: LOOSEN HARDWARE TO ADJUST FOR SQUARING IF NEEDED

CRITICAL:

- SQUARE UNIT BEFORE PROCEEDING TO NEXT STEPS.
- THE BELOW DIMENSIONS ARE CRITICAL TO THE FINAL ROOF ASSEMBLY.
- MEASUREMENTS SHOULD BE HELD WITHIN $\pm 1/4"$.
- MEASUREMENTS OUTSIDE OF TOLERANCE WILL LEAD TO THE INABILITY TO ASSEMBLY THE ROOF.

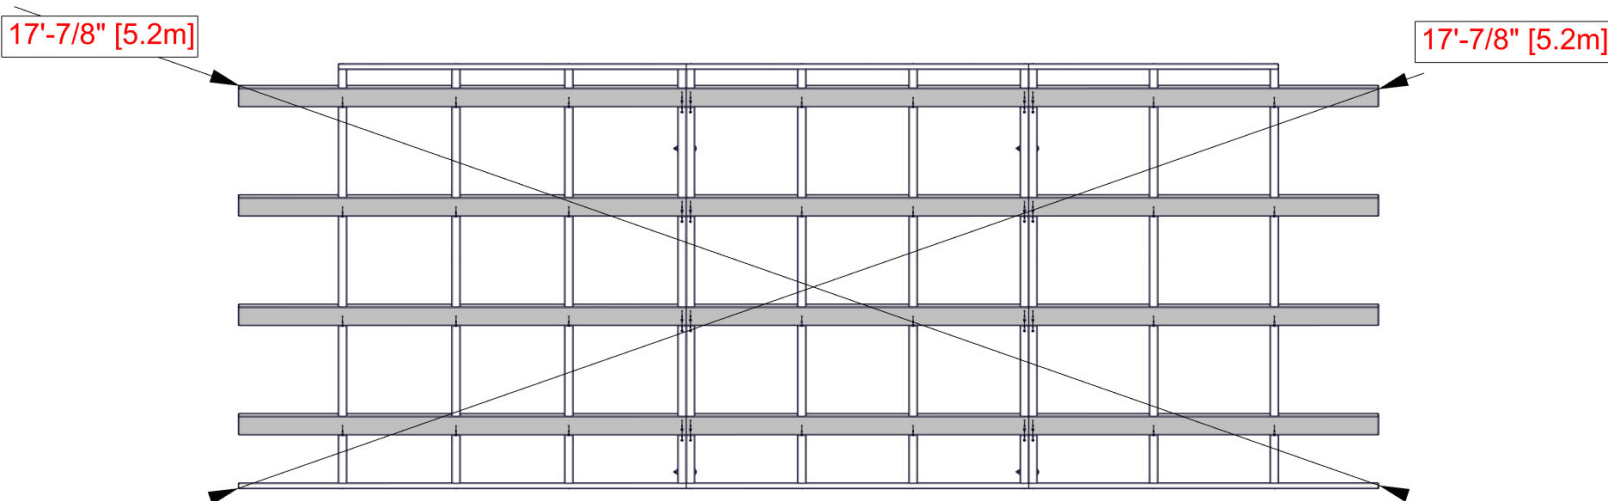

STEP 28 - ROOF PANEL ASSEMBLY

ROOF PANEL B

USE THIS PAGE TO FAMILIARIZE YOURSELF WITH THE ROOF PANEL AND ASSIST YOU IN STEPS 29-31.

TIPS:


- REMOVE PROTECTIVE BLUE FILM
- START AT THE END INDICATED AND ASSEMBLE IN THE DIRECTION OF THE ARROW

GLOVES SHOULD BE WORN WHEN HANDLING ROOF PANELS: EDGES ARE SHARP.

THE PRE-DRILLED HOLES ON EACH PANEL SHOULD ALWAYS BE POSITIONED ON THE RIDGE SIDE.


RIDGE

ROOF PANEL STEPS 29-31

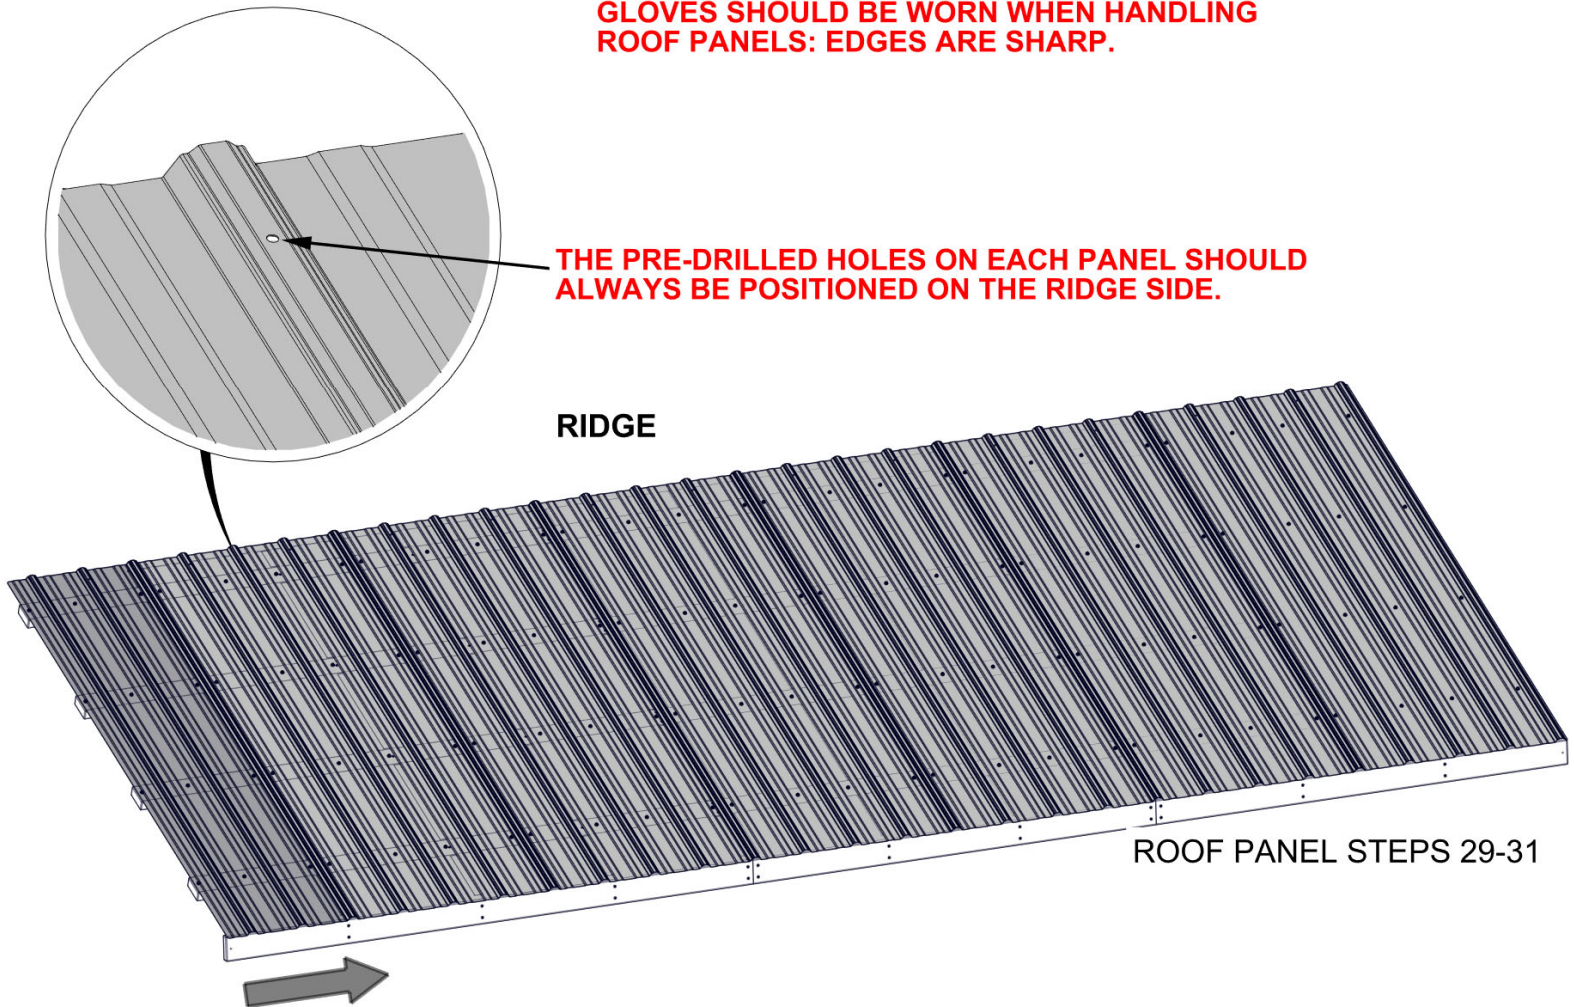

STEP 29 - ROOF PANEL ASSEMBLY


QTY	PART NUMBER	DESCRIPTION
44	H100833	SCREW WOODGRIP 10-16 x 3/4

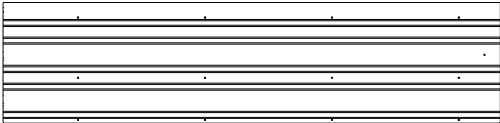

A4M01370 (x1) | 29 GA STEEL SHEETING




A4M01124 (x1) | 29 GA STEEL SHEETING

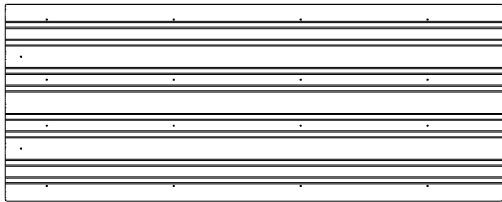


A4M01718 (x1) | 29 GA STEEL SHEETING

ROOF PANEL B


NOTE RIB OVERLAP

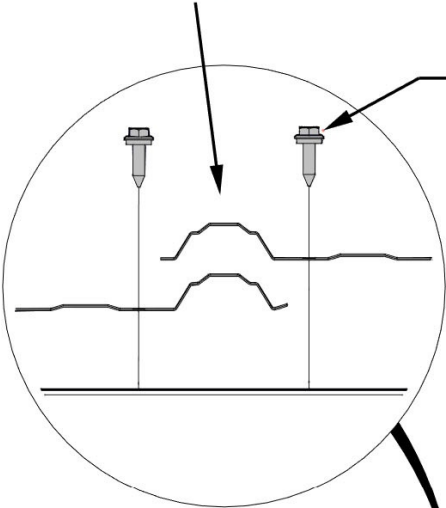


833 (x44)
SCREW - 3/4"

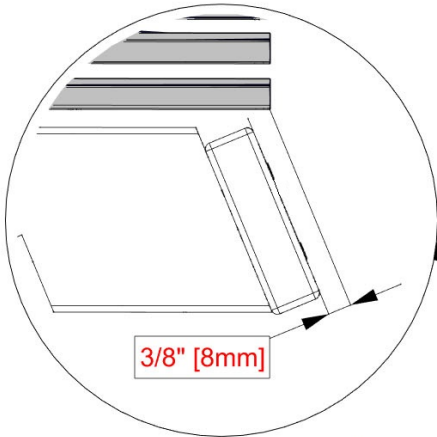


**MAKE SURE YOUR ROOF PANEL IS
SQUARE BEFORE MOVING ON.**



1370 (x1)
29 GA STEEL SHEETING

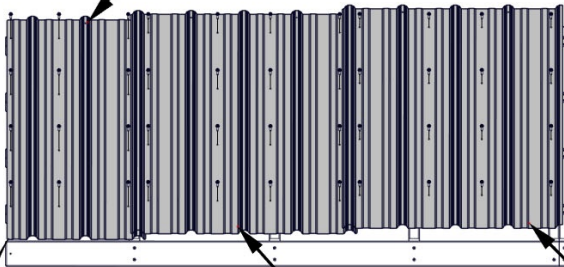


1124 (x1)
29 GA STEEL SHEETING

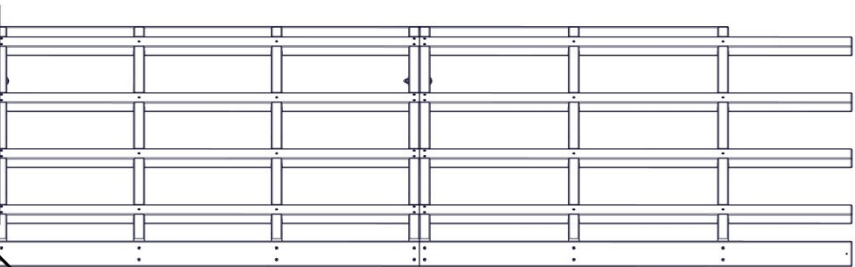

1718 (x1)
29 GA STEEL SHEETING

**ENSURE CORRECT PLACEMENT
OF 1718 STEEL SHEETING.**


**HOLD SHEETING INSIDE OF FRAME
MEASURING FROM RIB AS SHOWN.**

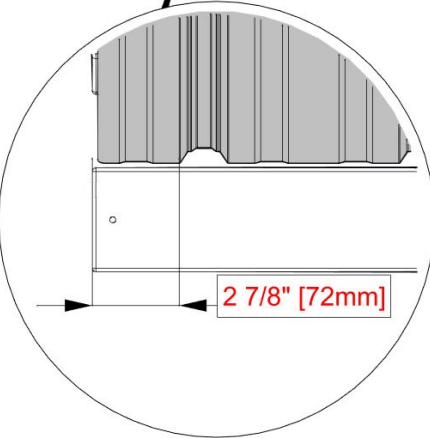

2 7/8" [72mm]

STEP 30 - ROOF PANEL ASSEMBLY

QTY	PART NUMBER	DESCRIPTION
32	H100833	SCREW WOODGRIP 10-16 x 3/4


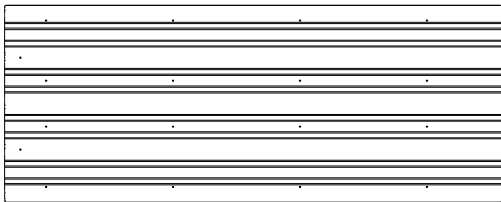


A4M01124 (x1) 29 GA STEEL SHEETING



A4M01718 (x1) 29 GA STEEL SHEETING

ROOF PANEL B

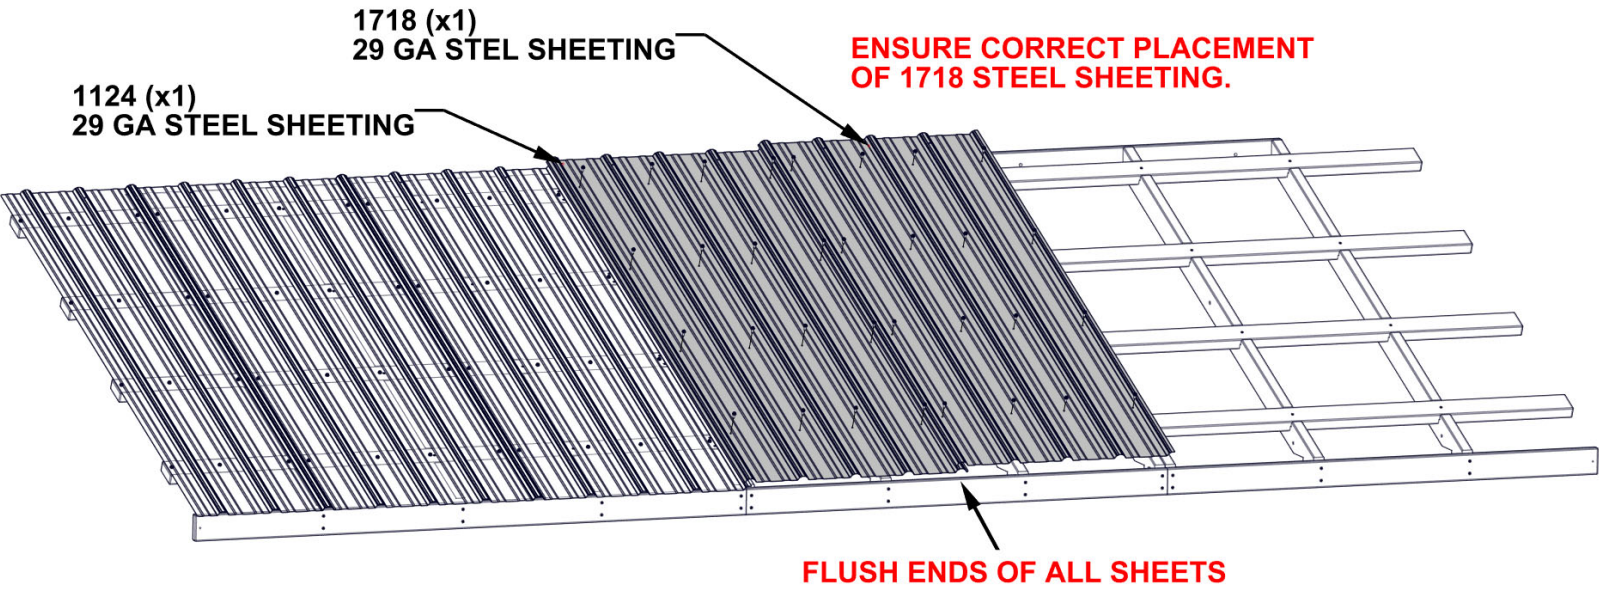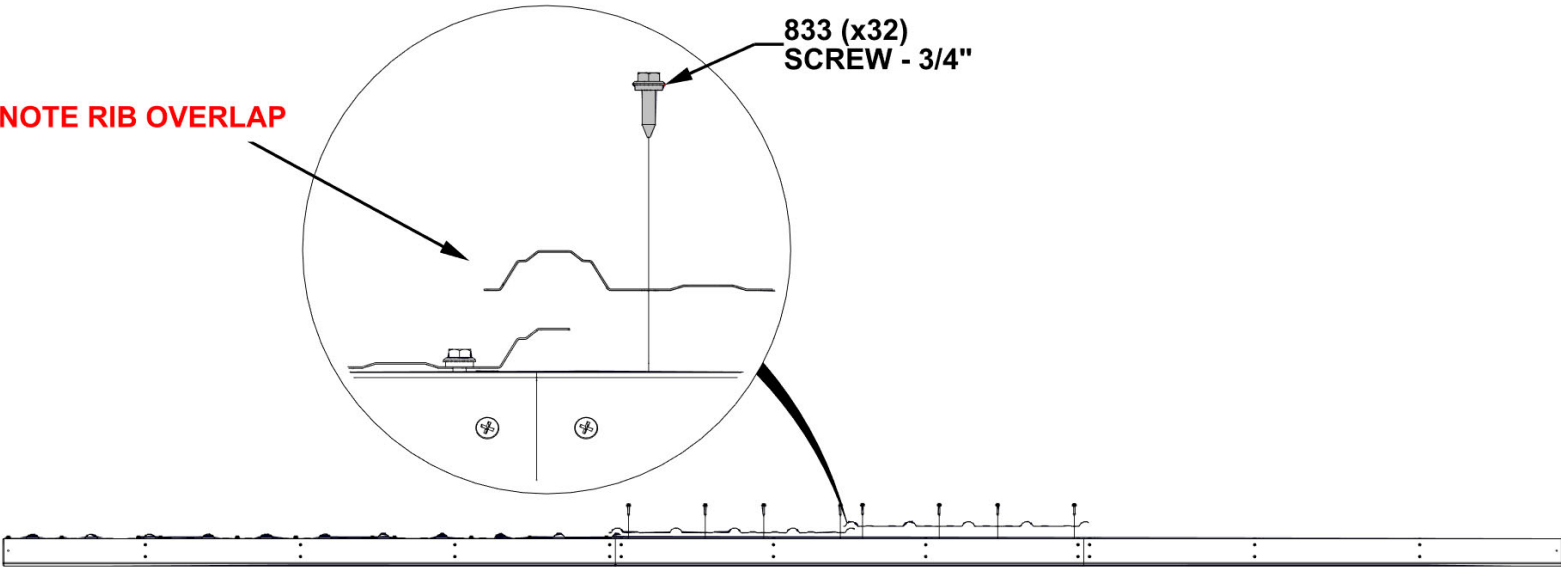



STEP 31 - ROOF PANEL ASSEMBLY

QTY	PART NUMBER	DESCRIPTION
32	H100833	SCREW WOODGRIP 10-16 x 3/4



A4M01124 (x2) | 29 GA STEEL SHEETING

ROOF PANEL B

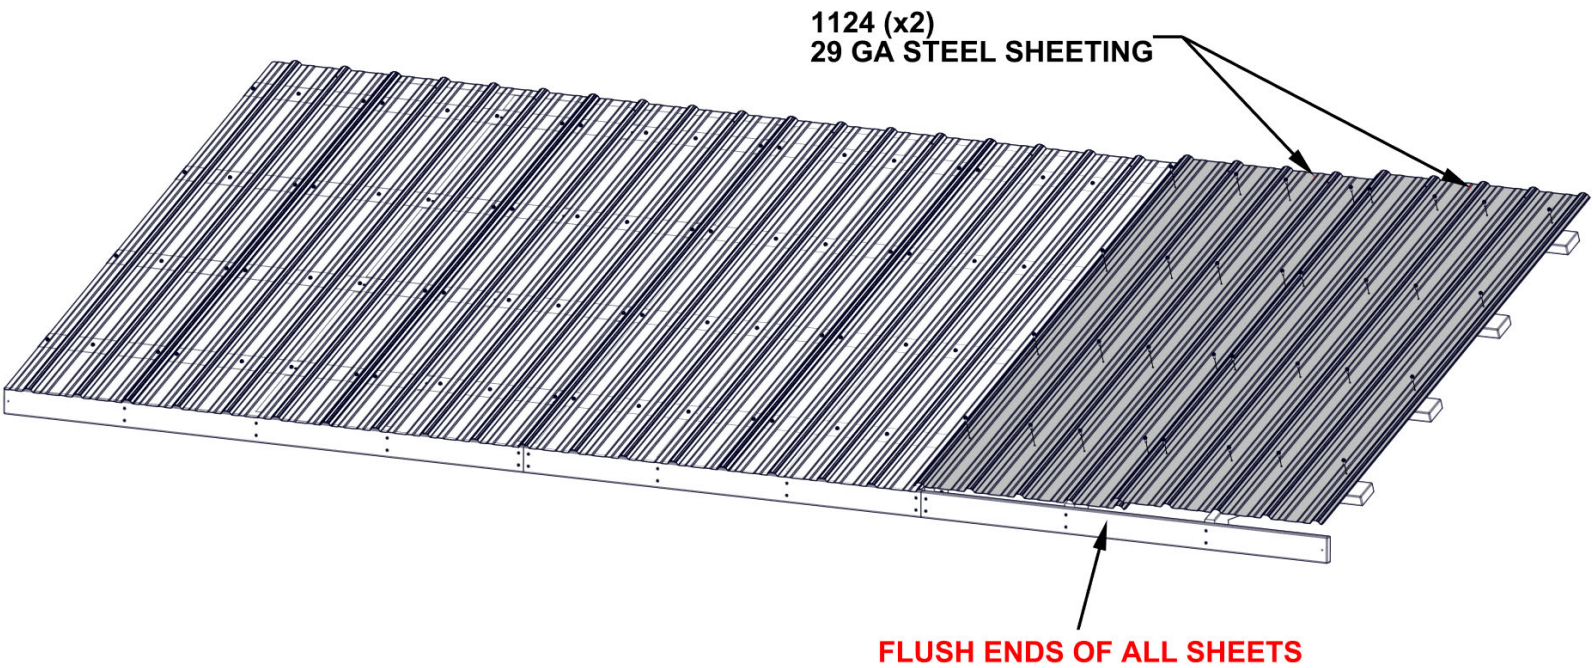
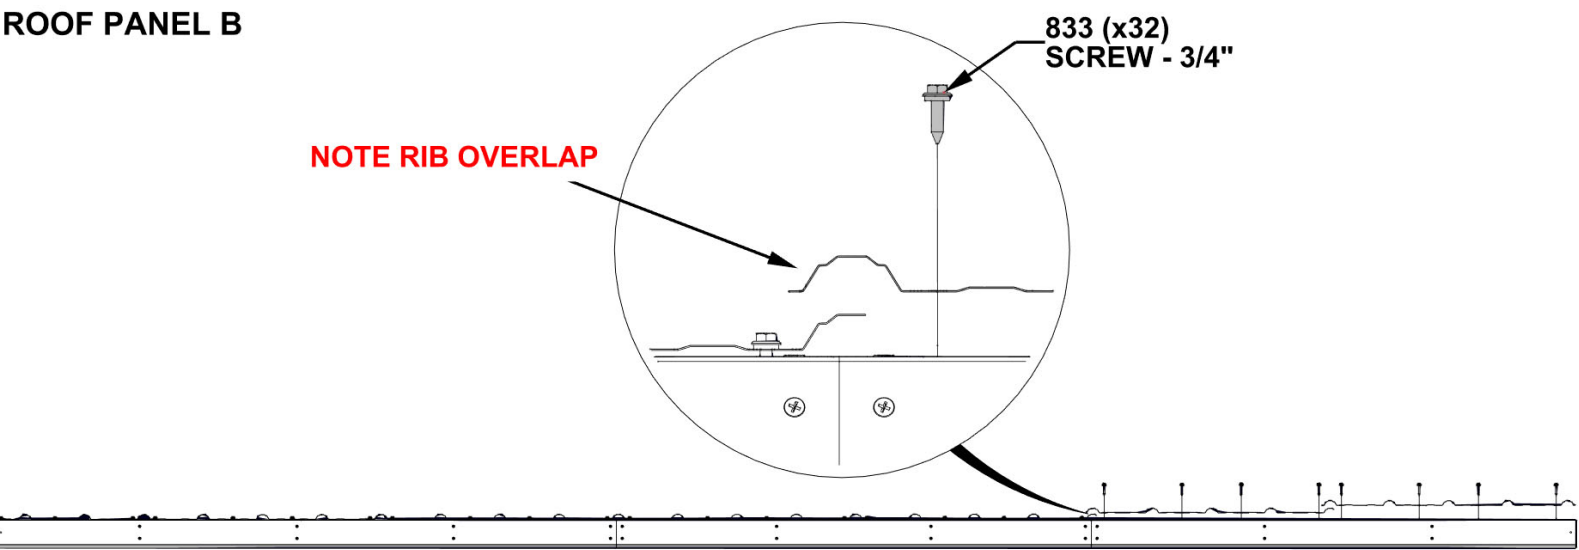


STEP 32 - ROOF PANEL ASSEMBLY

ROOF PANEL B

SEPARATE ROOF PANEL AT THIS TIME FOR EASE OF ASSEMBLING.

REMOVE HARDWARE AND SET TO THE SIDE AS IT WILL BE USED AGAIN AFTER BOTH ROOF PANELS ARE INSTALLED.

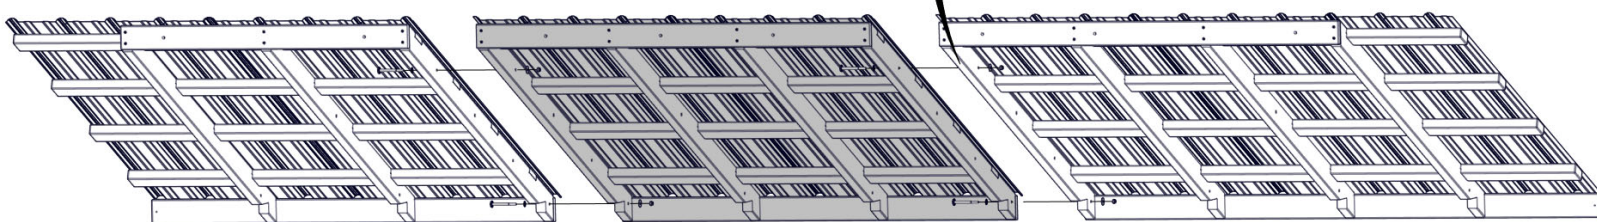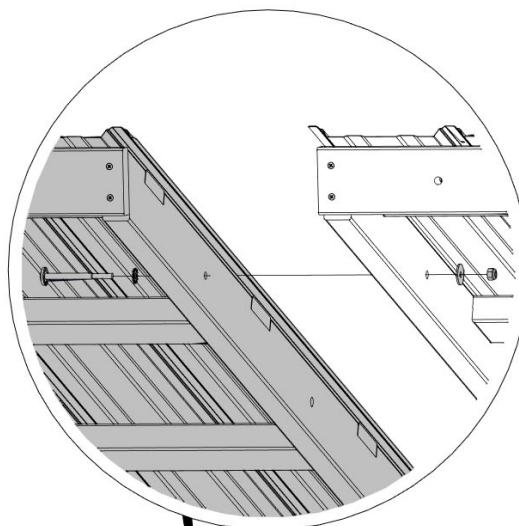

SECTION 3




SECTION 2

SECTION 1

STEP 33 - ROOF ASSEMBLY

QTY	PART NUMBER	DESCRIPTION
3	H100198	WASHER LOCK EXT 8X19 BLK
3	H100378	BOLT WH 5/16 X 1 3/4 BLK
1	H100391	SCREW PFH 8 X 2 BLK

INSTALL ROOF PANEL A, SECTION 1

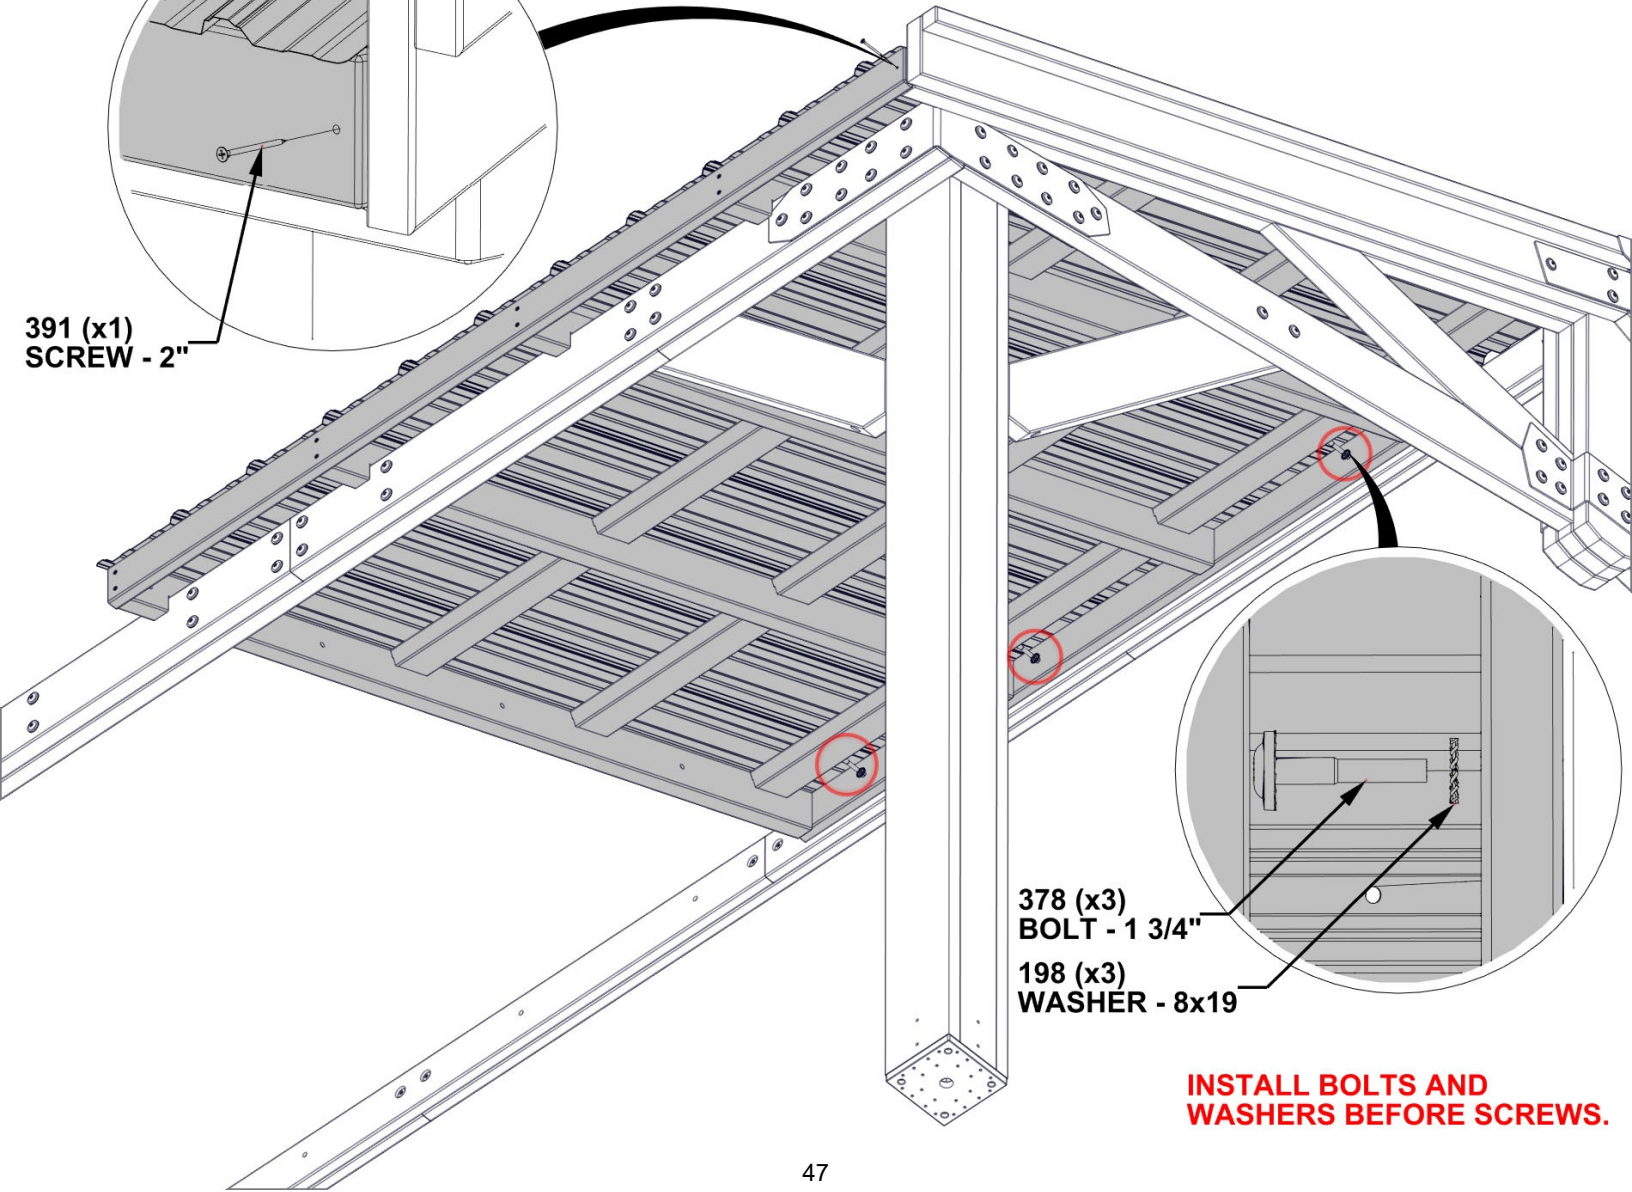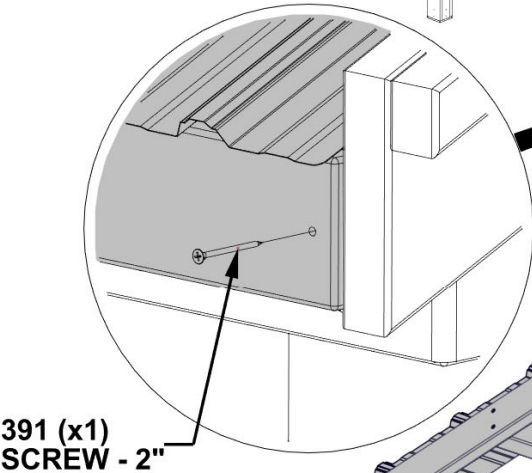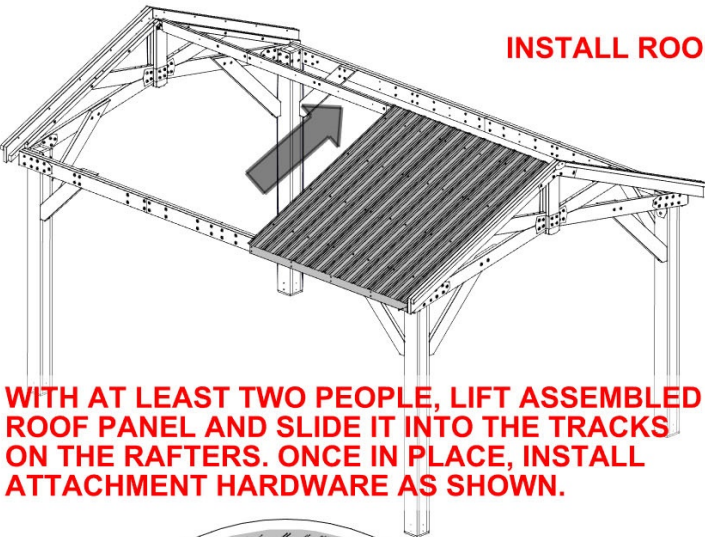




INSTALL BOLTS AND WASHERS BEFORE SCREWS.

STEP 34 - ROOF ASSEMBLY

QTY	PART NUMBER	DESCRIPTION
3	H100198	WASHER LOCK EXT 8X19 BLK
3	H100378	BOLT WH 5/16 X 1 3/4 BLK
1	H100391	SCREW PFH 8 X 2 BLK

INSTALL ROOF PANEL B, SECTION 1

INSTALL BOLTS AND WASHERS BEFORE SCREWS.

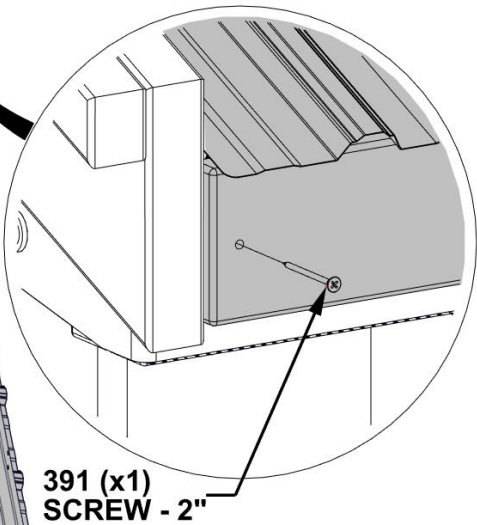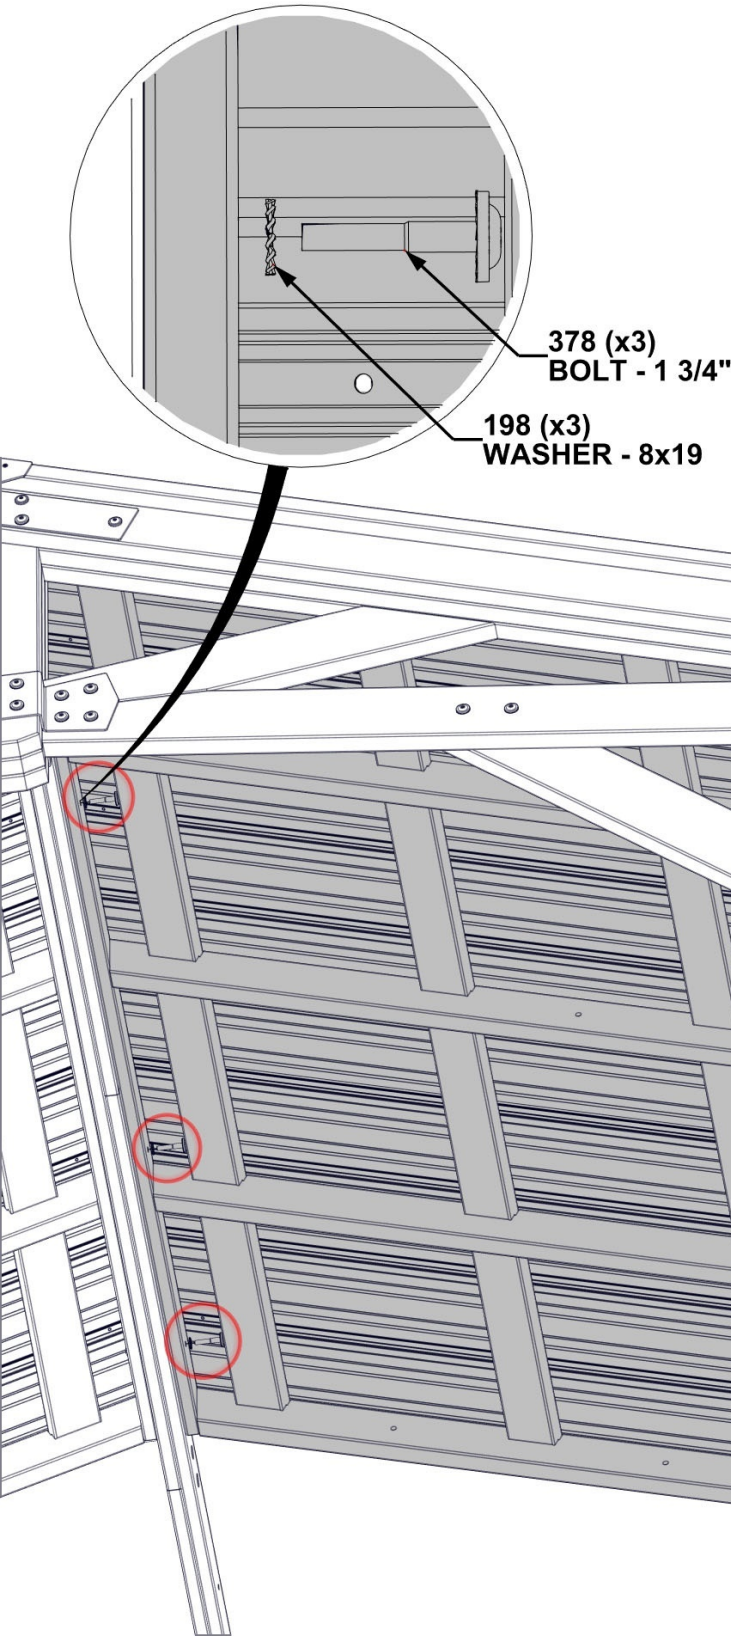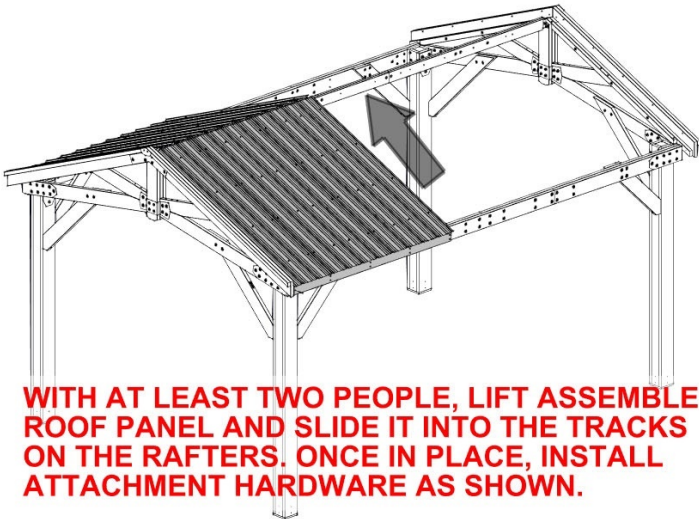


STEP 35 - ROOF ASSEMBLY

QTY	PART NUMBER	DESCRIPTION
2	H100198	WASHER LOCK EXT 8X19 BLK
2	H100478	WASHER FLAT 8X27 BLK
2	H100479	NUT LOCK 5/16 BLK
2	H100480	BOLT WH 5/16 X 4 3/4 BLK






E06 | ACCESSORY TRUSS - W4L16863
(x2) | 1 3/8"x3 3/8"x73 13/16" (36x86x1875)

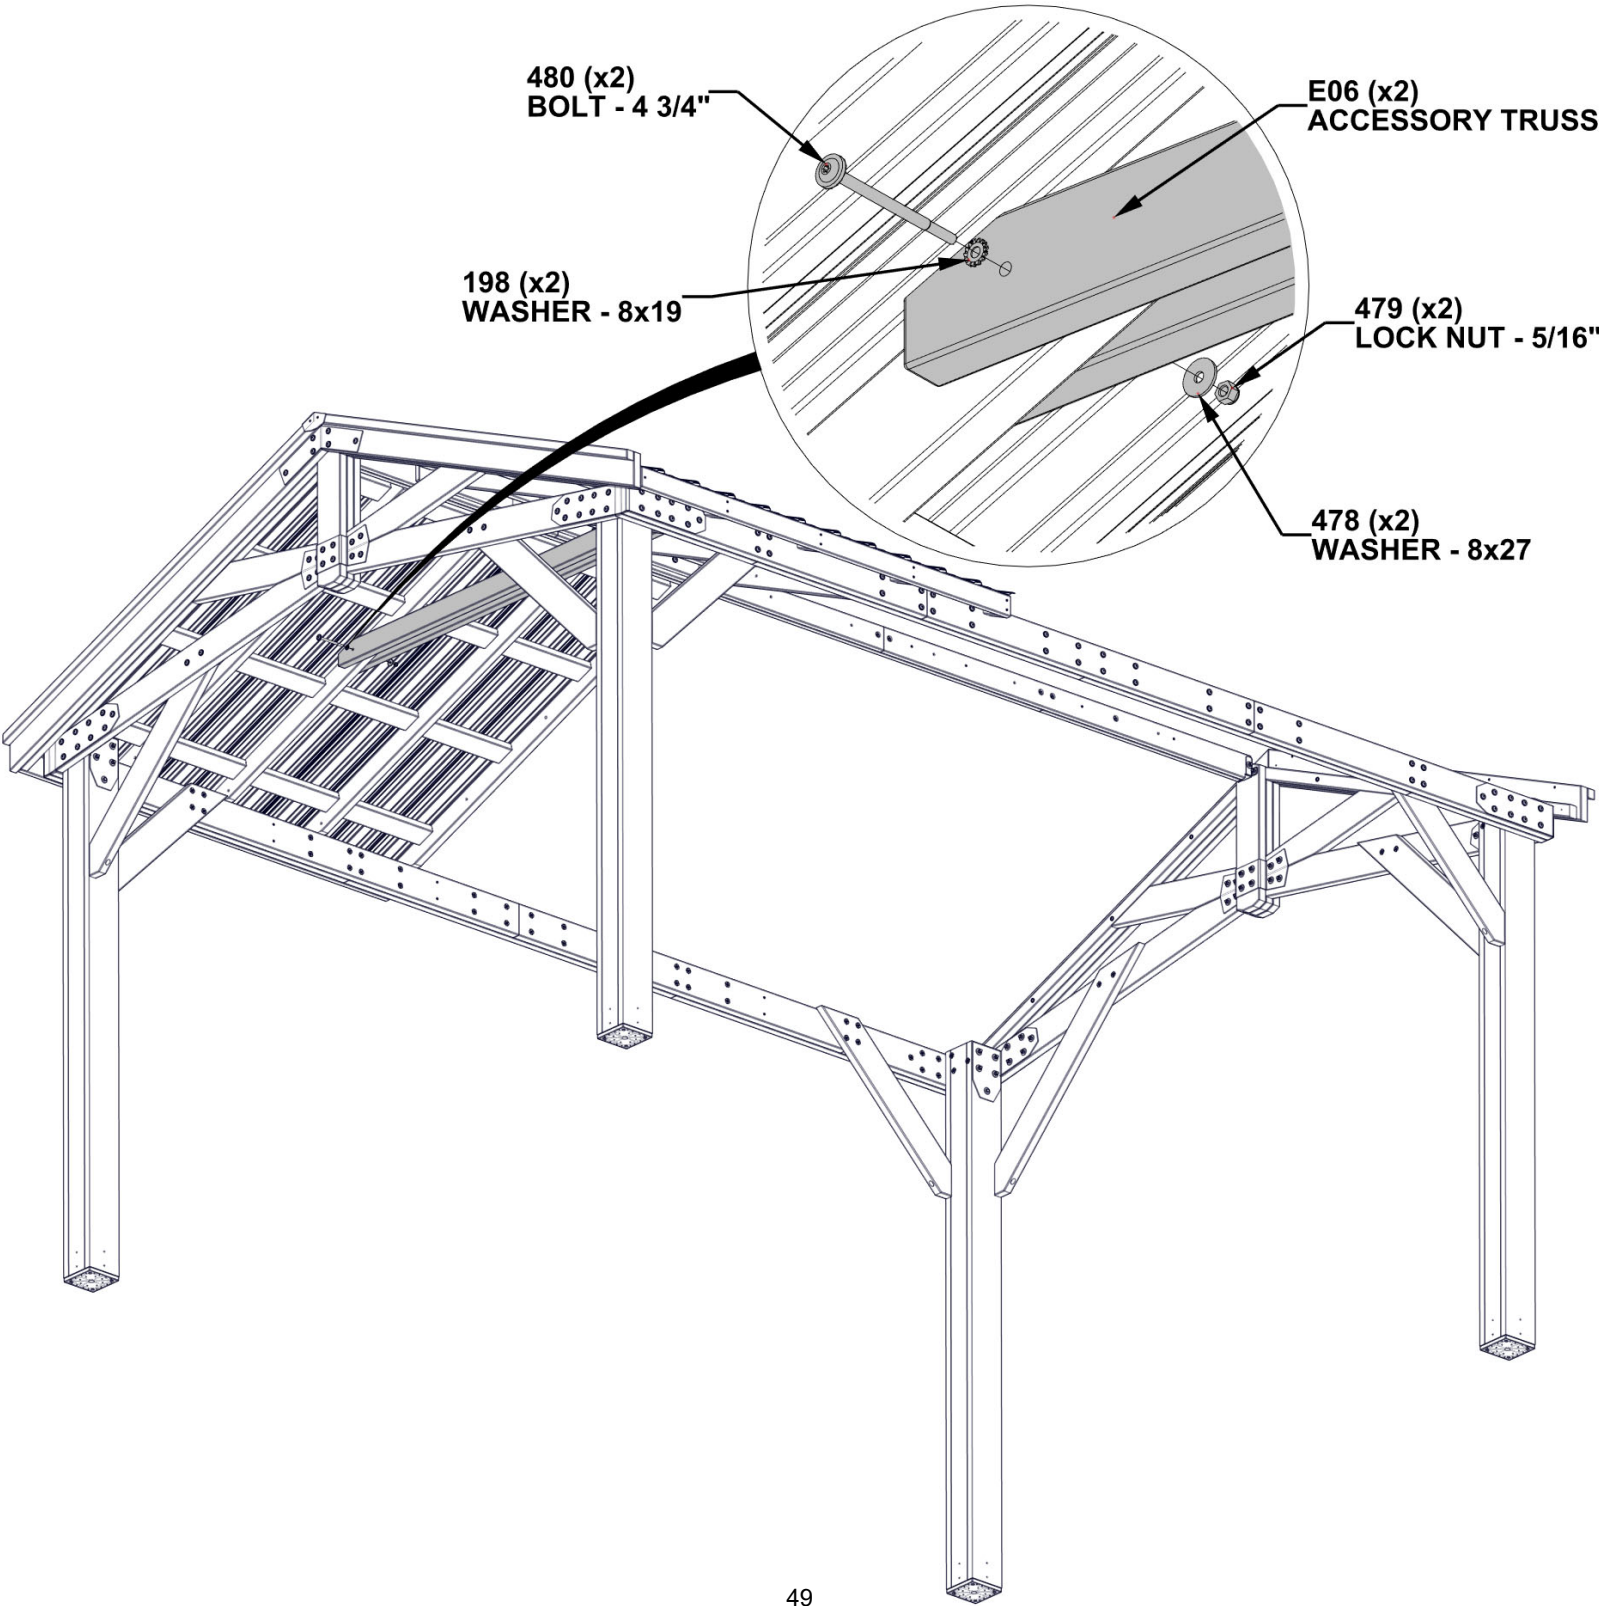


STEP 36 - ROOF ASSEMBLY

QTY	PART NUMBER	DESCRIPTION
6	H100198	WASHER LOCK EXT 8X19 BLK
3	H100378	BOLT WH 5/16 X 1 3/4 BLK
3	H100478	WASHER FLAT 8X27 BLK
3	H100479	NUT LOCK 5/16 BLK
3	H100503	BOLT WH 5/16 X 3 1/2 BLK

INSTALL ROOF PANEL A, SECTION 2

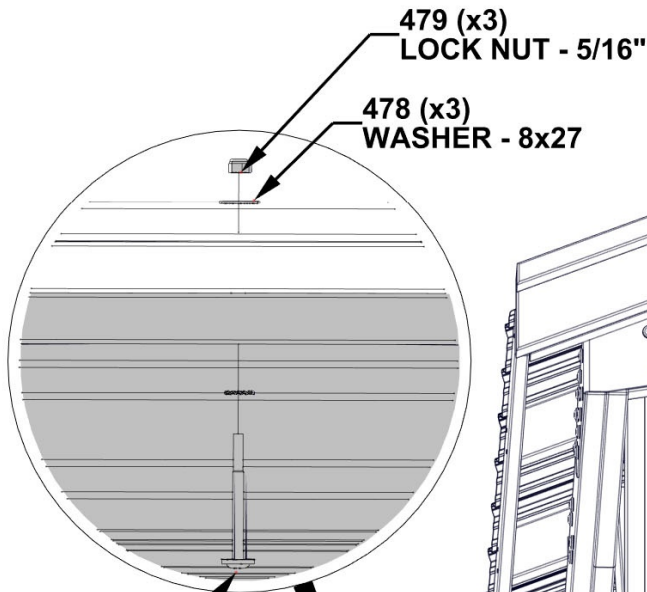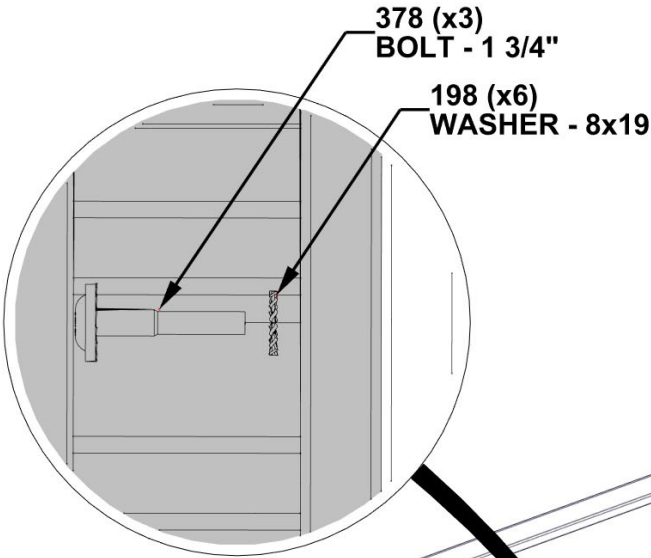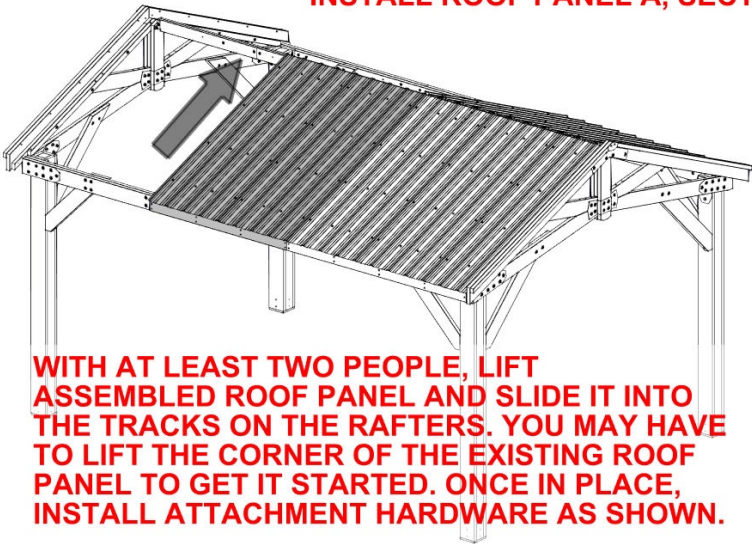



503 (x3)
BOLT - 3 1/2"

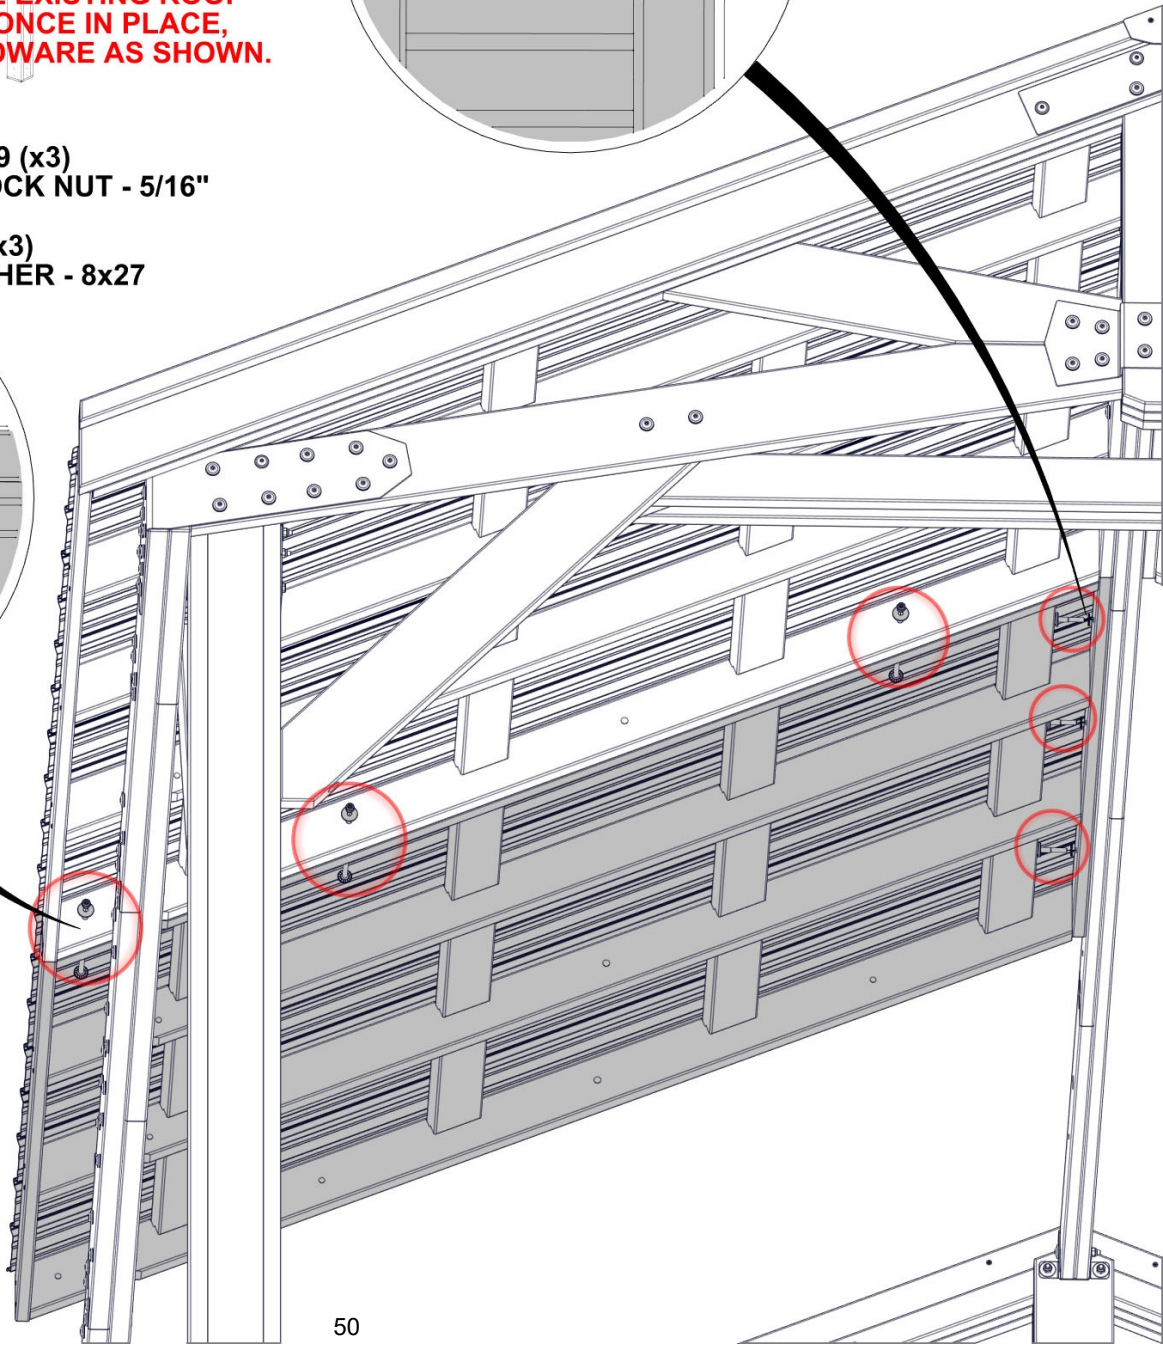


STEP 37 - ROOF ASSEMBLY

QTY	PART NUMBER	DESCRIPTION
6	H100198	WASHER LOCK EXT 8X19 BLK
3	H100378	BOLT WH 5/16 X 1 3/4 BLK
3	H100478	WASHER FLAT 8X27 BLK
3	H100479	NUT LOCK 5/16 BLK
3	H100503	BOLT WH 5/16 X 3 1/2 BLK

INSTALL ROOF PANEL B, SECTION 2

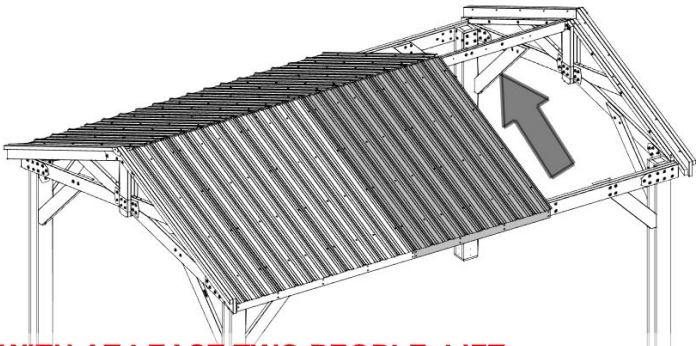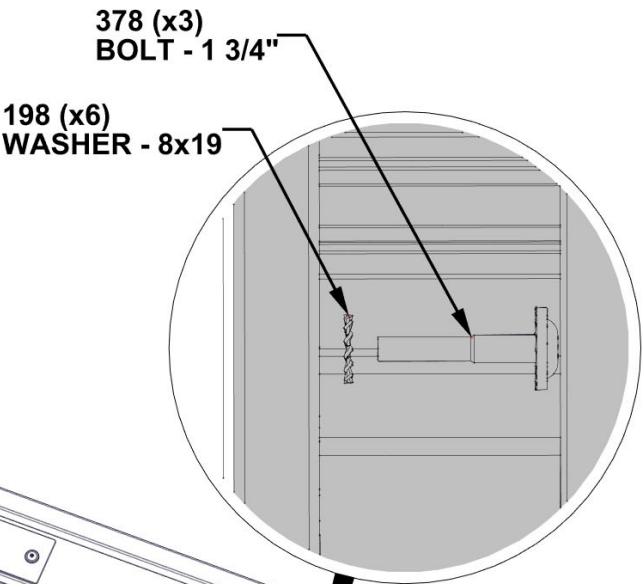


WITH AT LEAST TWO PEOPLE, LIFT ASSEMBLED ROOF PANEL AND SLIDE IT INTO THE TRACKS ON THE RAFTERS. YOU MAY HAVE TO LIFT THE CORNER OF THE EXISTING ROOF PANEL TO GET IT STARTED. ONCE IN PLACE, INSTALL ATTACHMENT HARDWARE AS SHOWN.

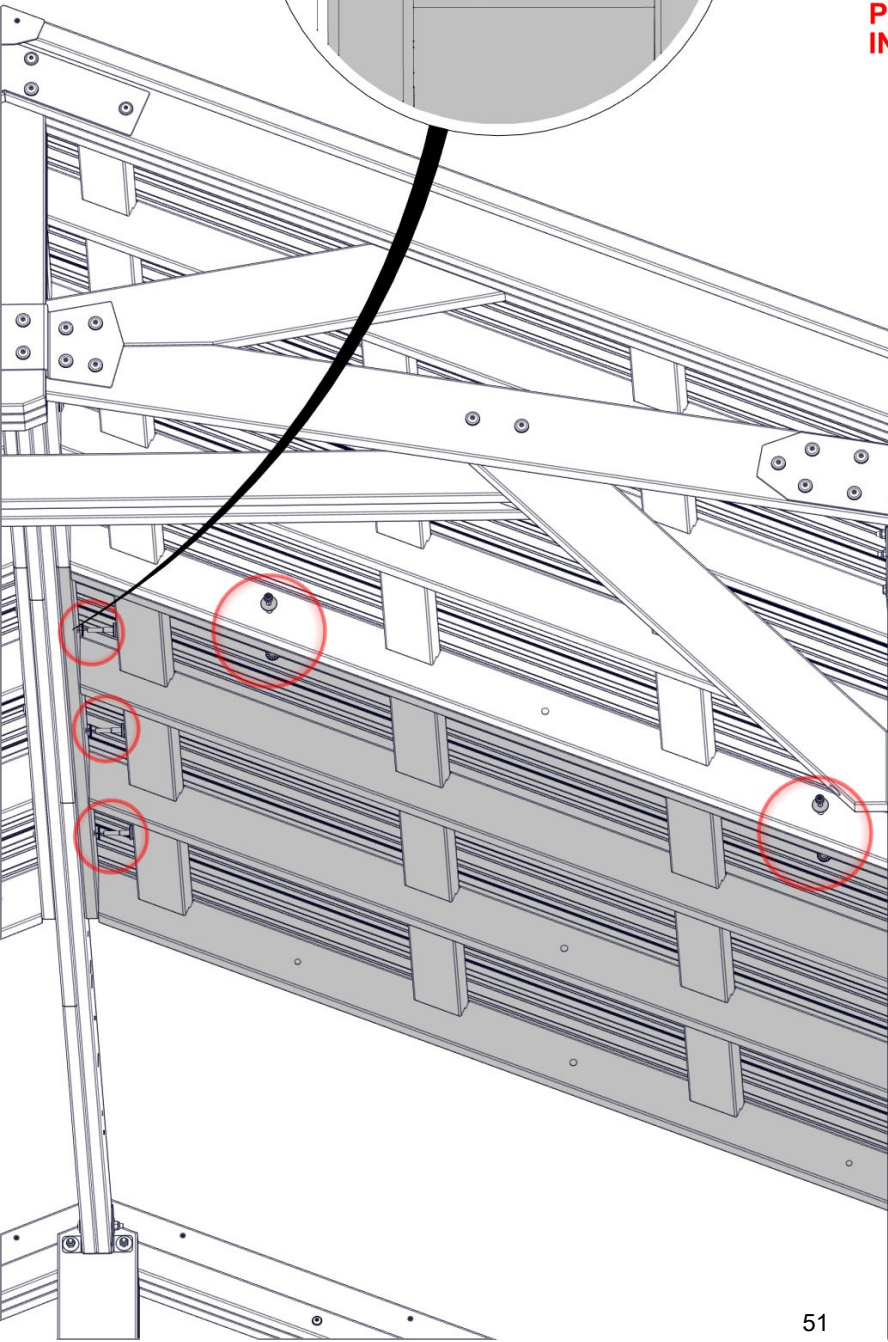

479 (x3)
LOCK NUT - 5/16"

478 (x3)
WASHER - 8x27

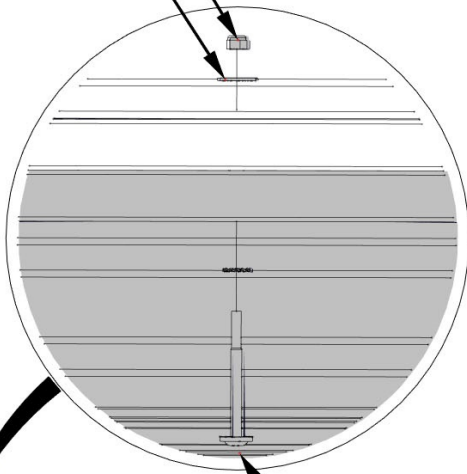

503 (x3)
BOLT - 3 1/2"




STEP 38 - ROOF ASSEMBLY

QTY	PART NUMBER	DESCRIPTION
4	H100198	WASHER LOCK EXT 8X19 BLK
4	H100478	WASHER FLAT 8X27 BLK
4	H100479	NUT LOCK 5/16 BLK
2	H100480	BOLT WH 5/16 X 4 3/4 BLK
2	H100976	BOLT WH 5/16 X 6 1/4 BLK




E06 | ACCESSORY TRUSS - W4L16863
(x4) | 1 3/8"x3 3/8"x73 13/16" (36x86x1875)

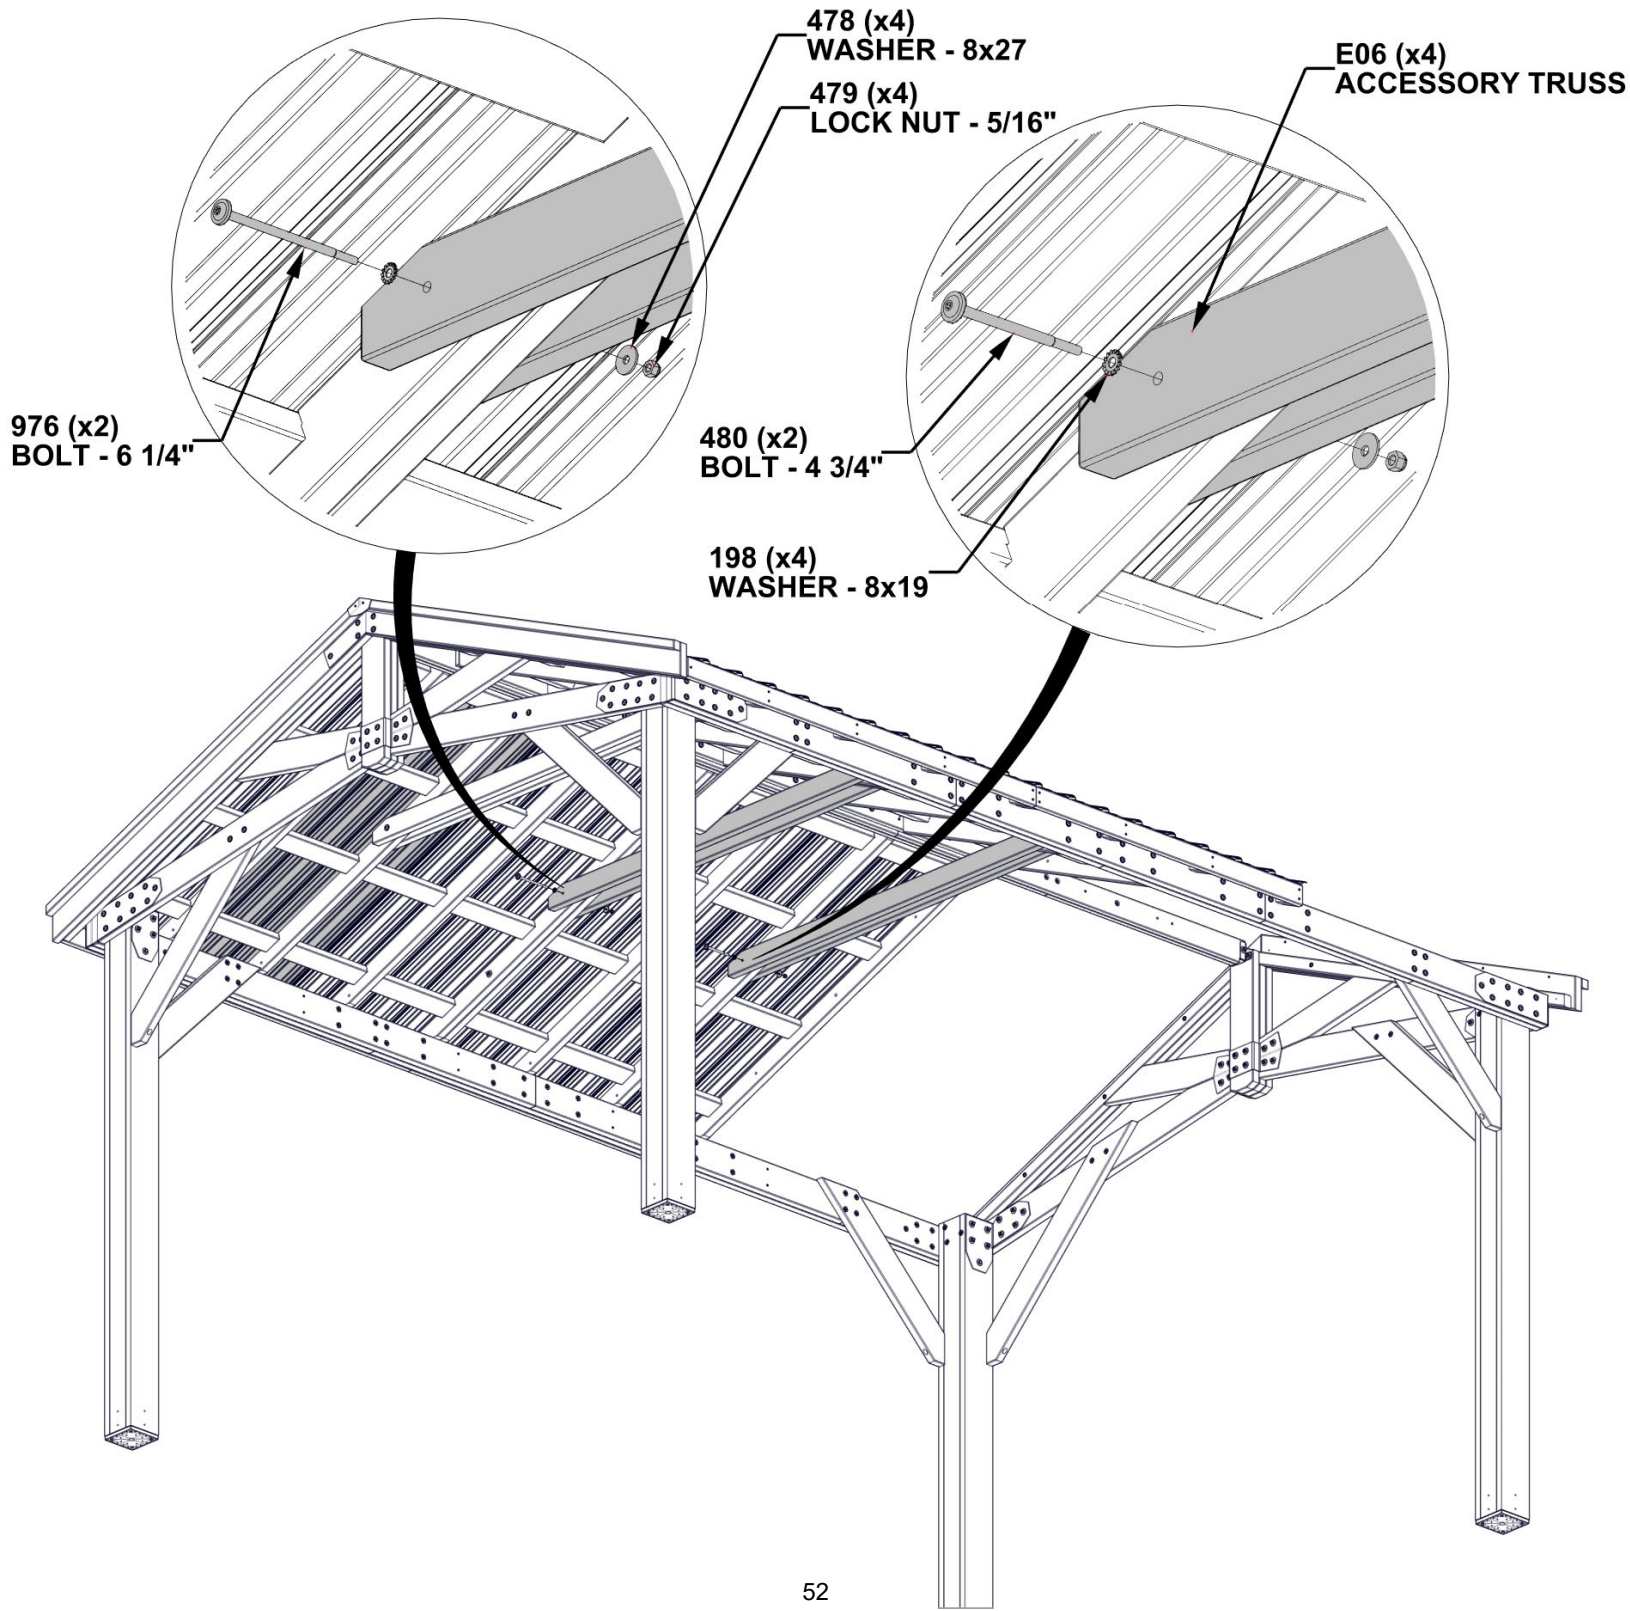

STEP 39 - ROOF ASSEMBLY

QTY	PART NUMBER	DESCRIPTION
6	H100198	WASHER LOCK EXT 8X19 BLK
2	H100378	BOLT WH 5/16 X 1 3/4 BLK
1	H100391	SCREW PFH 8 X 2 BLK
4	H100478	WASHER FLAT 8X27 BLK
4	H100479	NUT LOCK 5/16 BLK
4	H100503	BOLT WH 5/16 X 3 1/2 BLK

INSTALL ROOF PANEL A, SECTION 3

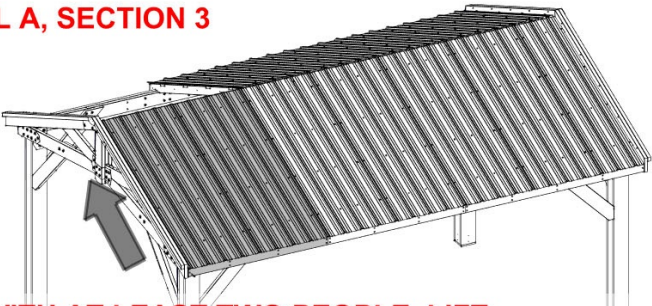


WITH AT LEAST TWO PEOPLE, LIFT ASSEMBLED ROOF PANEL AND SLIDE IT INTO THE TRACKS ON THE RAFTERS. YOU MAY HAVE TO LIFT THE CORNER OF THE EXISTING ROOF PANEL TO GET IT STARTED. ONCE IN PLACE, INSTALL ATTACHMENT HARDWARE AS SHOWN.


INSTALL BOLTS AND WASHERS BEFORE SCREWS.

198 (x6)
WASHER - 8x19

378 (x2)
BOLT - 1 3/4"

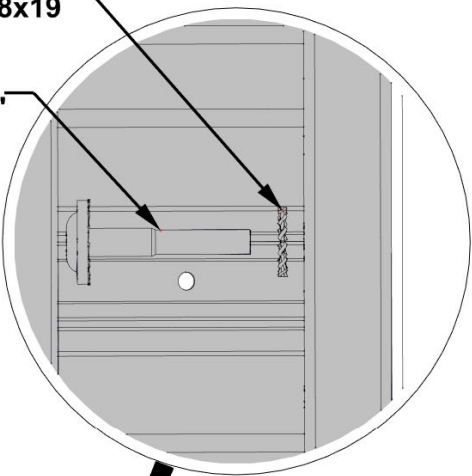


391 (x1)
SCREW - 2"

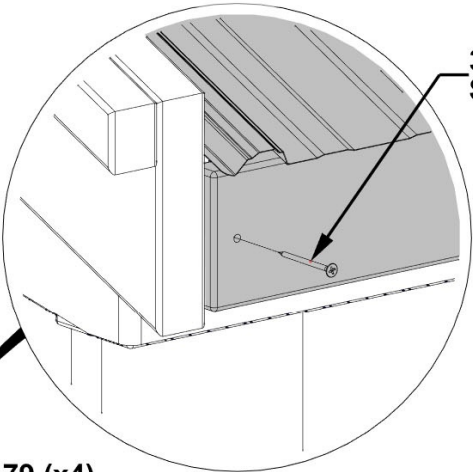


479 (x4)
LOCK NUT - 5/16"

478 (x4)
WASHER - 8x27

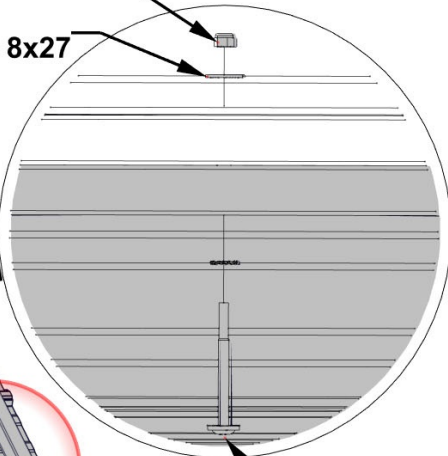





503 (x4)
BOLT - 3 1/2"

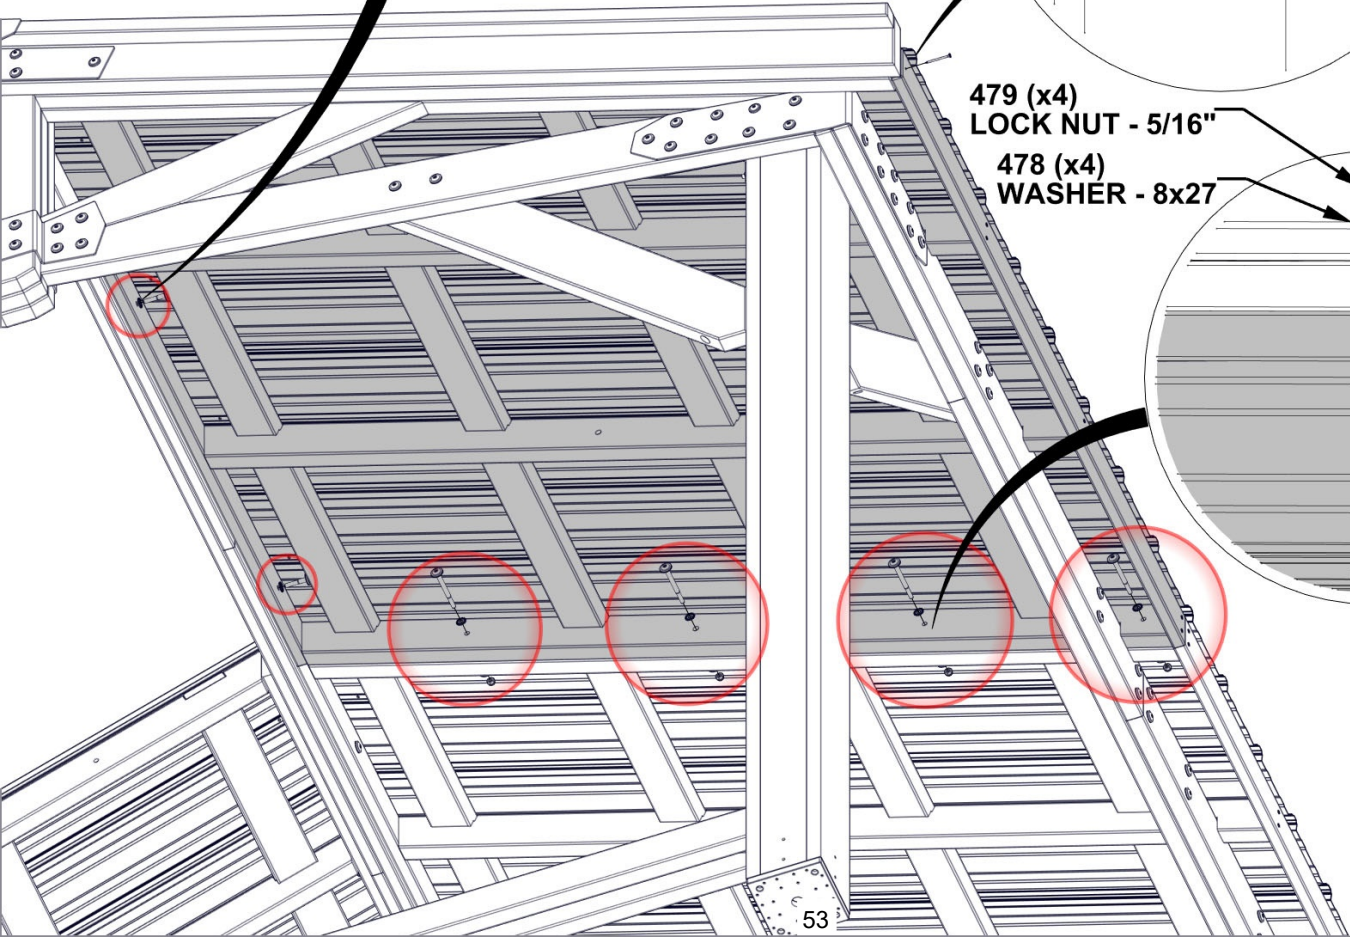

STEP 40 - ROOF ASSEMBLY

QTY	PART NUMBER	DESCRIPTION
6	H100198	WASHER LOCK EXT 8X19 BLK
2	H100378	BOLT WH 5/16 X 1 3/4 BLK
1	H100391	SCREW PFH 8 X 2 BLK
4	H100478	WASHER FLAT 8X27 BLK
4	H100479	NUT LOCK 5/16 BLK
4	H100503	BOLT WH 5/16 X 3 1/2 BLK

INSTALL ROOF PANEL B, SECTION 3

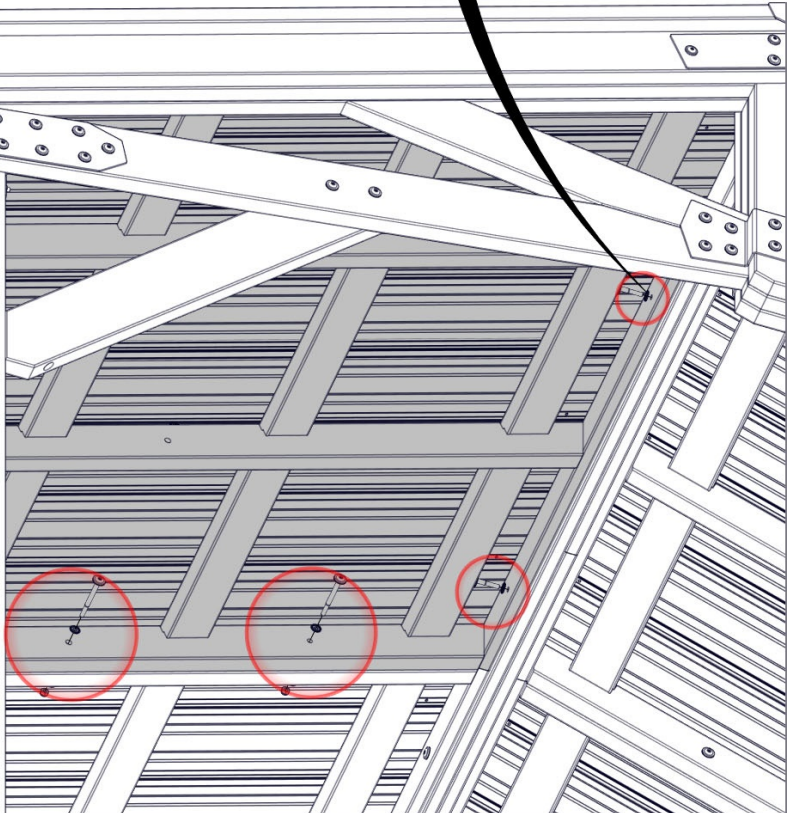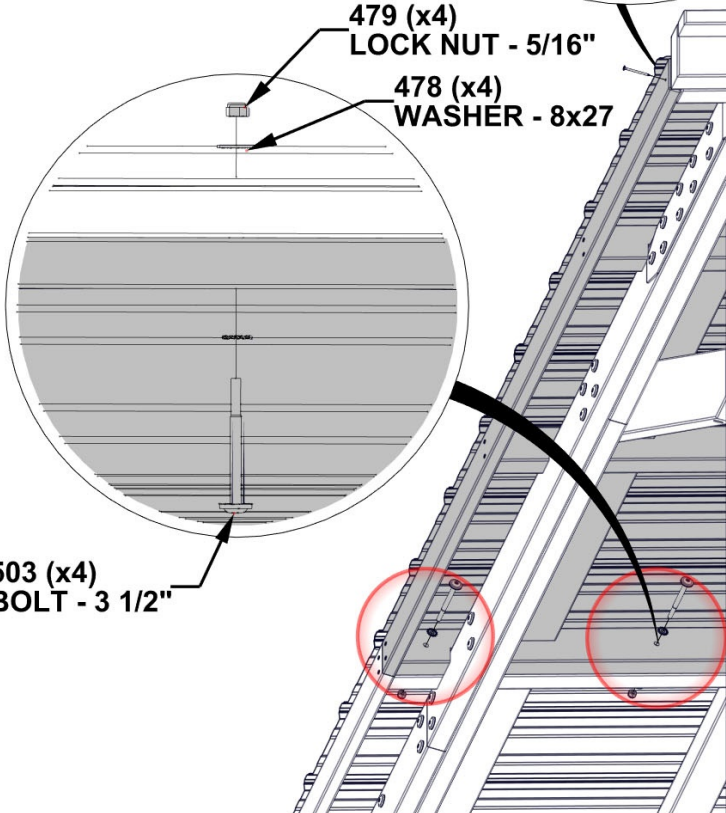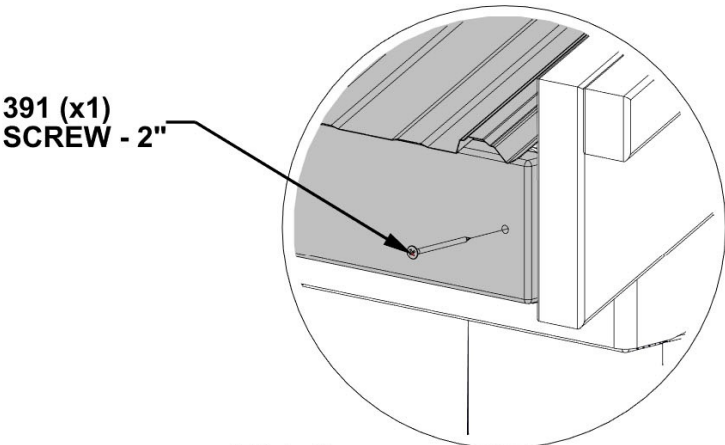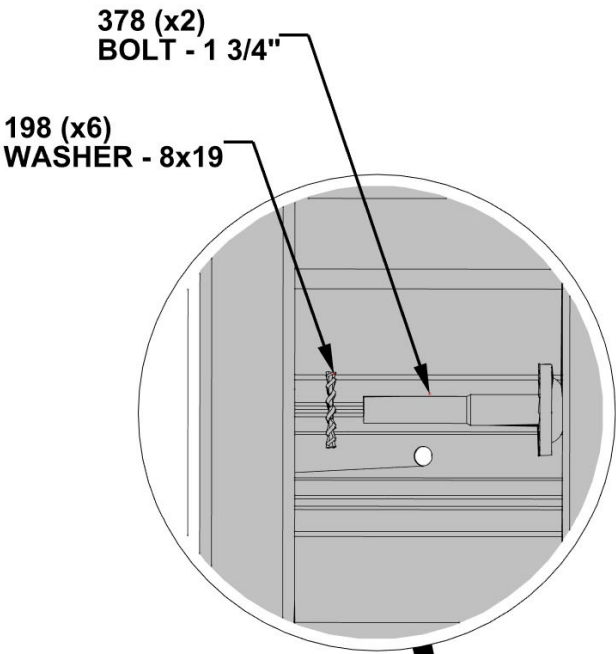


STEP 41 - ROOF ASSEMBLY

QTY	PART NUMBER	DESCRIPTION
2	H100198	WASHER LOCK EXT 8X19 BLK
2	H100478	WASHER FLAT 8X27 BLK
2	H100479	NUT LOCK 5/16 BLK
2	H100480	BOLT WH 5/16 X 4 3/4 BLK



E06 | ACCESSORY TRUSS - W4L16863
(x2) 1 3/8"x3 3/8"x73 13/16" (36x86x1875)

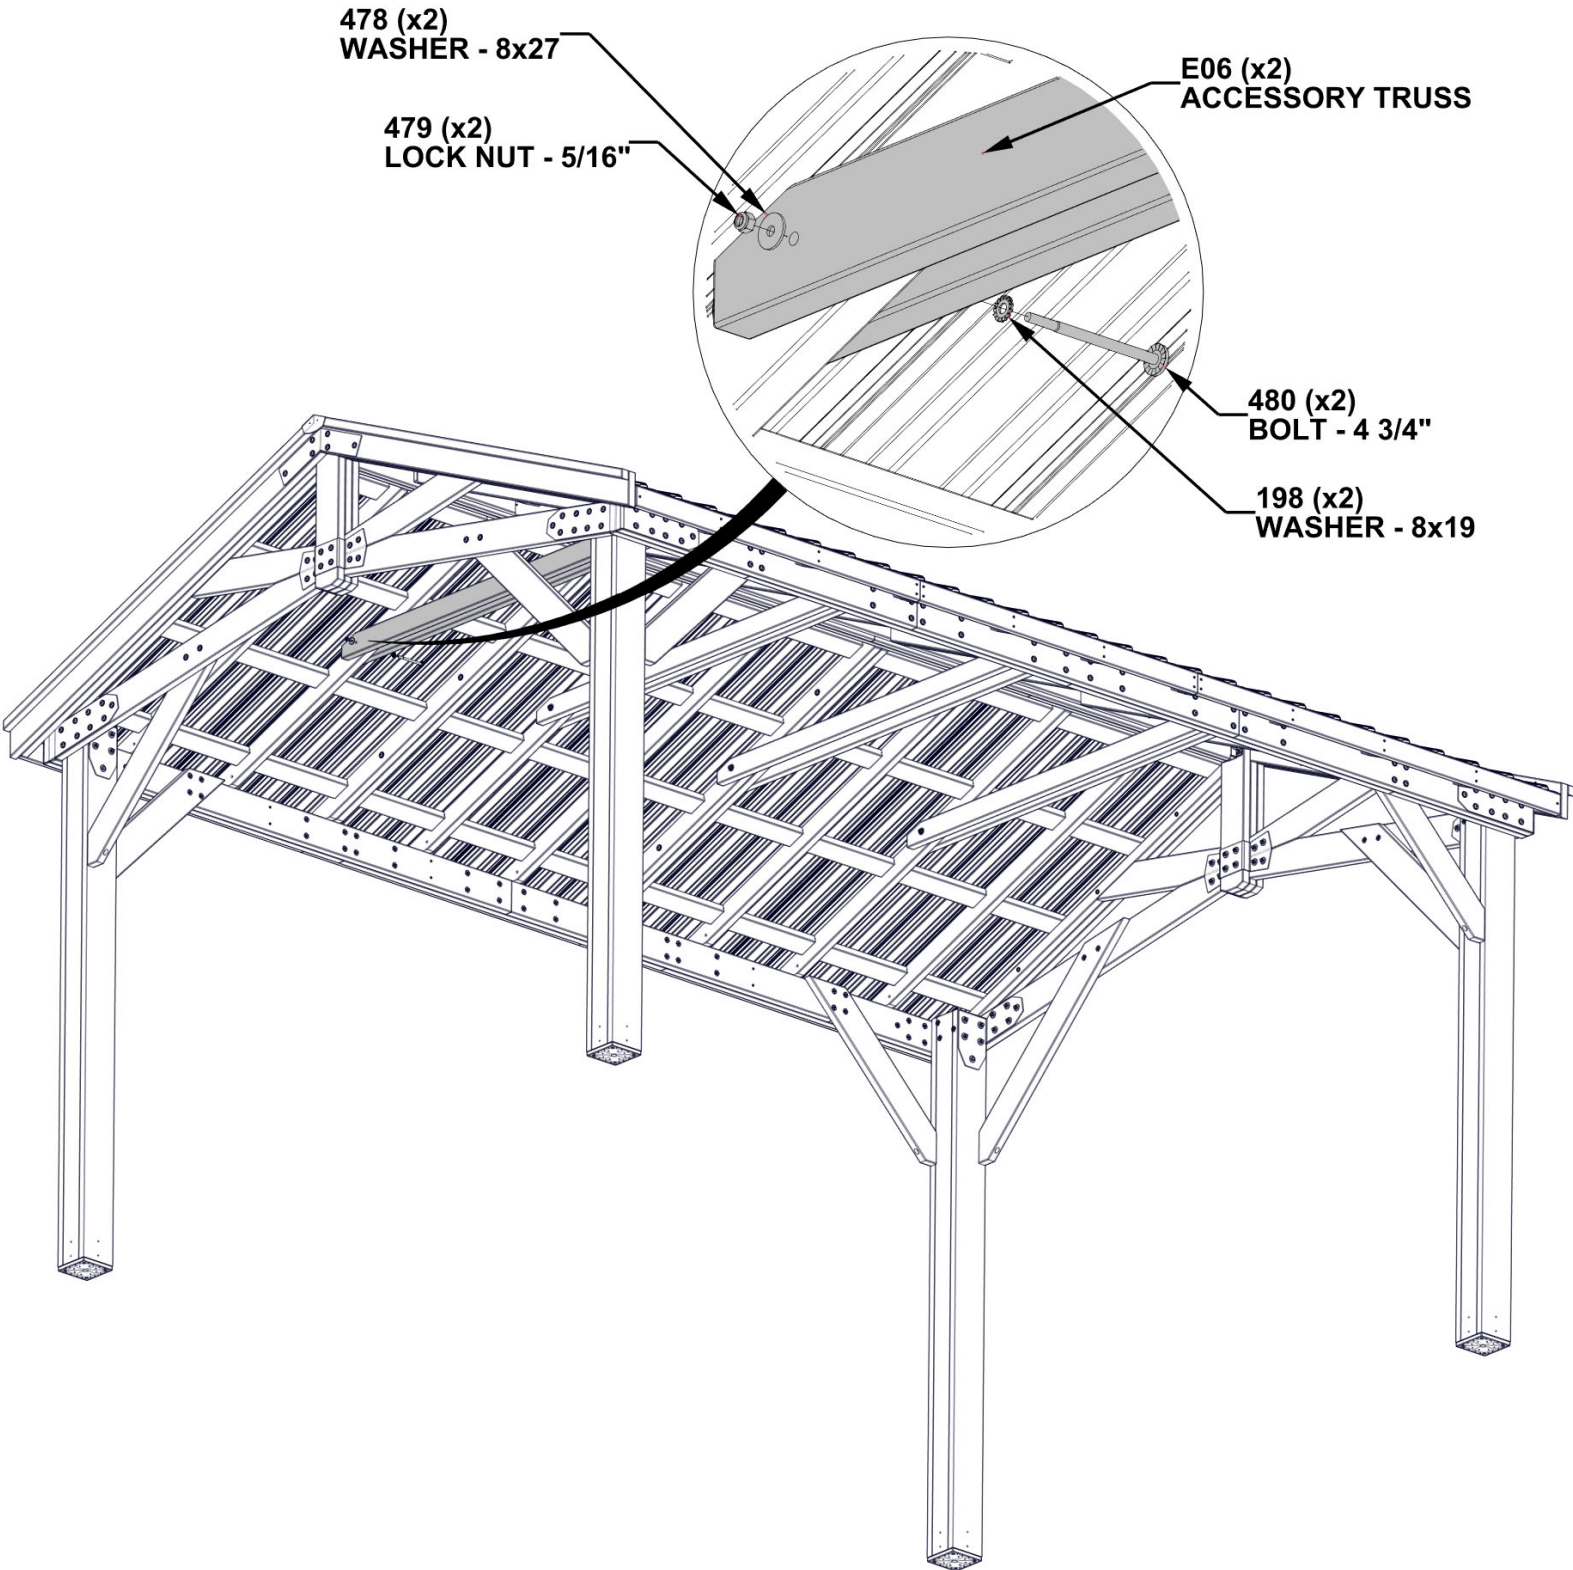

STEP 42 - GAZEBO ASSEMBLY



QTY	PART NUMBER	DESCRIPTION
24	H100201	SCREW PFH 8 X 2 1/2 BLK



G01 COVER BOARD - W4L16917
(x2) 1"x5 1/4"x89 1/2" (24x134x2274)


REPEAT FOR OTHER SIDE OF GAZEBO.

FOR BOARD PLACEMENT, MEASURE AS SHOWN FROM CORNER OF CORBEL. USE PILOT HOLES TO ATTACH BOARD.

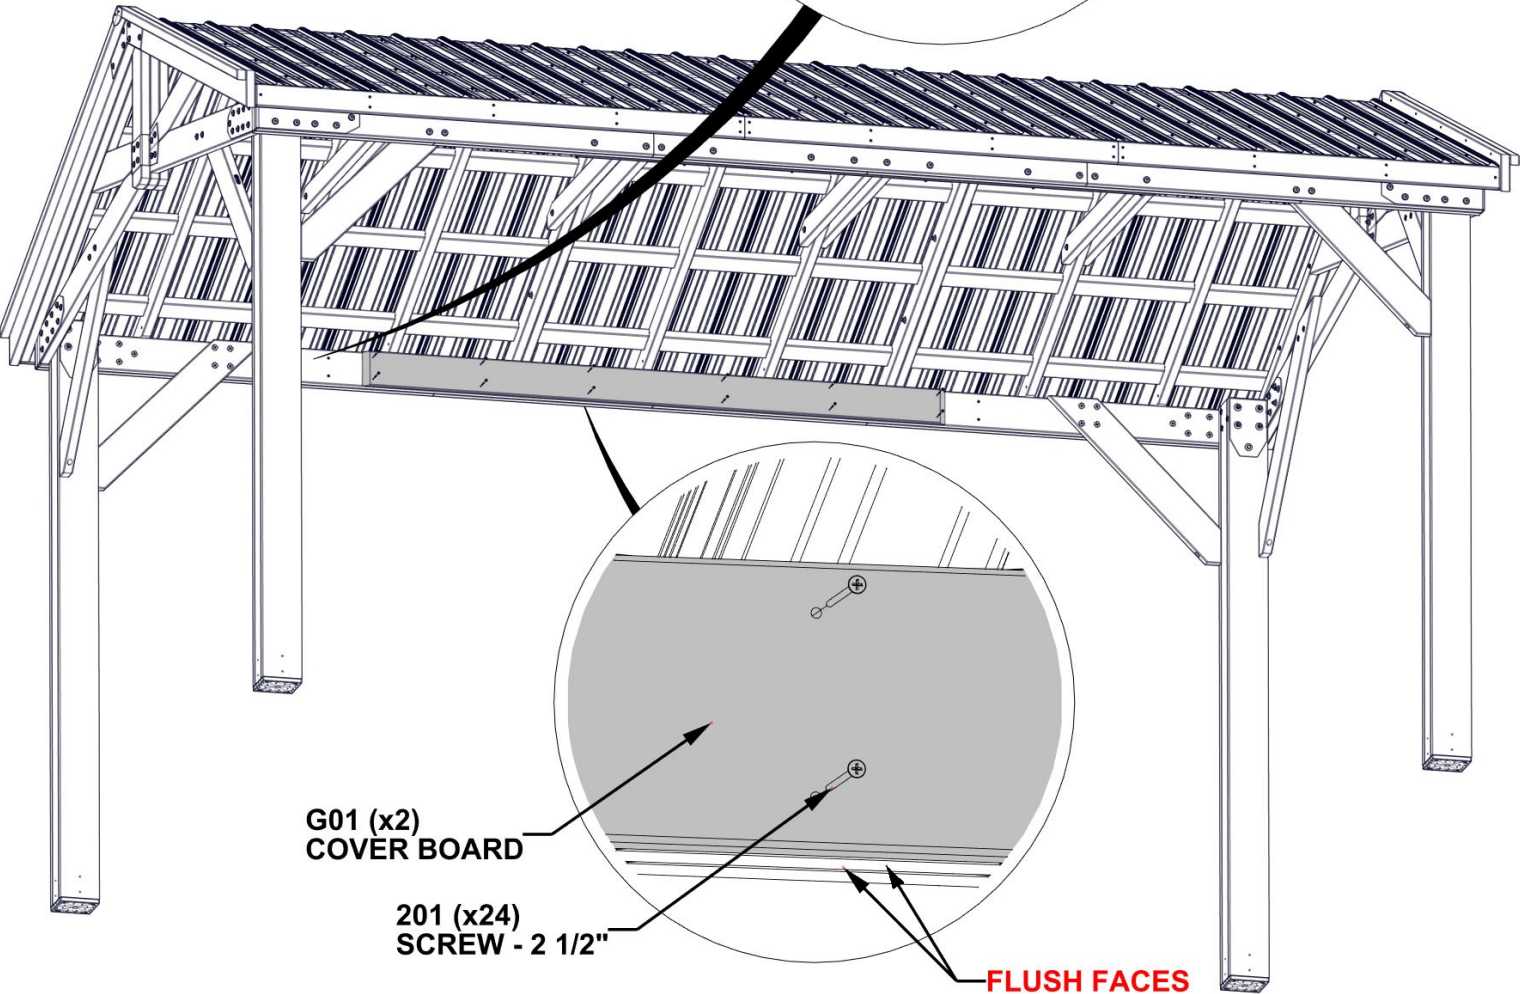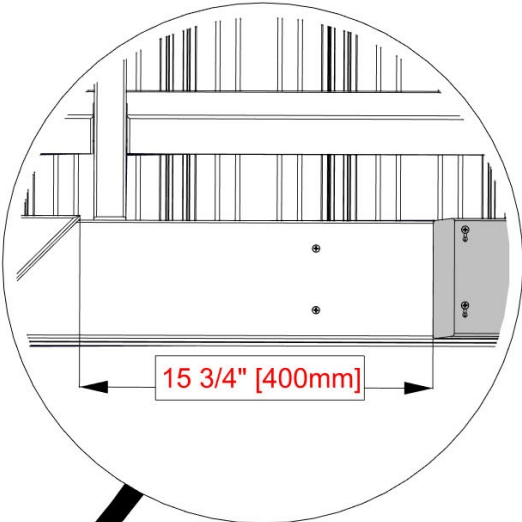


STEP 43 - ROOF ASSEMBLY

QTY	PART NUMBER	DESCRIPTION
14	H100488	BOLT WH 1/4 X 2 BLK
14	H100630	WASHER FLAT 8x19 BLK
14	H100653	NUT LOCK 1/4 BLK
28	H100823	SCREW PWH 8 X 1 1/2 BLK



A4M01752
(x14) | RAFTER CLIP

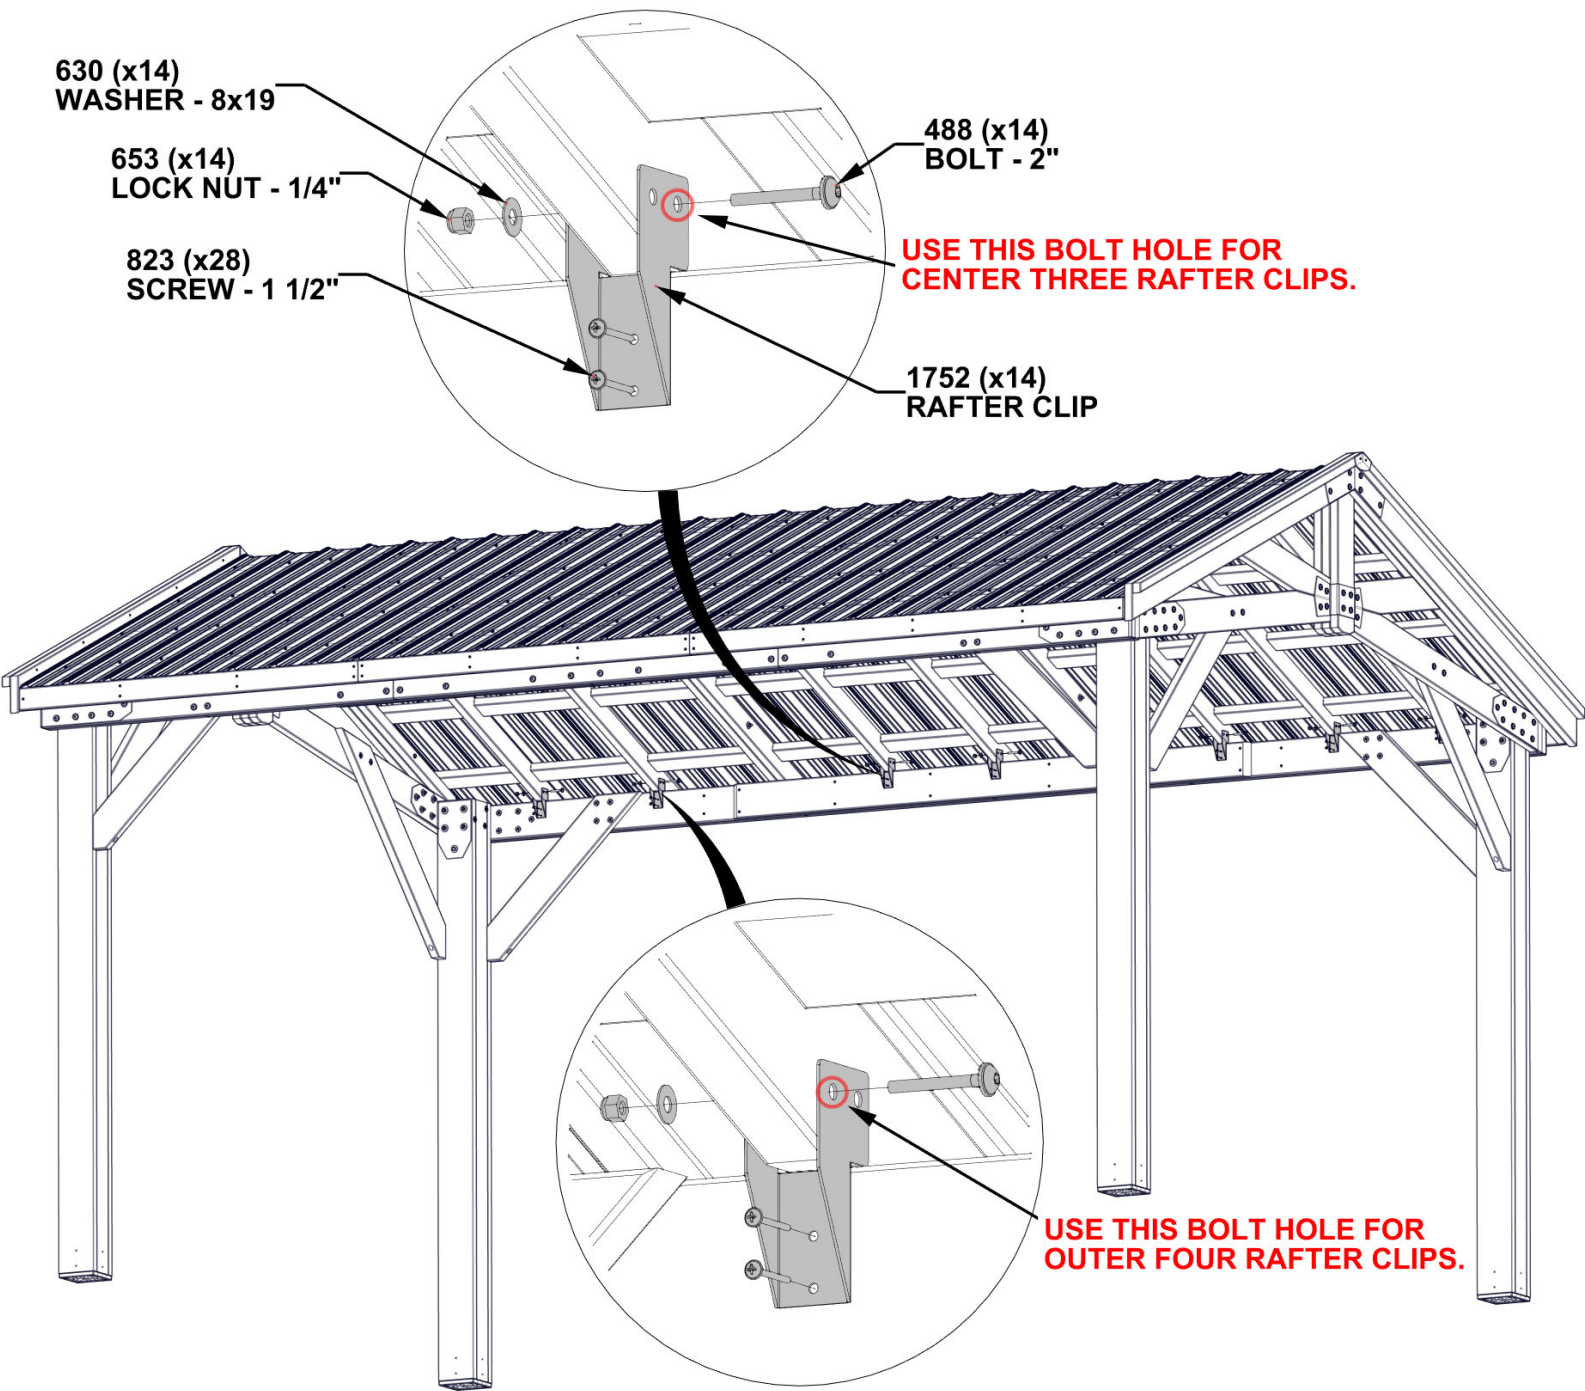

STEP 44 - ROOF ASSEMBLY


QTY	PART NUMBER	DESCRIPTION
28	H100759	SCREW SELF TAPPING 1/4x1




COMPLETE ON BOTH SIDES.

DUE TO MULTIPLE LAYERS OF METAL ON THE EDGE TRIM, IT IS RECOMMENDED THAT A 1/8" DRILL BIT IS USED TO CREATE STARTER HOLES.

SCREWS GO THROUGH EDGE TRIM INTO THE TOP OF THE RIBS IN THE APPROXIMATE LOCATIONS SHOWN.

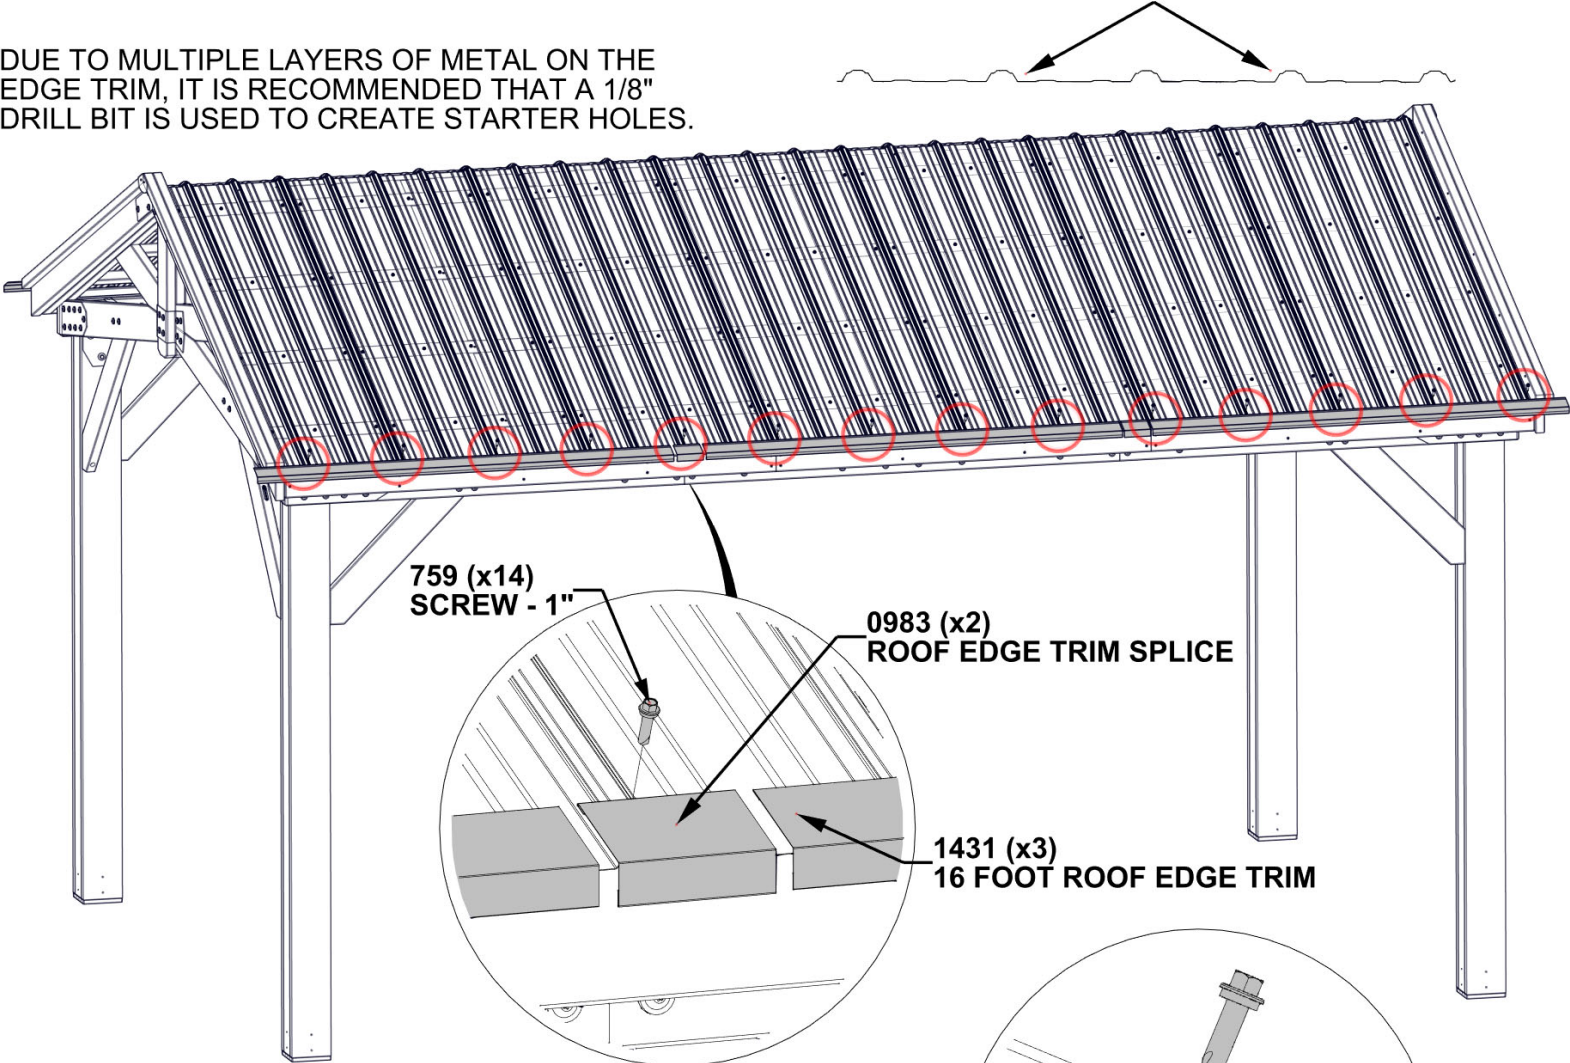

SLIDE TRIM INTO SPLICE ENSURING THAT BOTH ENDS ARE FLUSH WITH THE EDGES OF ROOF PANELS.

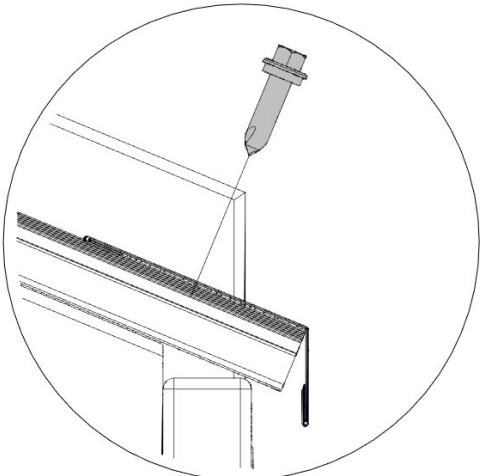

STEP 45 - ROOF ASSEMBLY

A4M01127
(x2) | RIDGE CAP SPLICE

A4M01430
(x3) | 16 FOOT RIDGE CAP 29 GA

1127 (x2)
RIDGE CAP SPLICE


1430 (x3)
16 FOOT RIDGE CAP 29 GA

SLIDE EACH RIDGE CAP INTO THE RIDGE CAP SPLICE UNTIL CENTERED.

STEP 46 - ROOF ASSEMBLY

QTY	PART NUMBER	DESCRIPTION
30	H100833	SCREW WOODGRIP 10-16 x 3/4

J09 | RIDGE CAP STIFFENER - W4L16876
(x4) | 1"x2 3/8"x53 7/8" (24x60x1367)




A6P00398 | RIDGE CAP PROTECTOR
(x2)

J10 | RIDGE CAP STIFFENER - W4L16877
(x2) | 1"x2 3/8"x83 1/2" (24x60x2121)


ASSEMBLE BY ALIGNING THE HOLES ON EACH RIDGE CAP TO THE HOLES IN THE RIDGE CAP SPLICE.
FINAL LENGTH - 15'-11 5/16" [4859mm]

REMOVE SPACERS FROM RIDGE CAP PROTECTORS BEFORE INSTALLING.

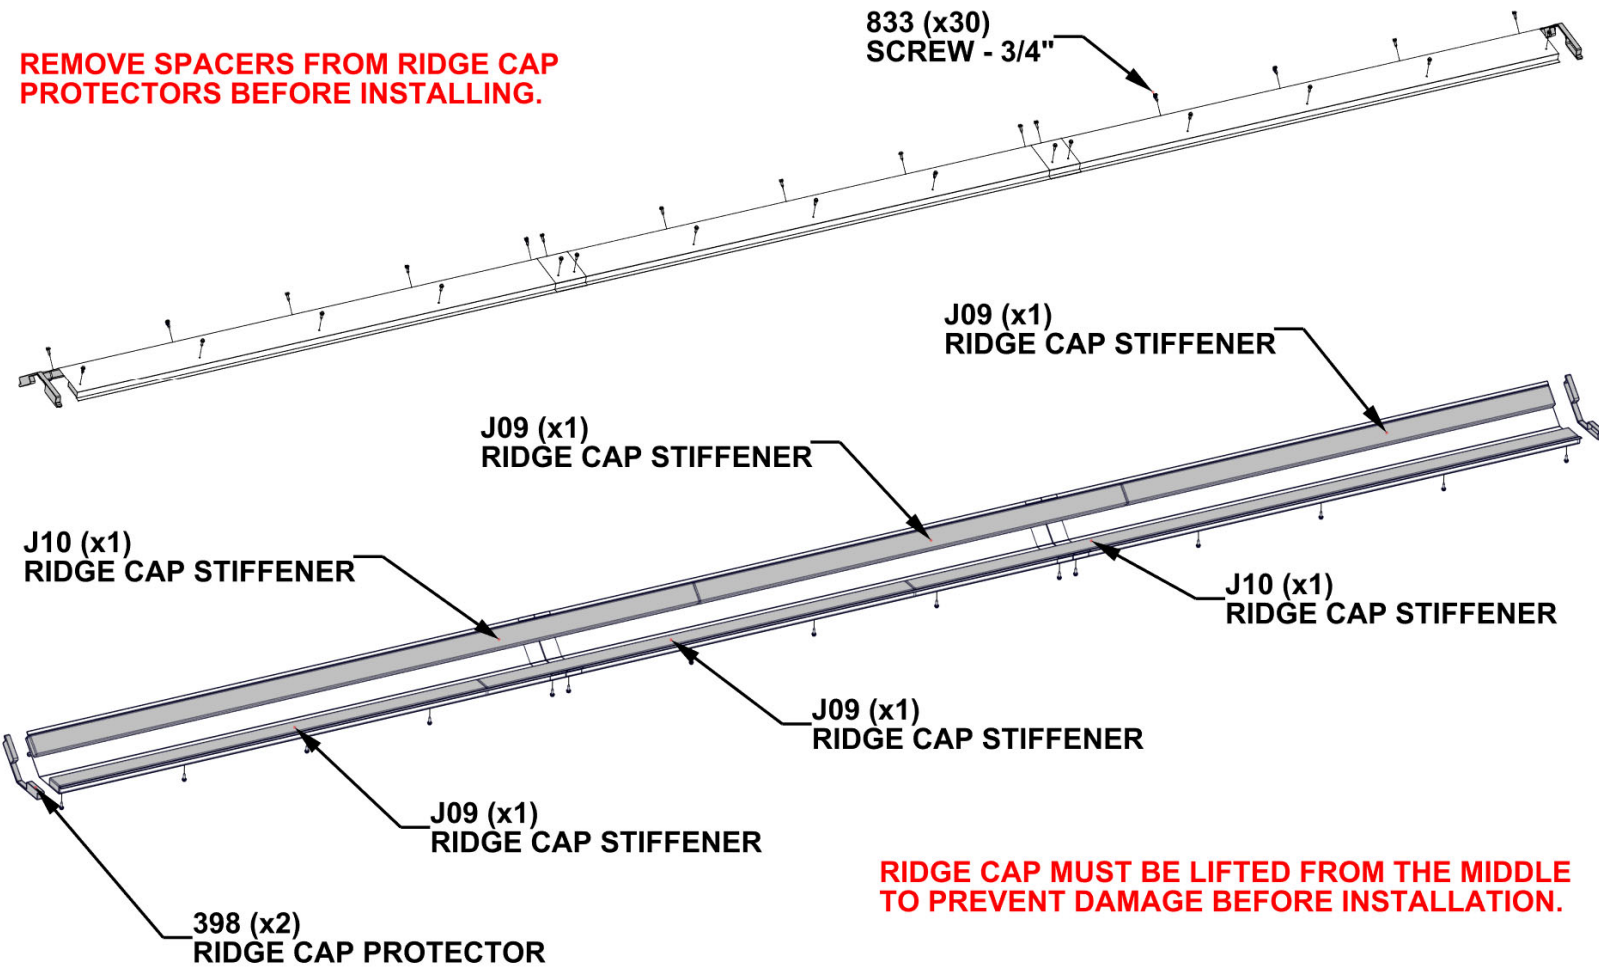



STEP 47 - ROOF ASSEMBLY

QTY	PART NUMBER	DESCRIPTION
26	H100392	SCREW PWH 8 X 3/4 BLK




RIDGE CAP ASSEMBLY FROM PREVIOUS STEP


**DO NOT CLIMB ON ROOF TO INSTALL:
ROOF CAP HAS BEEN DESIGNED TO
INSTALL WITH THE USE OF A LADDER.**

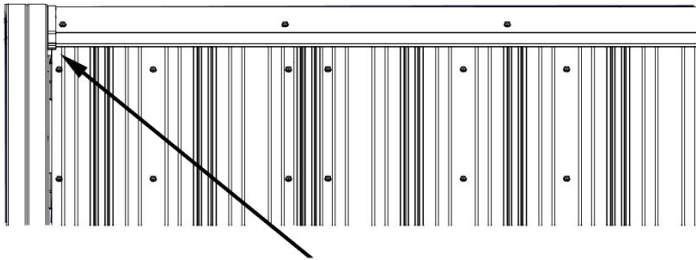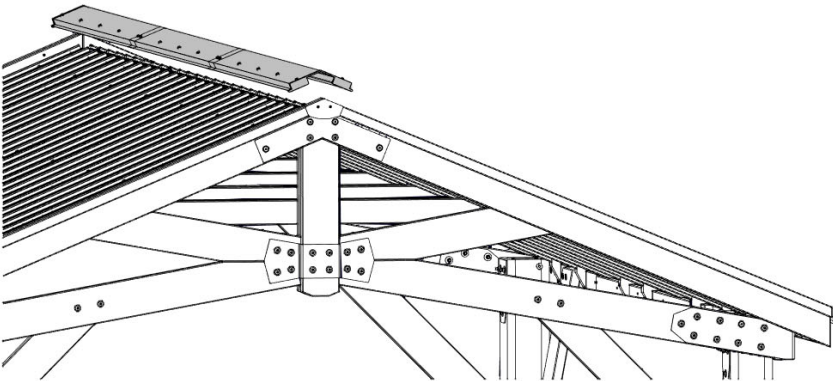

**USING AN ADULT HELPER, SLIDE RIDGE CAP
ASSEMBLY ACROSS THE ROOF RIDGE UNTIL
BOTH ENDS SIT INSIDE RAFTERS AS SHOWN.**

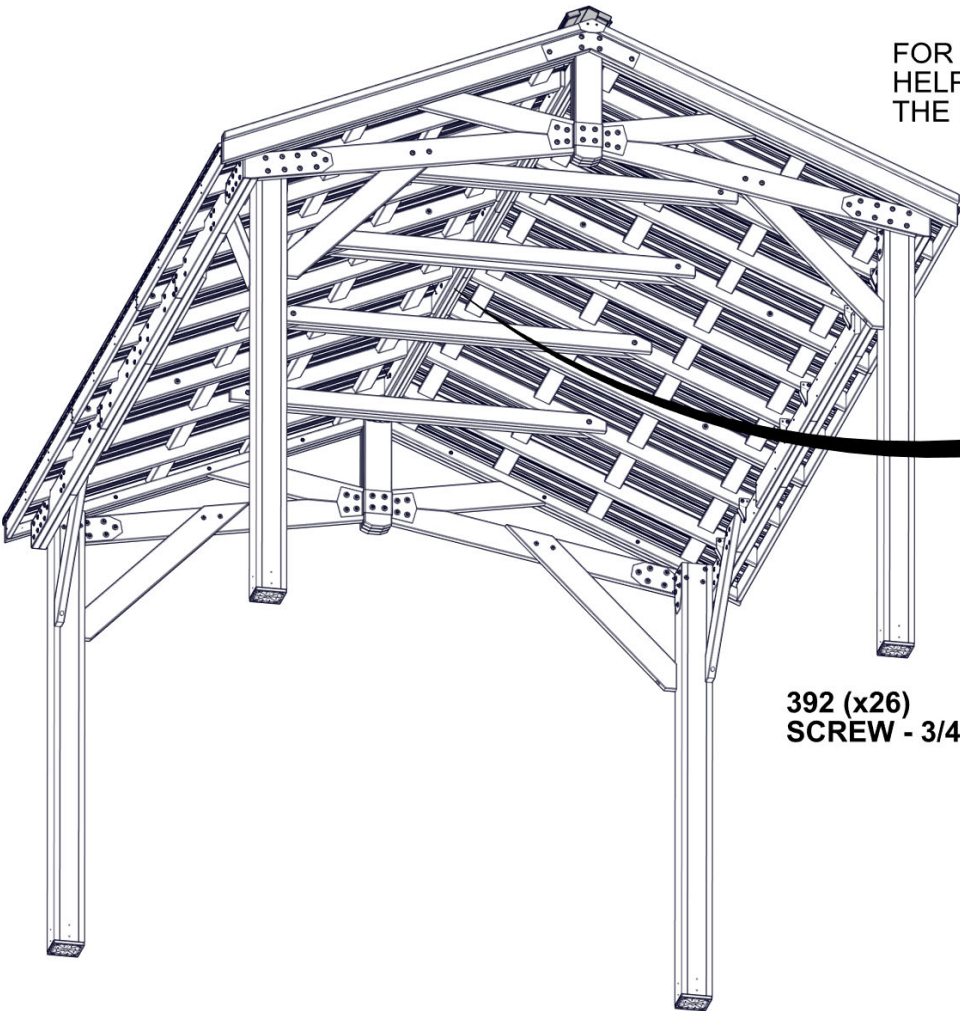

**FOR PROPER INSTALLATION, USE AN ADULT
HELPER TO KEEP DOWNWARD PRESSURE ON
THE RIDGE CAP WHILE SCREWING IN SCREWS.**

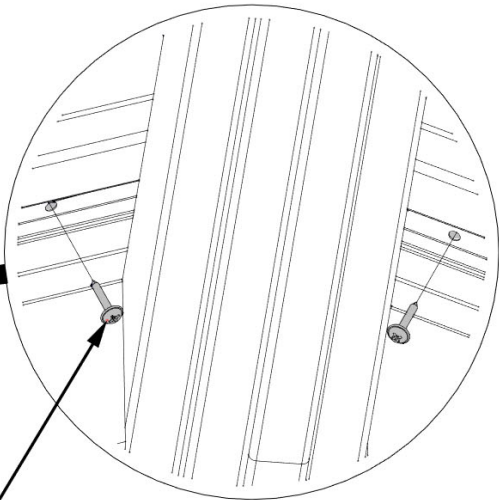


**392 (x26)
SCREW - 3/4"**

**INSTALL SCREWS THROUGH PILOT
HOLES IN ROOF PANELS INTO
RIDGE CAP STIFFENER BOARDS.**

STEP 48 - GAZEBO ASSEMBLY


QTY	PART NUMBER	DESCRIPTION
32	H100471	LAG SCREW WH 5/16 X 1 1/2 BLK



A4M00977 (x8) POST ANCHORING PLATE



A4M00978 (x8) POST PLATE

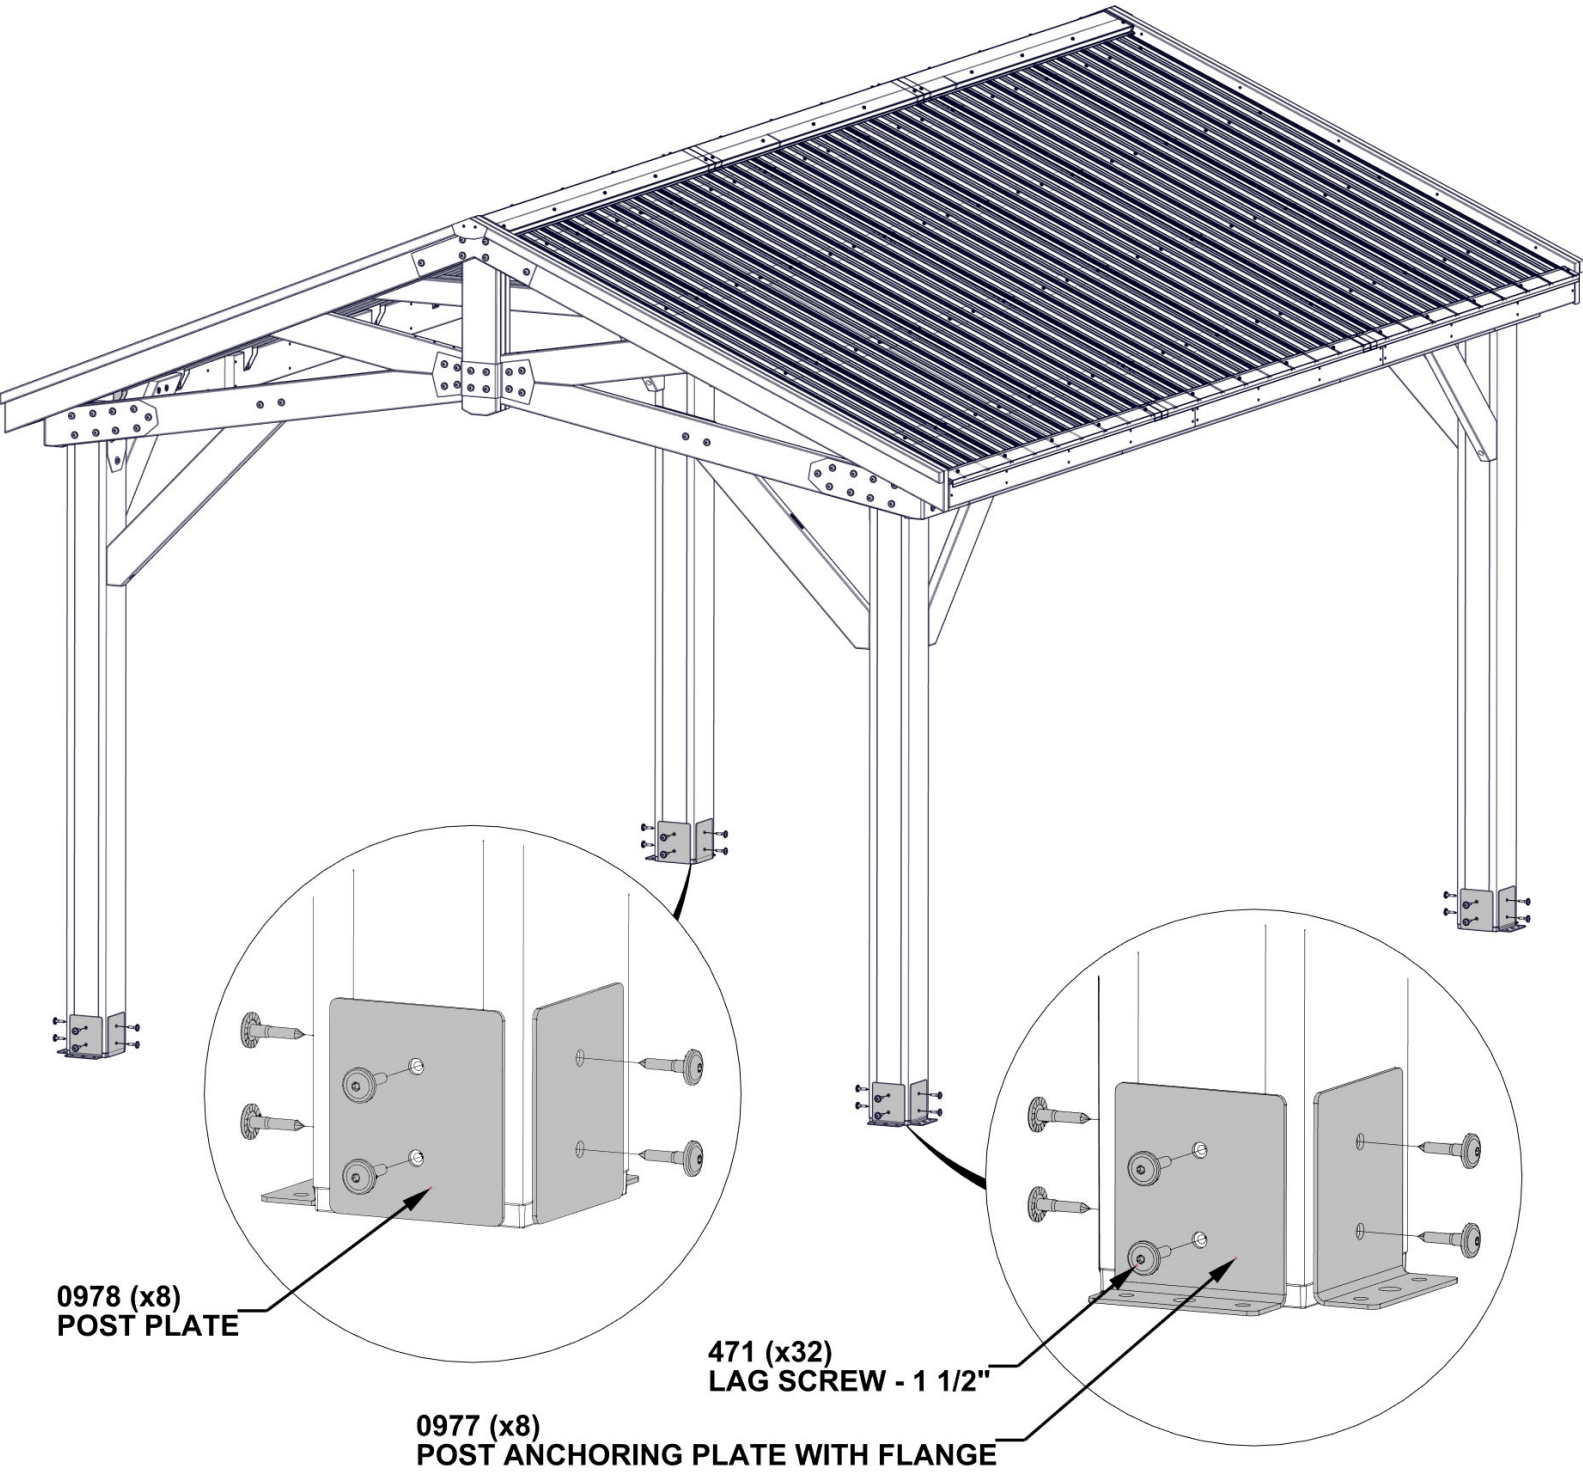

0978 (x8) POST PLATE

471 (x32) LAG SCREW - 1 1/2"


0977 (x8) POST ANCHORING PLATE WITH FLANGE

STEP 49 - GAZEBO ASSEMBLY

QTY	PART NUMBER	DESCRIPTION
2	H100200	SCREW PFH 8 X 1 1/2 BLK



A100241 (x1) BYD ID TAG (SMALL) WITHOUT AGES

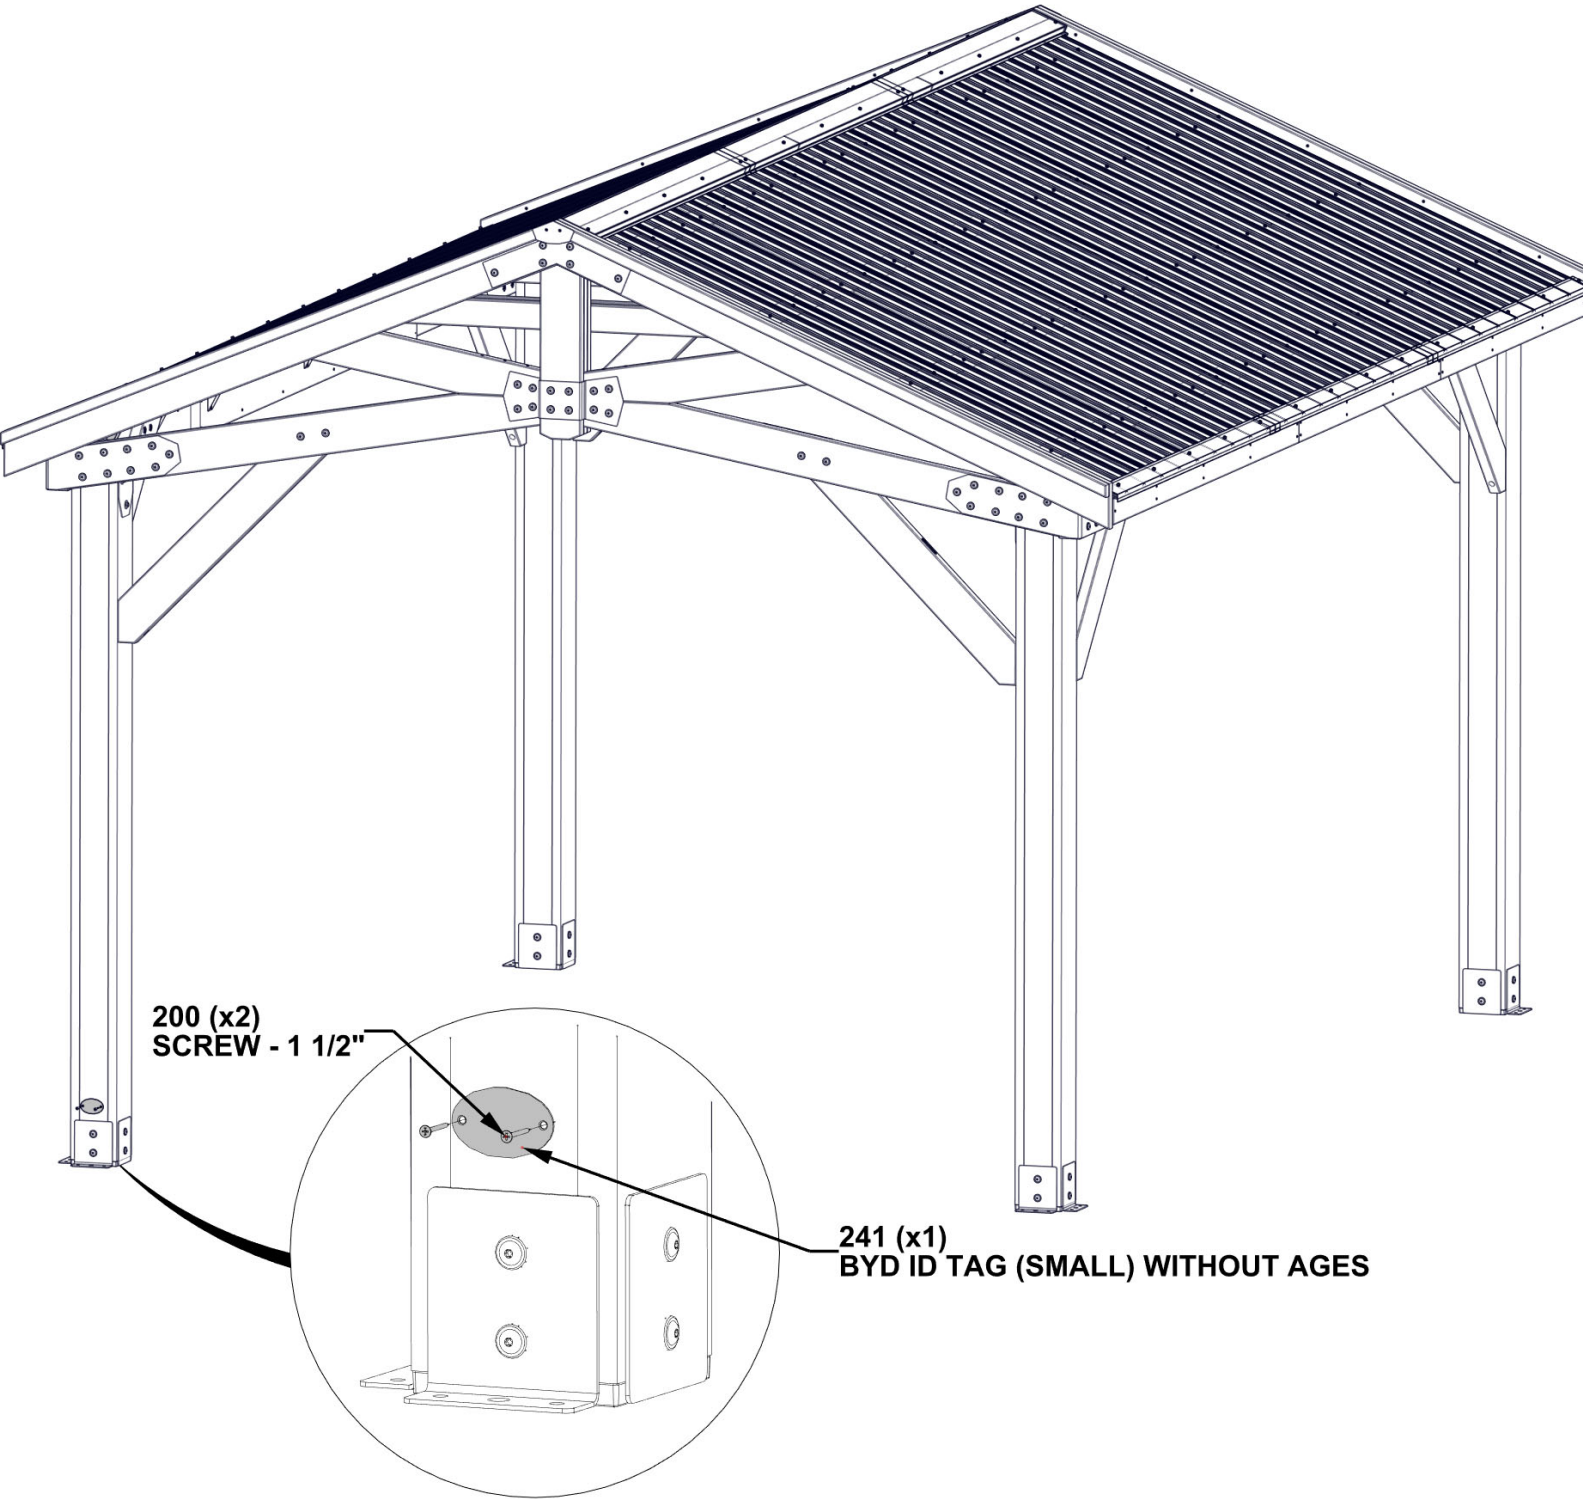


STEP 50 - GAZEBO ASSEMBLY


QTY	PART NUMBER	DESCRIPTION
16	H100120	CONCRETE ANCHOR
16	H100630	WASHER FLAT 8x19 BLK

MANUFACTURER RECOMMENDS INSTALLATION ON CONCRETE SURFACE OR CONCRETE POST PAD AS SHOWN BELOW.

FOR INSTALLATION ON WOOD DECK, YOU MUST ENSURE THERE IS AMPLE STRUCTURAL SUPPORT UNDER THE DECK. HARDWARE NOT INCLUDED FOR DECK ATTACHMENT.

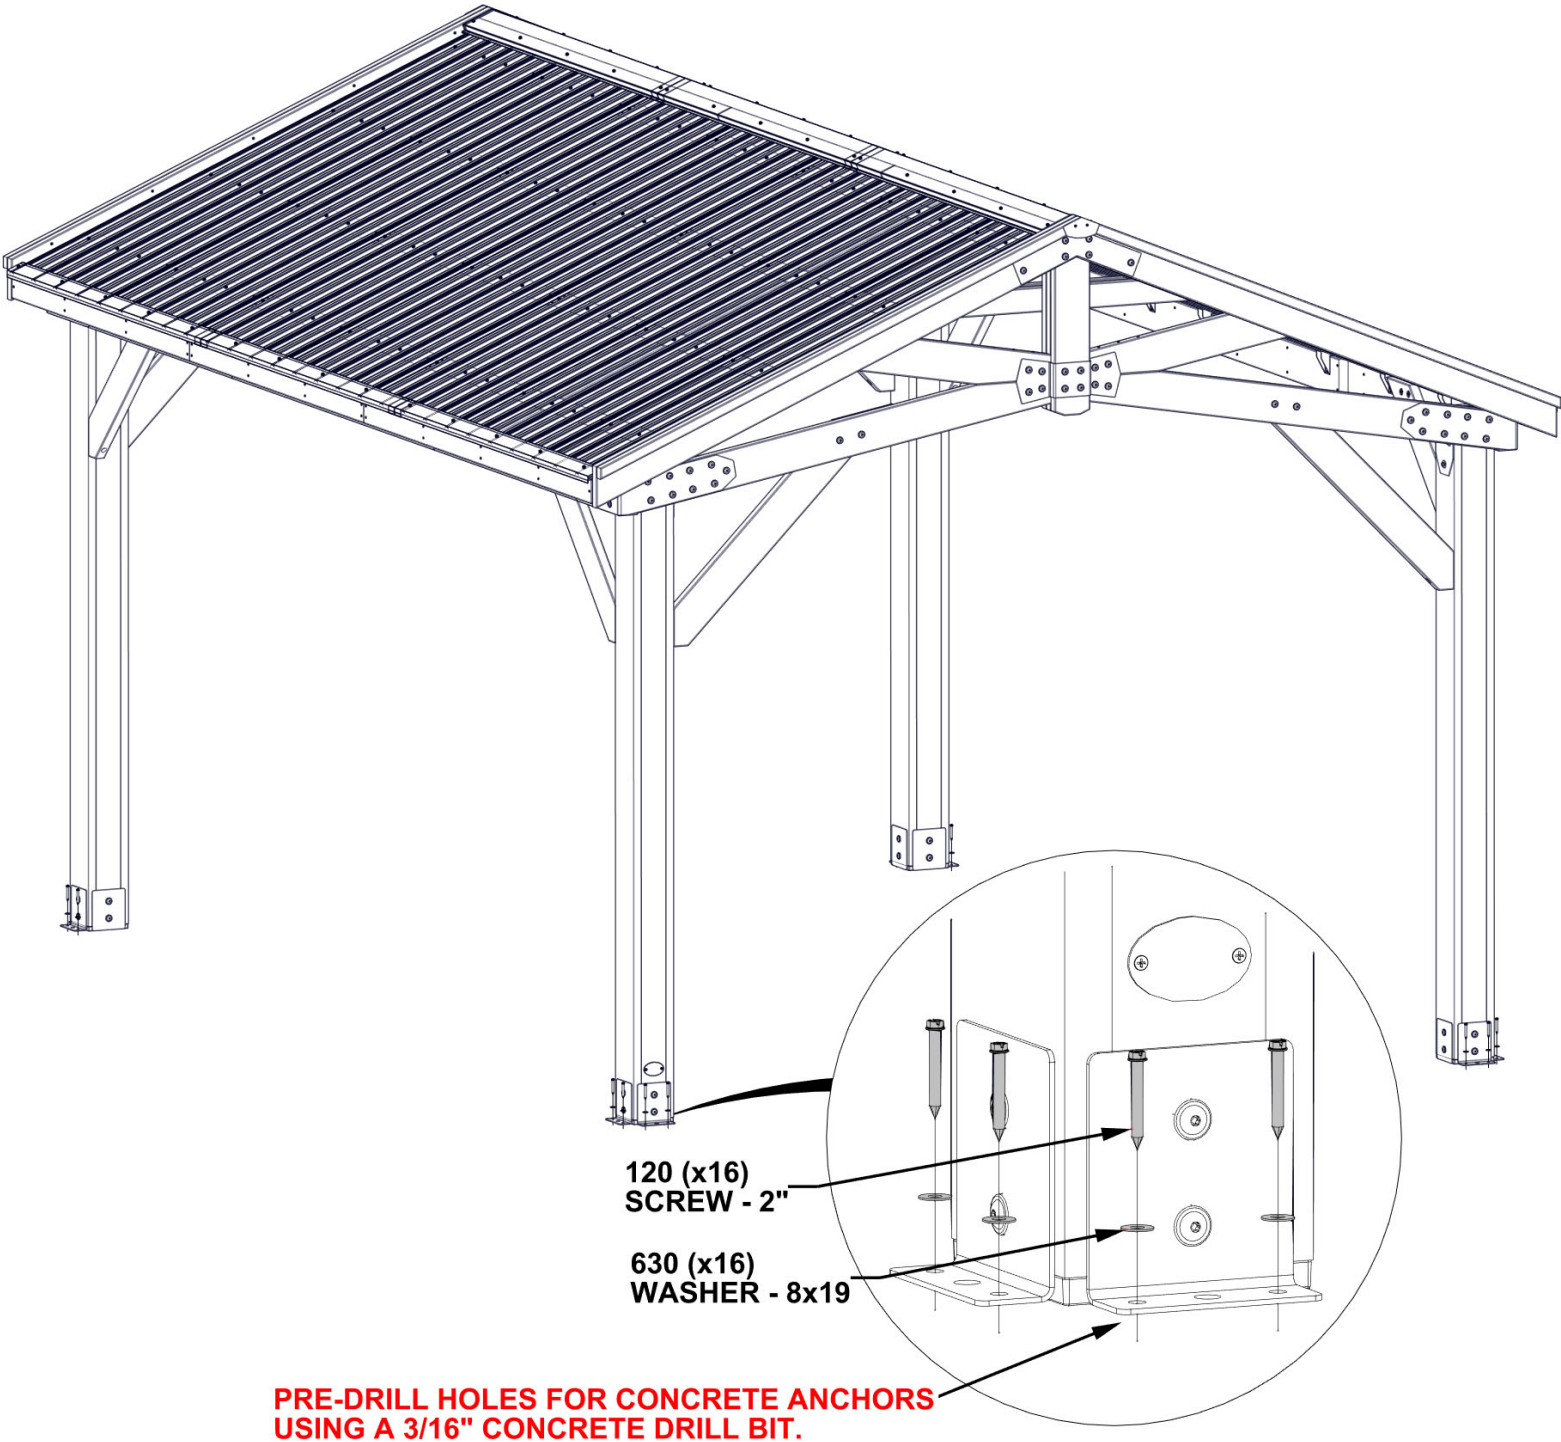

ELECTRICAL ENCLOSURE

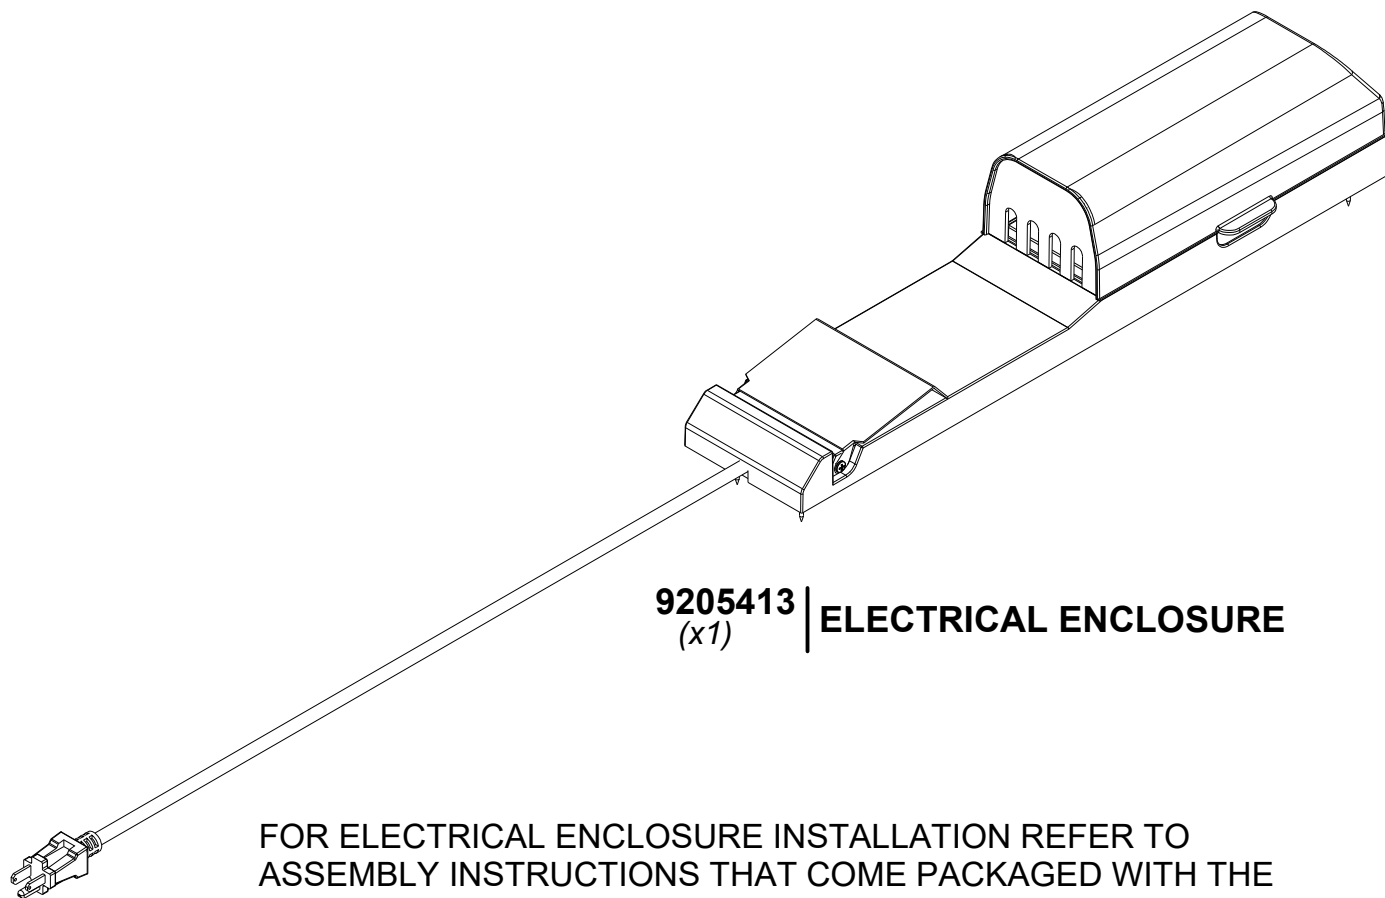

9205413 | **ELECTRICAL ENCLOSURE**
(x1)

FOR ELECTRICAL ENCLOSURE INSTALLATION REFER TO ASSEMBLY INSTRUCTIONS THAT COME PACKAGED WITH THE ELECTRICAL ENCLOSURE KIT. INSTALL ON ANY POST THAT IS DESIRED. FOLLOW DIRECTIONS FOR PROPER INSTALLATION.