


BP87P2

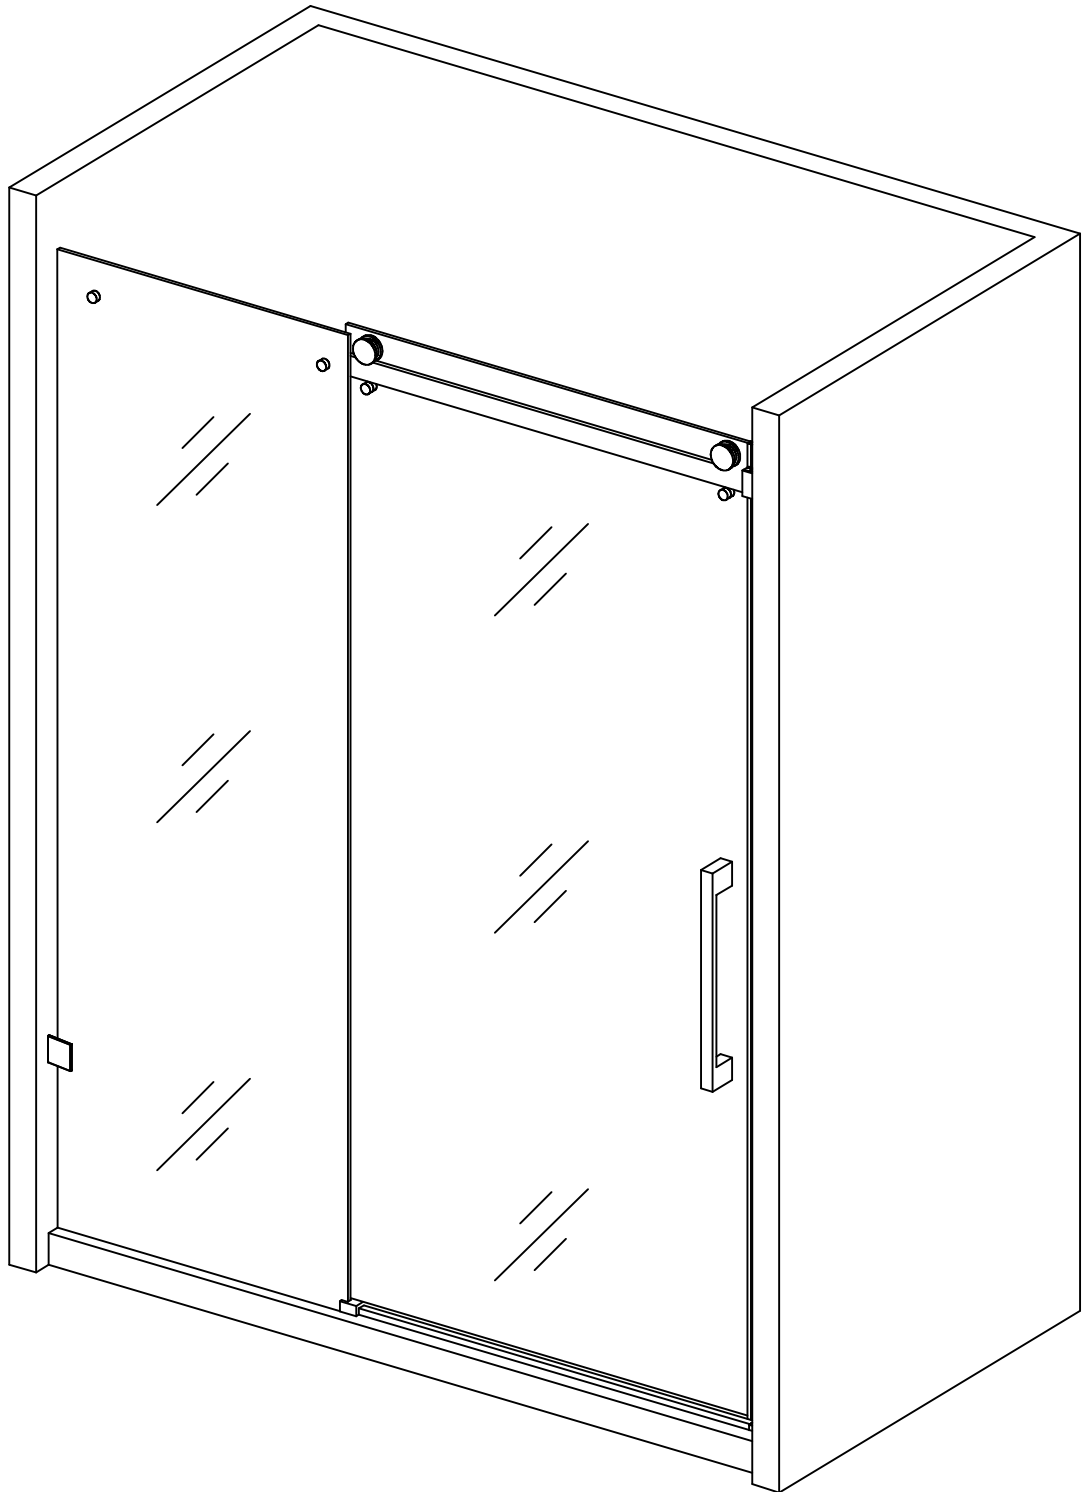

◆ General information

Please inspect the product immediately upon receipt for transit damage, missing packs/parts or manufacturing fault. Damage reported later cannot be accepted. Please handle the product with care avoiding knocks and shock loading to all sides and edges of the glass.








Note: Safety glass can not be re-worked.

- Please read these instructions carefully before start of installation.
- Special care should be taken when drilling walls to avoid hidden pipes or electrical cables.
- Note: this product is heavy and required two persons install.


Aftercare instructions






- After use, your shower should be cleaned with soap and water. This is particularly important in hard water districts where insoluble lime salts may be deposited and allowed to build up.
- Cleaners of gritty or abrasive nature should not be used. Care should be taken to avoid contact with strong chemicals such as organic solvents and strippers.
- Glass cleaners can be used but with caution, if in doubt contact the manufacturer of the cleaner in question.
- Please keep these instructions for aftercare and customer service details.

TOOLS REQUIRED





DESCRIPTION	PART IMAGE	DESCRIPTION	PART IMAGE
Tape measure		Drill	
Spirit level		Hammer	
Pencil		Cross head Screwdriver	
Ø6/3.2mm Drill bit		Inner hexagon Spanner	
20mm Thick board		Silicone Sealant	

ASSEMBLY INSTRUCTIONS-DRAWING


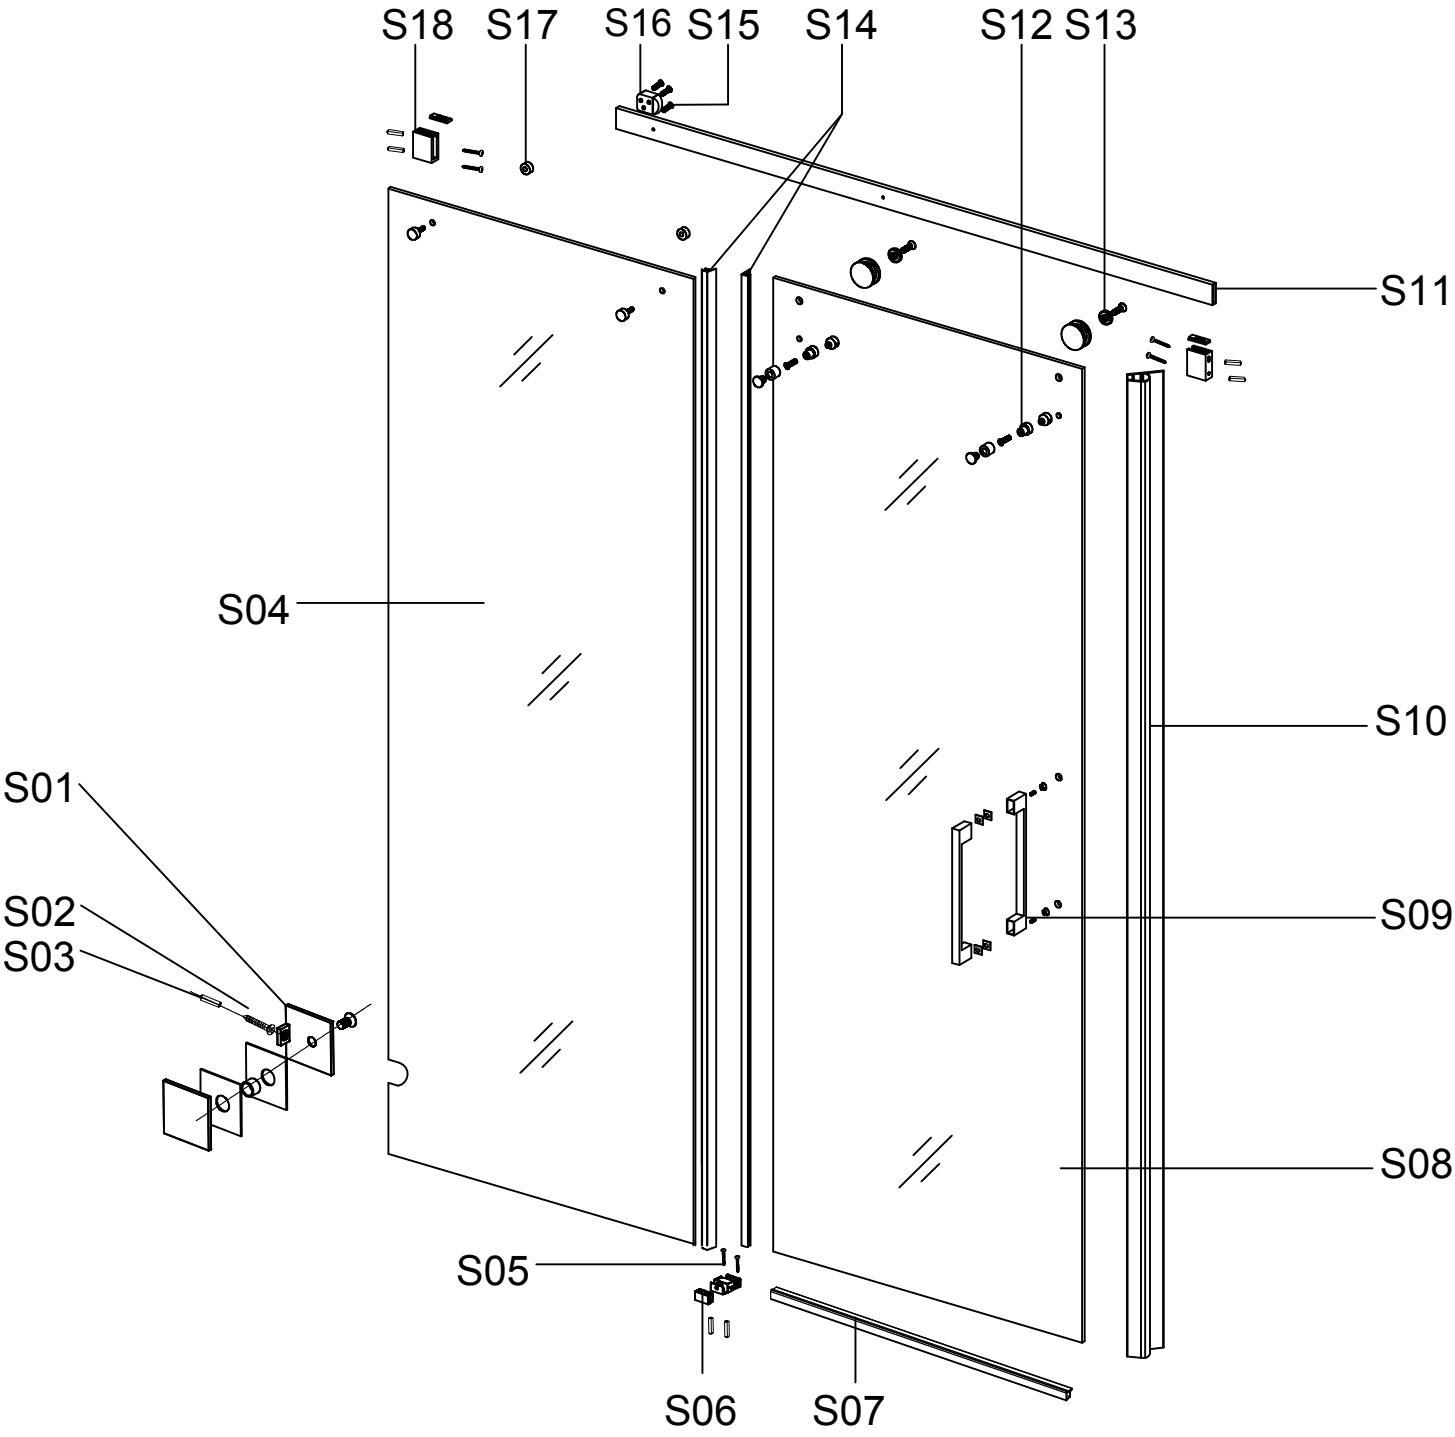


NO.	Description	QTY	Diagram
S01	Hinges	1	
S02	Metric Screw(3.9x30)	1	
S03	Expansion sleeve	3	
S04	Fixed glass panel	1	
S05	Metric Screw(3.9x20)	2	
S06	Guider	1	
S07	Aluminum bottom waterproof seal strip	1	
S08	Glass door panel	1	
S09	Handel	1	
S10	Magnetic seal strip	2	
S11	Stainless steel top rail	1	
S12	Rollers	2	
S13	Fixed glass installing screws	2	
S14	PVC seal strip	2	
S15	Metric Screw(M4x12)	3	
S16	Stopper	1	
S17	Fixed glass installing screws	2	
S18	Wall brackets	2	



Step 1

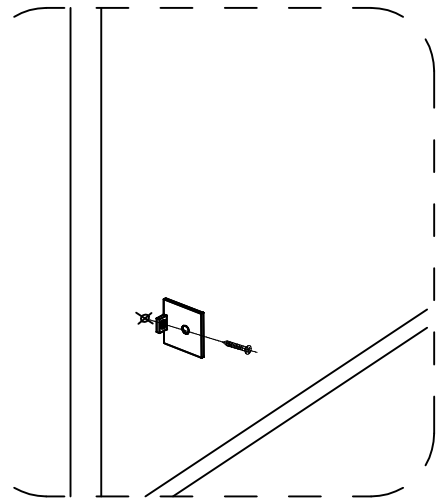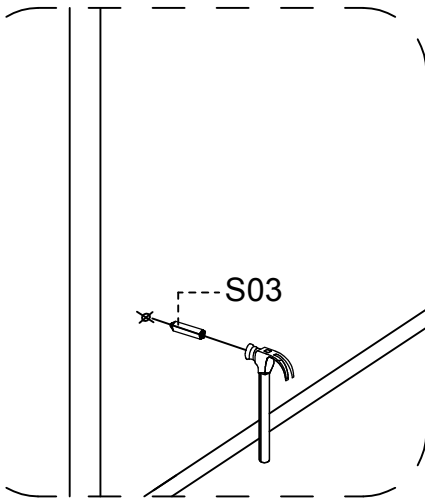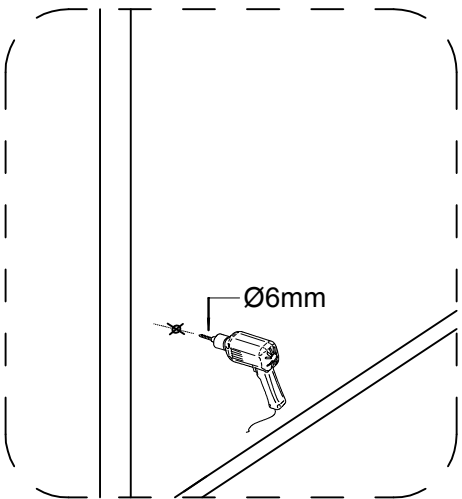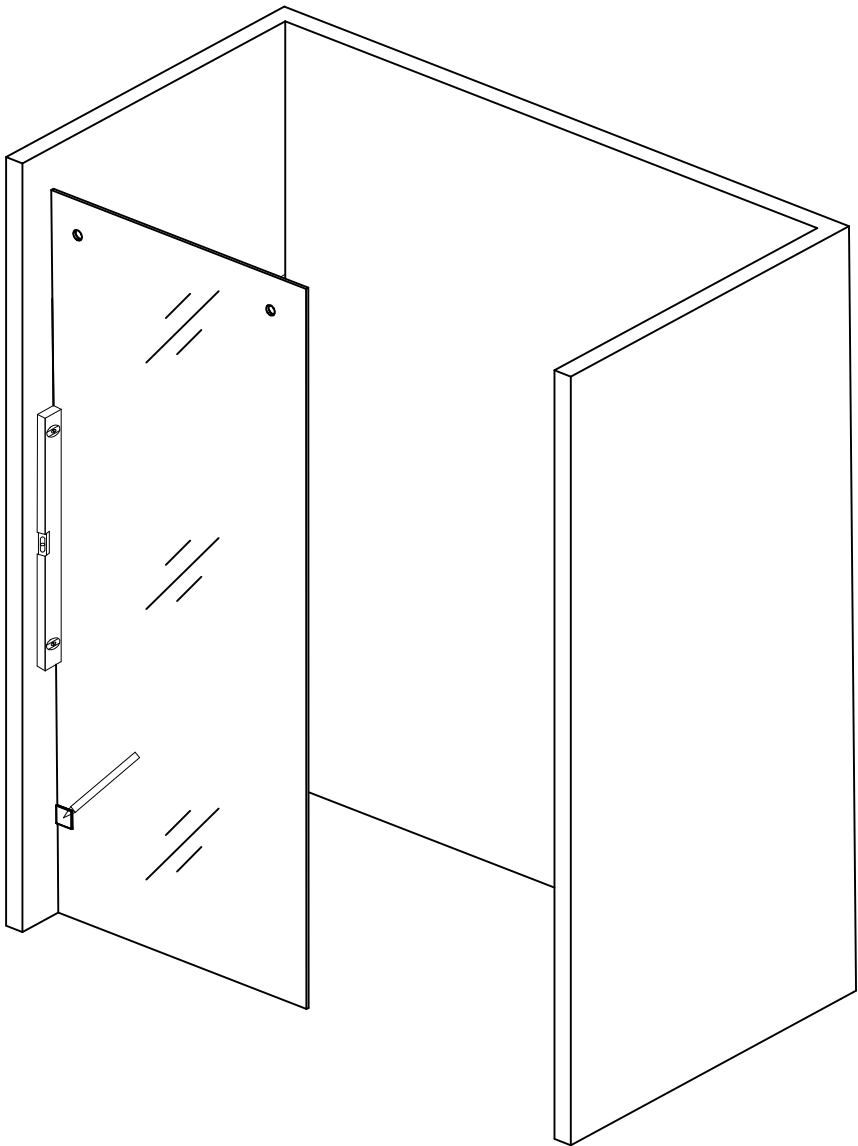



Step 2

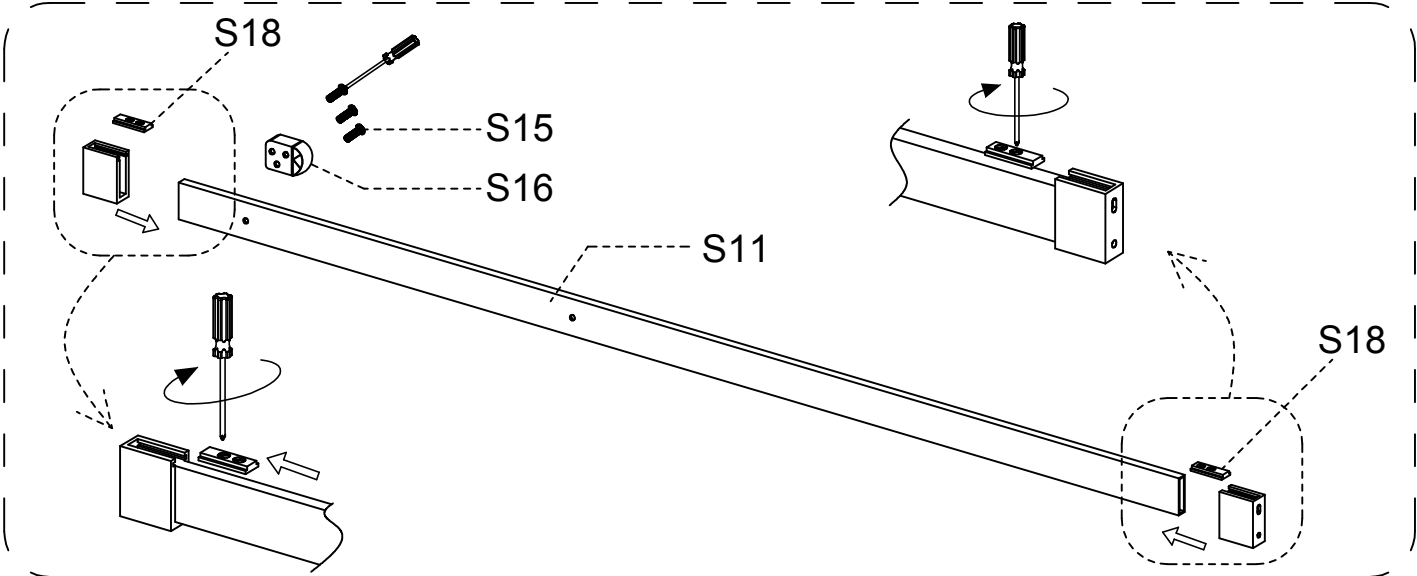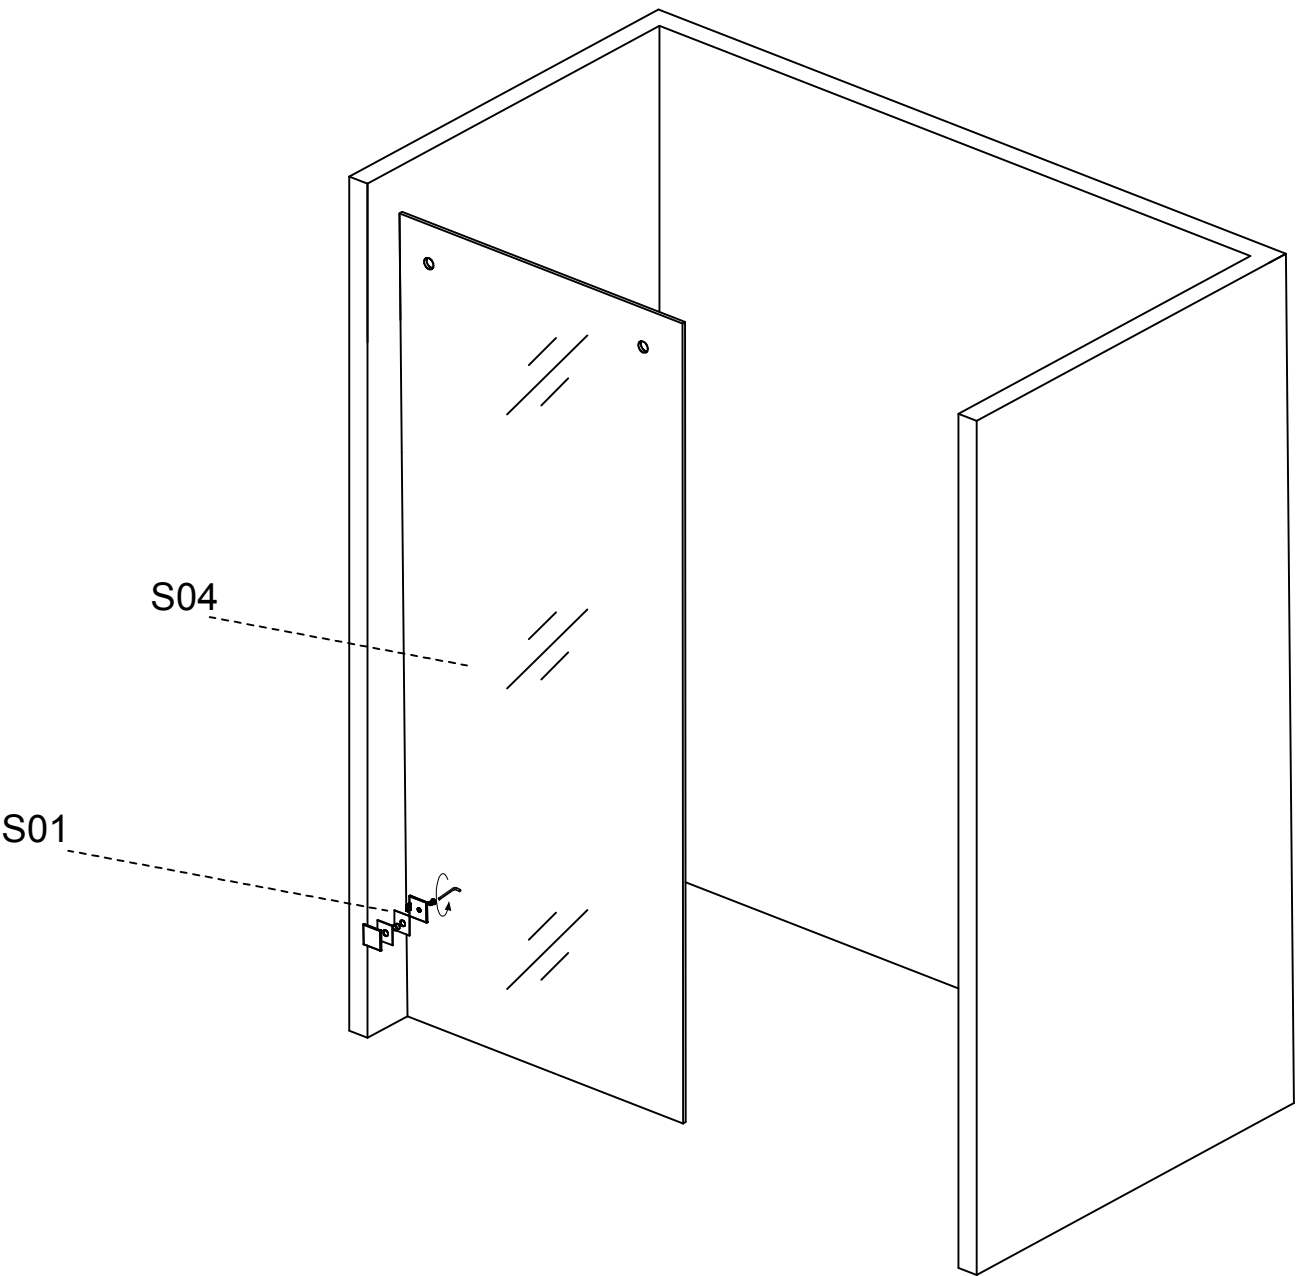




Step 3

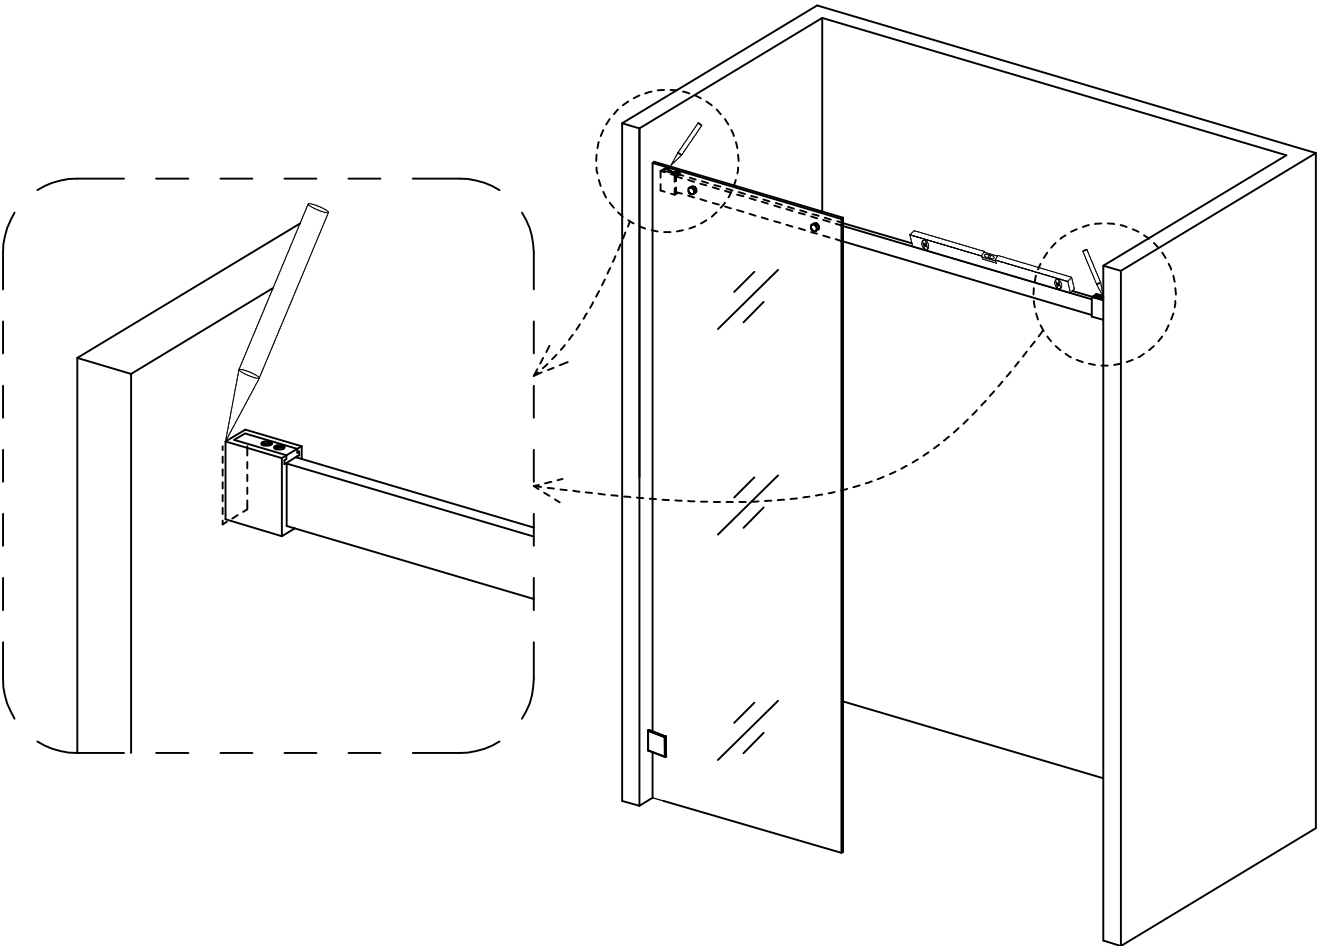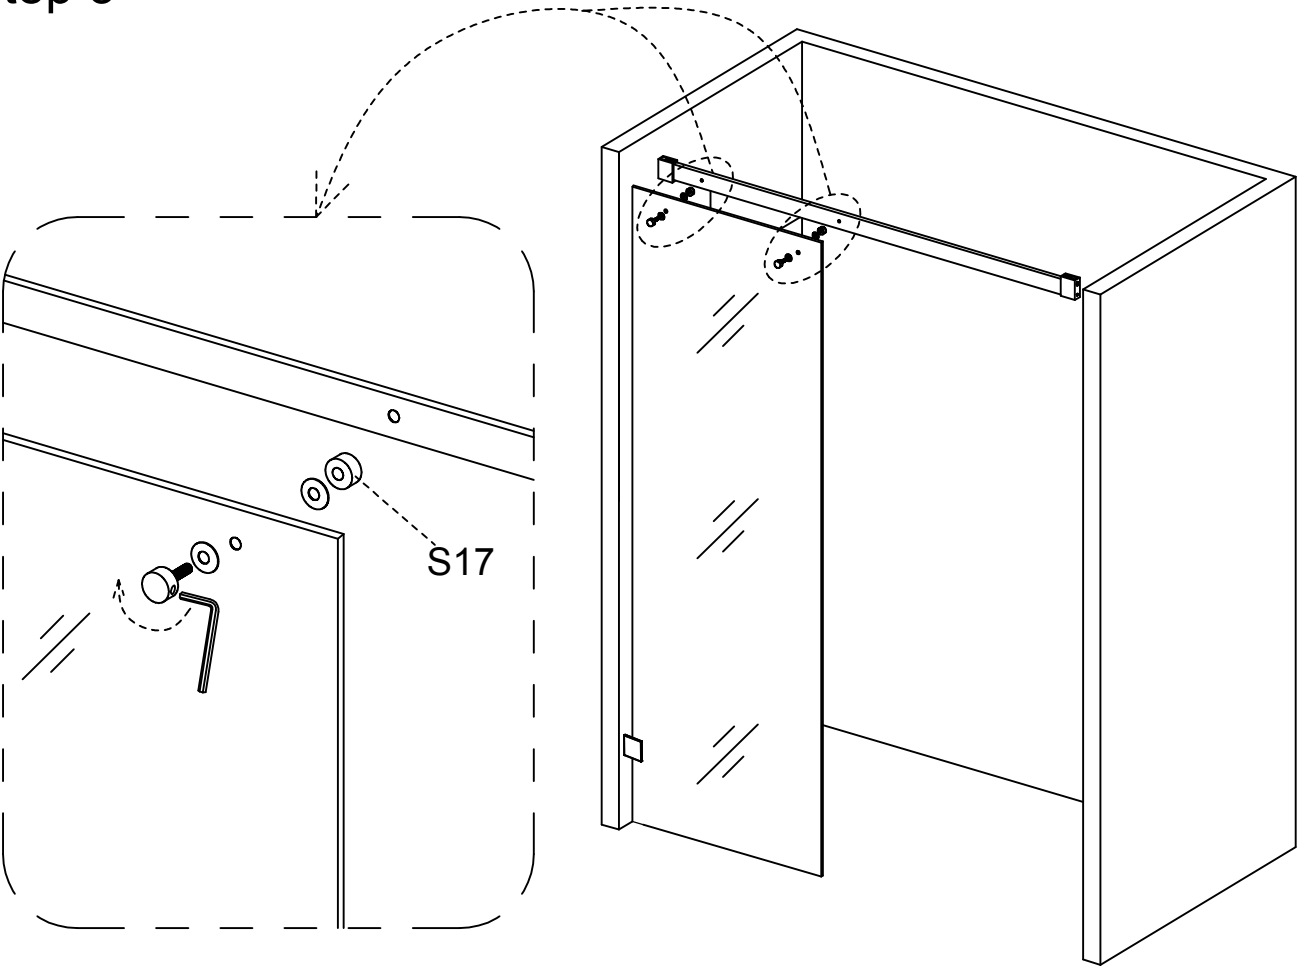




Step 4

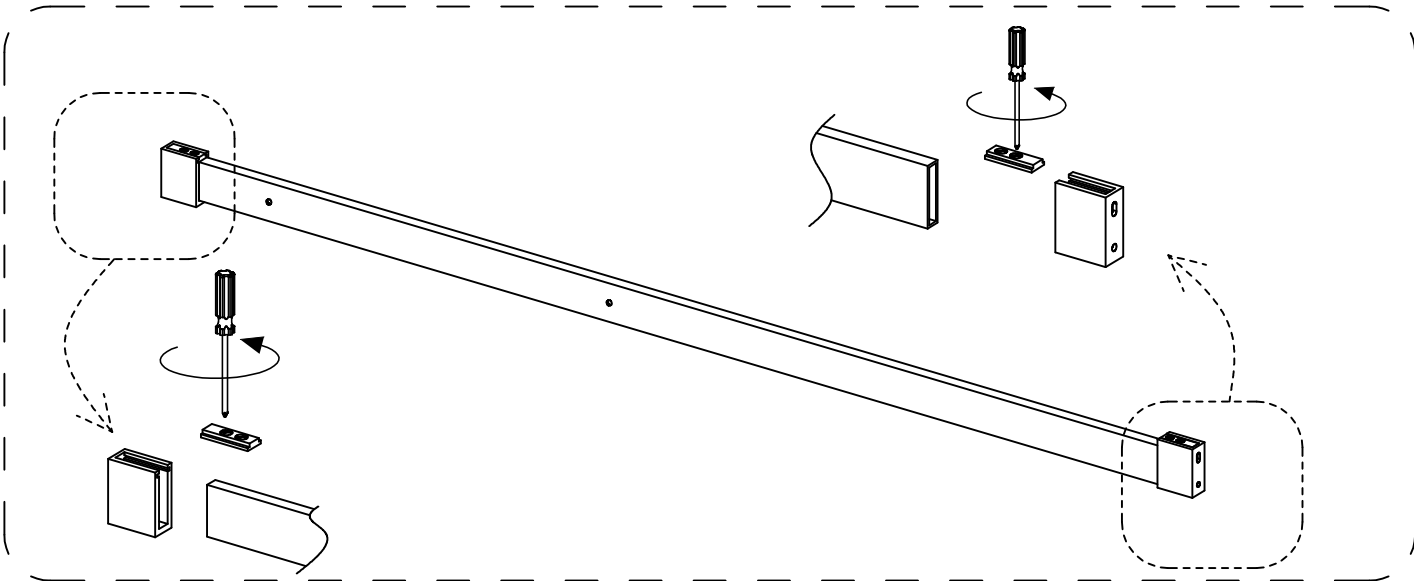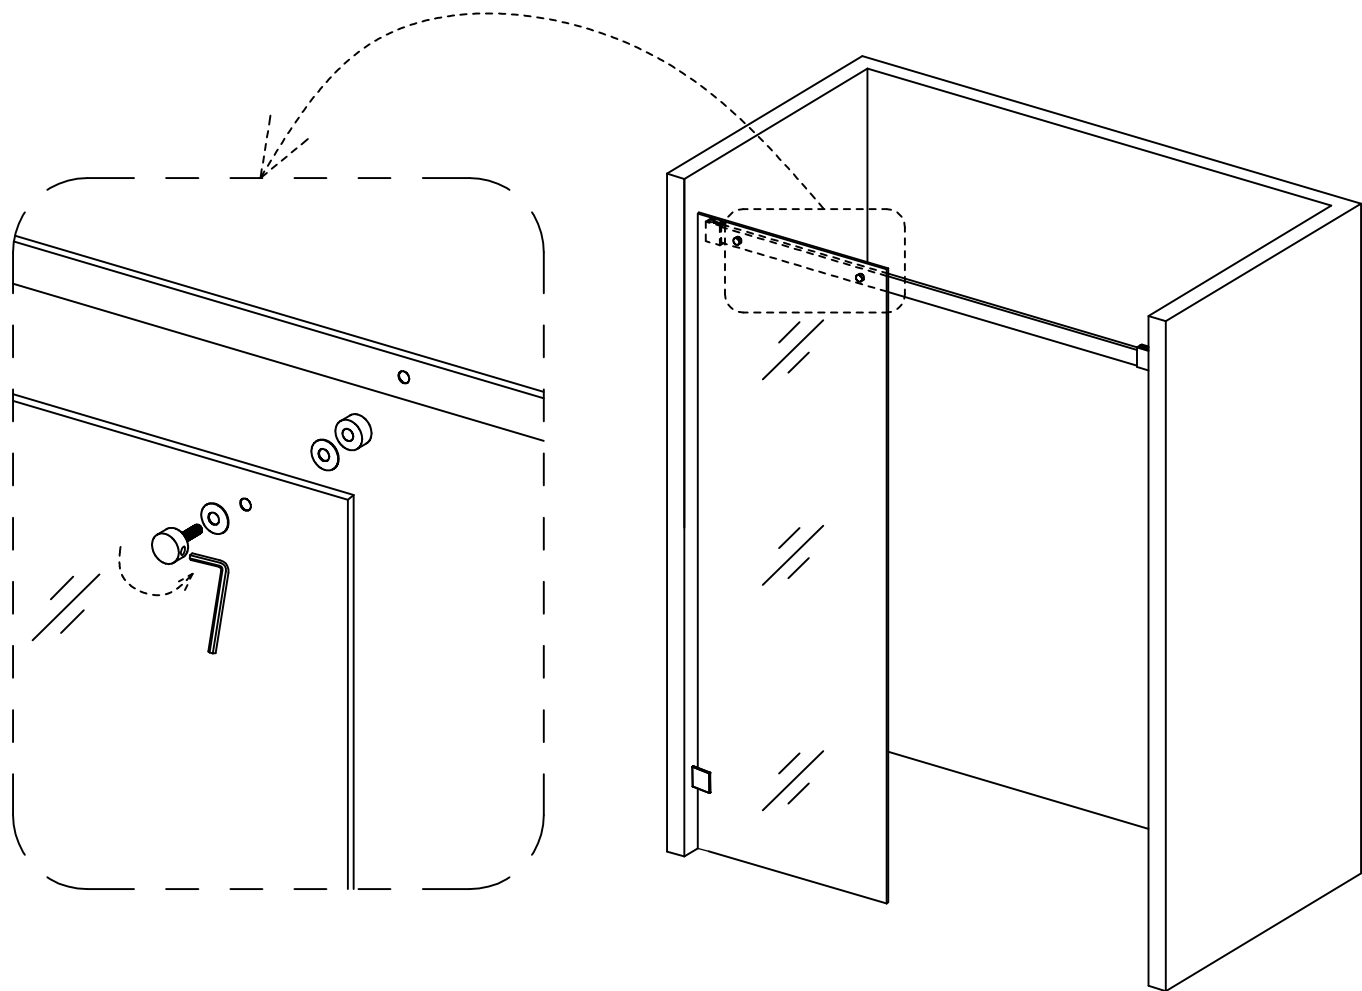






Step 5

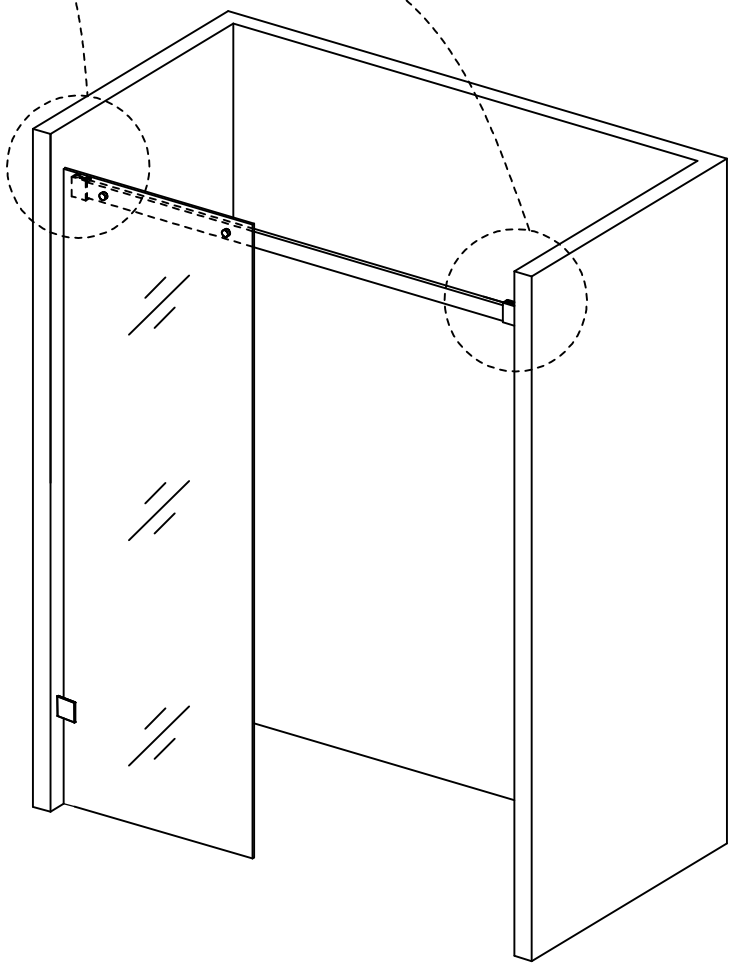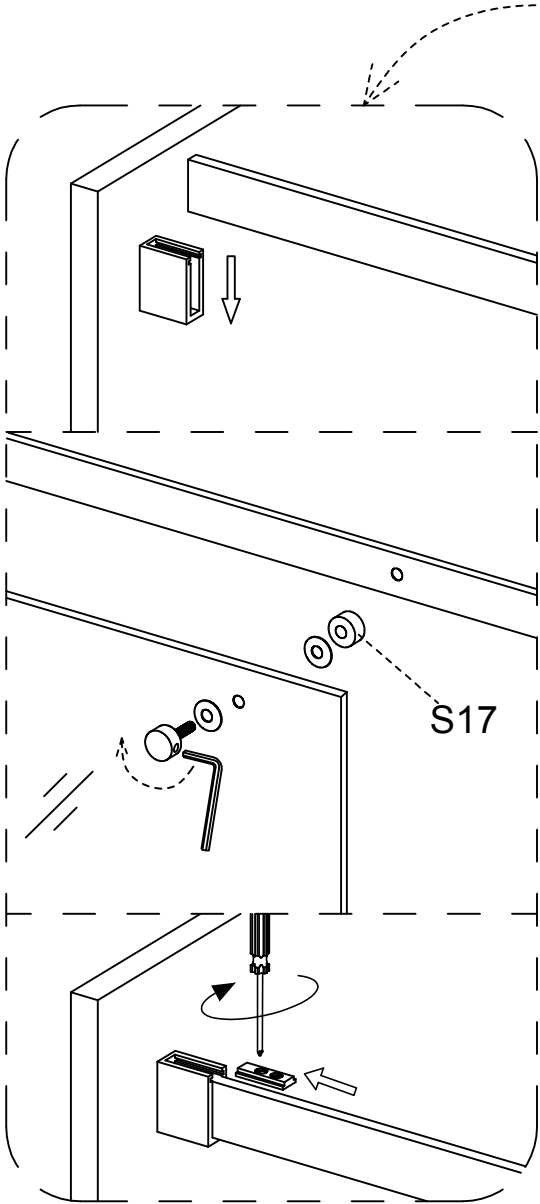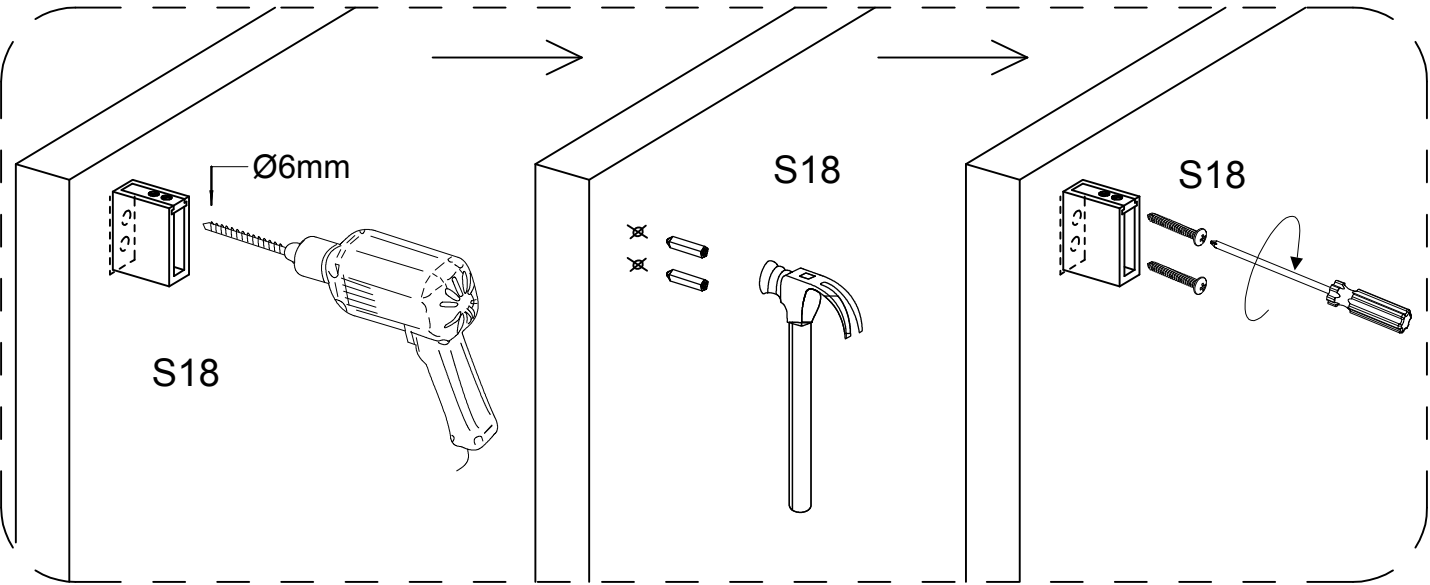





Step 6

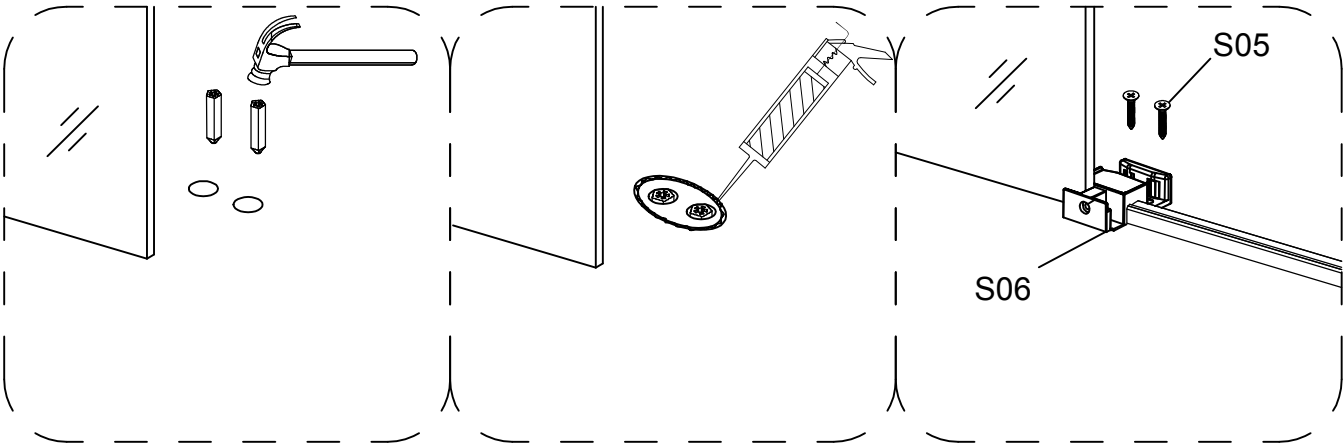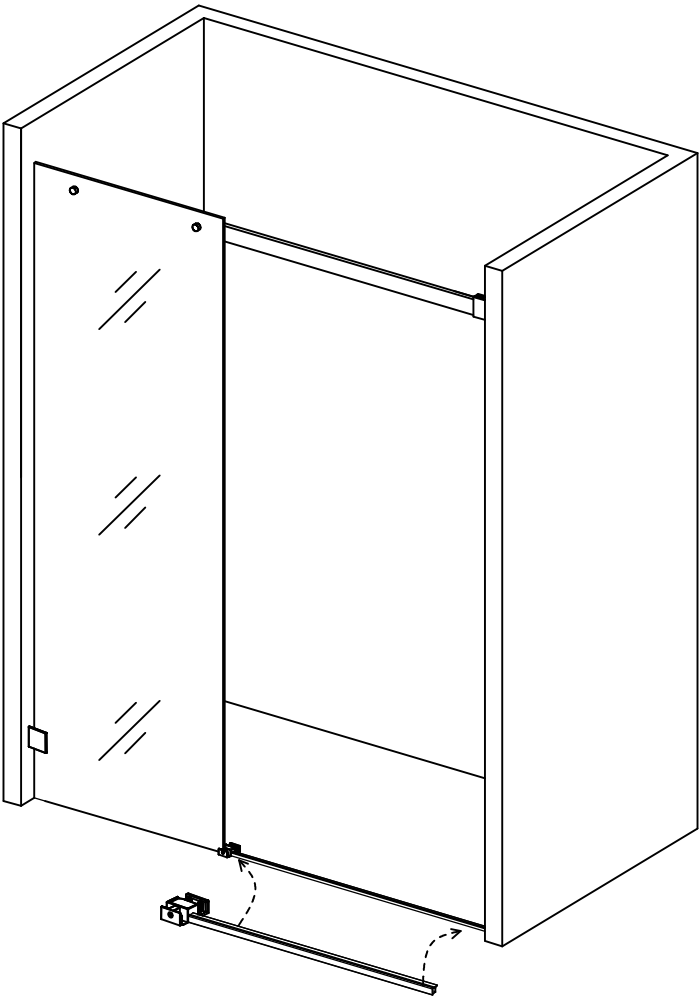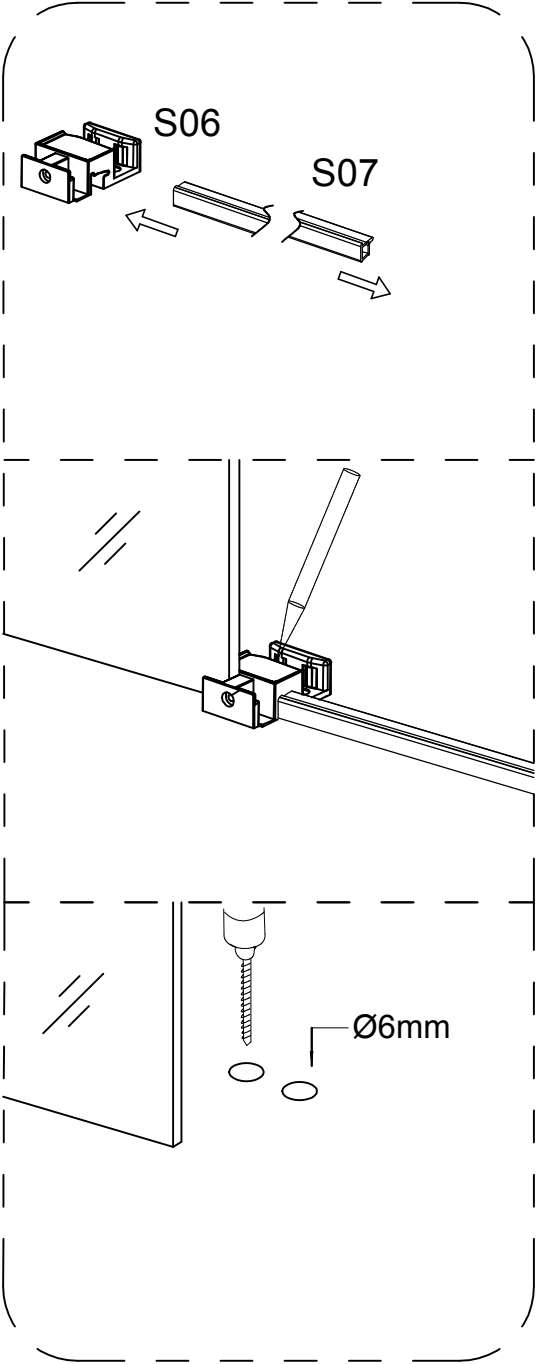



Step 8

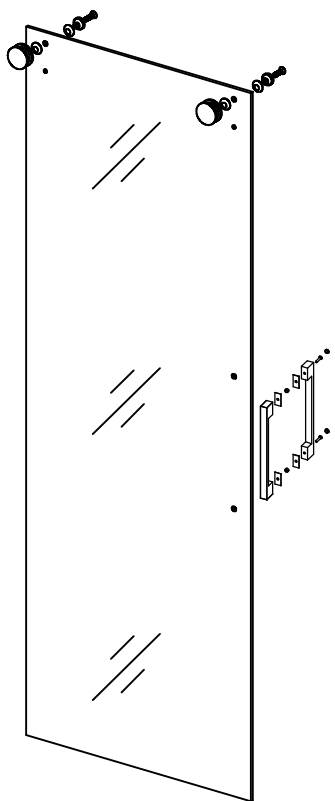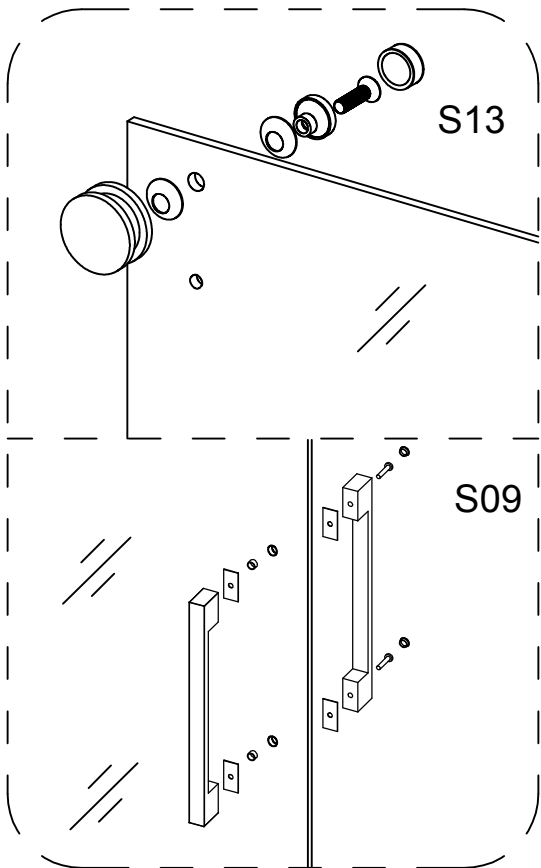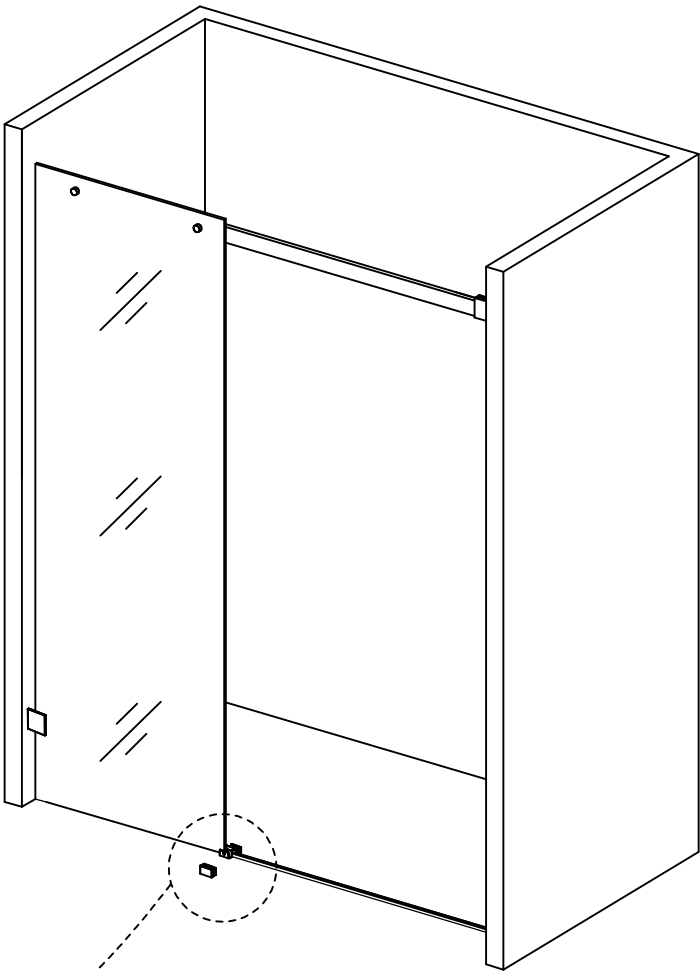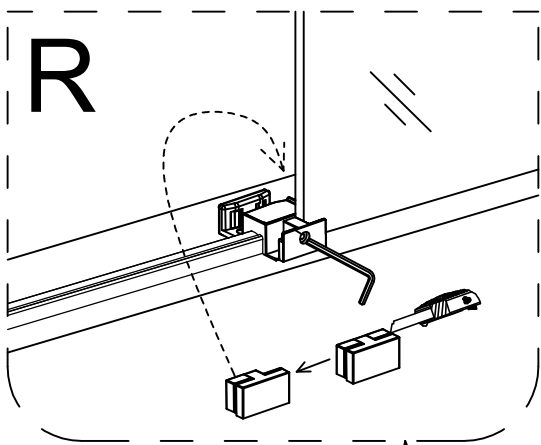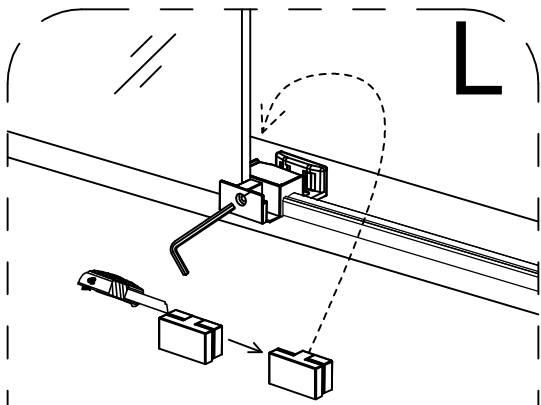

Step 9

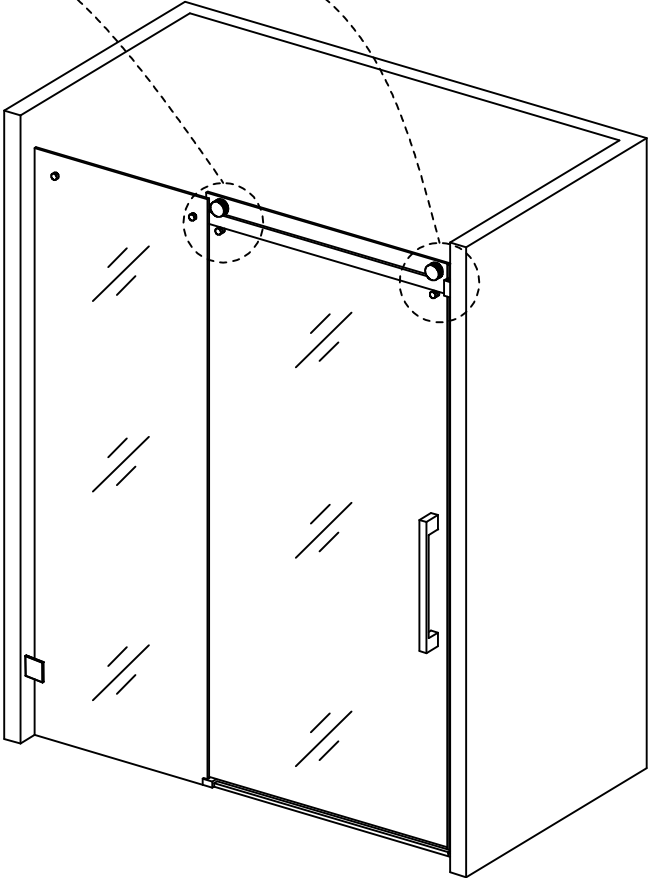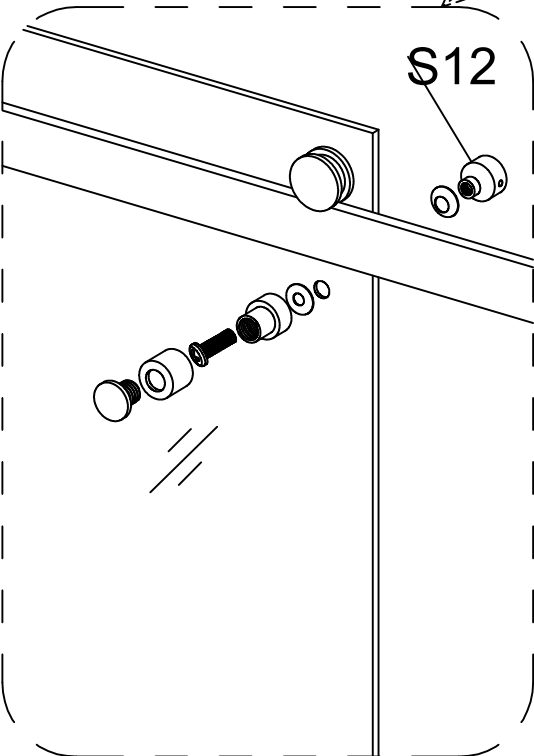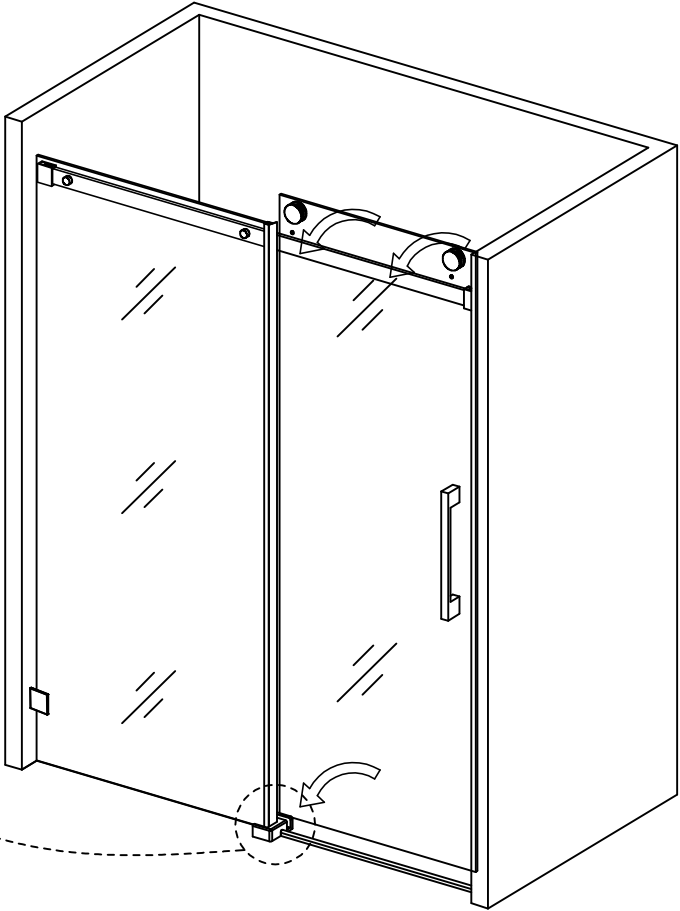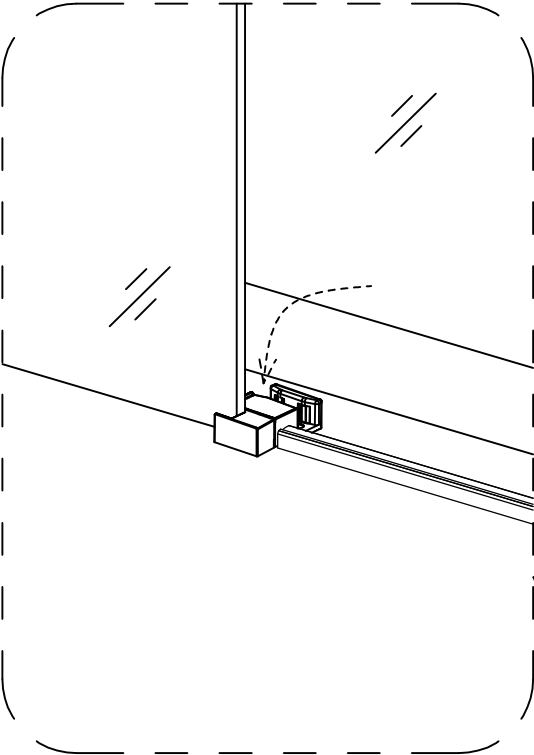

Step 10

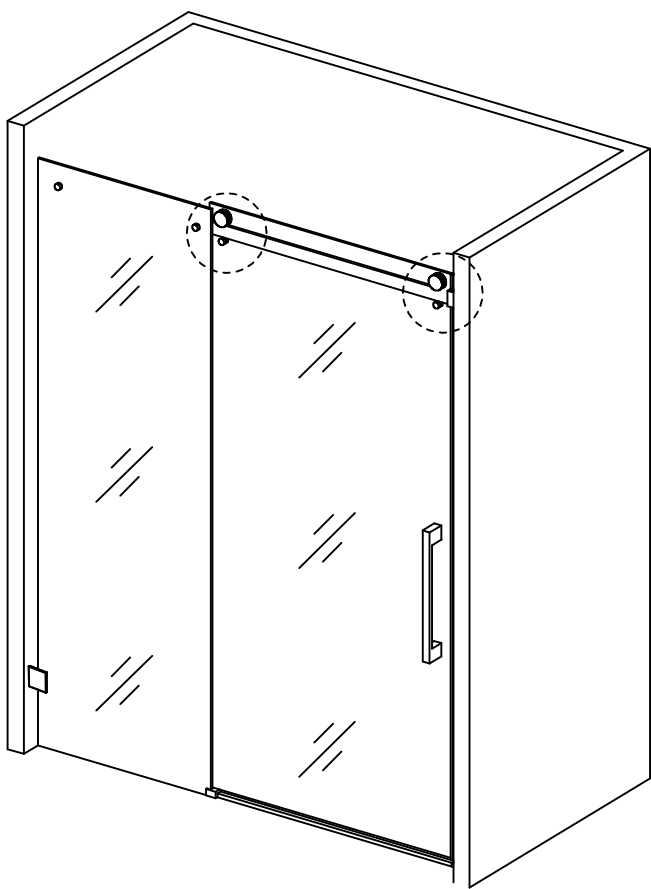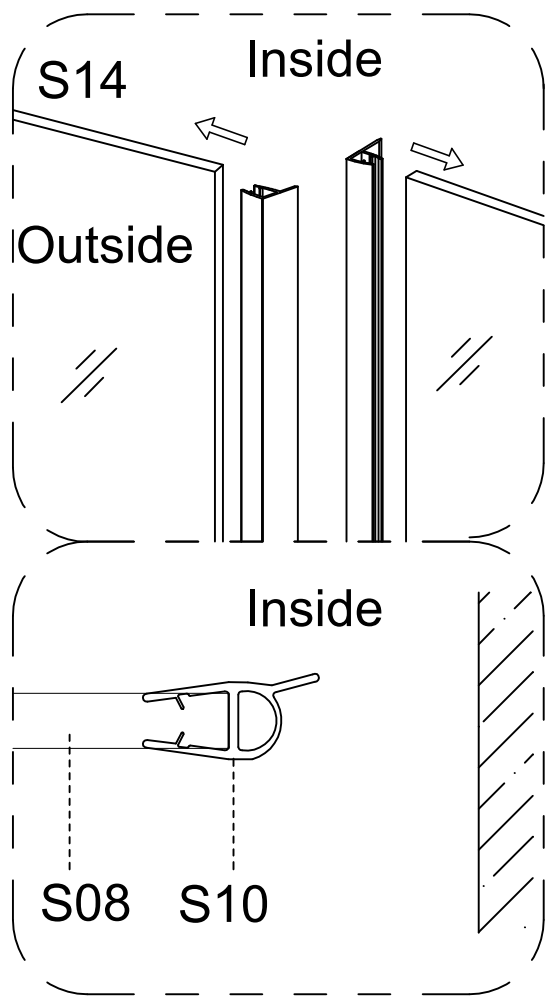

Step 11



Allow 24 hours for silicone to dry before use. Silicone on the outside edge only

