#### **ASSEMBLY INSTRUCTIONS**




- ◆ Inspect the wire insulation for any cuts, abrasions, or exposed copper that may have resulted during shipping. If there is a defect in the wire, do not attempt installation.
- Before starting installation of this fixture or removal of a previous fixture, disconnect the power by turning off the circuit breaker or by removing the fuse at the fuse box.




If you need further assistance, please contact us by Email: customersupport@superiordecorinc.com

# **TOOLS REQUIRED**

A Tripod



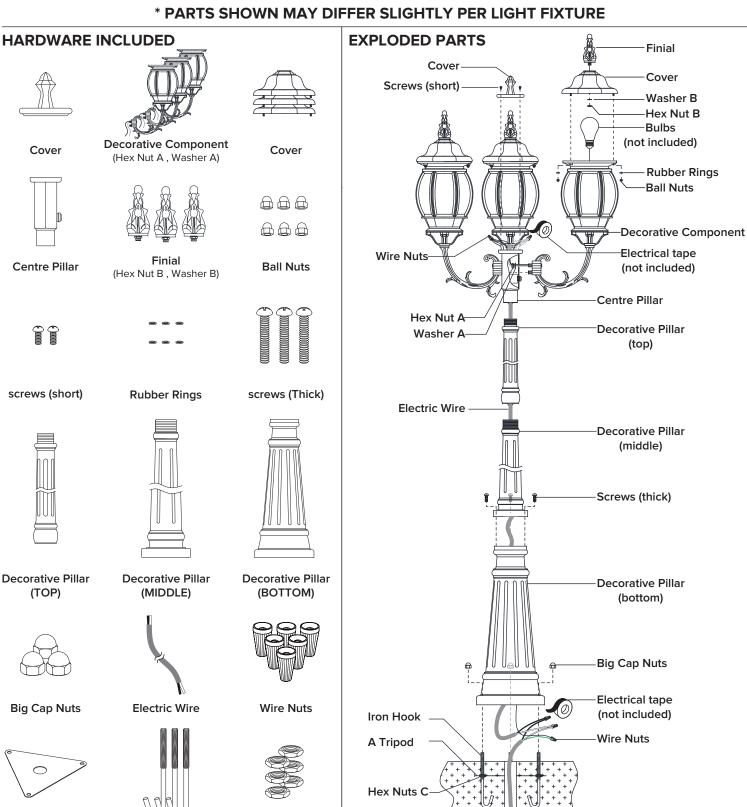


Hex Nuts C

Iron Hook

## **INSTALLATION** STEP 1


Install iron hook into the a tripod with the hex nuts C then embed the component in the ground level with concrete.

Note: the threaded nipple must protrude outward 15/8"(41 mm).

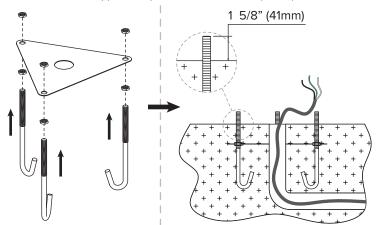

## STEP 2


Successively install the decorative component into centre pillar and secure them with washer A and hex nuts A.

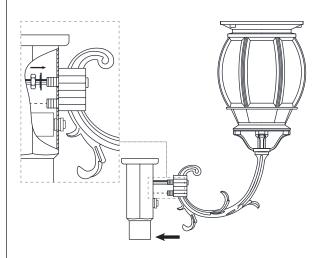


#### STEP 3

Run the electric wire across the centre pillar.

Next, connect the black wire, red wire and white wire with the supplied wire nuts. Secure with electrical tape(not included). Then carefully tuck wires back into the centre pillar.

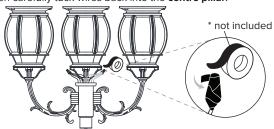


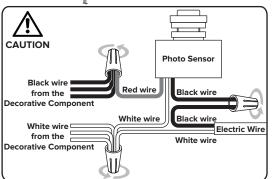

#### STEP 4


Install the cover into centre pillar and secure with screws (short).



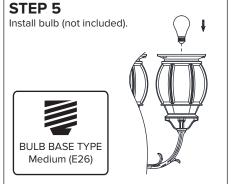


#### STEP 6

- 1. Remove the hex nut B and washer B from the finial.
- 2. Use the  $\boldsymbol{hex}$   $\boldsymbol{nut}$   $\boldsymbol{B}$  and washer B to attach the finial to the cover.



#### STEP 7


Place cover onto the decorative component and secure with Ball Nuts and Rubber Rings.

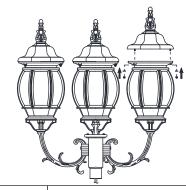

### STEP 8


Pass through the electric wire into decorative pillar(top) and decorative pillar(middle).

Secure the decorative pillar(top) into centre pillar, then secure the decorative pillar(middle) into decorative pillar(bottom).




## STEP 9

Pass through the electric wire into decorative pillar(bottom), attach the decorative pillar (bottom) onto decorative pillar (middle) using screws(thick).



## STEP 10

Connect the live wire, neutral wire and ground wire with the supplied wire nuts. Secure with electrical tape(not included).

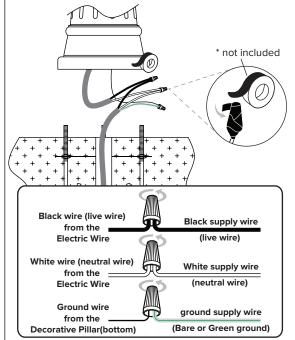

### **STEP 11**

Attach the decorative pillarto (bottom) to the iron hook through screw holes, and secure it with big cap nuts.

