












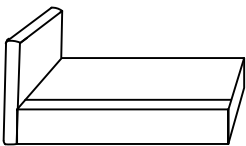

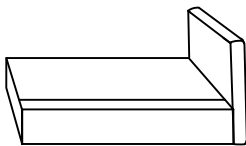






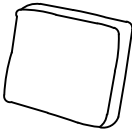
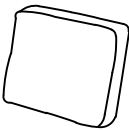








YMX-75


Accessories list(sitting sofa)

<p>A</p>  <p>Right seat frame(1)</p>	<p>B</p>  <p>Left seat frame(1)</p>	<p>C</p>  <p>Right backrest(1)</p>	<p>D</p>  <p>Left backrest(1)</p>	<p>E</p>  <p>Ottoman panel(1)</p>
<p>F</p>  <p>Ottoman base plate(1)</p>	<p>G</p>  <p>Ottoman side pane(2)</p>	<p>H</p>  <p>Ottoman side pane(2)</p>	<p>I</p>  <p>Seat cushion(2)</p>	<p>J</p>  <p>Back cushion(2)</p>
<p>K</p>  <p>Ottoman seat cushion(1)</p>	<p>L</p>  <p>Soft Leg(10)</p>	<p>M</p>  <p>8*100mm Screw(10)</p>	<p>N</p>  <p>8*17mm Gasket (10)</p>	<p>O</p>  <p>M5*100*55mm Wrench (1)</p>
<p>P</p>  <p>50 Metal plate(1)</p>	<p>Q</p>  <p>6*25mm Screw(2)</p>	<p>R</p>  <p>6*16mm Gasket (38)</p>	<p>S</p>  <p>M4*65*23mm Wrench(1)</p>	<p>T</p>  <p>Hardware (4)</p>
<p>U</p>  <p>6*40mm Screw(16)</p>	<p>V</p>  <p>6*18mm Screw(20)</p>	<p>W</p>  <p>Metal plate(2)</p>	<p>X</p>  <p>Corner brace connector (4)</p>	<p>Y</p>  <p>M4*100*30mm Wrench (1)</p>
<p>Z</p>  <p>Right armrest soft bag(1)</p>	<p>①</p>  <p>Left armrest soft bag(1)</p>	<p>②</p>  <p>Seat cushion(1)</p>	<p>③</p>  <p>Back cushion(1)</p>	


STEP 1: Install the legs of sofa

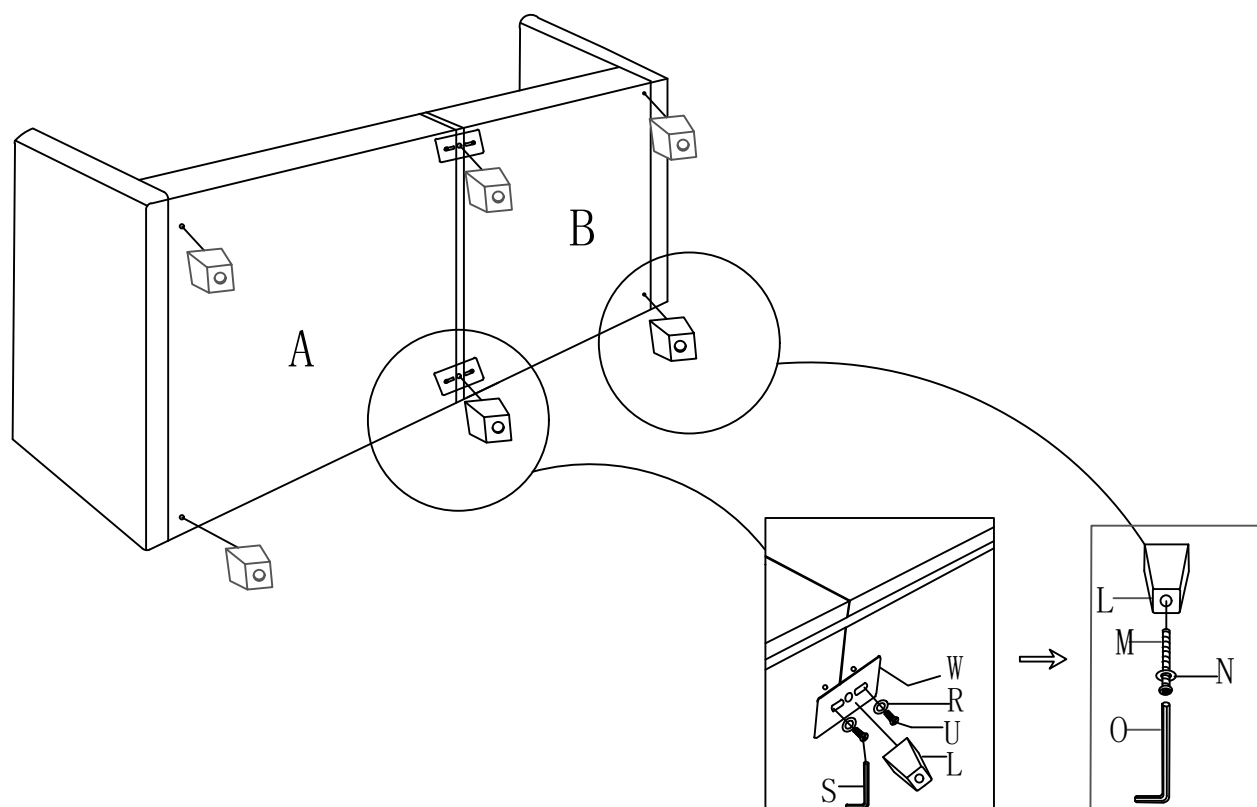


STEP 2: Zip the armrest soft bag of the armrest

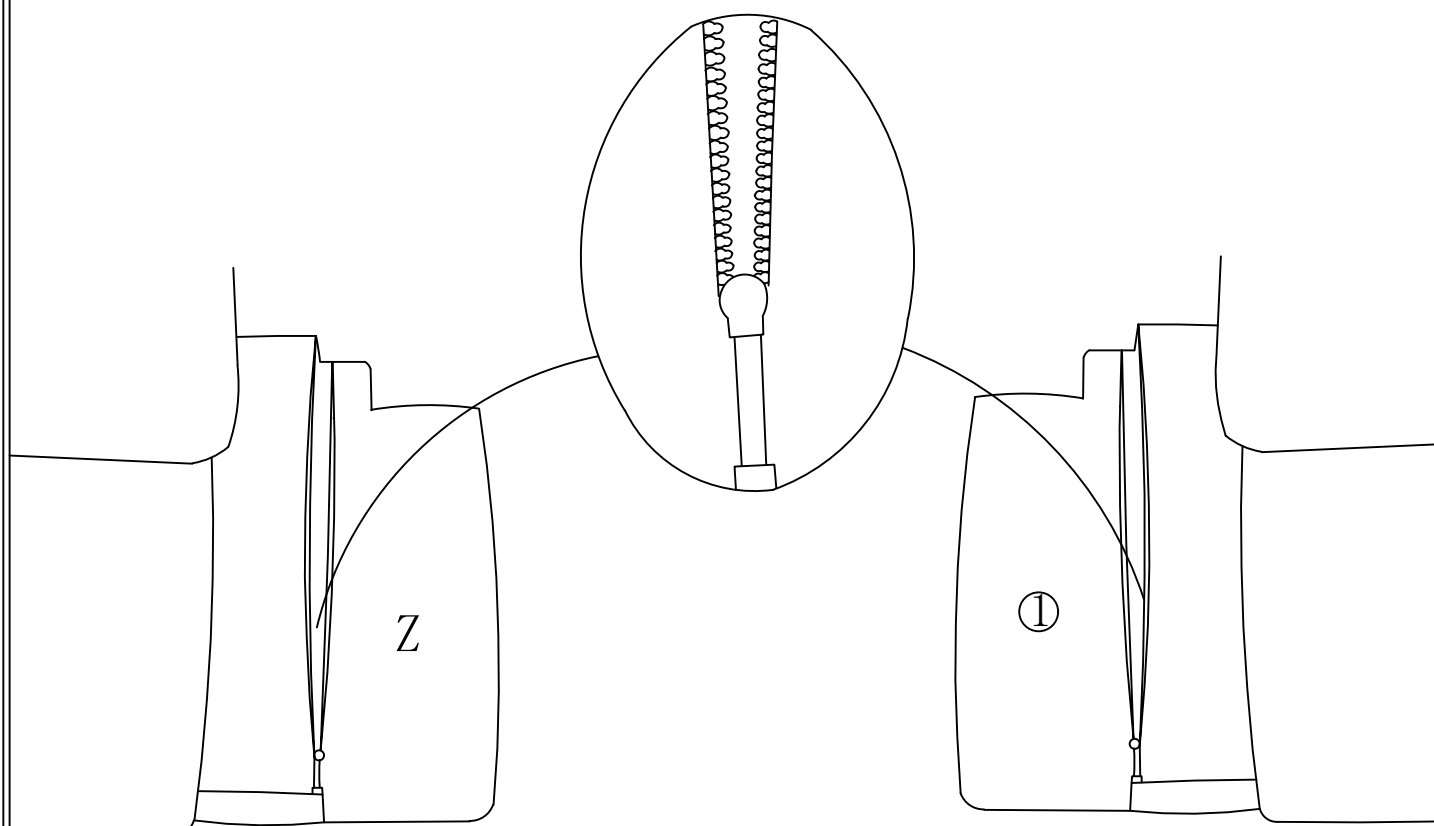


STEP 3: Tighten the screws to securely install the hardware on the sofa seat frame.

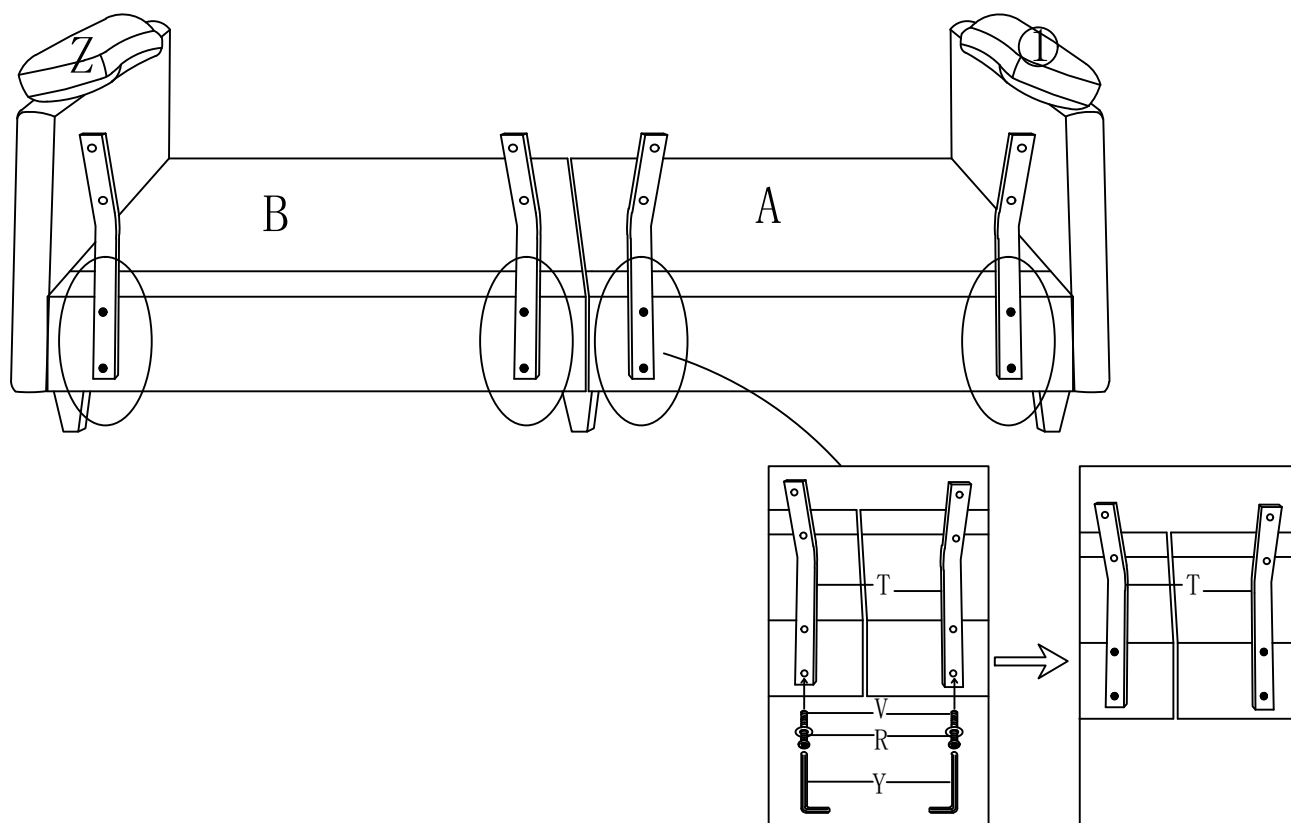


STEP 4: Lower the backrest and align it with the hardware hole

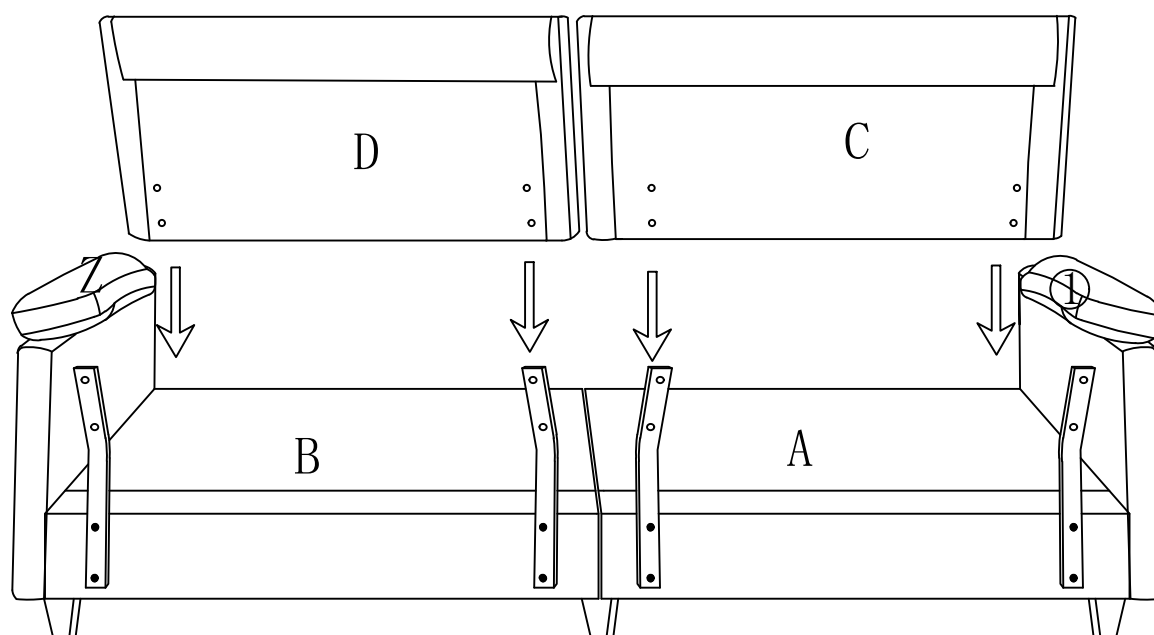


STEP 5: Install hardware screws

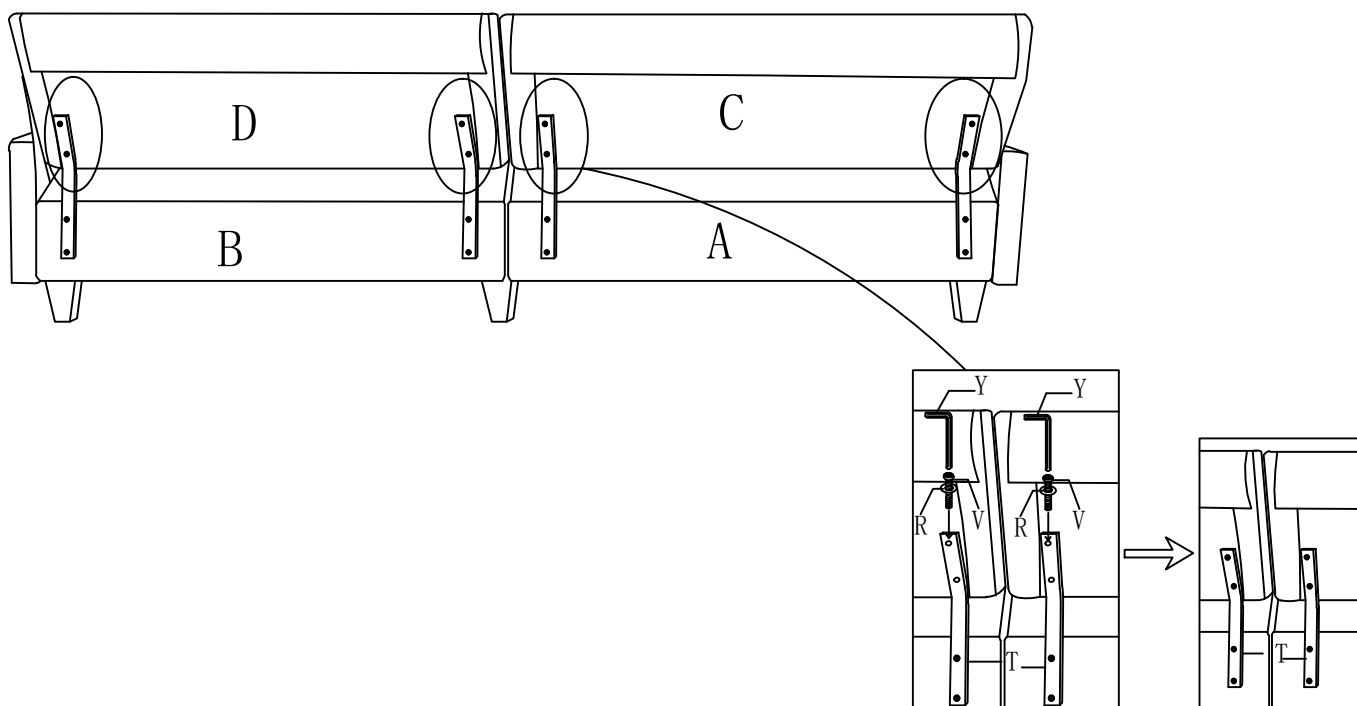

STEP 6: Turn the backrest fabric over and secure the Velcro on the backrest fabric to the seat frame.

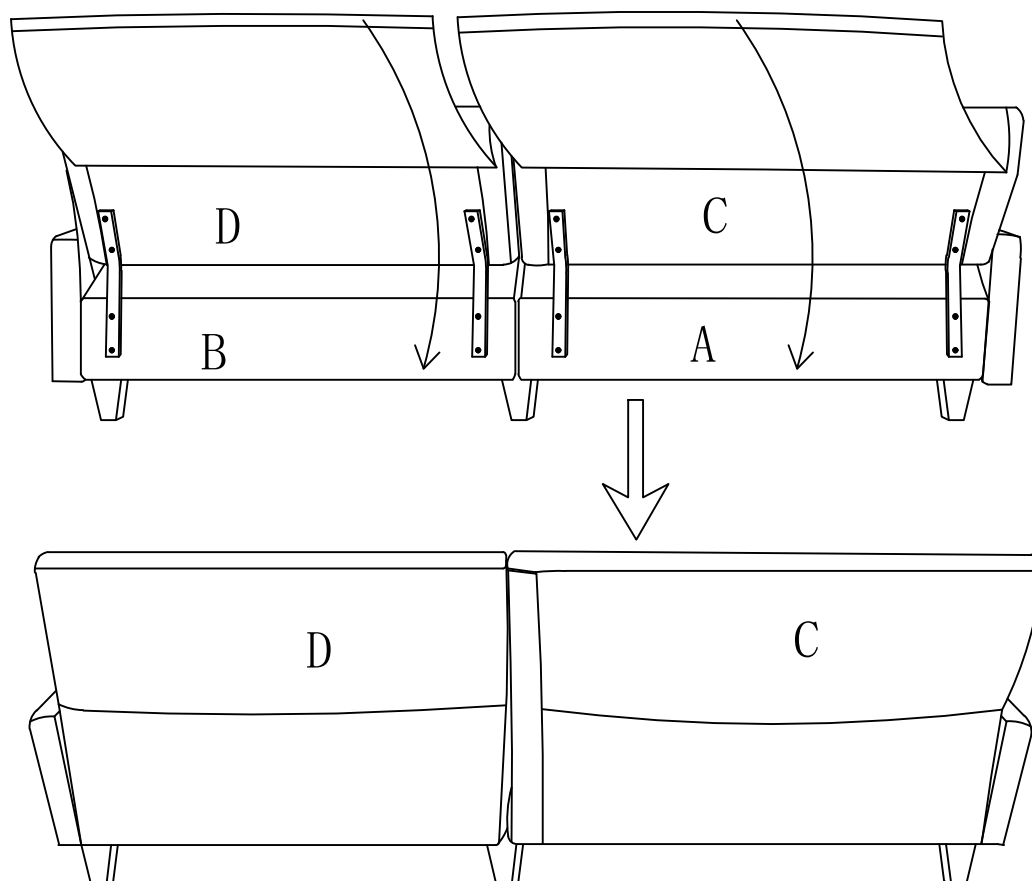


STEP 7: Lock the backrest with the metal plate

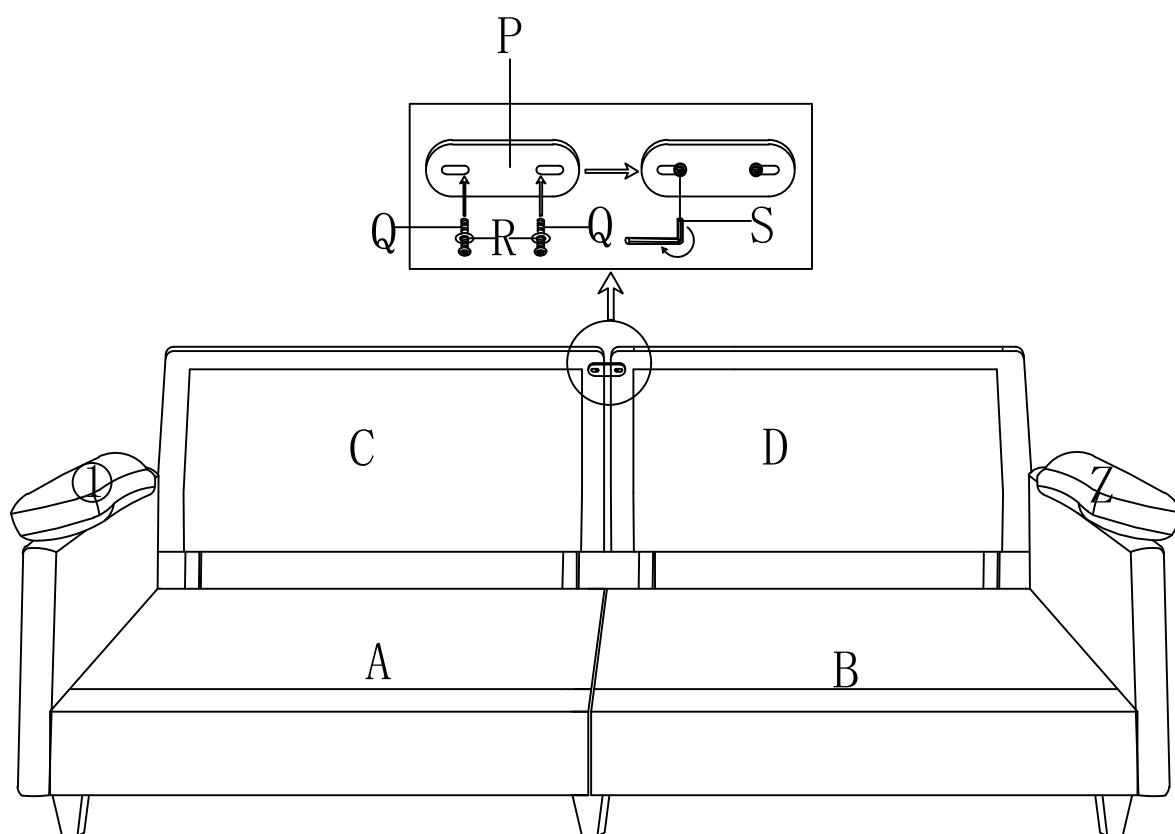


STEP 8: Secure the sofa foot to the sofa pedal base plate and the foot pedal hardware.


Note: Ensure the foot pedal hardware is oriented towards the smooth surface of the sofa pedal base.

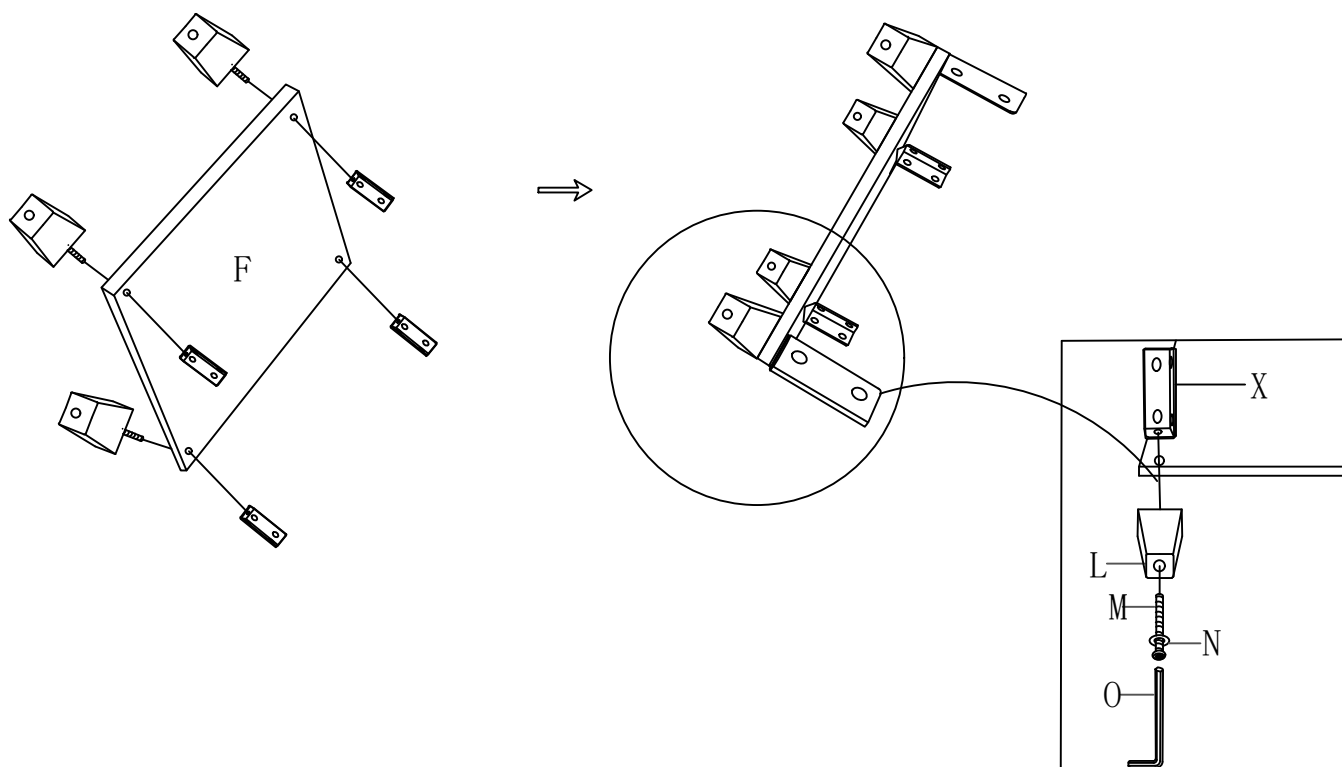


STEP 9: Stagger the side panels of the corner brace connector on the ottoman base plates, and differentiate between the top and bottom of the ottoman side panels. Place the ottoman panel onto the ottoman frame.

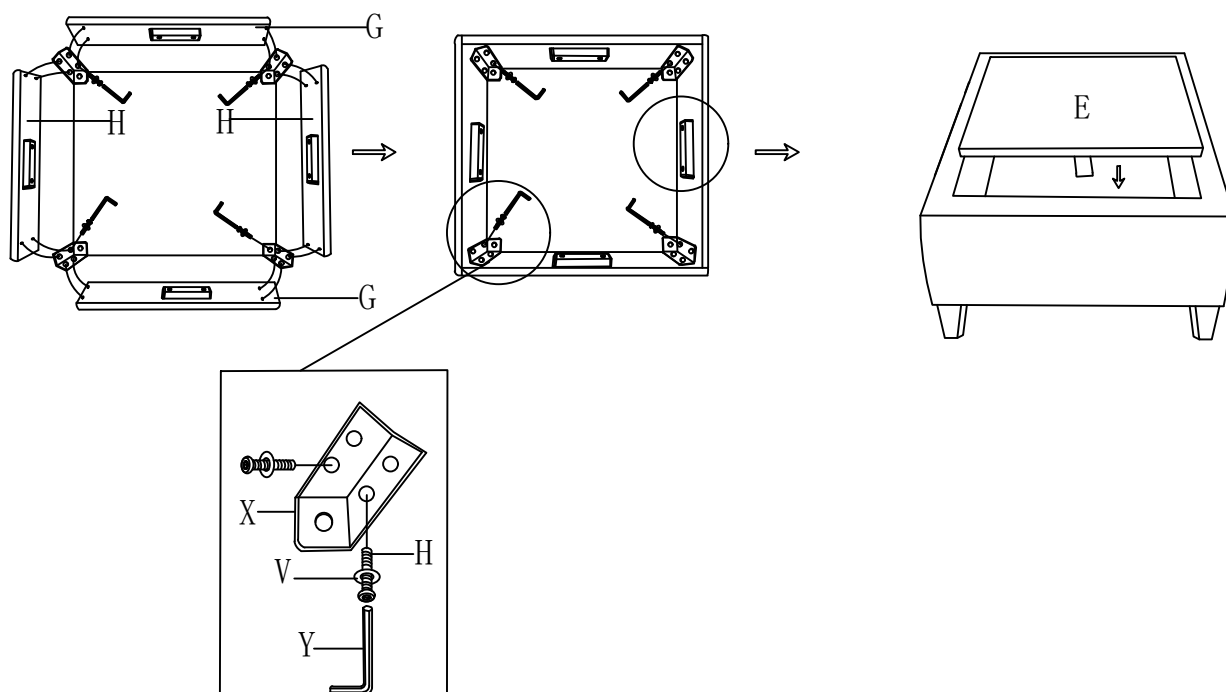

STEP 10: Cut the compression bags

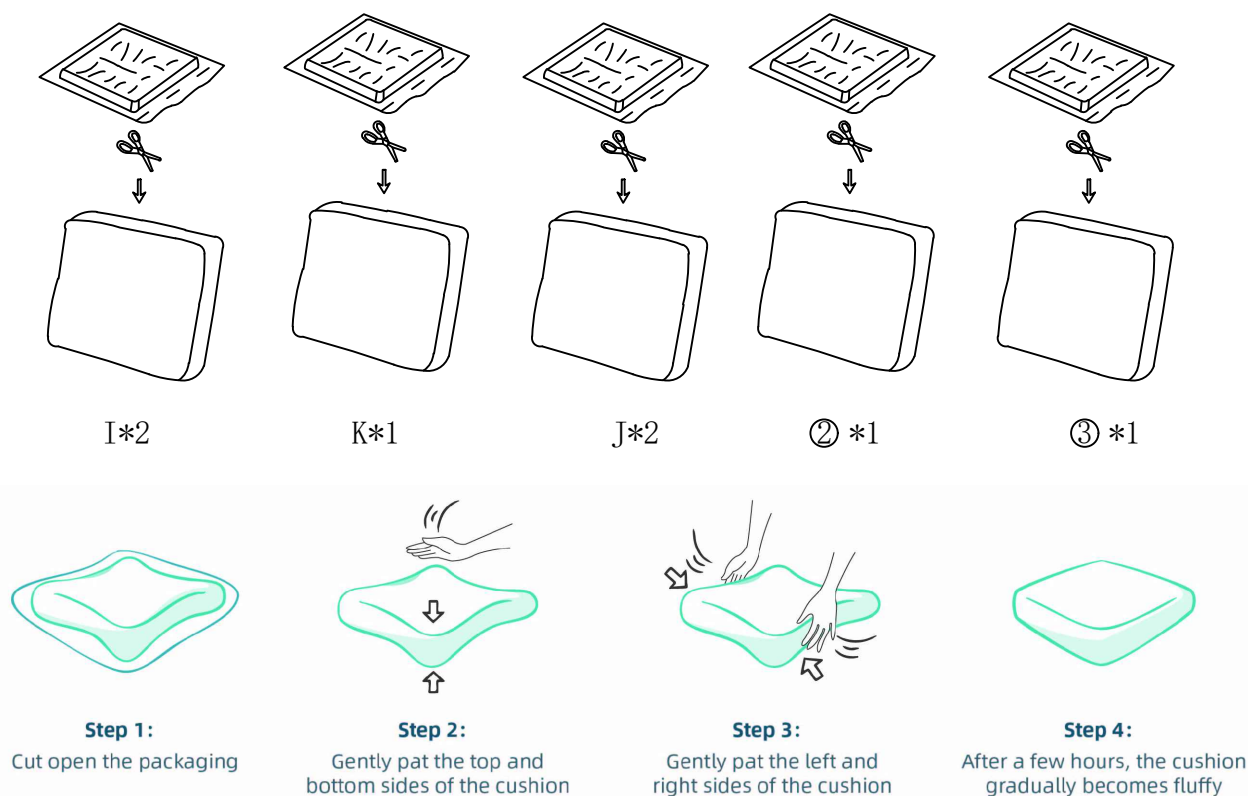

STEP 11: Assembly completed

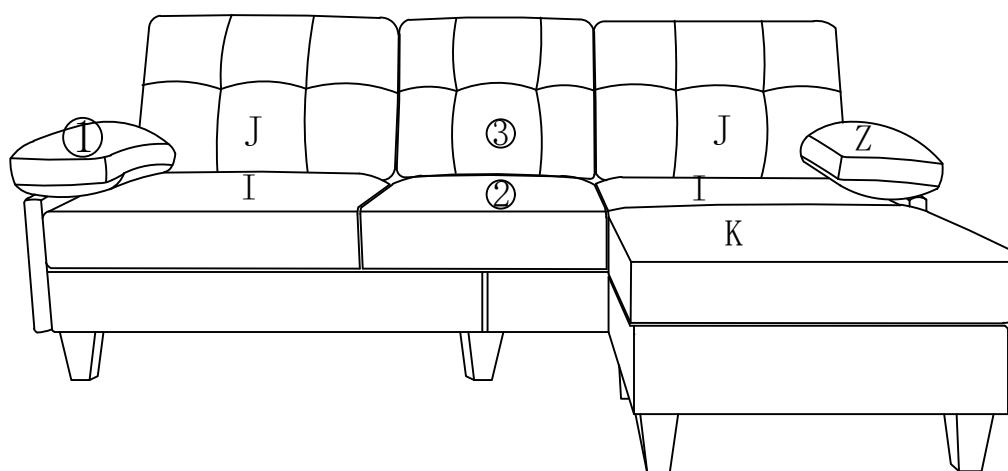

sofa feet and part I、J、K、①、② are inside
the single seat frame

