



ZIPPITY

Easy Does It!

OASIS

PRIVACY POOLSIDE ORGANIZER
(48" W X 30" L X 75 ½" H)


ASSEMBLY INSTRUCTIONS

ZP19080

90 MIN

Approximate assembly time

Want to see a video on how to
assemble this product?
Scan the QR code

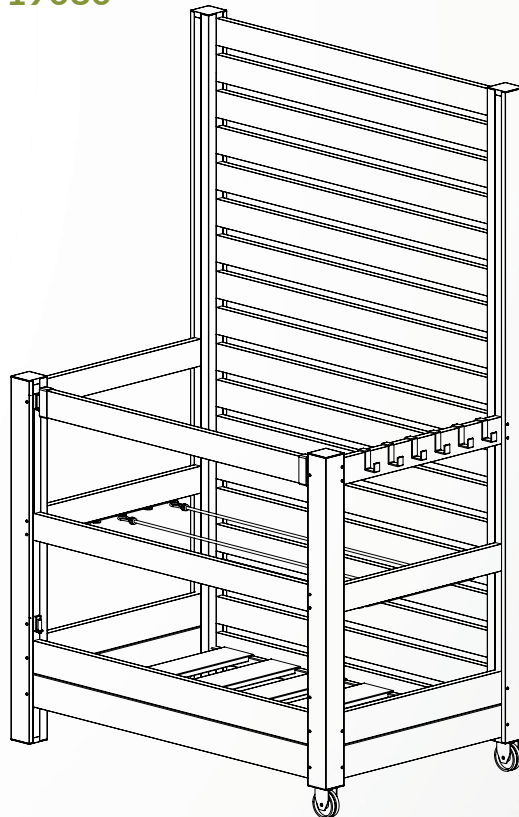

GENERAL INFORMATION

MISSING OR DAMAGED PARTS?



➤ **Visit Our Website**
so we can help you right away!
parts.nychbrands.com

* You can also reach us via phone or email.

Hours of Operation - **Weekdays 9am-5pm EST**

To better help you, **please have the following**

- Your product number (**ZP19080**)
- Your affected part letters (**Pages 4-9**)
- Your original product box

NEED ASSEMBLY HELP?


If you are having problems with assembly or installation of this product,
please contact at:

📞 **704-892-5222 / 877-234-6196** ✉ **support@zippity-outdoor.com**

NEED TO RETURN?


If for some reason you need to return this product, please allow us to help resolve your issues first. If you still decide to return the product, **you will need to initiate the return from the company you originally purchased from.**

Detailed Product Dimensions & Specifications

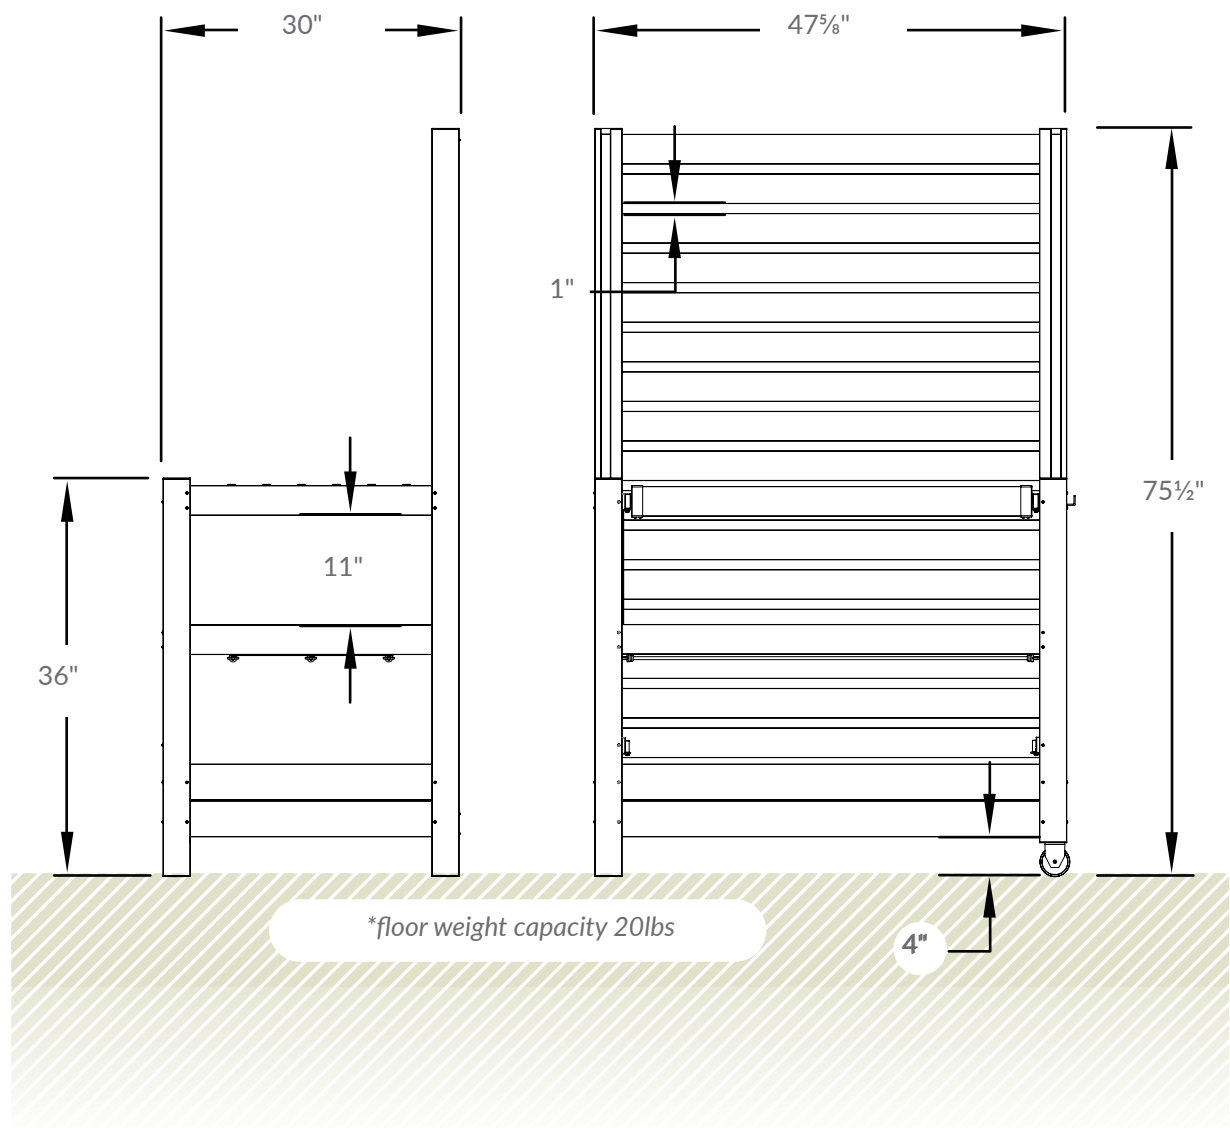

LAY OUT MATERIALS

► Tools required for a smoother installation experience.

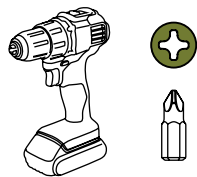



► Drill with Phillips bit

POSTS




A

Post A (1)
2 3/4" x 2 3/4" x 40"

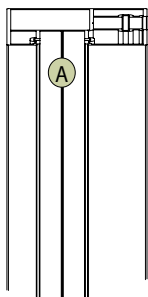


B

Post B (1)
2 3/4" x 2 3/4" x 40"

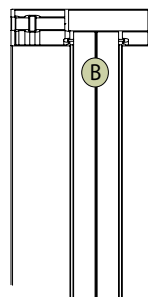


LAY OUT MATERIALS

POSTS

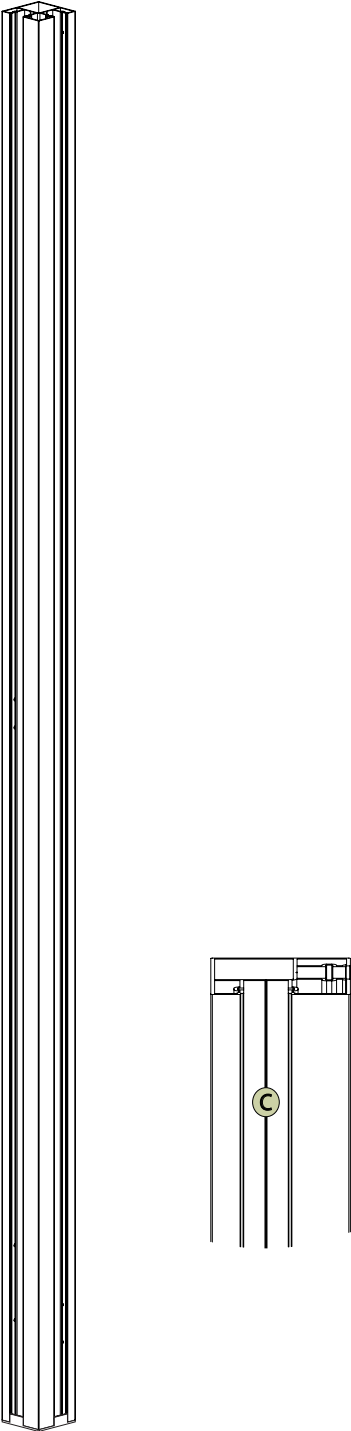

C

Post C (1)
2³/₄" x 2³/₄" x 75³/₈"

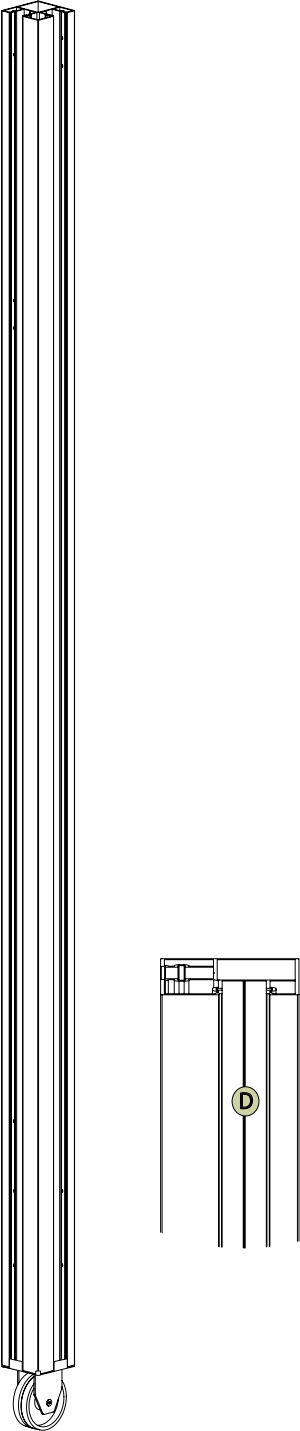

D

Post D (1)
2³/₄" x 2³/₄" x 75³/₈"

LAY OUT MATERIALS

WALLS

A perspective view of a long wooden board with a series of rectangular notches along its bottom edge, designed for interlocking with other boards.

E
Bottom Board Long - Front (1)
44¼" x 7⅜" x ⅞"

A perspective view of a long wooden board with a series of rectangular protrusions along its bottom edge, designed to fit into the notches of the front board.

F
Bottom Board Long - Back (1)
44¼" x 3" x ⅞"

A perspective view of a short wooden board with a series of rectangular notches along its bottom edge.

G
Short Bottom Board (2)
26⅜" x 7⅜" x ⅞"

A perspective view of a short, flat wooden board.

H
Short Slat (4)
26⅜" x 3" x ⅞"

A perspective view of a long, flat wooden board.

I
Floor Boards (6)
26⅞" x 4½" x ⅞"




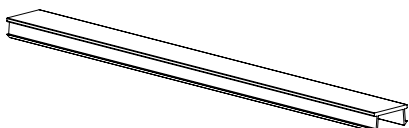
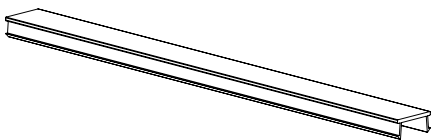
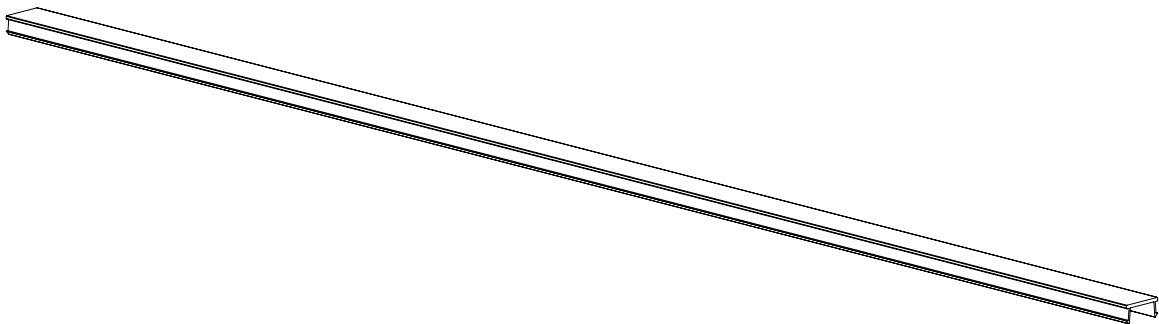
A perspective view of a long wooden board with a small rectangular notch at one end and a small rectangular protrusion at the other end.

J
Long Adjustable Slat (1)
42" x 3" x ⅞"

A perspective view of a long, flat wooden board.


K
Long Slats (18)
44¼" x 3" x ⅞"

LAY OUT MATERIALS

FILLERS			Note: Refer to bag labels during installation		
L			M		
	Post Filler (38) 1" x 1" x 3⁄8"			Post Filler (4) 3 3⁄8" x 1" x 3⁄8"	
			N		
				Post Filler (2) 8 1⁄2" x 1" x 3⁄8"	
					
O	Post Filler (8) 11 1⁄8" x 1" x 1⁄8"				
					
P	Post Filler (2) 11 1⁄2" x 1" x 1⁄8"				
					
Q	Post Filler (2) 35 1⁄2" x 1" x 3⁄8"				


LAY OUT MATERIALS

HARDWARE & ACCESSORIES

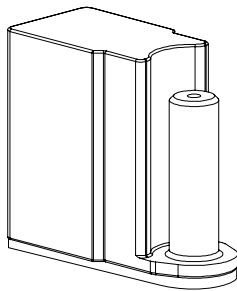


R

Post Hinge (4)

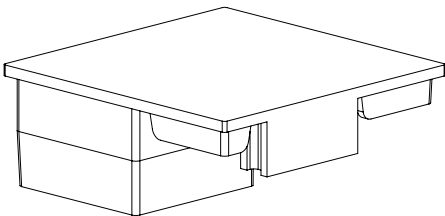

S

Post Cap (4)

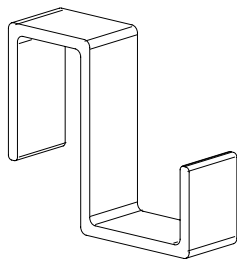

T

Towel Hook (6)




U

Long Self-Drilling Screws (40)
2.5"

LAY OUT MATERIALS

HARDWARE & ACCESSORIES

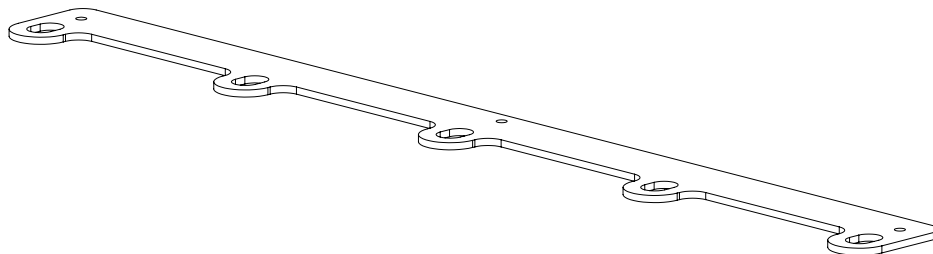


V

Bungee Connector (2)



W



Bungee (3)

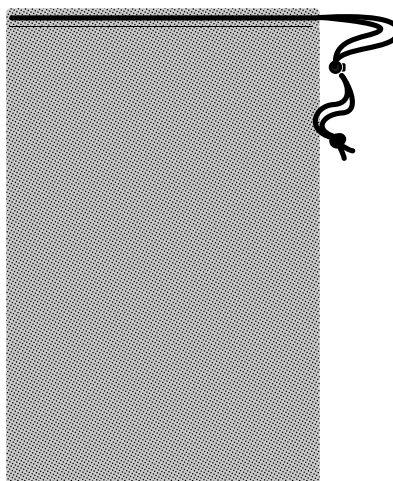


X

Mesh Bags (2)


ASSEMBLE UNIT

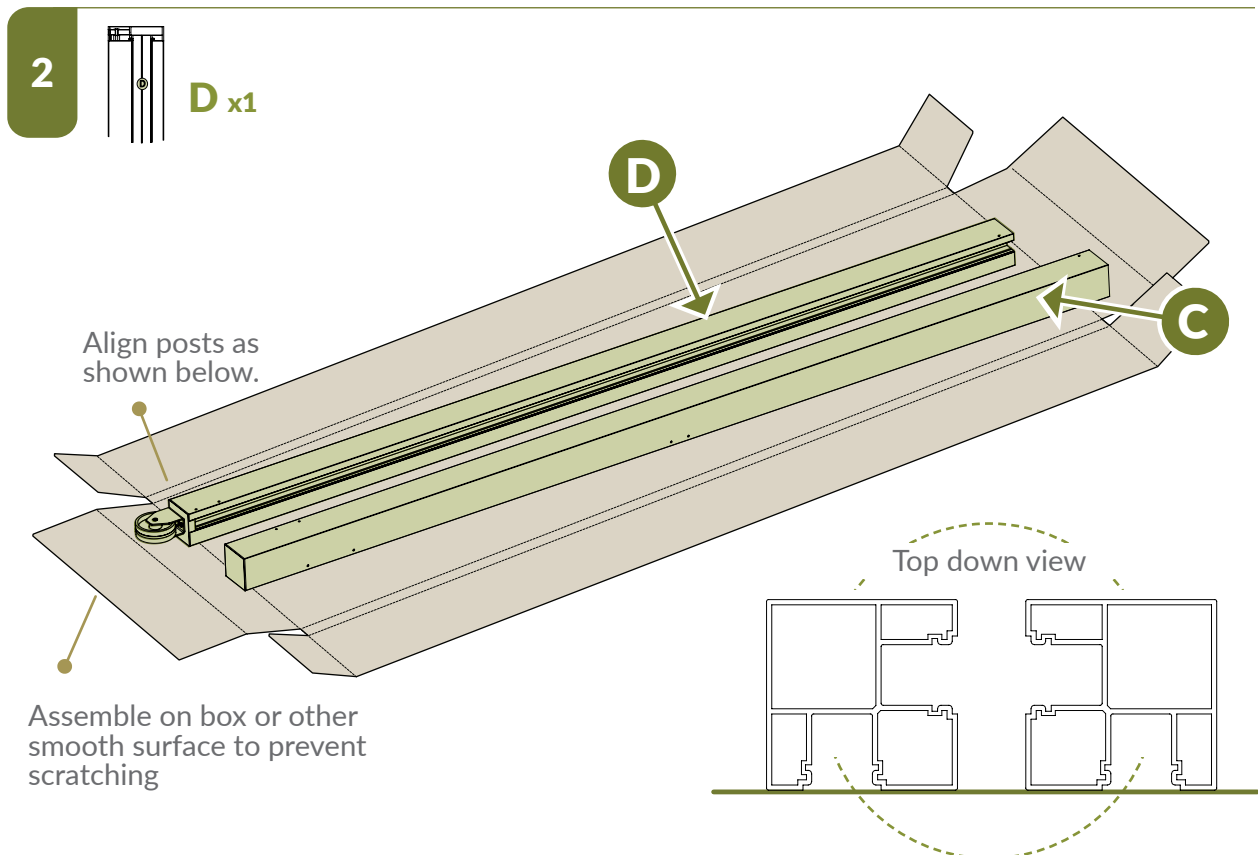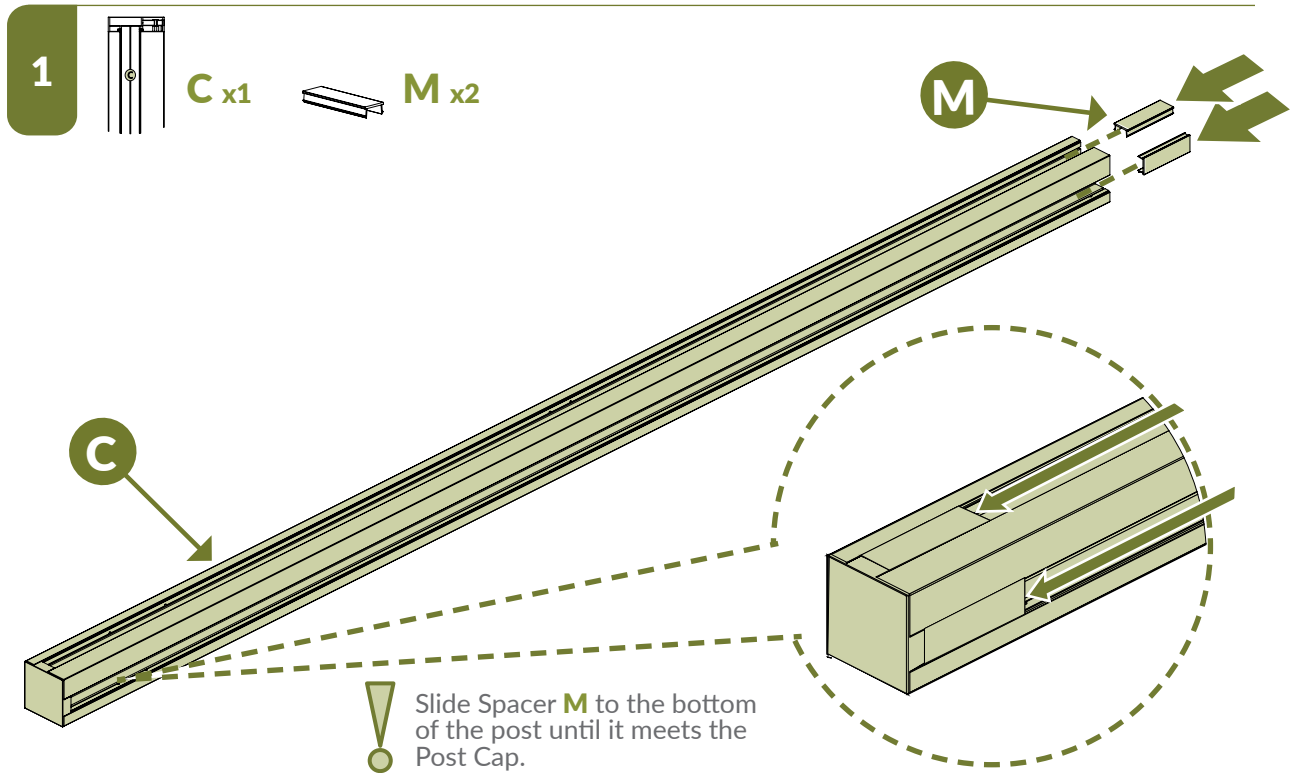


3




F x1

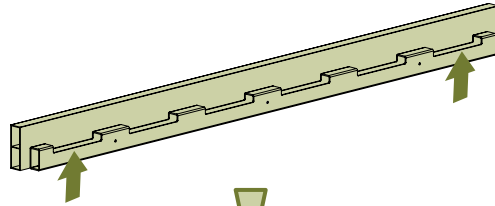


Ensure that the floor supports are facing upwards.

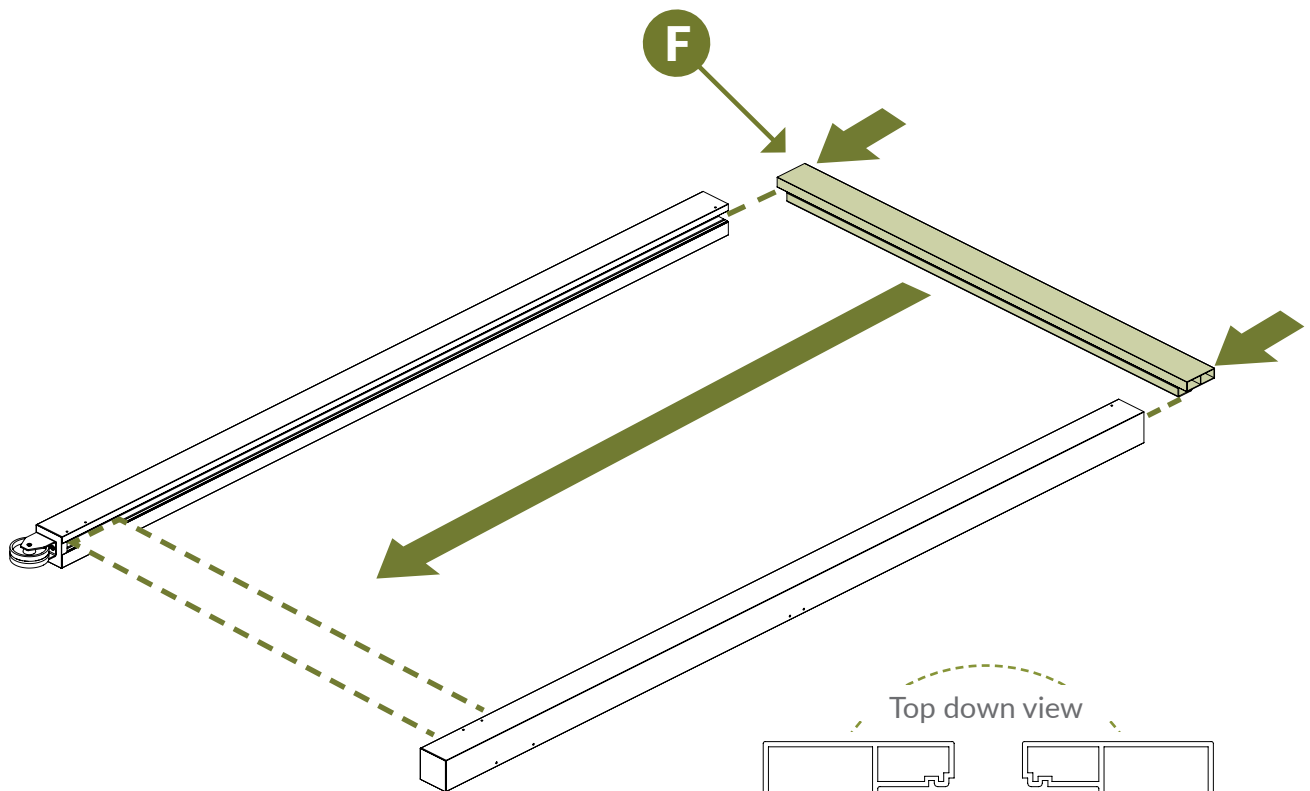

Top down view

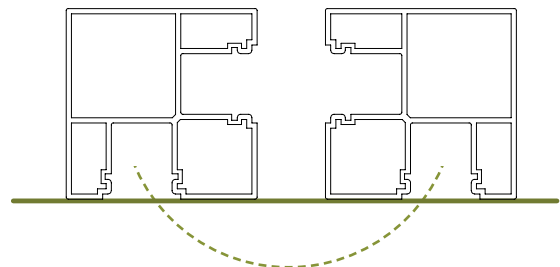


4



K x1


Temporarily place one K slat to keep the panel square. Remove after step 5.

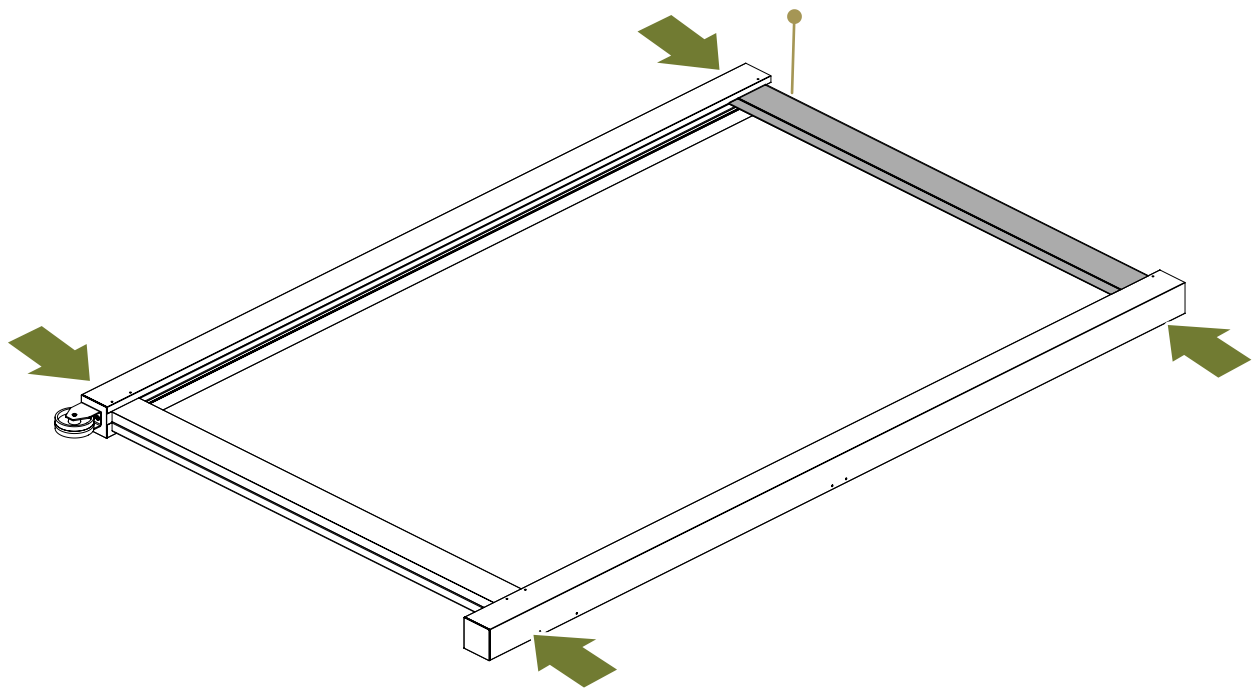

5




U x4

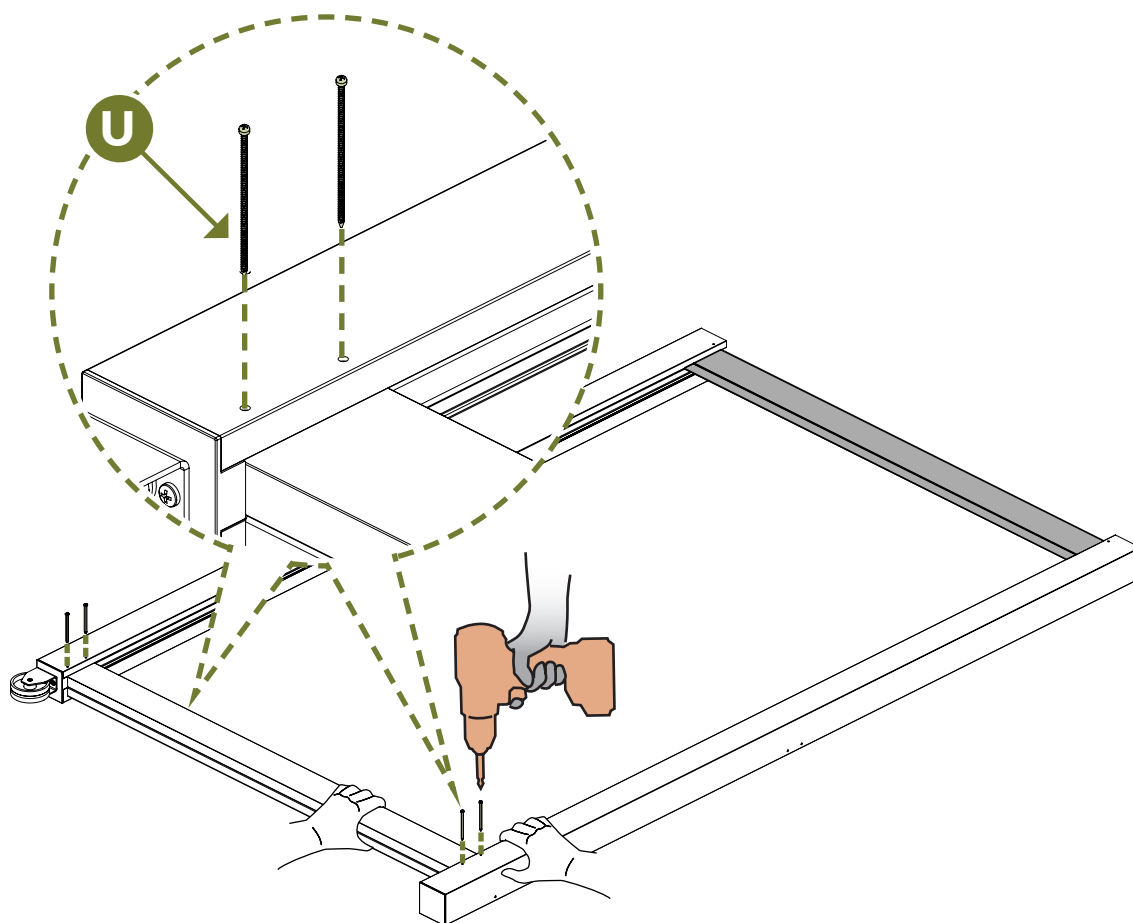

Tip: Ensure the bottom board is pushed to the back of the post channels before driving your screws.


6



K x17





L x34

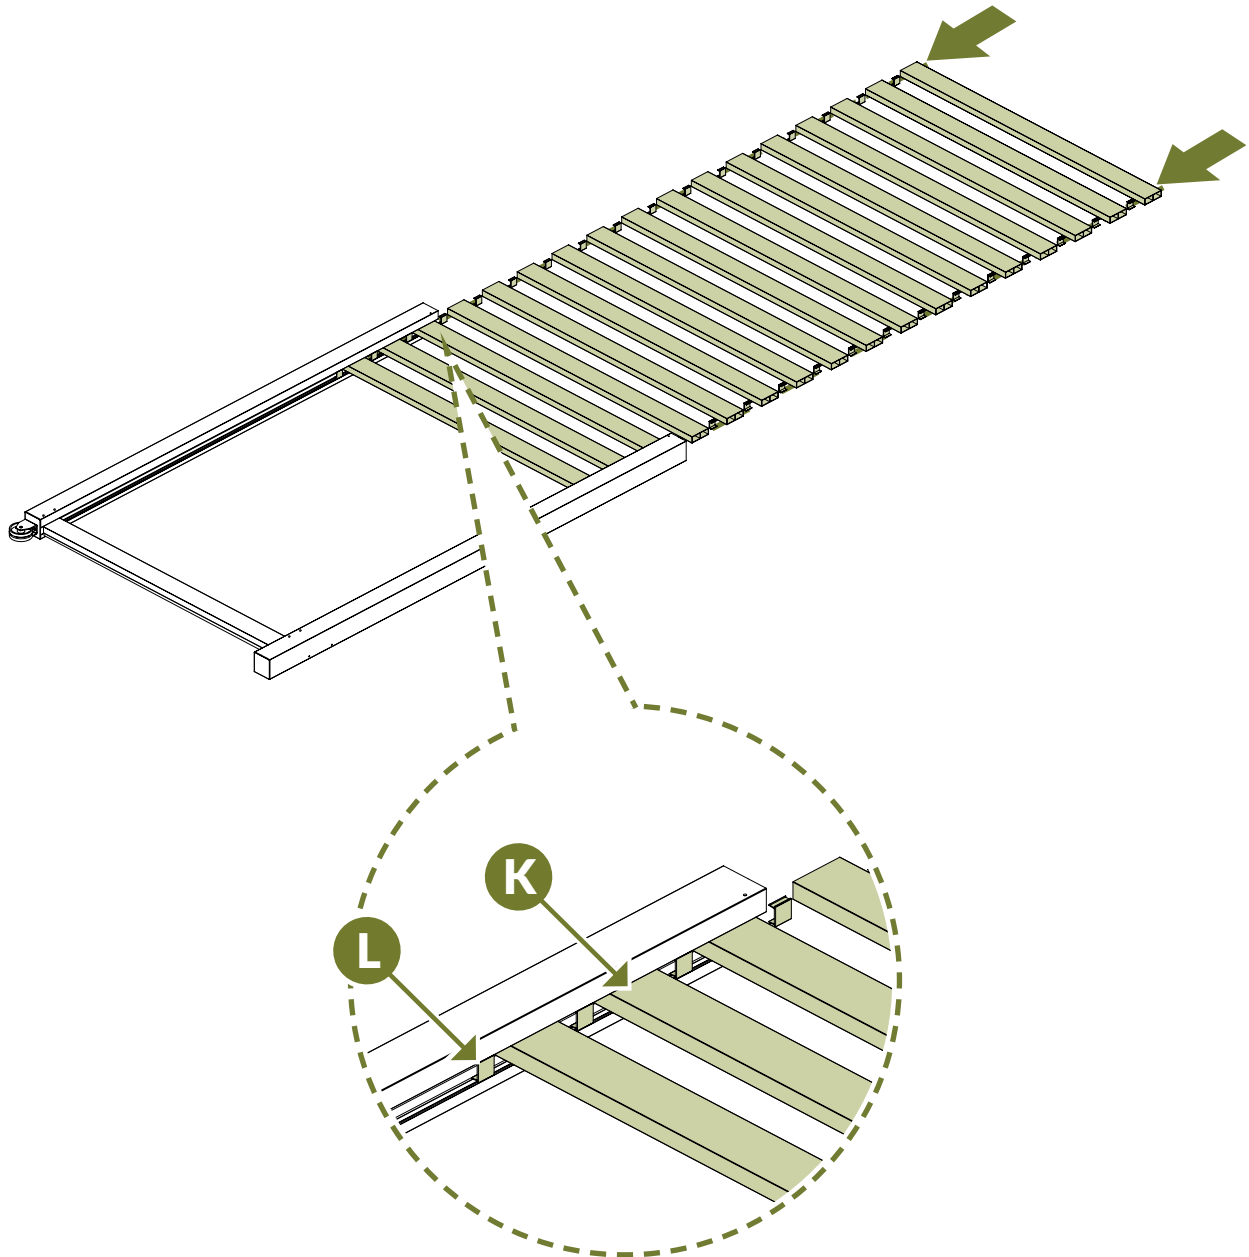


7




U x2

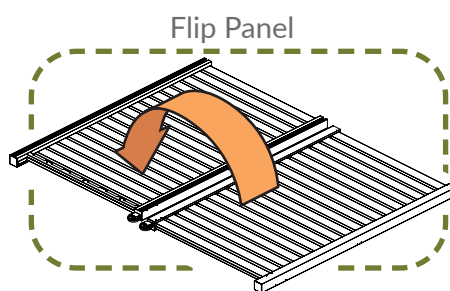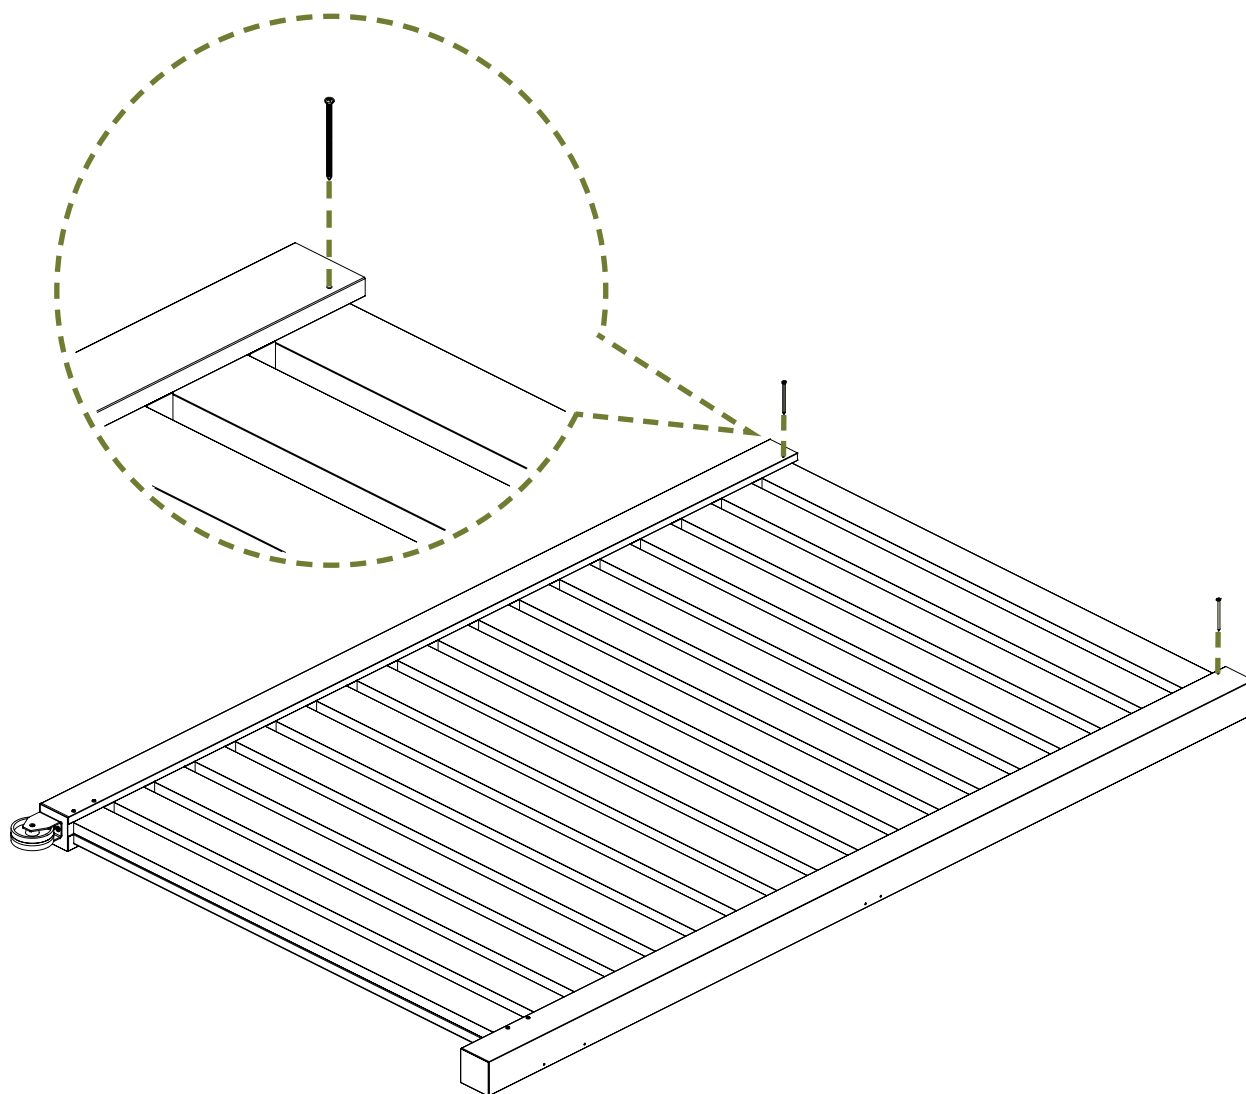

8




G x2

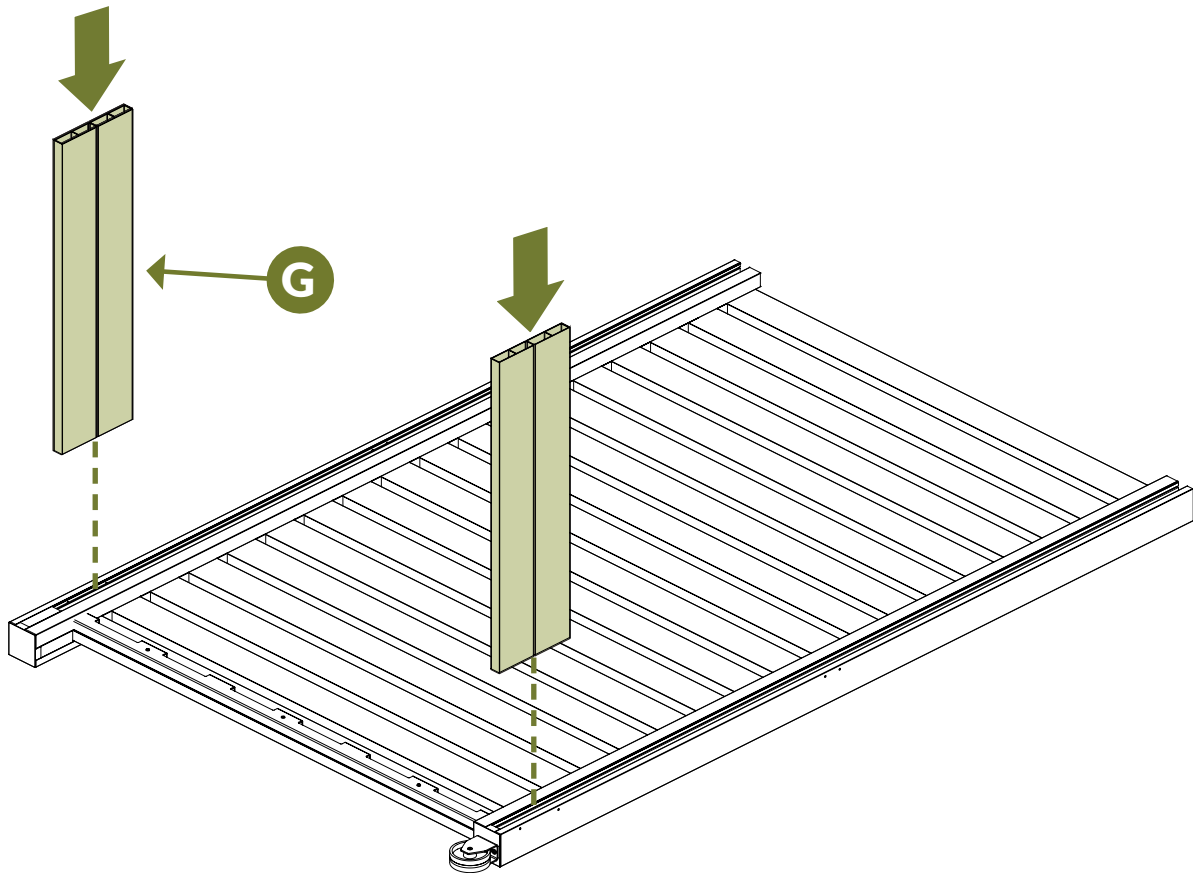


9



U x4

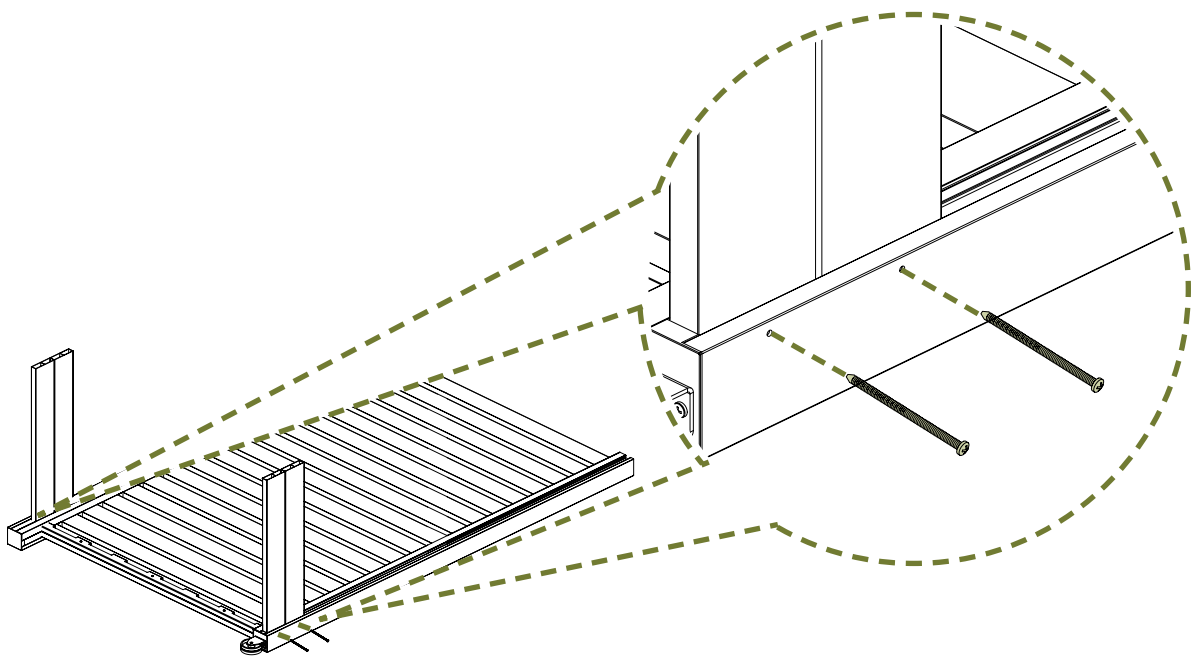


10




H x2

H

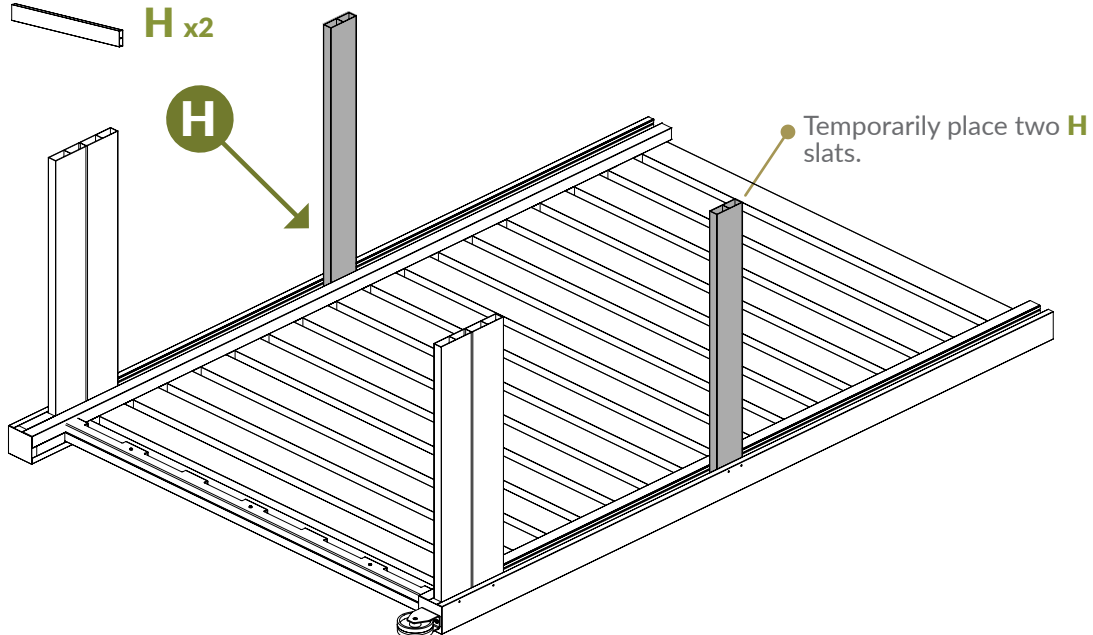


11



A x1




M x2

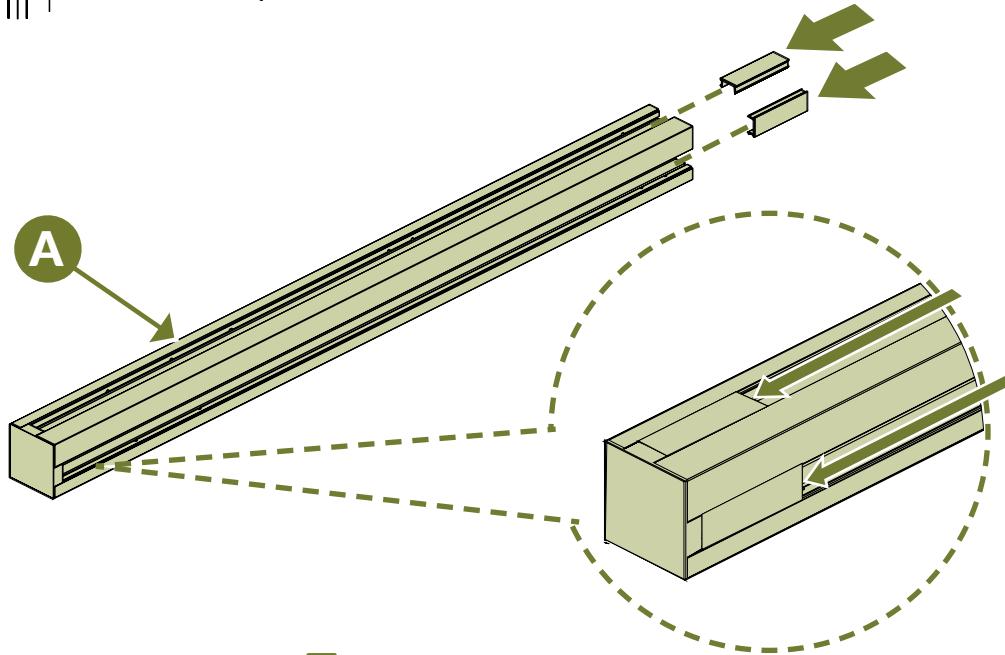


Slide Spacer **M** to the bottom of the post until it meets the Post Cap.

12




A x1



B x1


Note: Make sure your wheel is in-line with the back wheel.

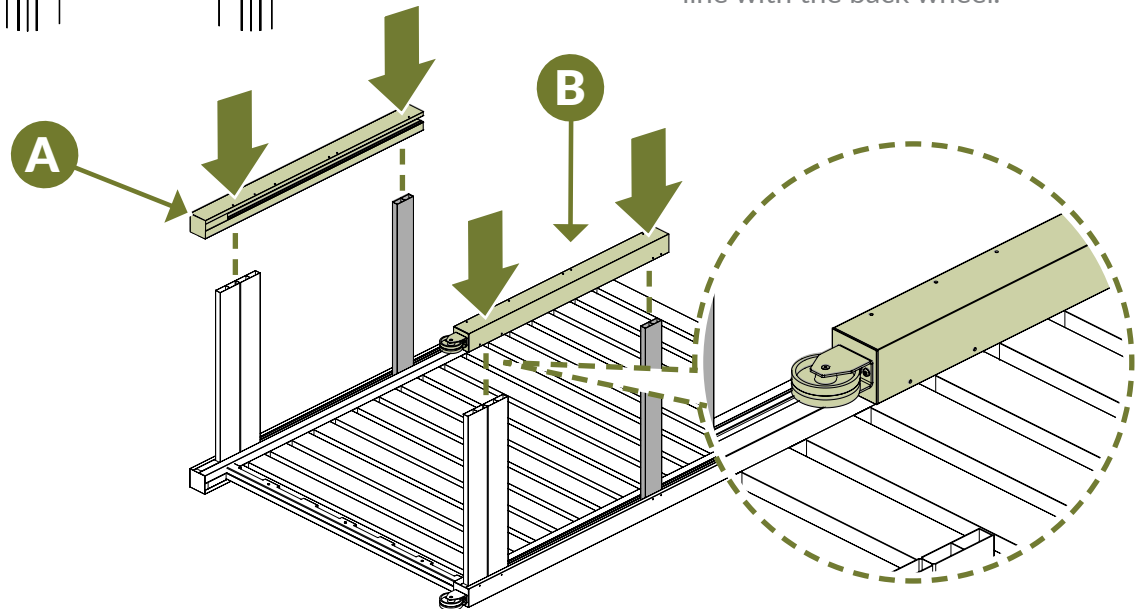


13




U x4

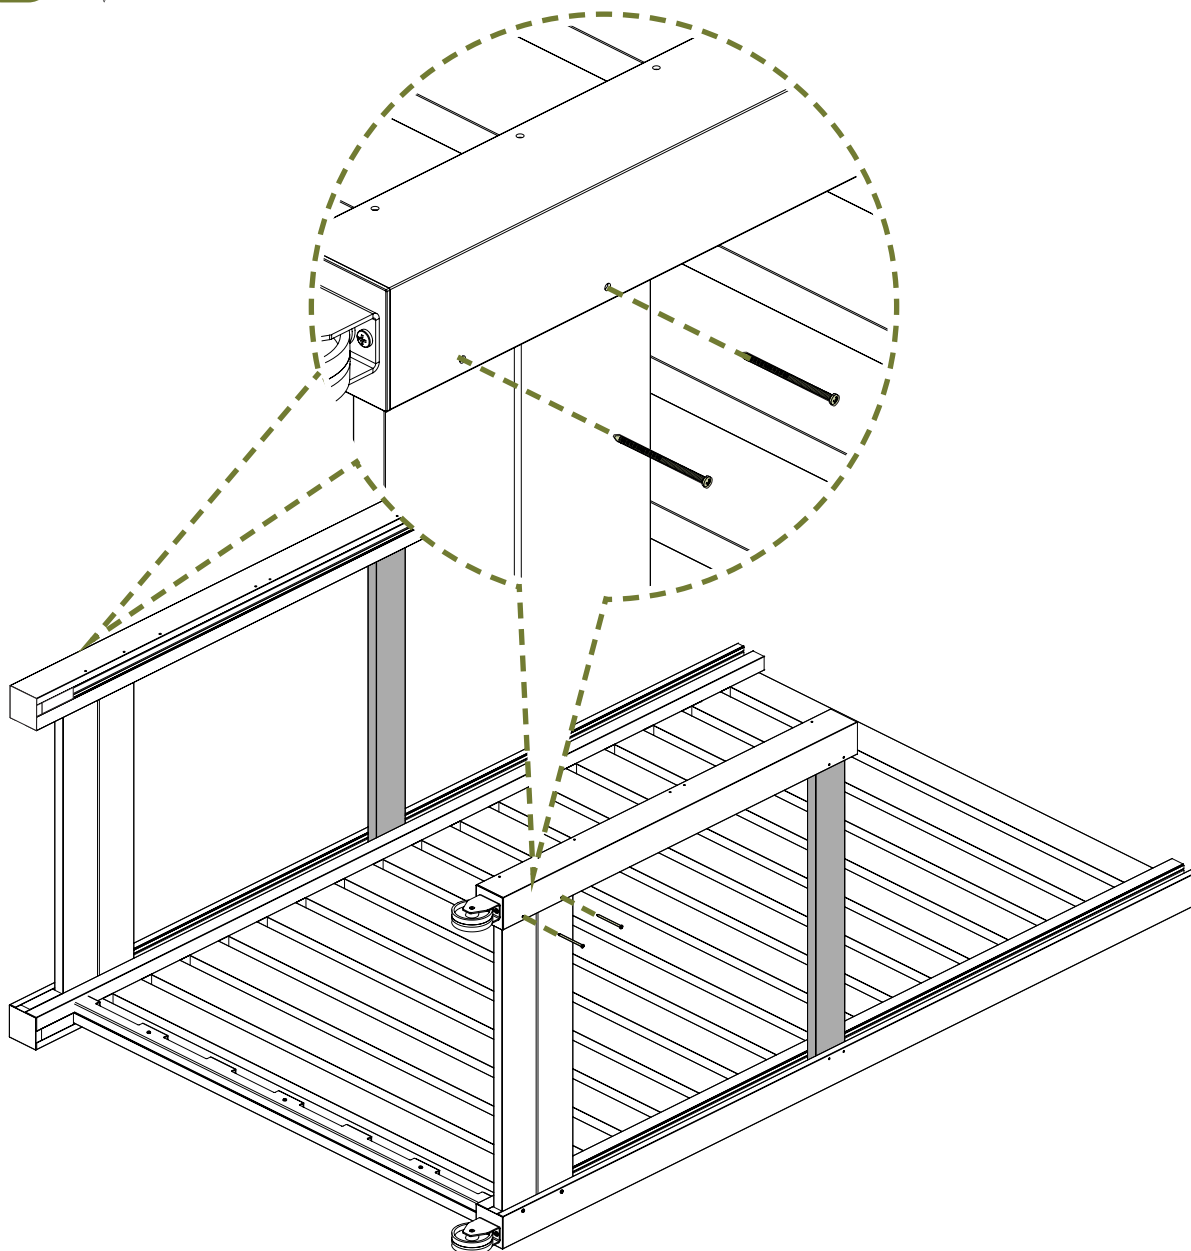




Note: Ensure pre-installed floor support is at the bottom of Part **E** when inserted into the posts.

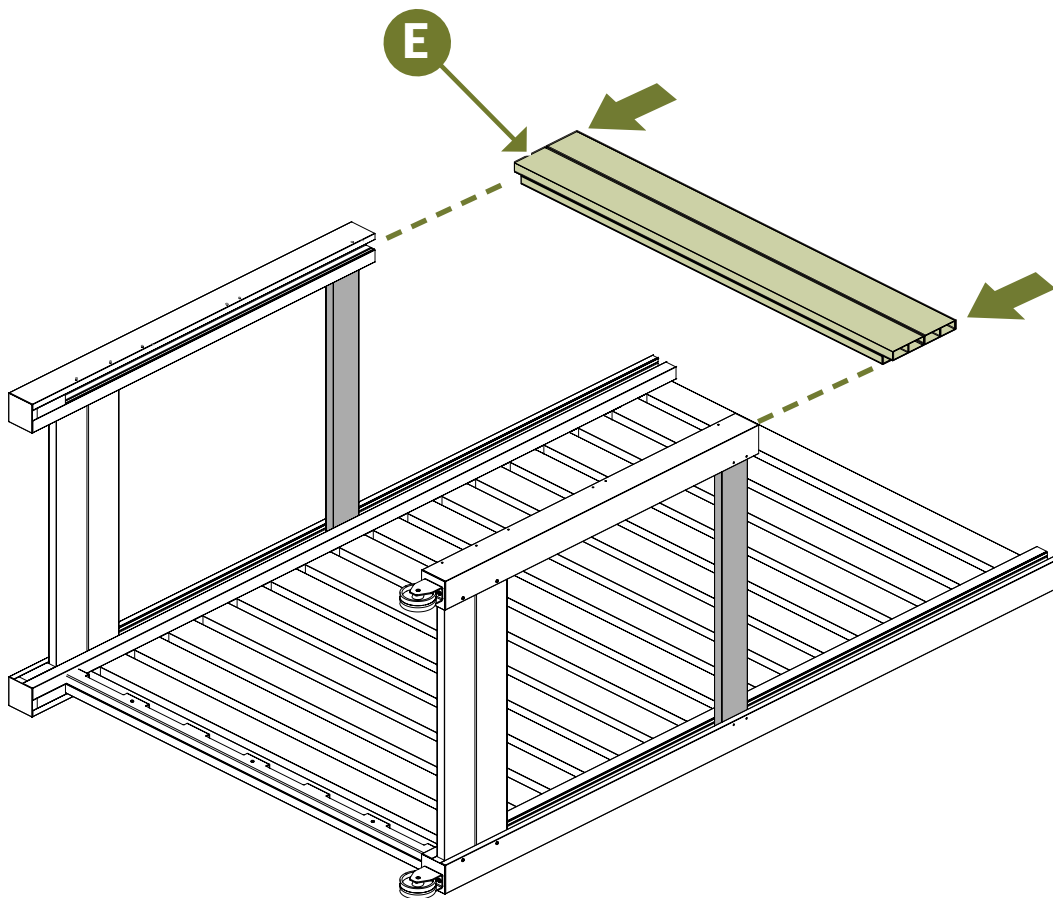

15




U x4

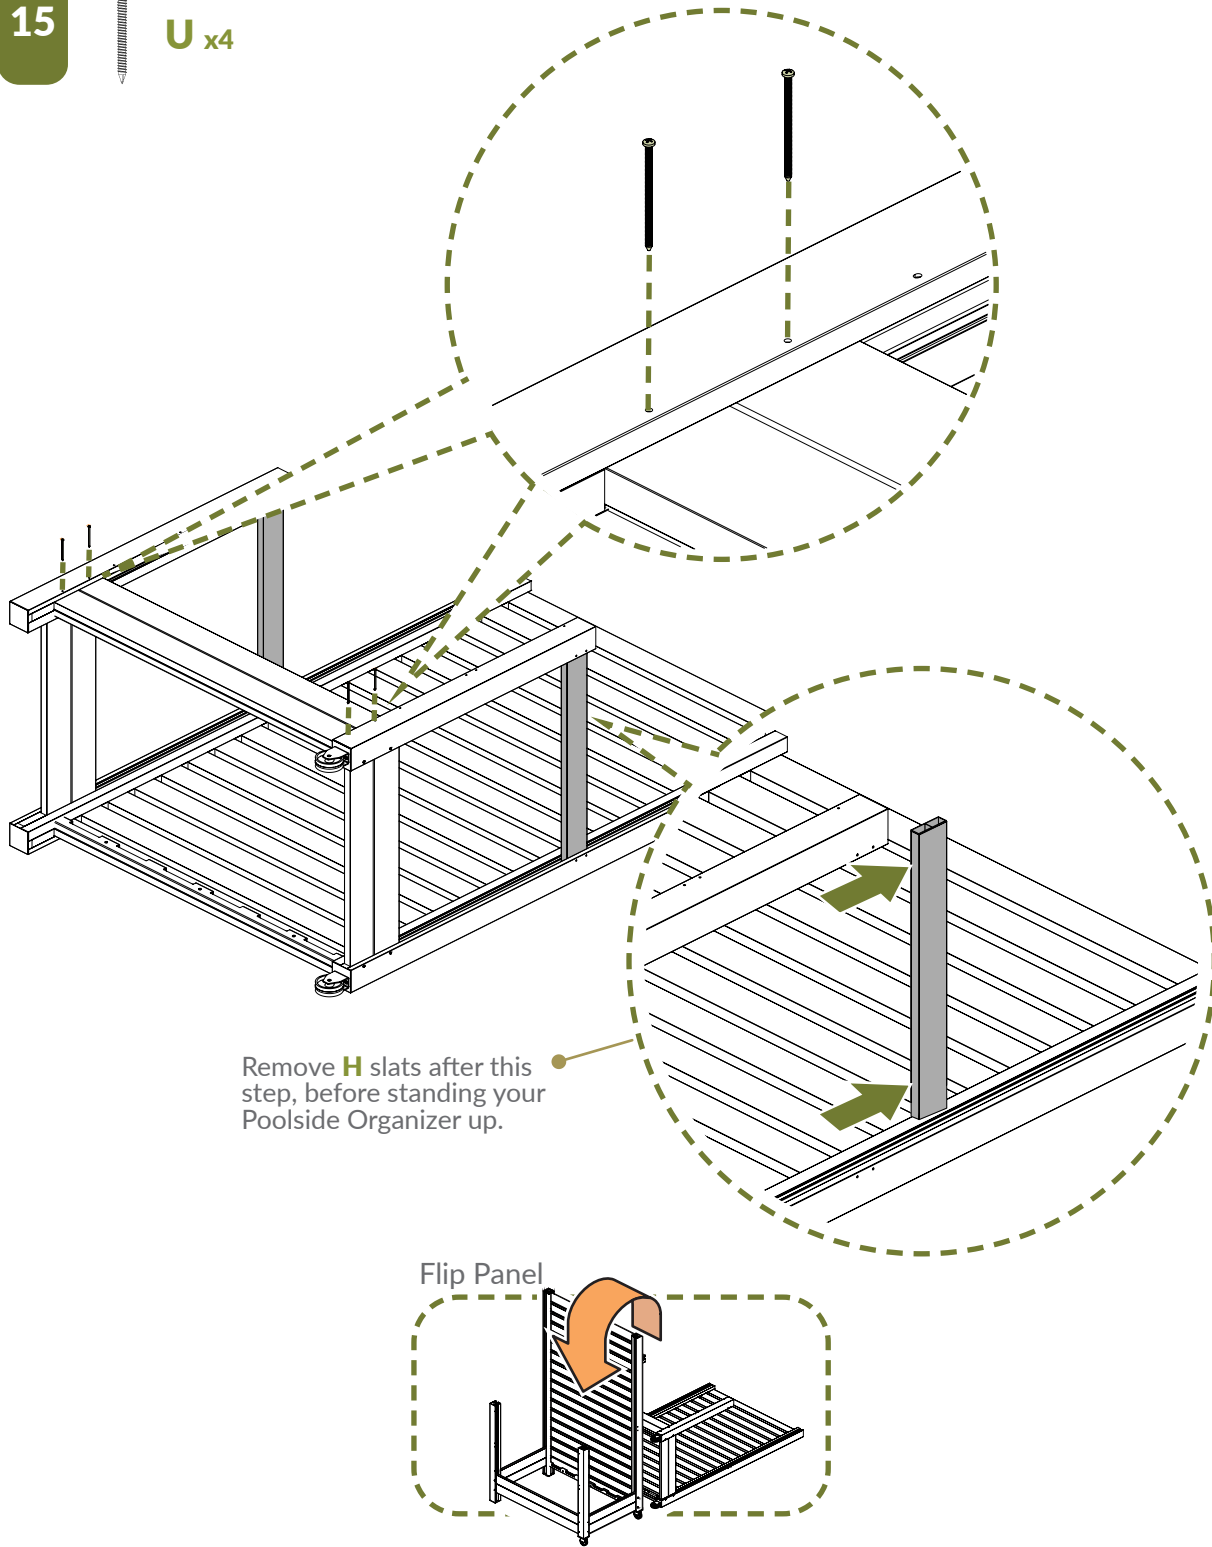


Remove H slats after this step, before standing your Poolside Organizer up.

Flip Panel

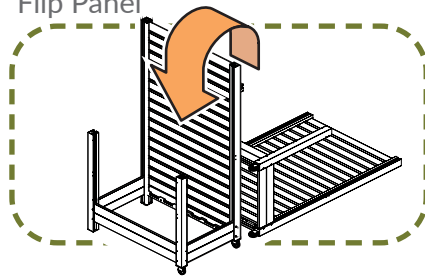


ASSEMBLE BUNGEE CONNECTOR

16

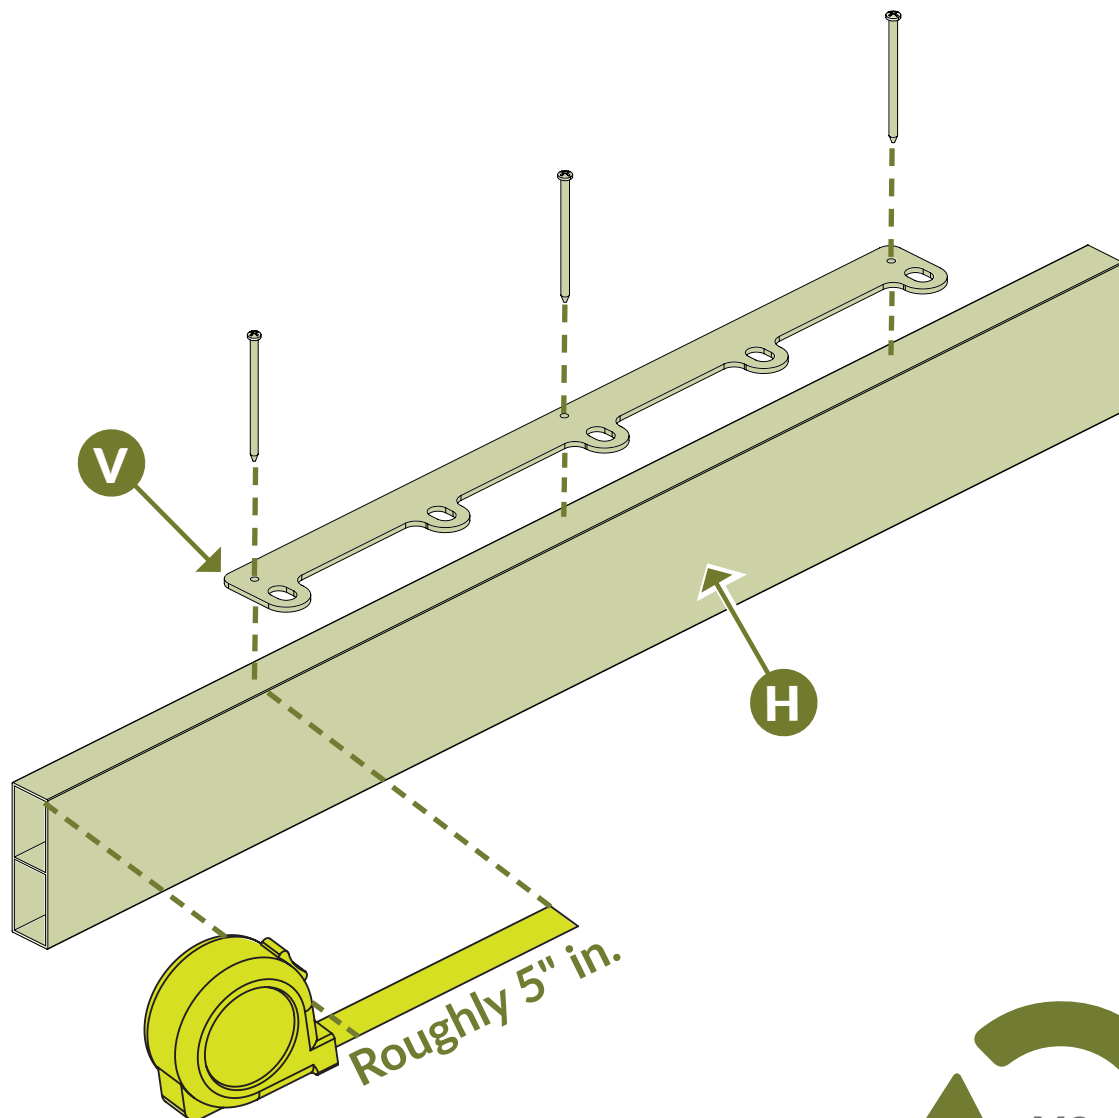


17

 O x4

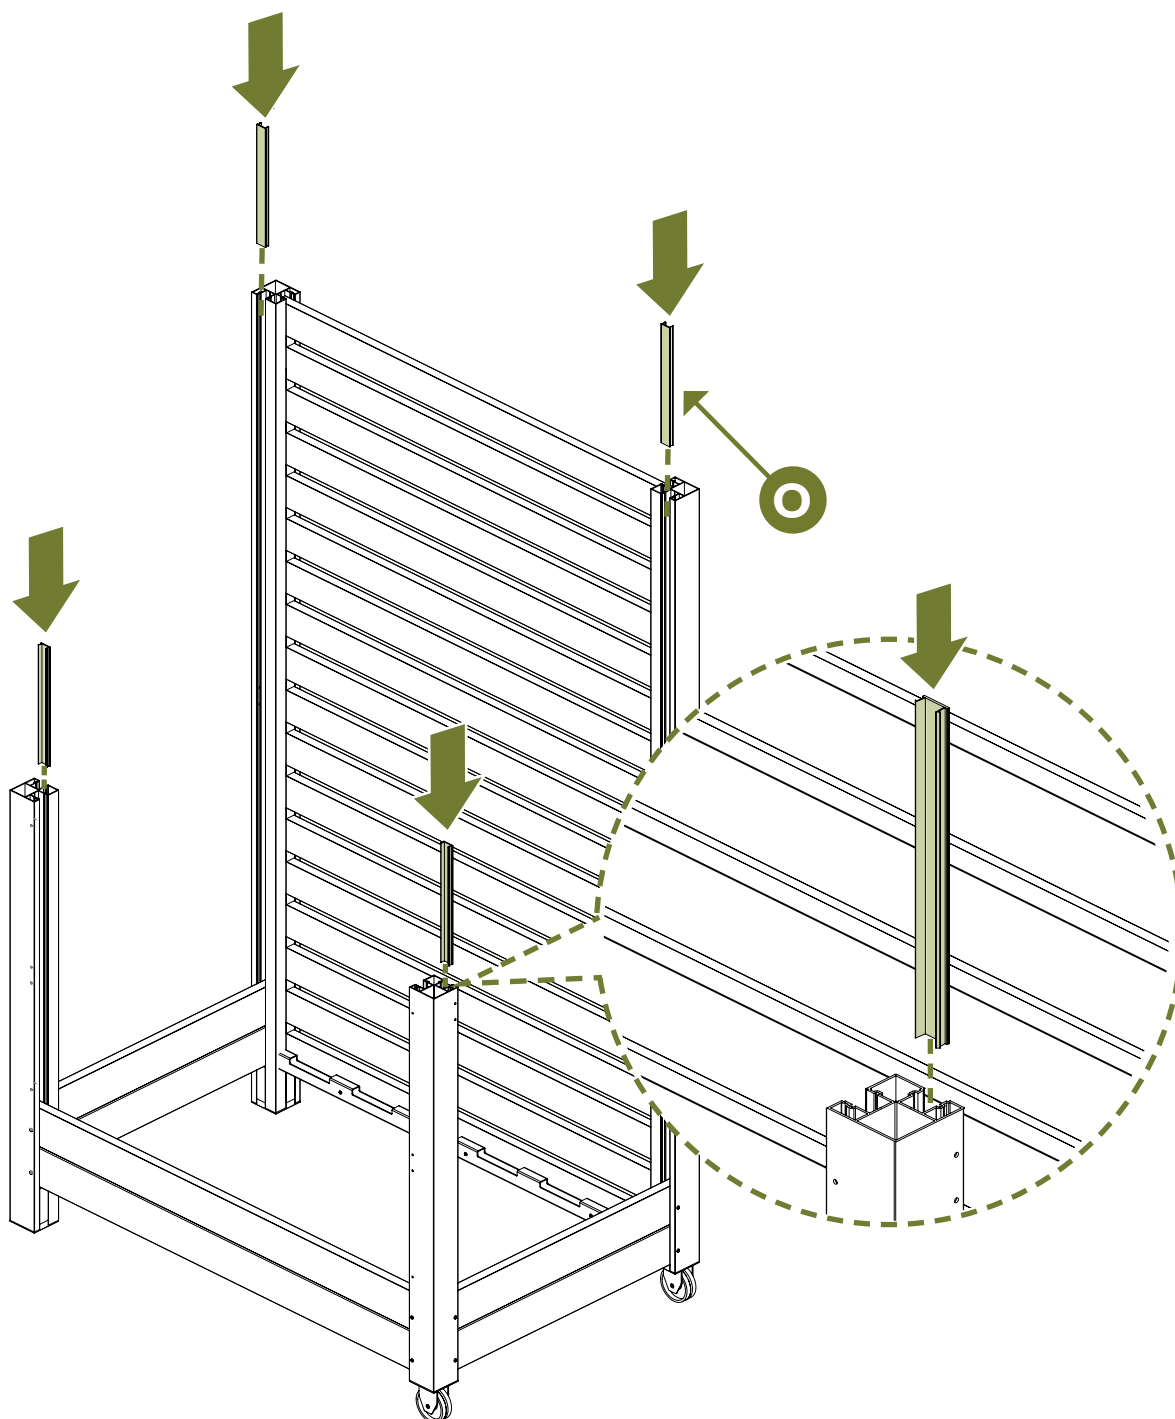


18



H x2




Make sure you have installed the bungee connector **V** from step 16.

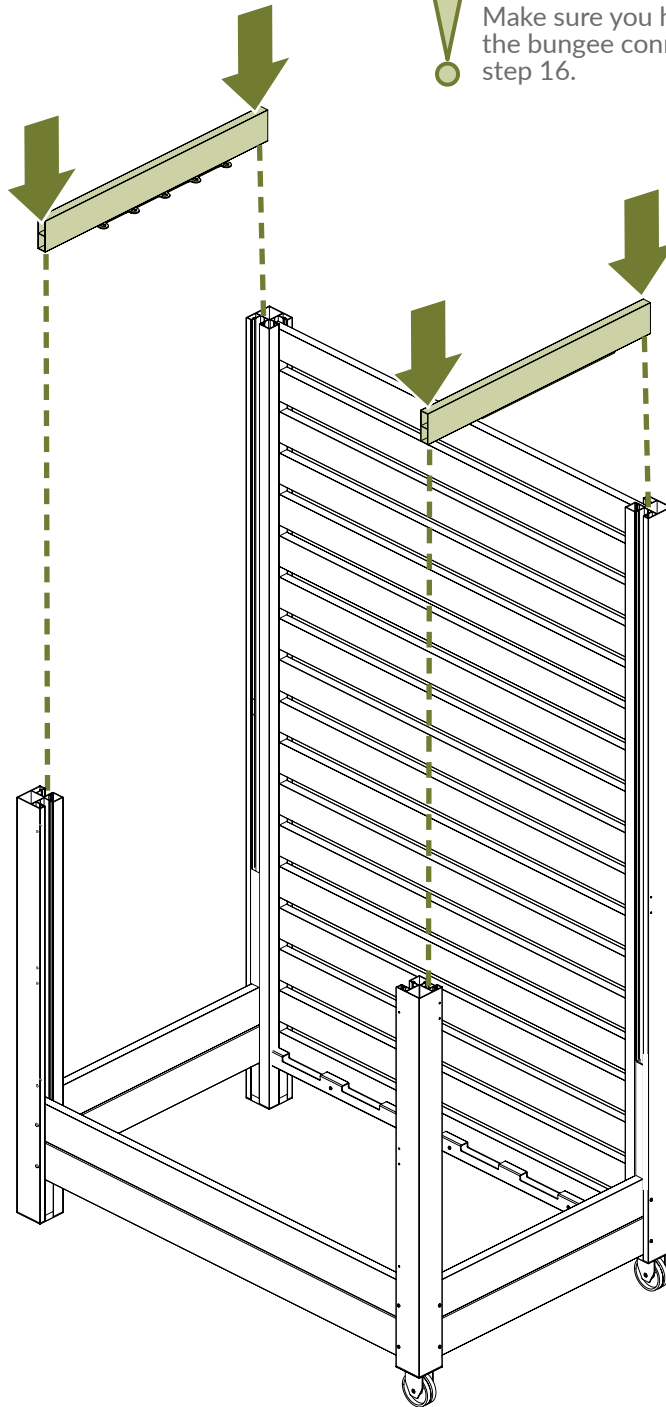


19


H x2 O x4

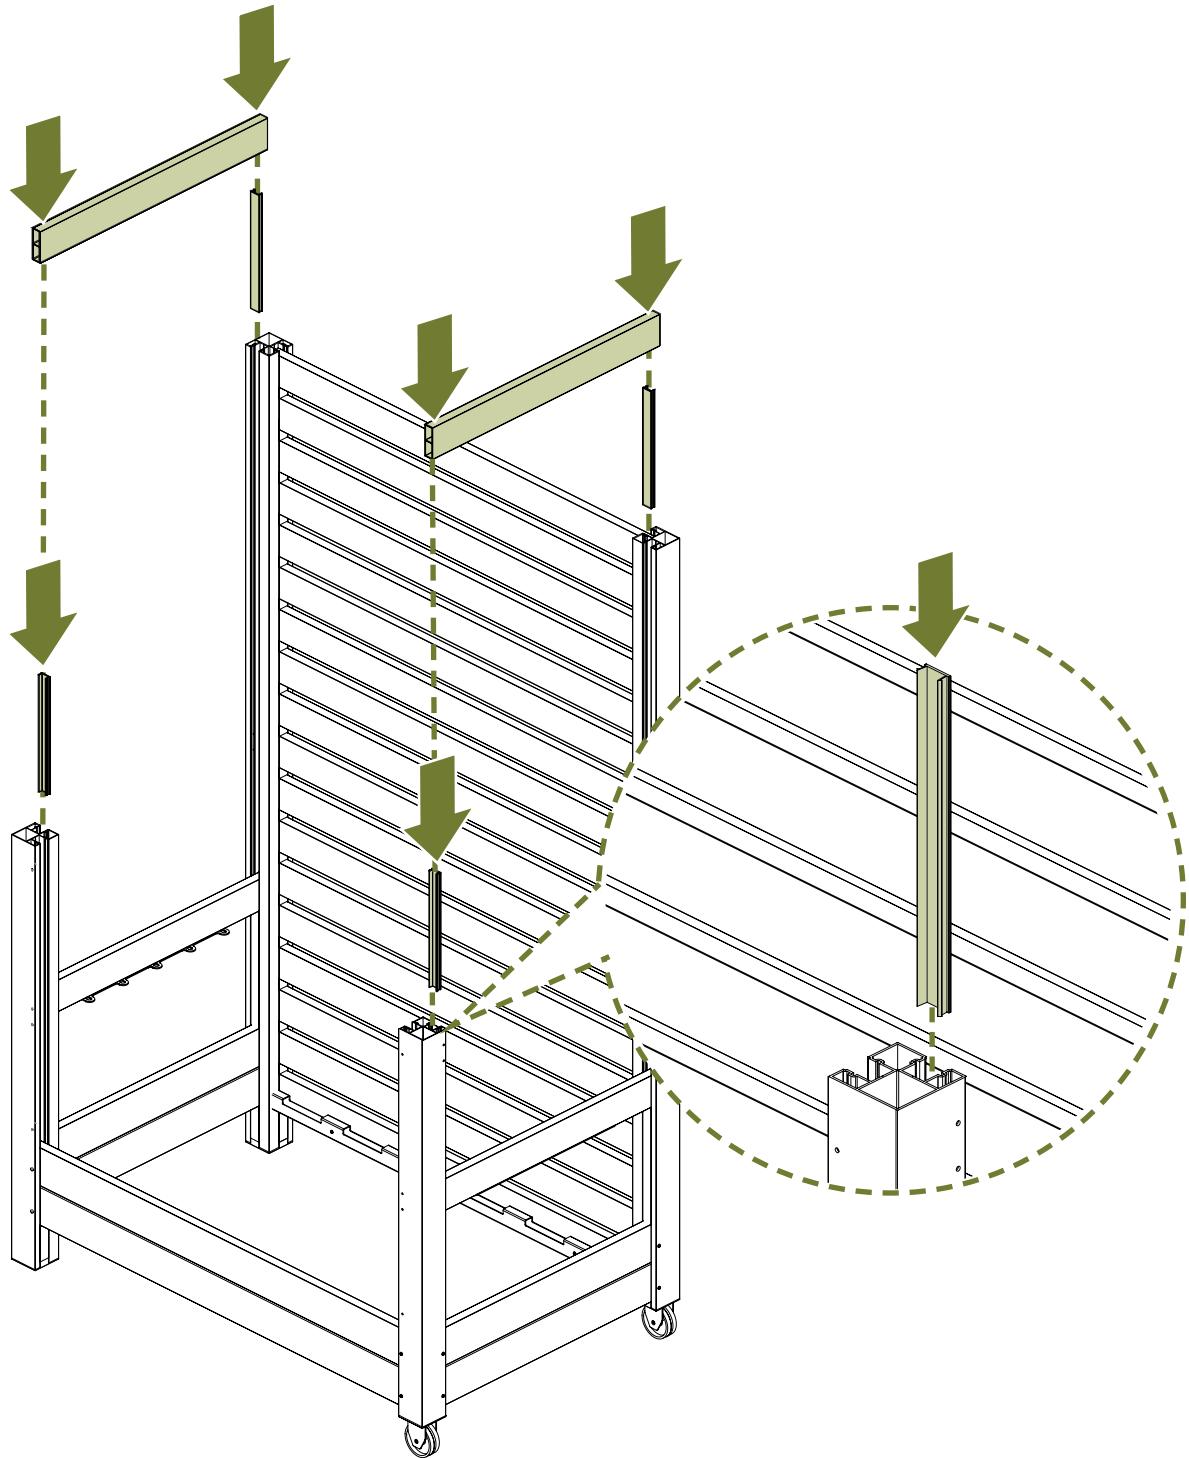


20




U_{x8}

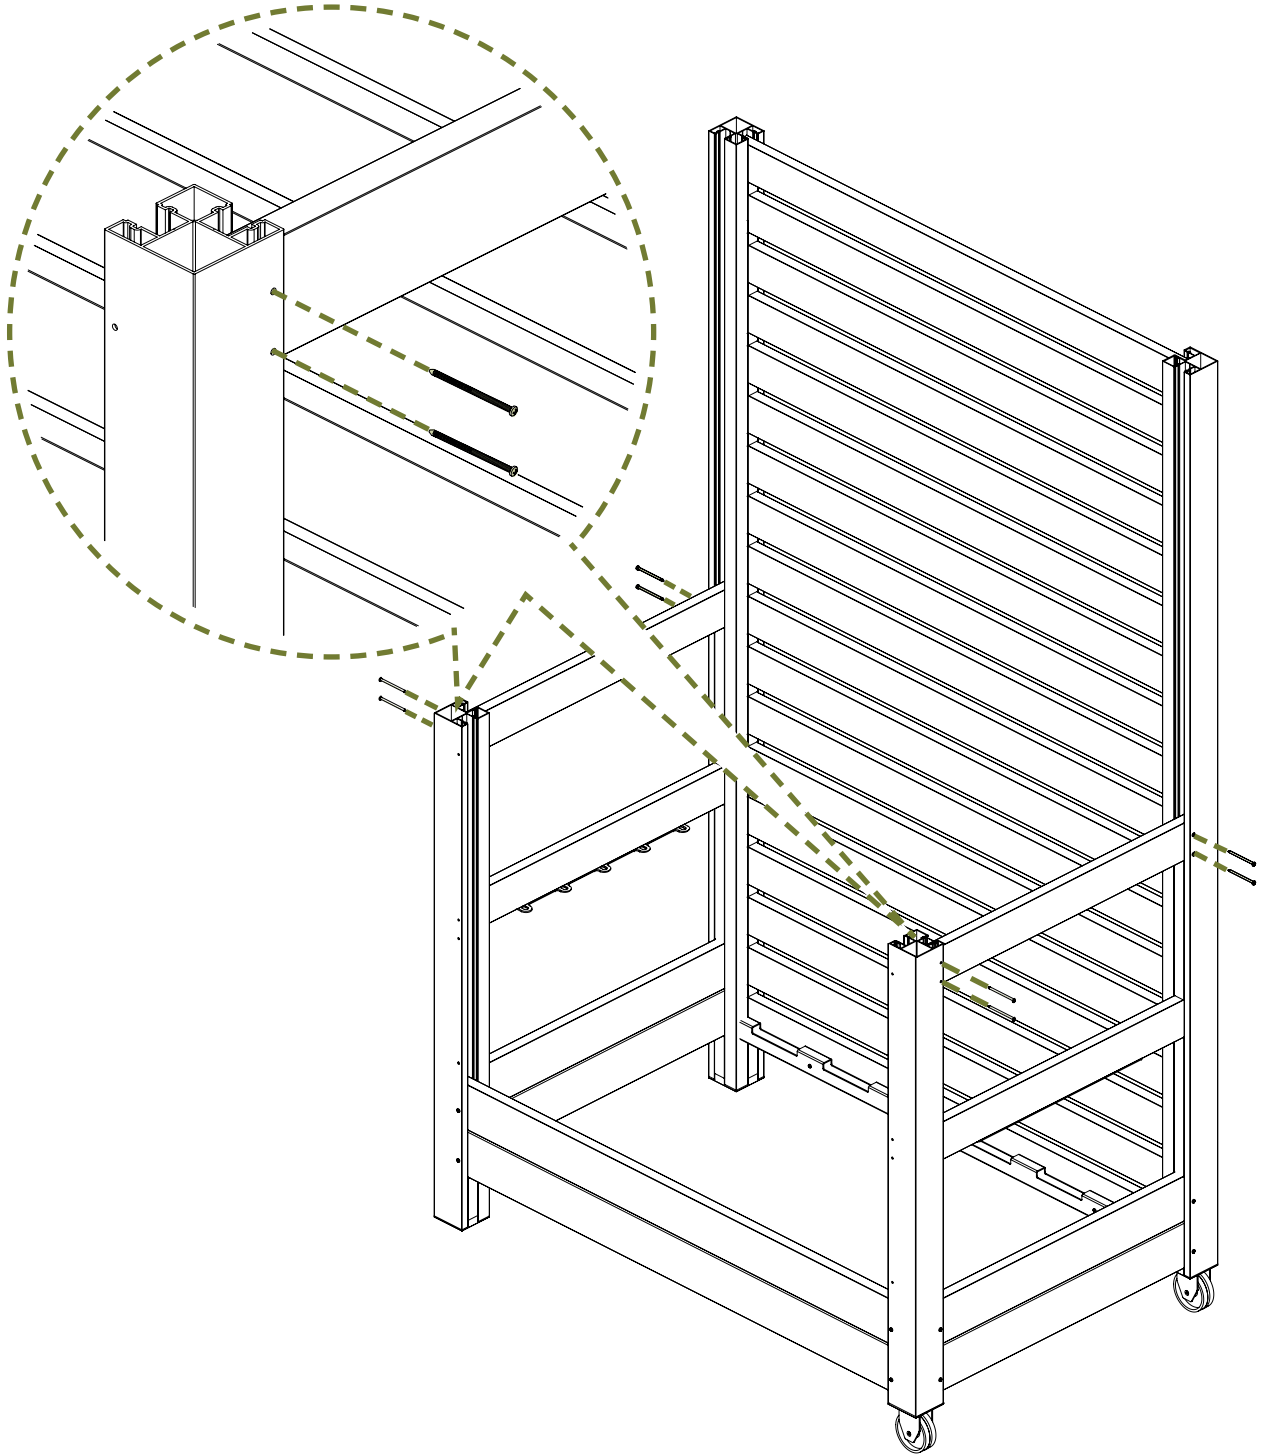

21



1x6

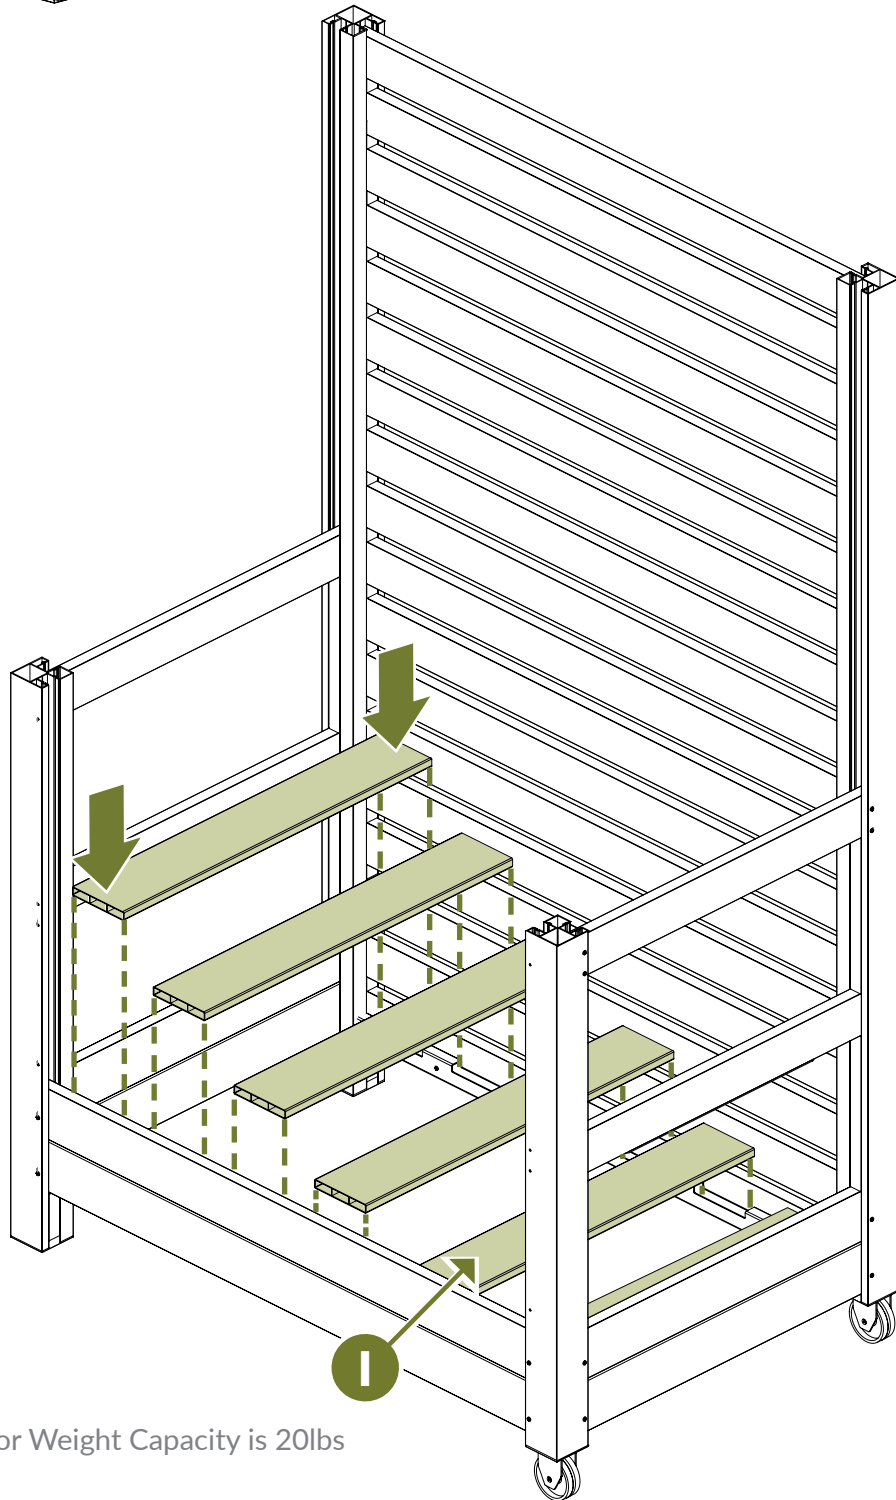

Note: Floor Weight Capacity is 20lbs

22




Nx2



Rx2




Lx2


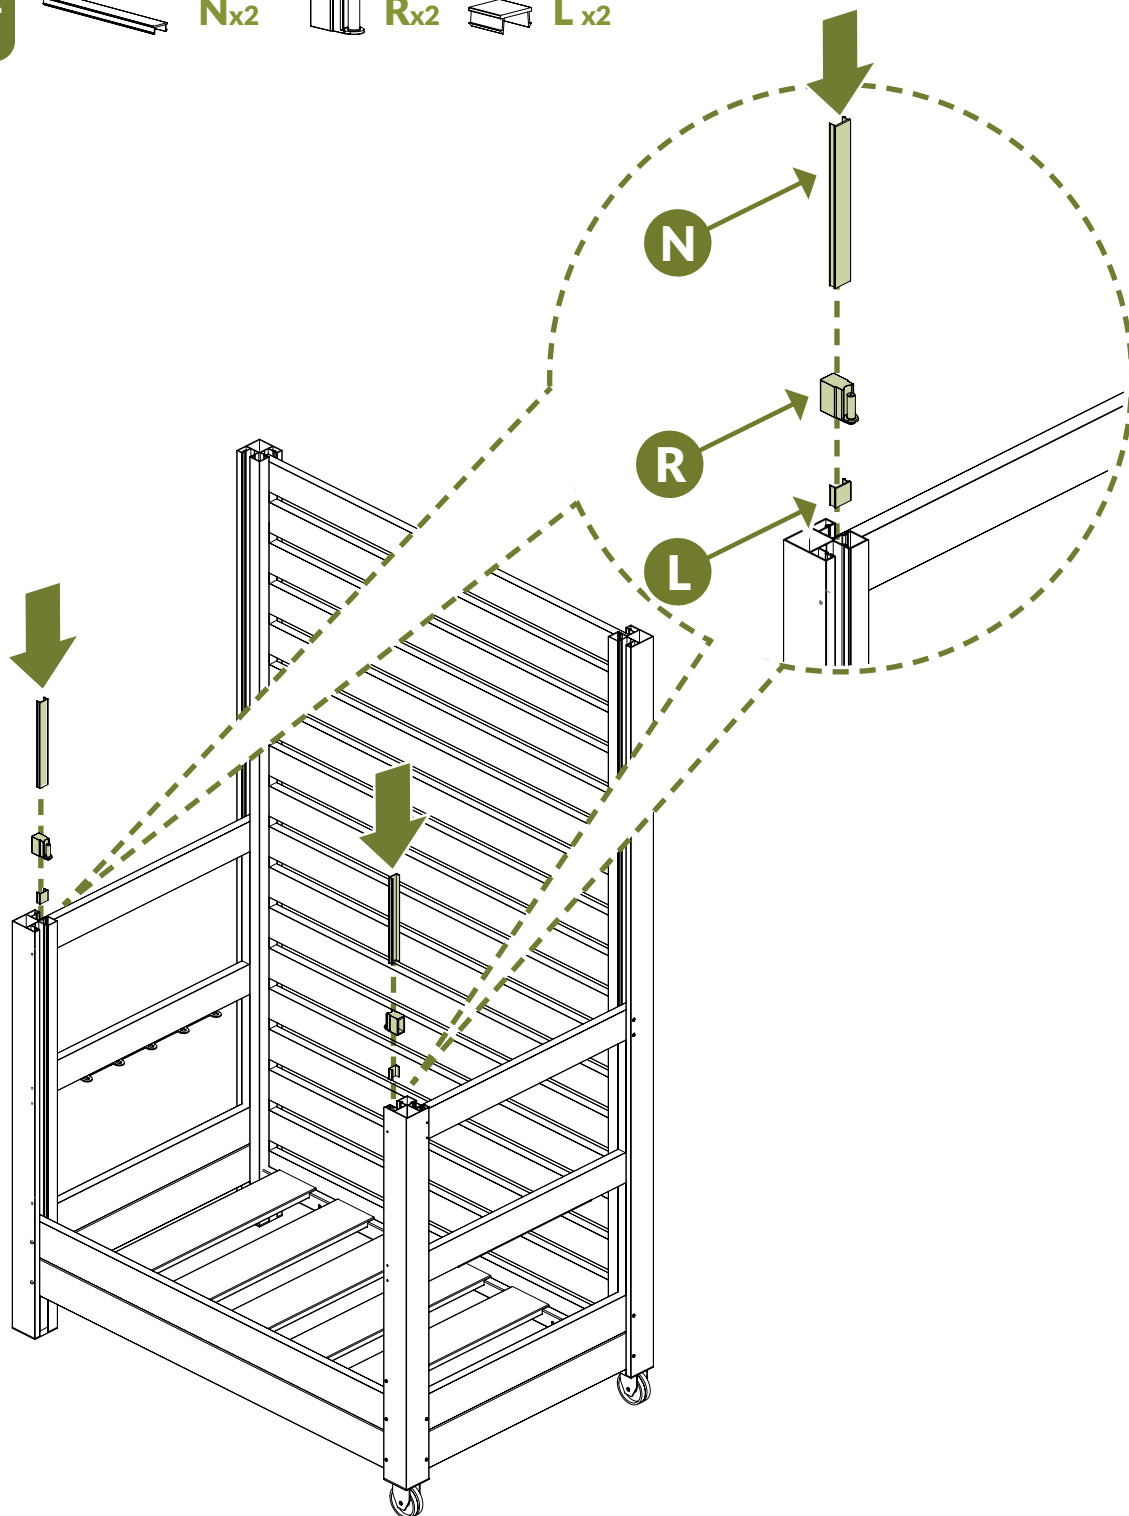


23




U x2

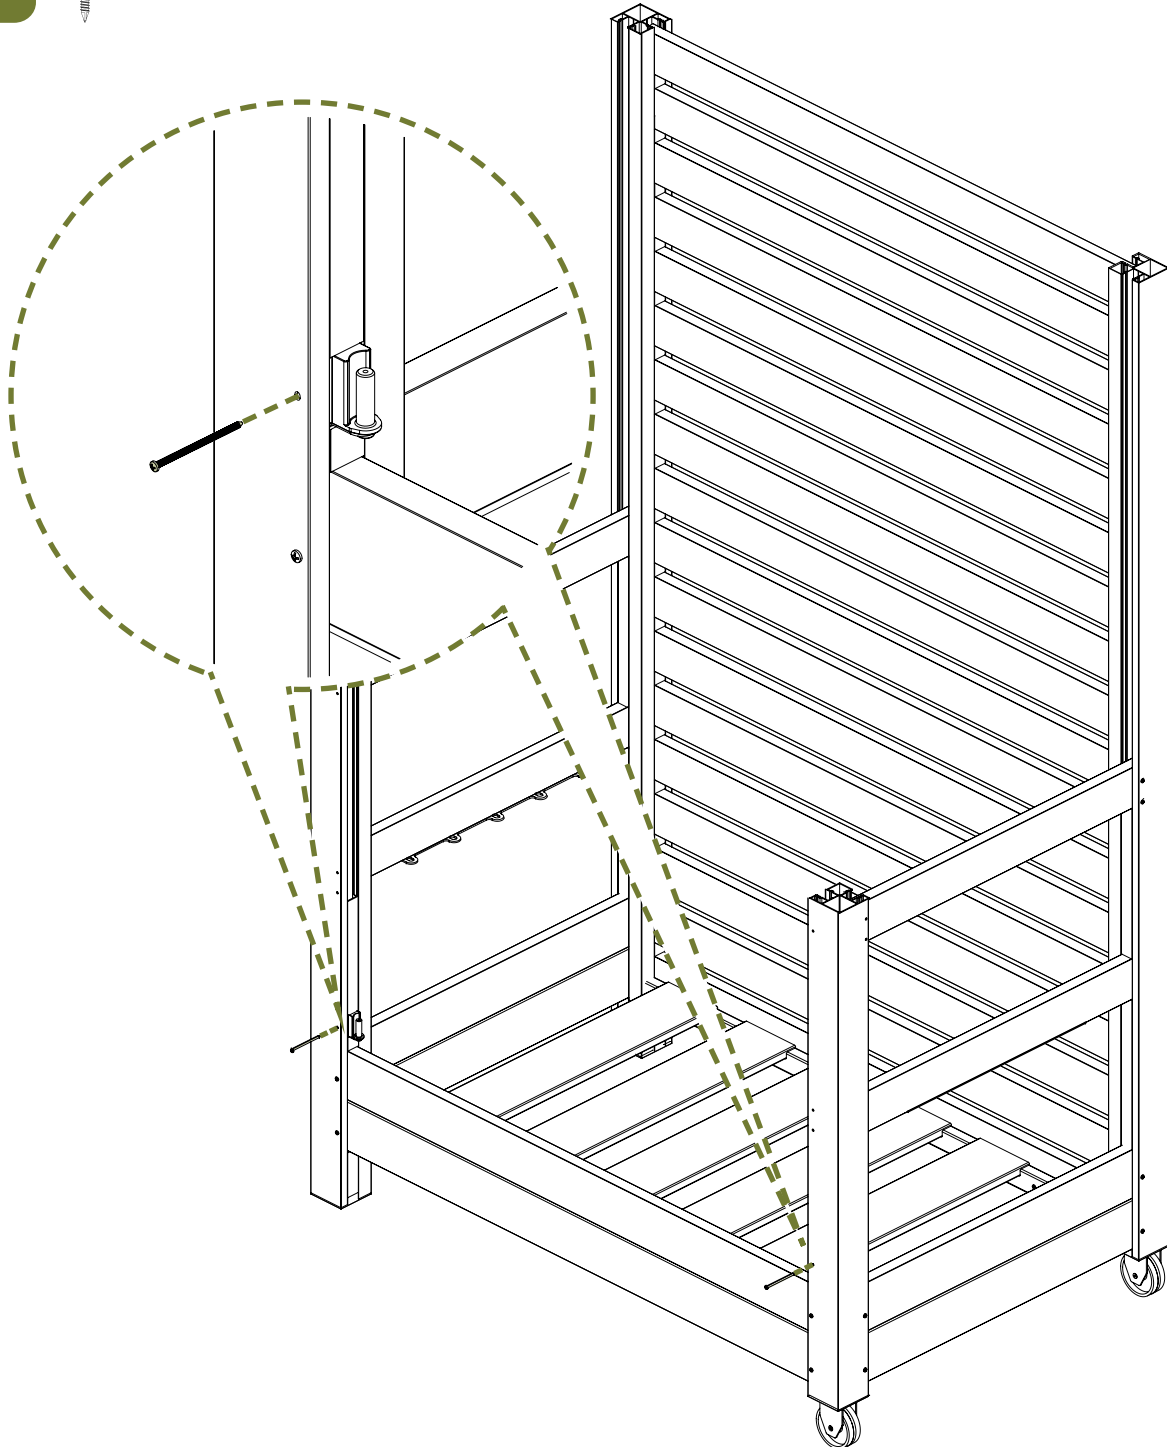

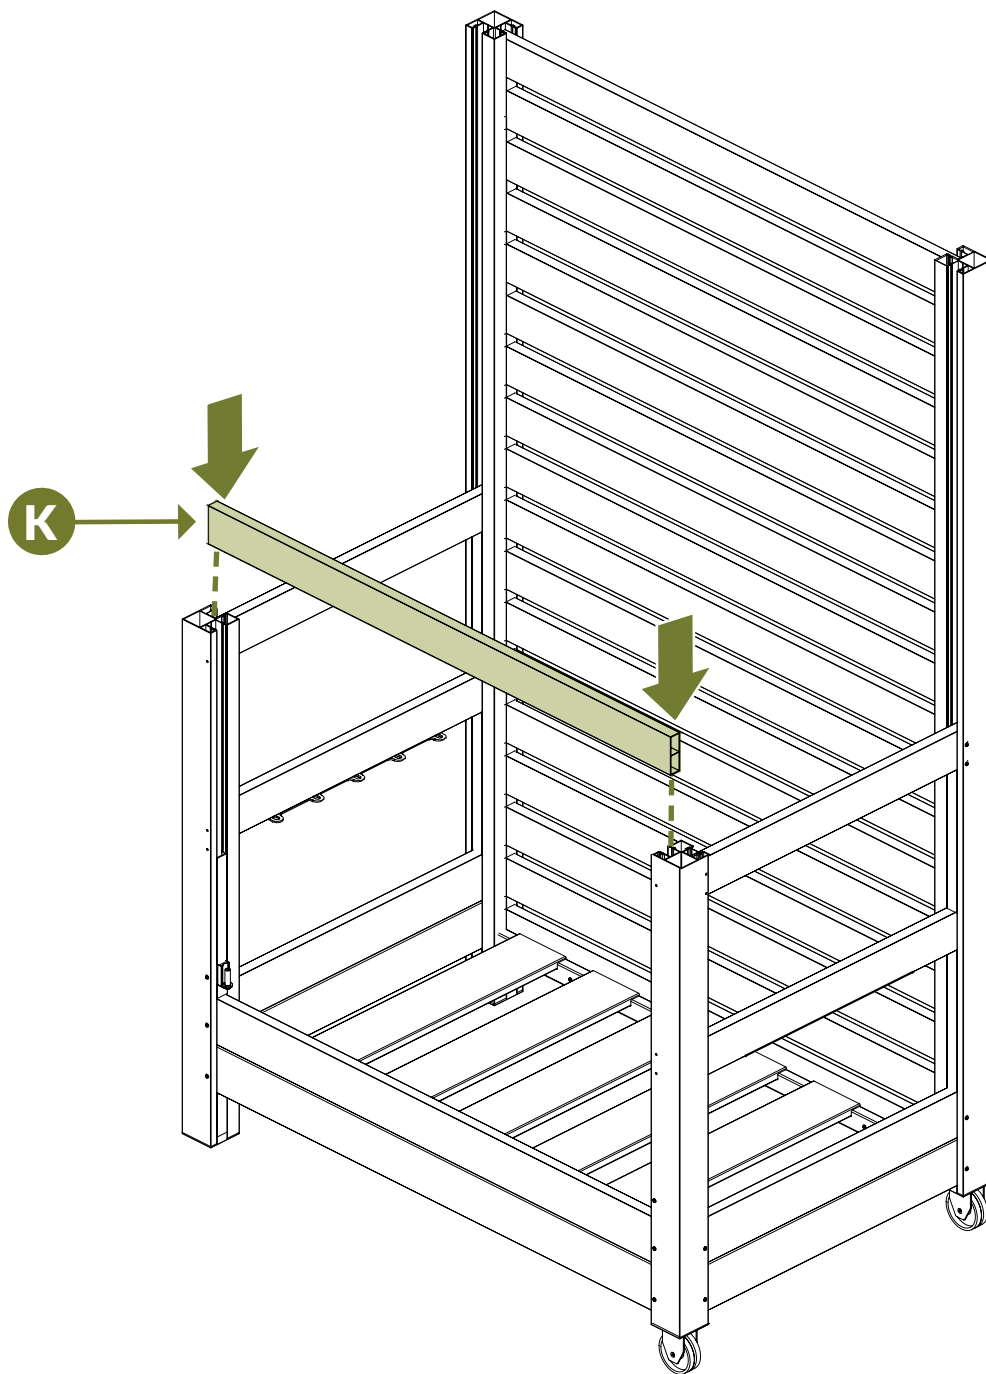**K x1**


26

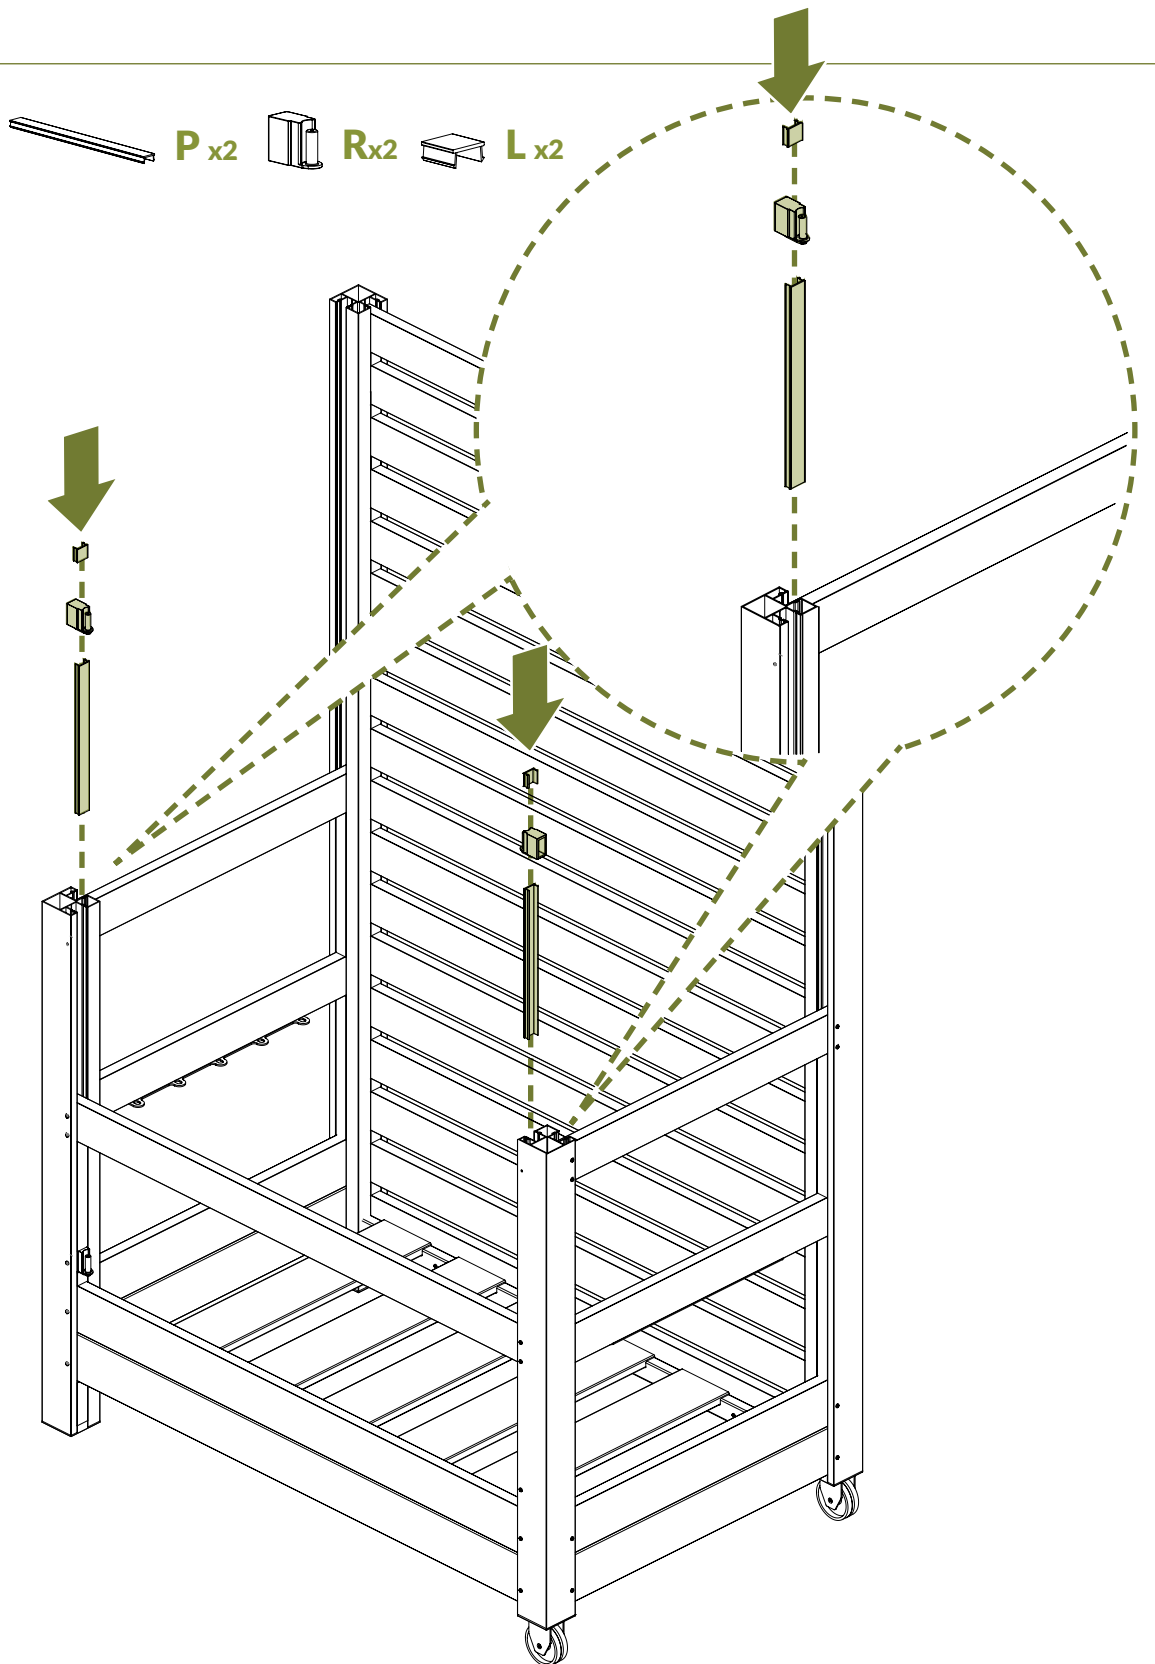


27



U x2

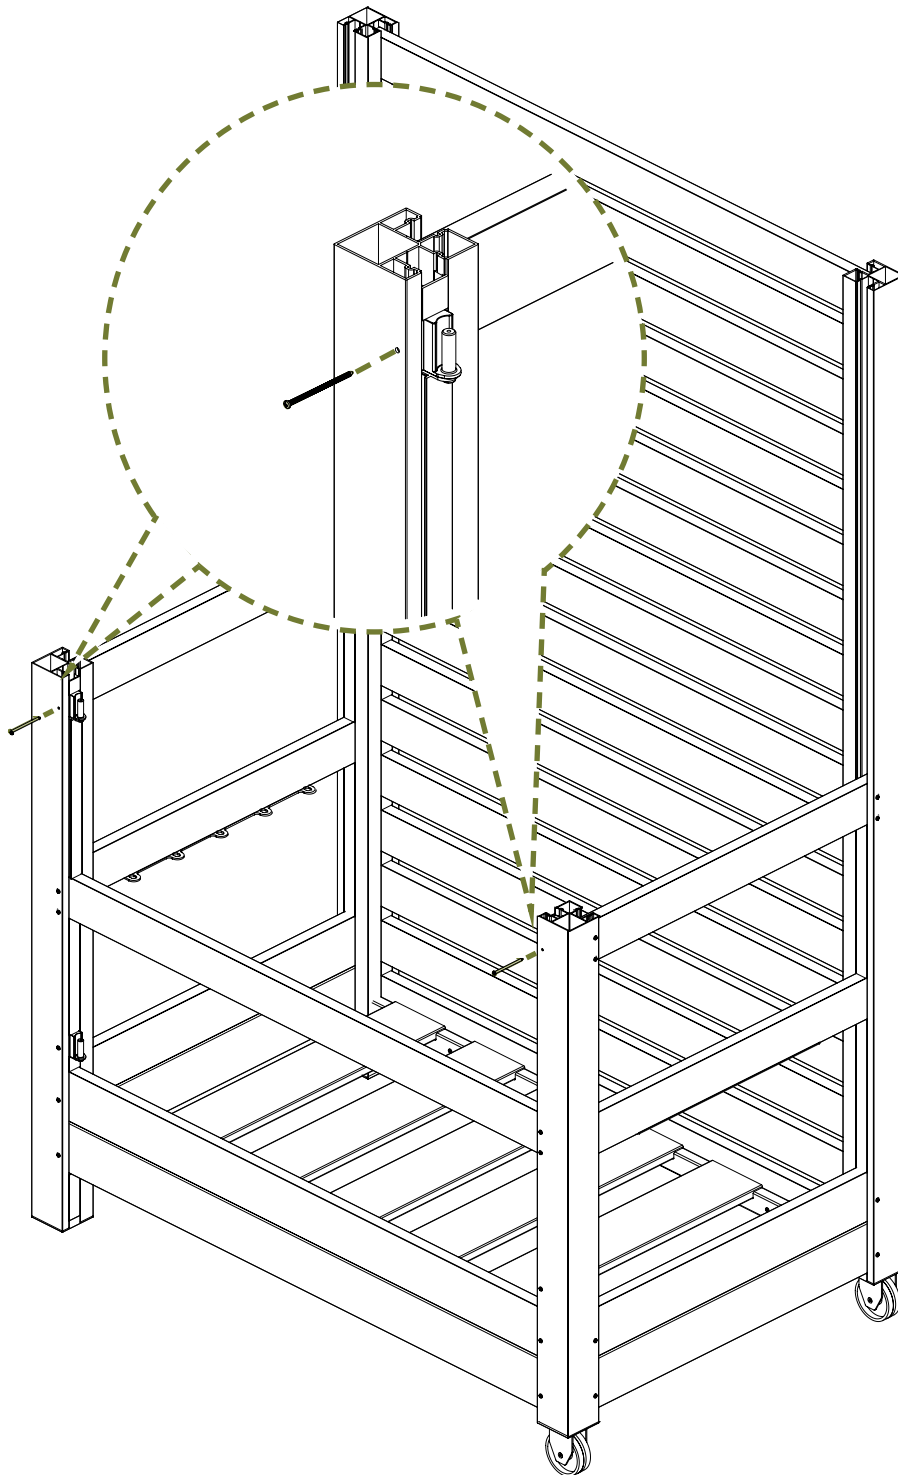


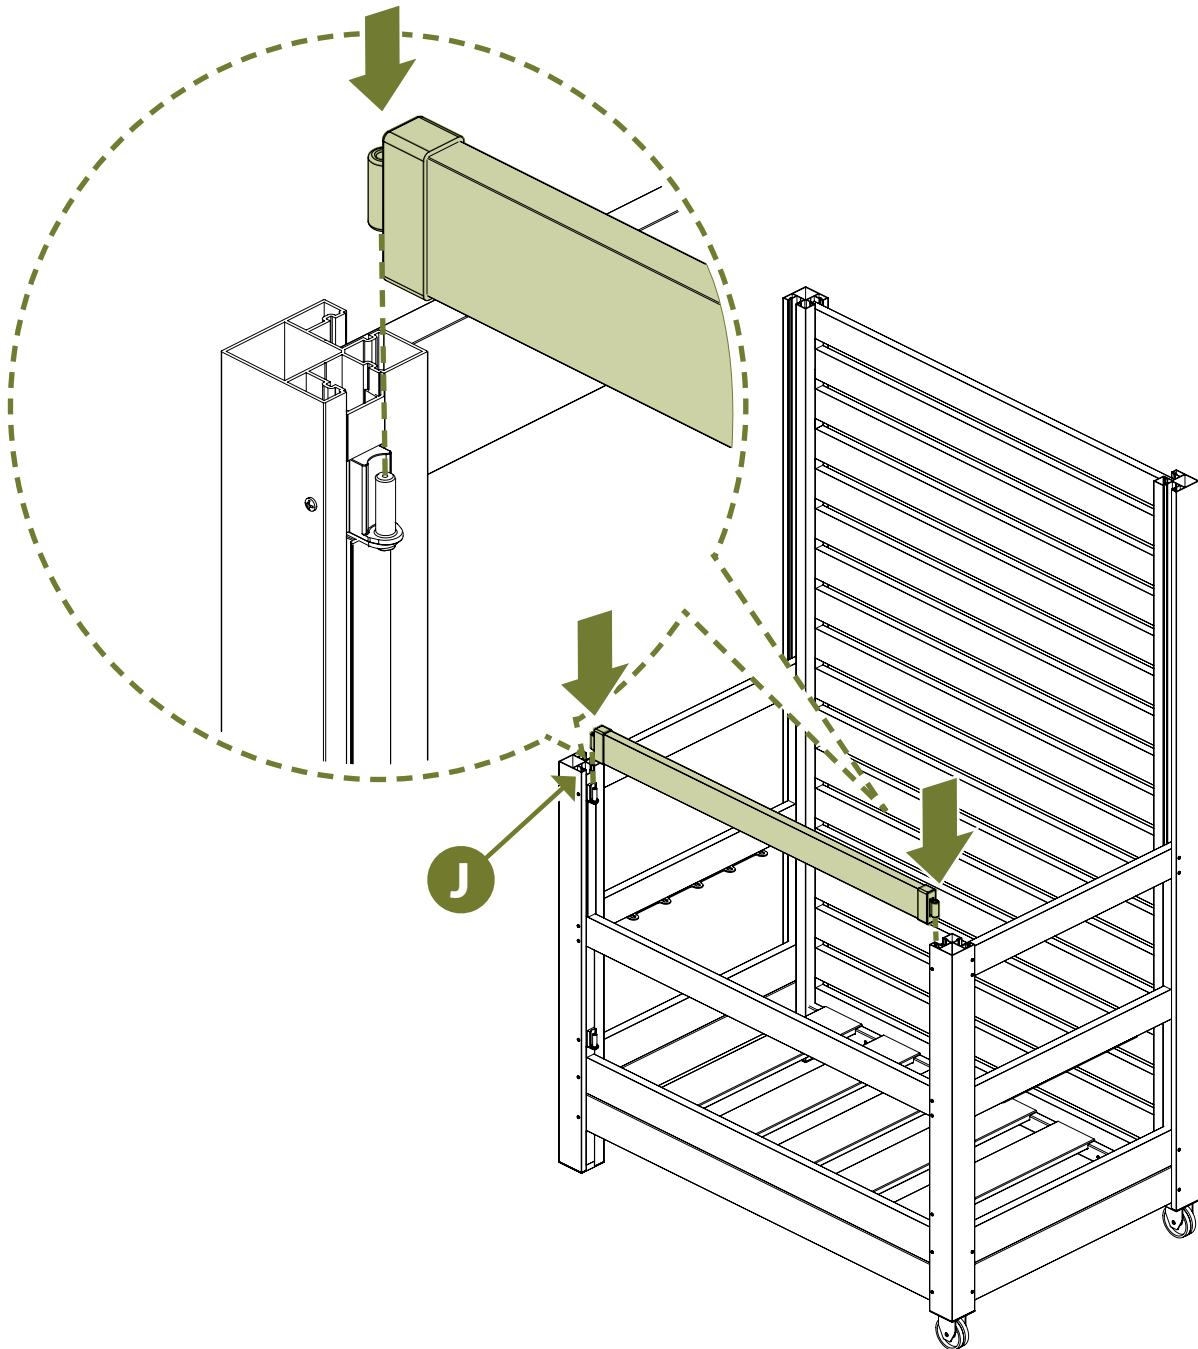
**J** x1

25



U x4

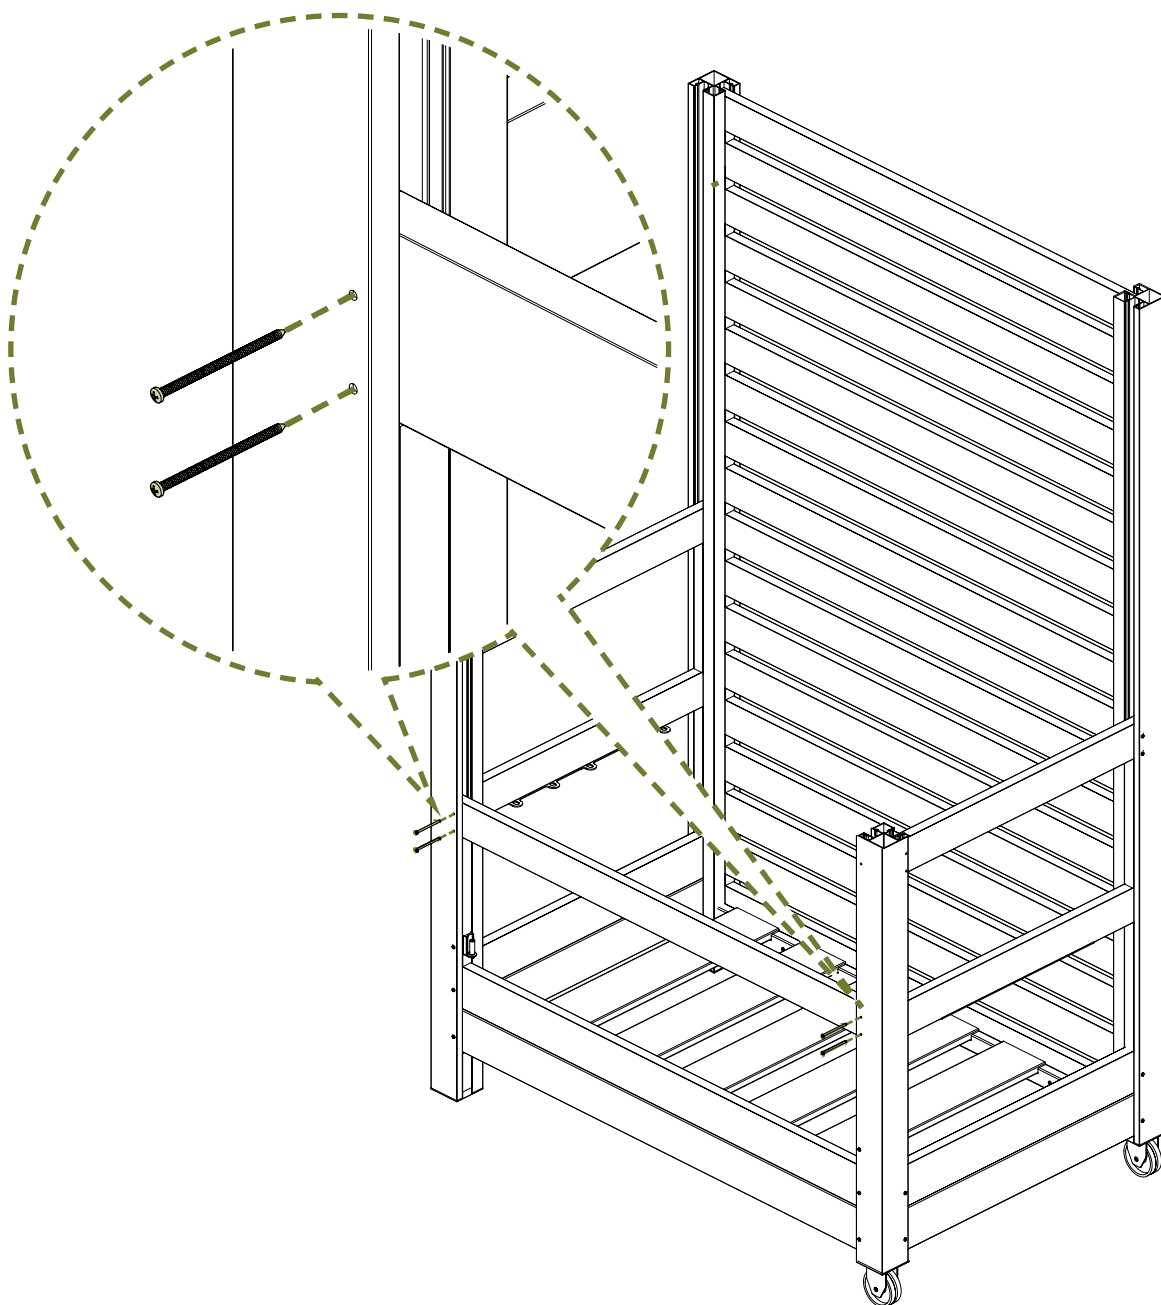


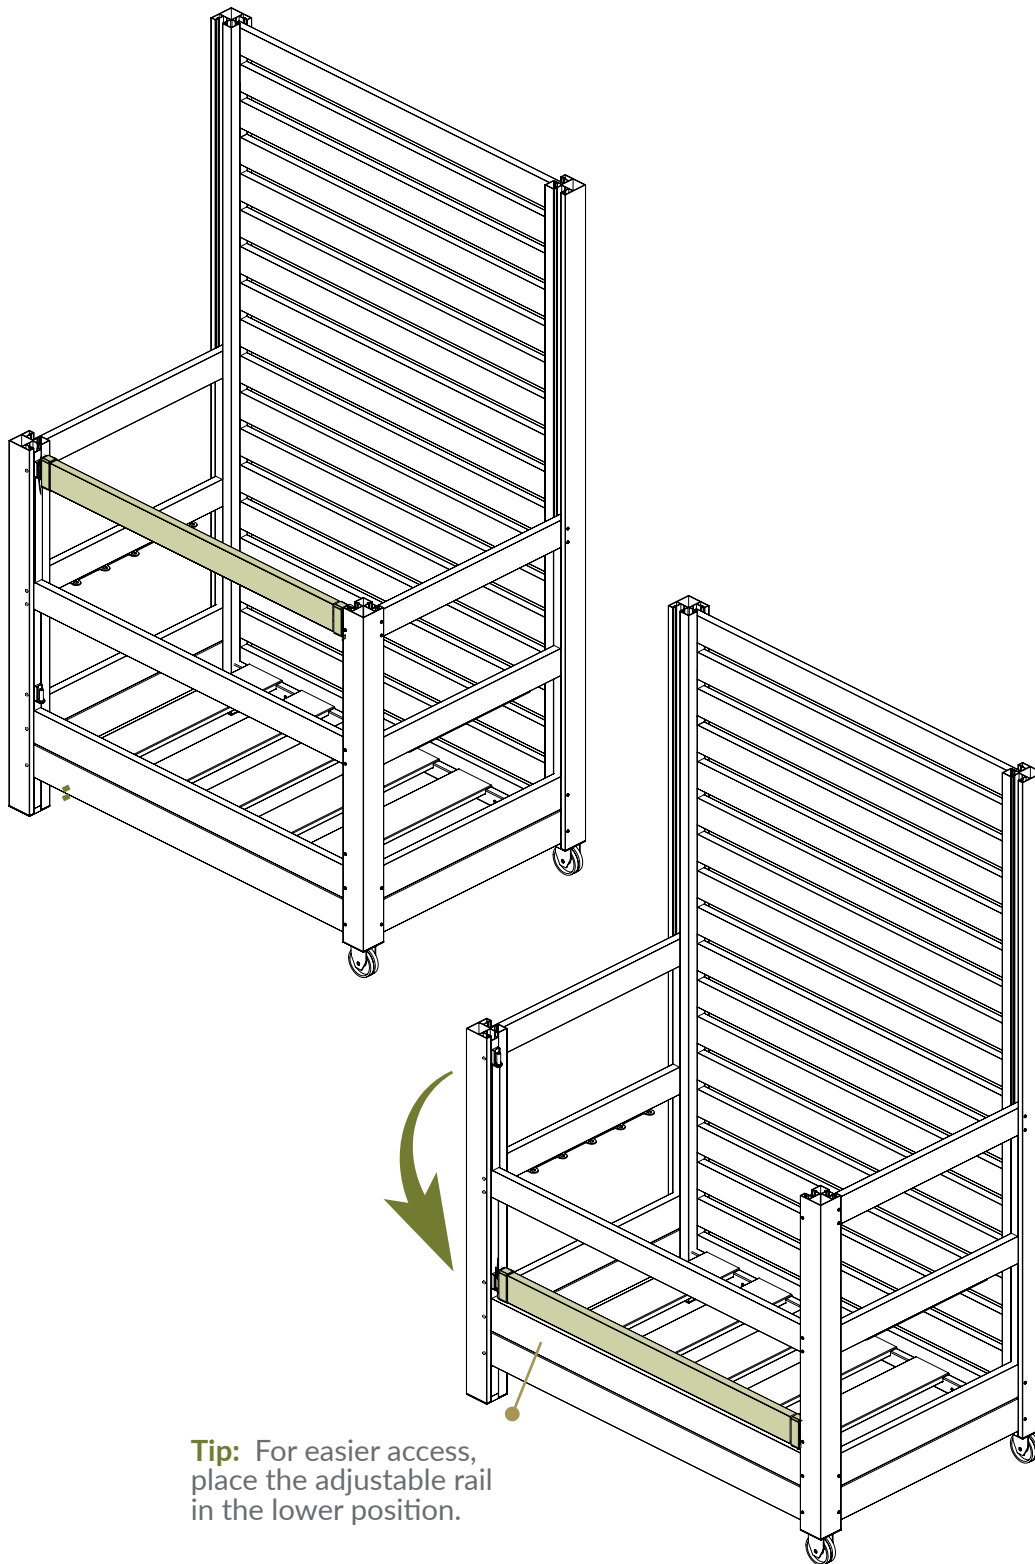


Tip: For easier access, place the adjustable rail in the lower position.

29


 Q x2

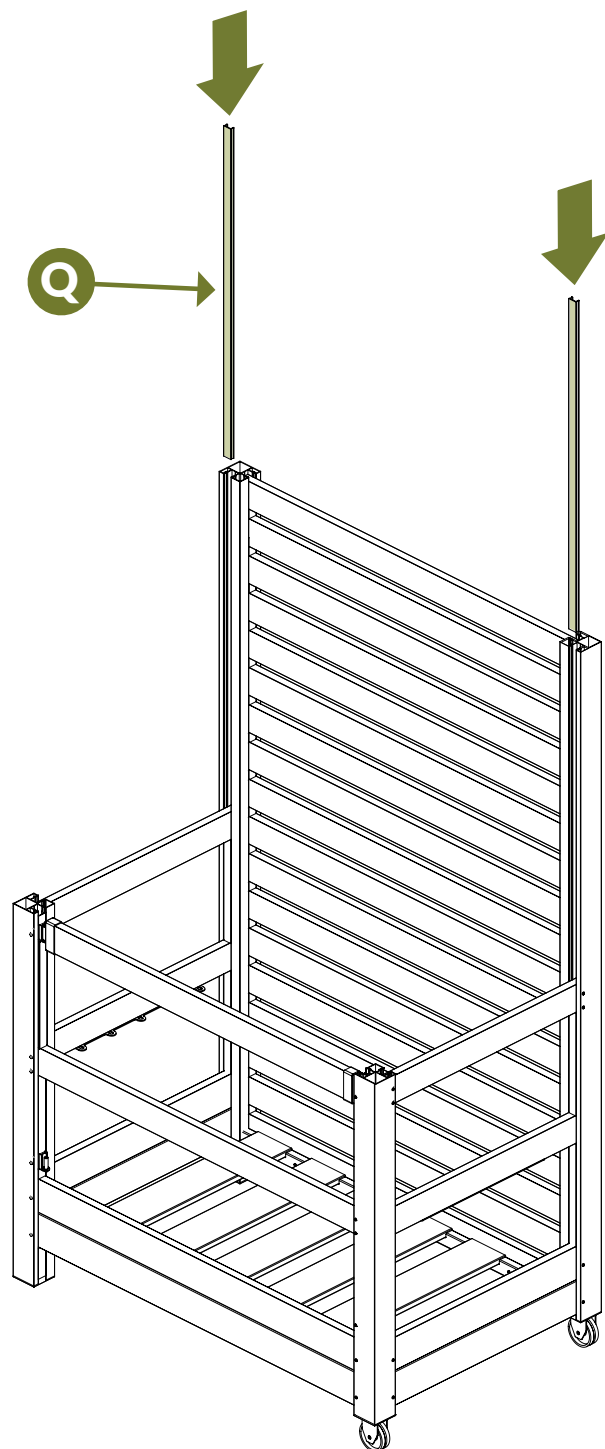

W x3

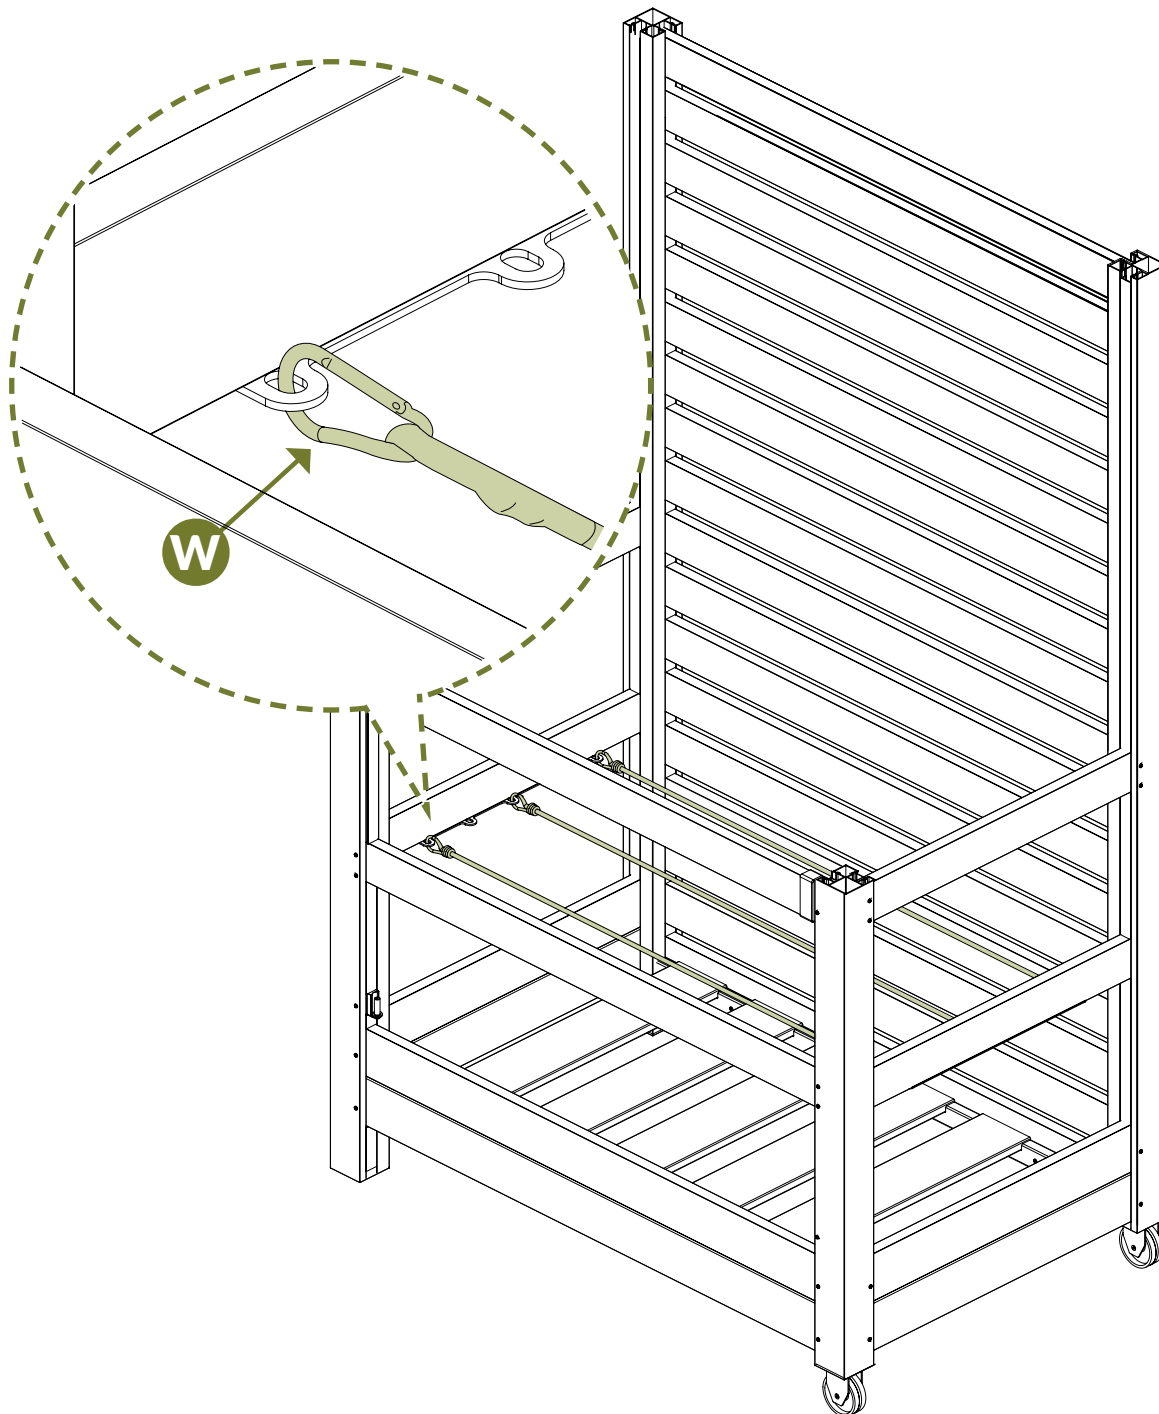


31



S x4



T x6

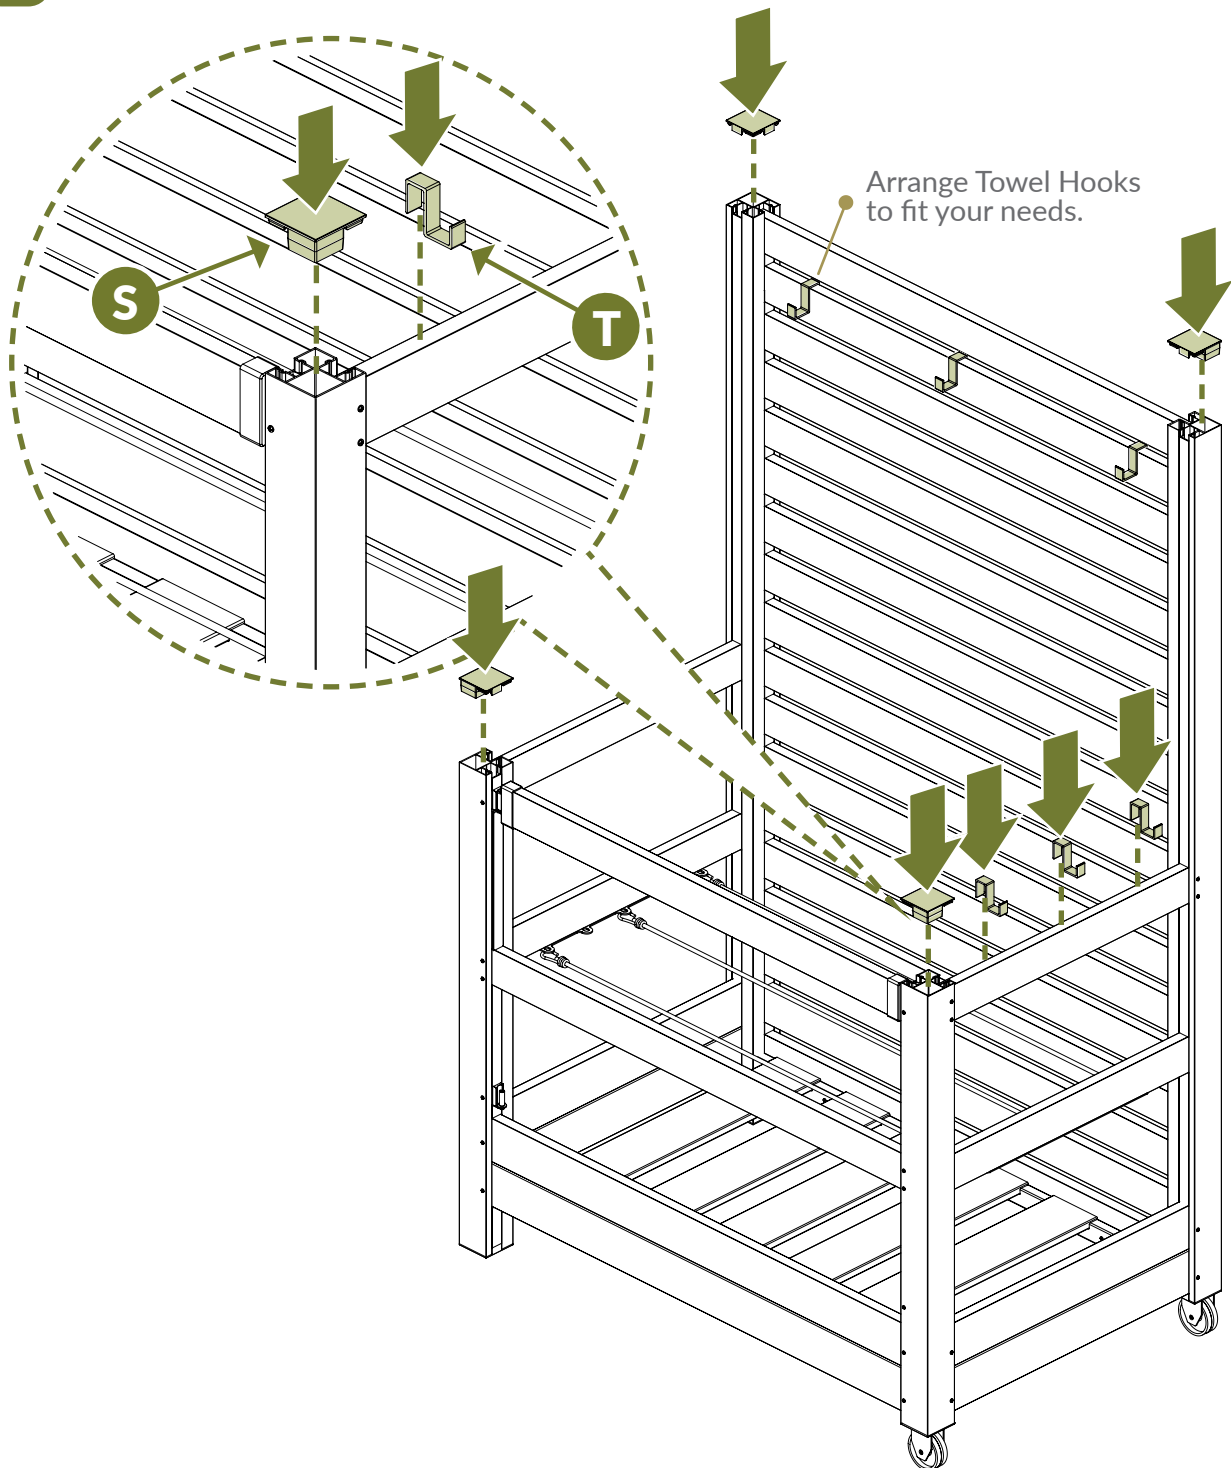



ZIPPITY

Easy Does It!



6935 Reames Rd. Ste. K.
Charlotte, NC 28216



support@zippity-outdoor.com

704-892-5222
877-234-6196



WWW.ZIPPITY-OUTDOOR.COM