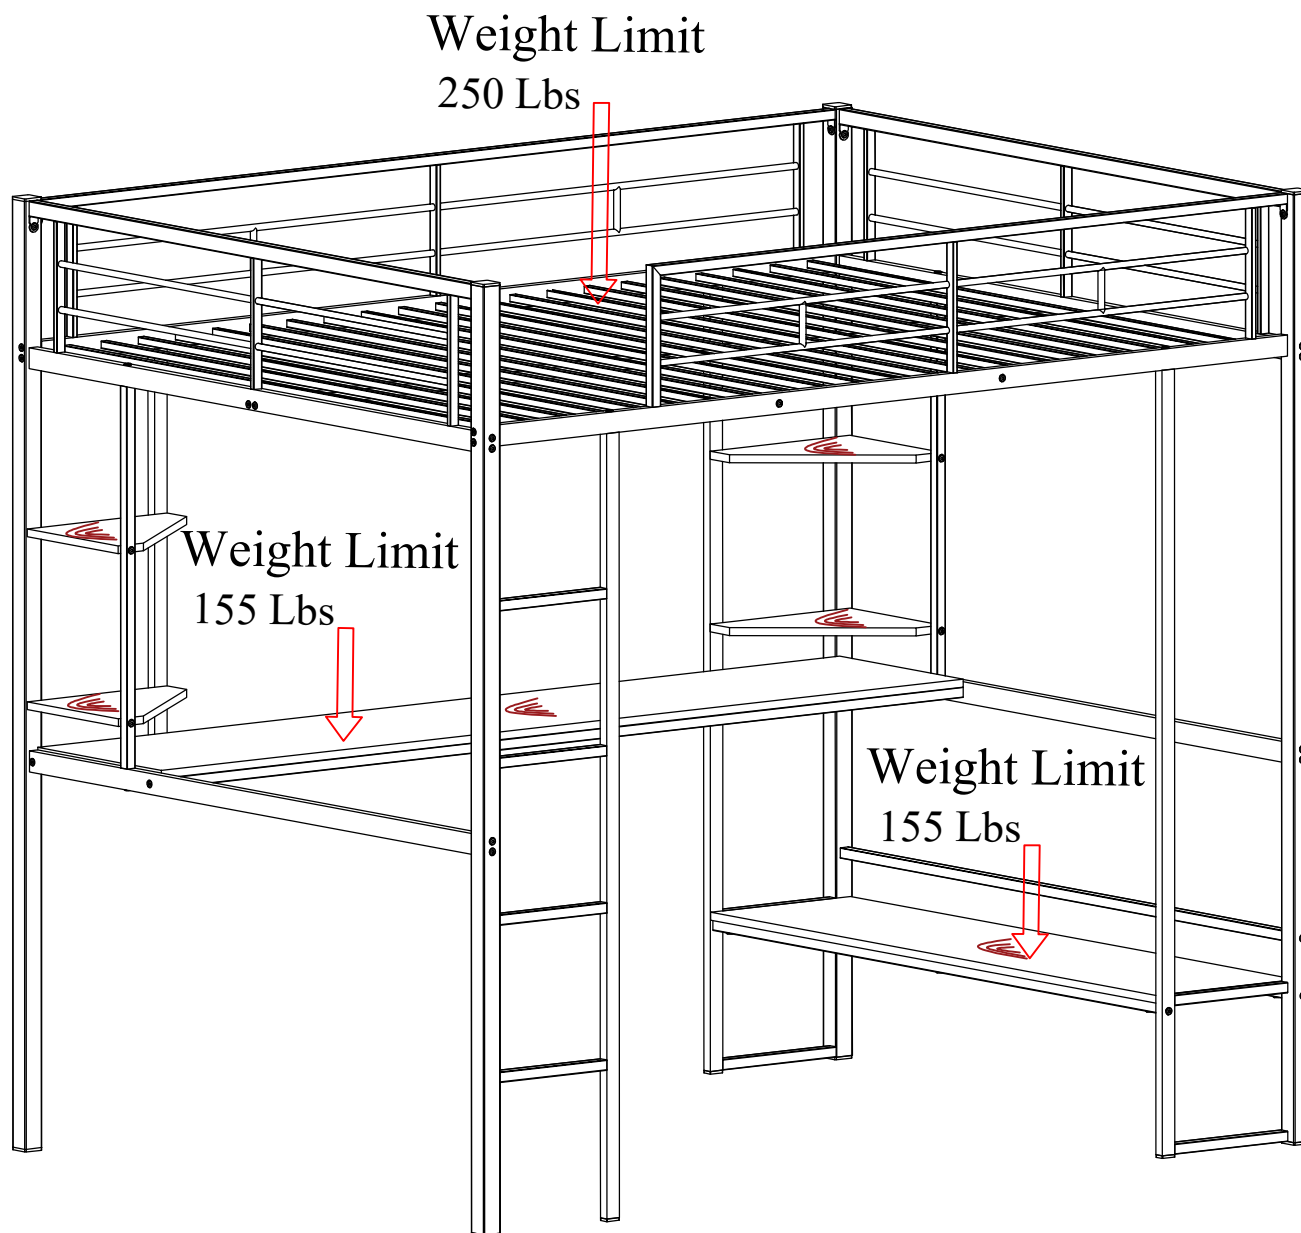


LOFT BED
ASSEMBLY INSTRUCTIONS
ITEM MF199509/199510



If you have any questions, please feel free to contact us.

Email: service@qualfurn.net

LOFT BED
ASSEMBLY INSTRUCTIONS
ITEM MF199509/199510

SAFETY WARNINGS AND GENERAL NOTES:

1. Follow the information on the warnings on the bunk bed end structure and on the carton. Do not remove the warning label from the bed.
2. Always use the recommended size mattress on mattress support, or both, to help prevent the likelihood of entrapment or falls.
3. Do not allow children under 6 years of age to use the upper bunk.
4. Periodically check and ensure the guardrail, ladder and other components are in their proper position, free from damage, and all connectors are tight.
5. Do not allow horseplay on or under beds.
6. Always prohibit jumping on the bed.
7. Prohibit more than one person on upper bunk.
8. Always use the ladder for entering and leaving the upper bunk.
9. Do not use substitute parts. Contact the manufacturer or dealer for replacement parts.
10. Use of a night-tight may provide added safety precaution for a child using the upper bunk.
11. Always use guardrails on both long sides of the upper bunk.
12. If the bunk bed will be placed next to a wall, the guardrail that runs the full length of the bed should be placed against the wall to prevent entrapment between the bed and the wall.
- The use of water or sleep flotation mattresses is prohibited.
13. **STRANGULATION HAZARD**-Never attach or hang items to any part of the bunk bed that are not designed for use with the bed.
14. Keep these instructions for future reference.
15. We recommend assembling your bunk bed on the shipping carton to protect your floor or carpet.
16. Be certain all staples are out of the box before beginning assembly on the shipping carton.
17. **USE ONLY MATTRESSES WHICH ARE AS THE TABLE BELOW ON UPPER AND ON LOWER BUNKS.**

Up bed (bunk bed and tribed included)

Bed type	Length	Width	Thickness
Full Standard	74" – 75"	53 ½"	6" max

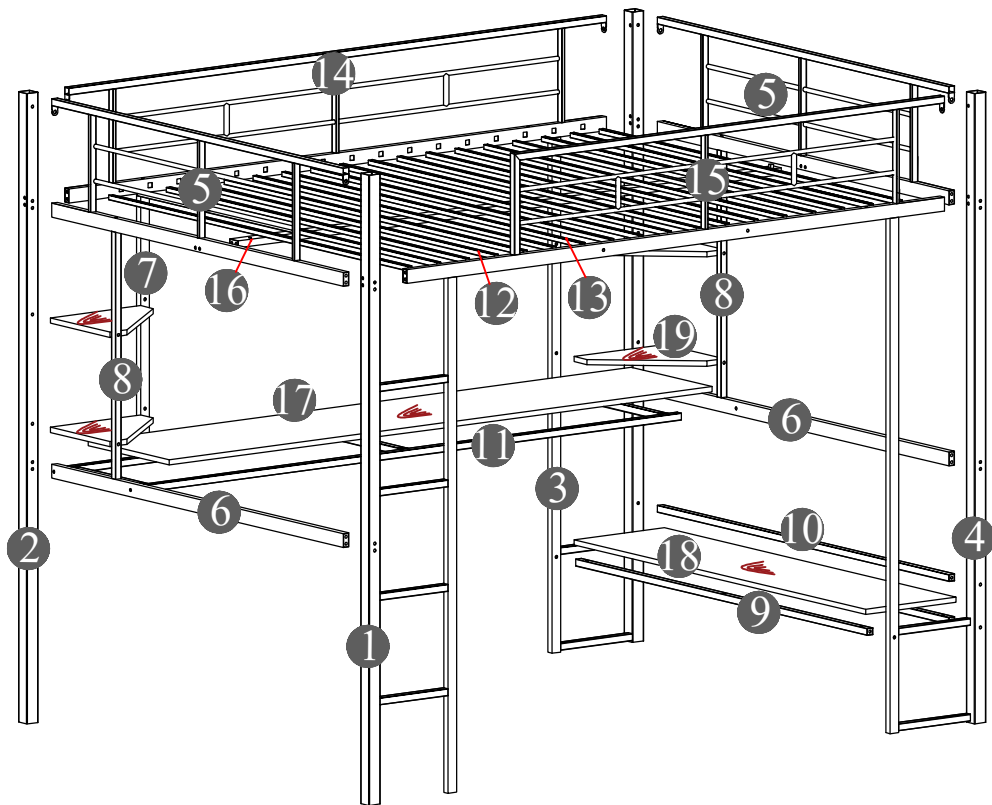
18. **SURFACE OF MATTRESS MUST BE AT LEAST 5" (127MM) BELOW THE UPPER EDGE OF GUARDRAILS.**

19. Replacement Parts:

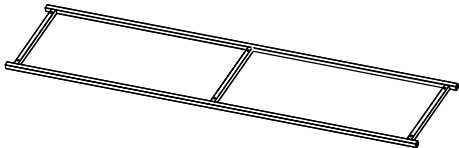
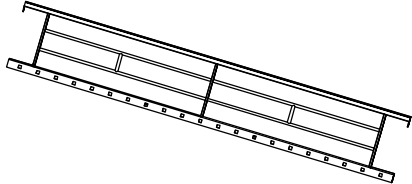
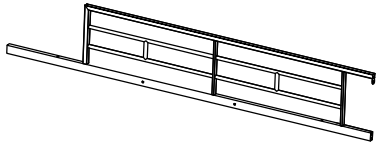
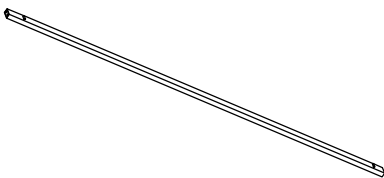
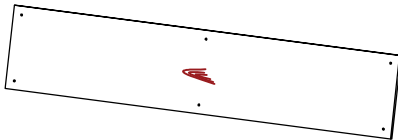


Replacement Parts, including additional guardrails, may be obtained from any of our (GIGACLOUD TECHNOLOGY(USA) INC.) dealers

LOFT BED
ASSEMBLY INSTRUCTIONS
ITEM MF199509/199510

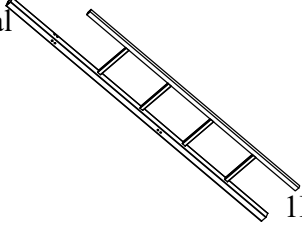
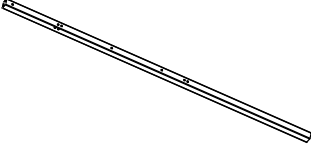
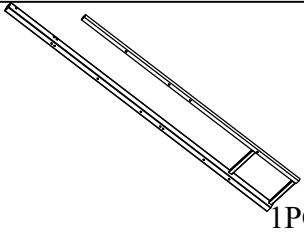
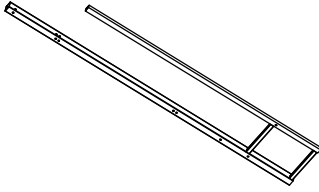
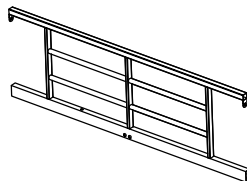

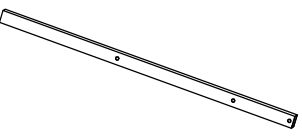
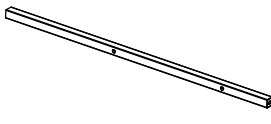

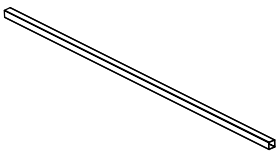
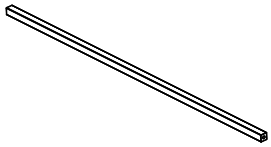
DETAIL VIEW










LOFT BED
ASSEMBLY INSTRUCTIONS
ITEM MF199509/199510
PART LIST MF199509

⑪ Table Frame  1PC	⑭ Guard Bar  1PC	⑮ Guard Bar  1PC	
⑯ Horizontal bar  1PC	⑰ Wooden table panel  1PC	⑱ Wooden shelf panel  1PC	⑲ Wooden shelf panel 2 Left & 2 Right  4PCS

PART LIST MF199510

① Vertical frame  1PC	② Vertical bar  1PC	③ Vertical frame  1PC
④ Vertical frame  1PC	⑤ Headboard  2PCS	⑥ Horizontal bar  2PCS
⑦ Vertical bar  1PC	⑧ Vertical bar  2PCS	⑨ Horizontal bar  2PCS
⑩ Horizontal bar  1PC	⑫ Slats  19PCS	⑬ Slats  2PCS

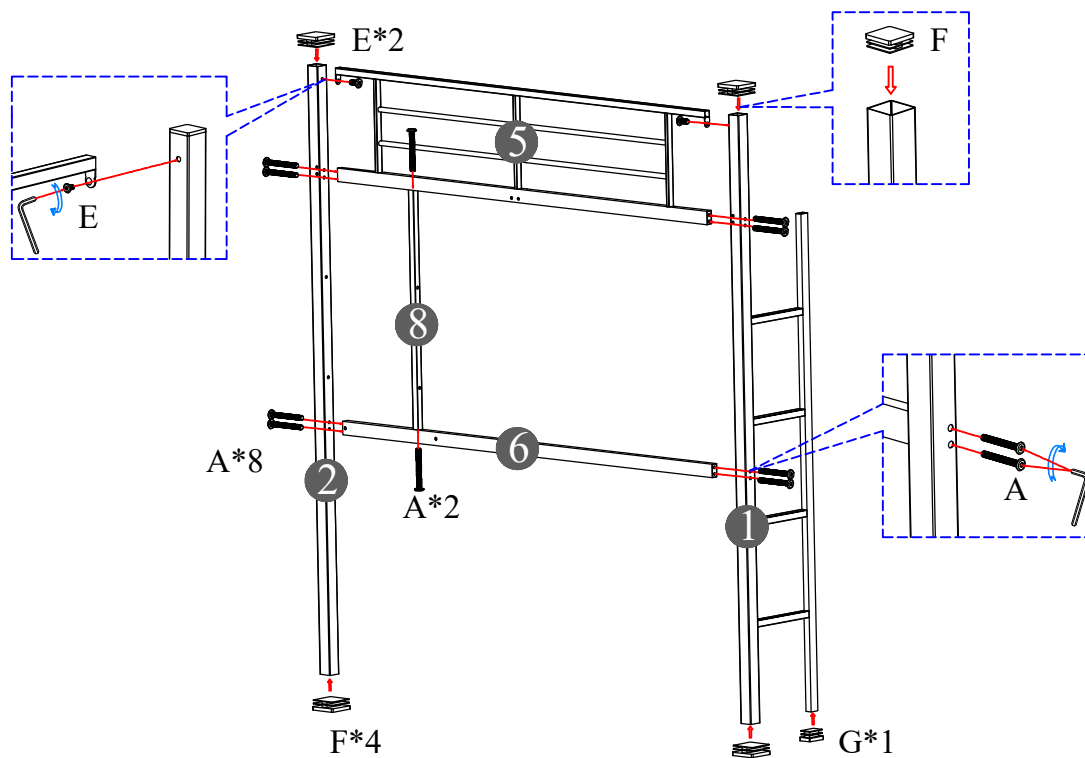
HARDWARE LIST MF199509



Ⓐ Bolts  1/4"*55 36PCS	Ⓑ Bolts  1/4"*50 4PCS	Ⓒ Bolts  1/4"*35 12PCS	Ⓓ Bolts  1/4"*30 20PCS	
Ⓔ Bolts  1/4"*15 11PCS	Ⓕ Pipe plug  40*40 8PCS	Ⓖ Pipe plug  30*20 3PCS	Ⓗ Allen key  4*59 1PC	① Connect wall  1/4"*40 2Set

This set is included 2 boxes if don't receive full 2 boxes please contact our customer service team.

LOFT BED ASSEMBLY INSTRUCTIONS ITEM MF199509/199510

STEP 1 : Following below illustration Assembly Frame # 1.
Using hardware #A, #E, #F, #G connect #1 & #2 with #5, #6 & #8 to complete Frame #1.



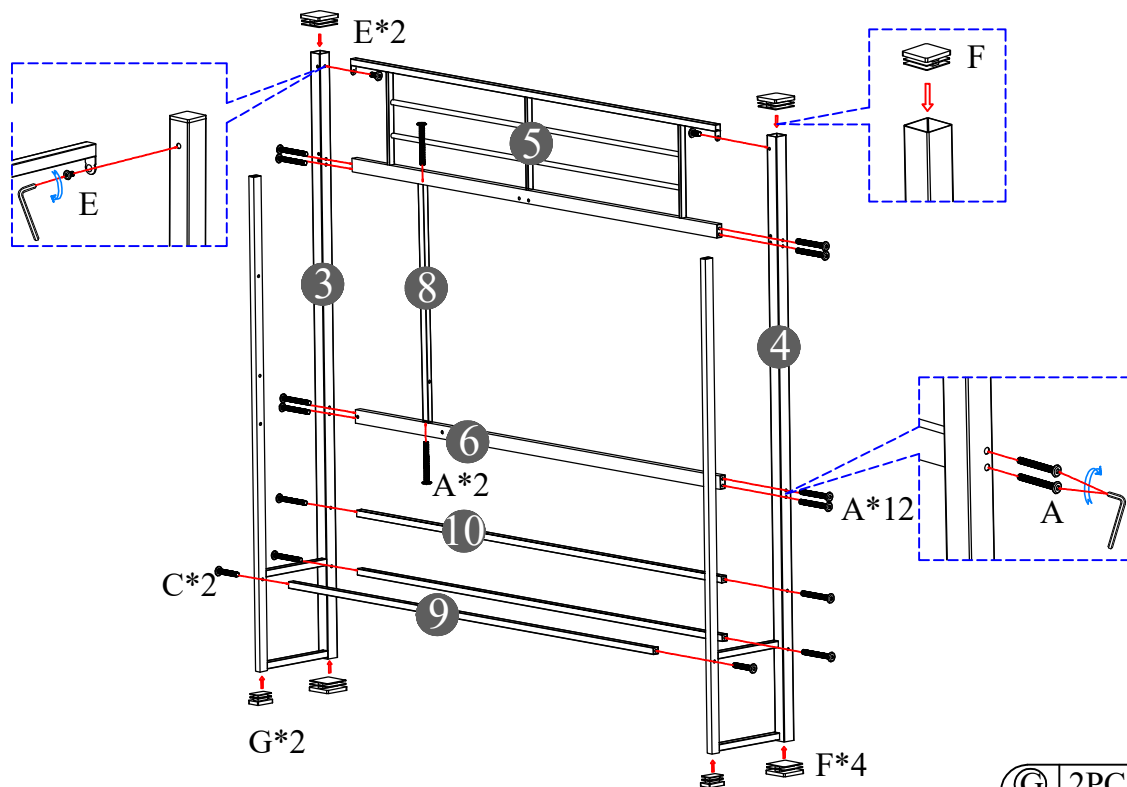
(A)	10PCS
	 1/4*55
(E)	2PCS
	 1/4*15
(F)	4PCS
	 40*40
(G)	1PC
	 30*20
(H)	1PC
	 4*59


NOTE: In this step, DO NOT tighten any bolt until you connect all part together.

LOFT BED ASSEMBLY INSTRUCTIONS ITEM MF199509/199510

STEP 2 : Following below illustration Assembly Frame # 2.

Using hardware #A, #C, #E, #F, #G connect #3 & #4 with #5, #6, #8, #9, #10 to complete Frame #2.

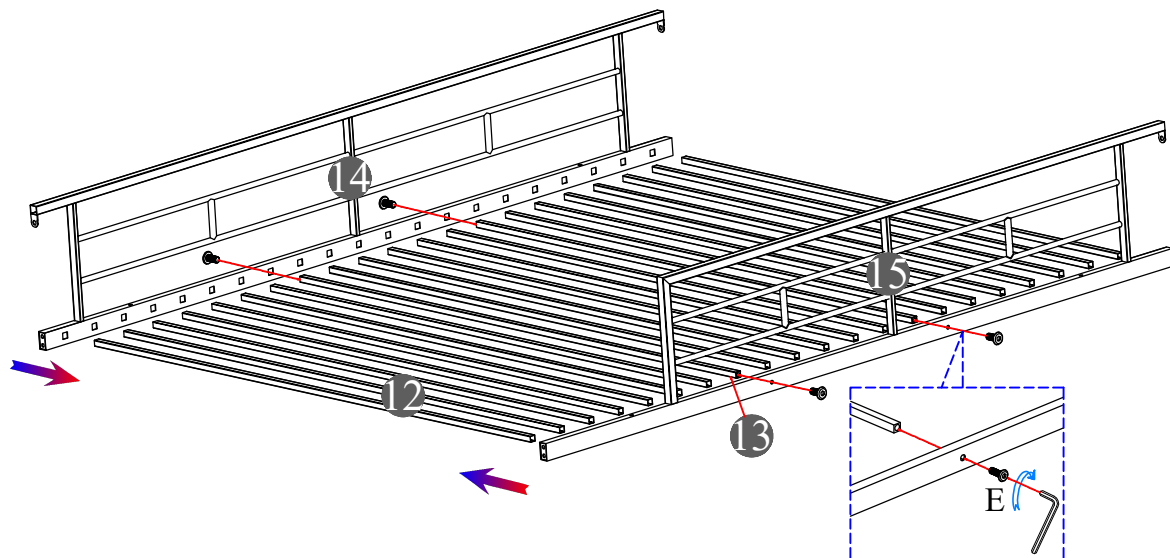


(A)	14PCS
	 1/4*55
(C)	2PCS
	 1/4*35
(E)	2PCS
	 1/4*15
(F)	4PCS
	 40*40
(G)	2PCS
	 30*20
(H)	1PC
	 4*59

NOTE:In this step, DO NOT tighten any bolt until you connect all part together.

STEP 3 : Following below illustration Assembly Frame # 3.

Using hardware #E connect #14 ,#15 with #12, #13 to complete Frame #3.

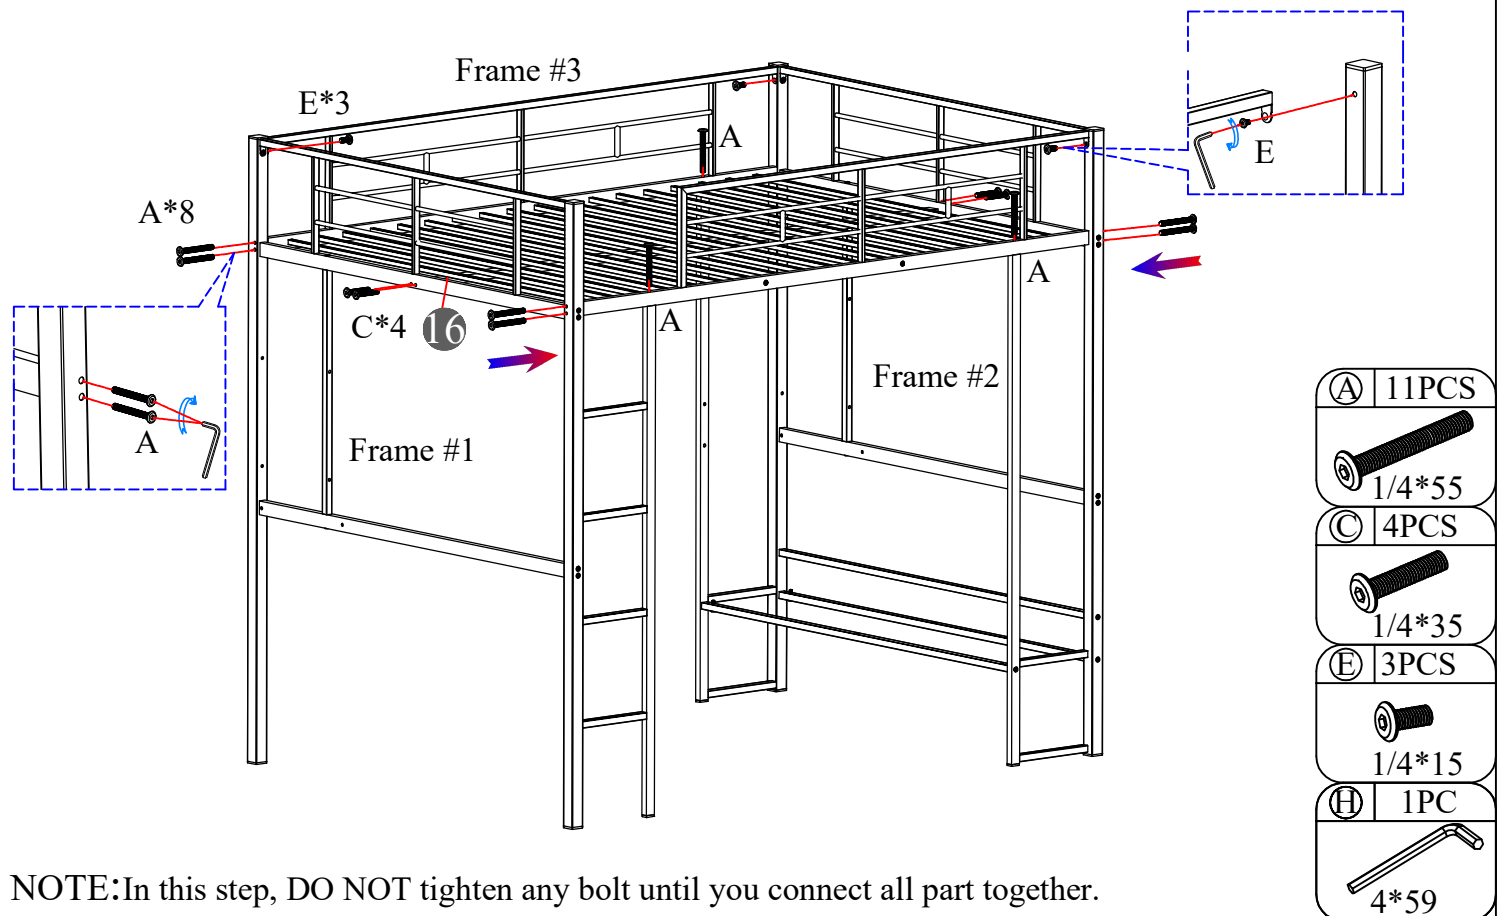


(E)	4PCS
	 1/4*15
(H)	1PC
	 4*59

NOTE:In this step, DO NOT tighten any bolt until you connect all part together.

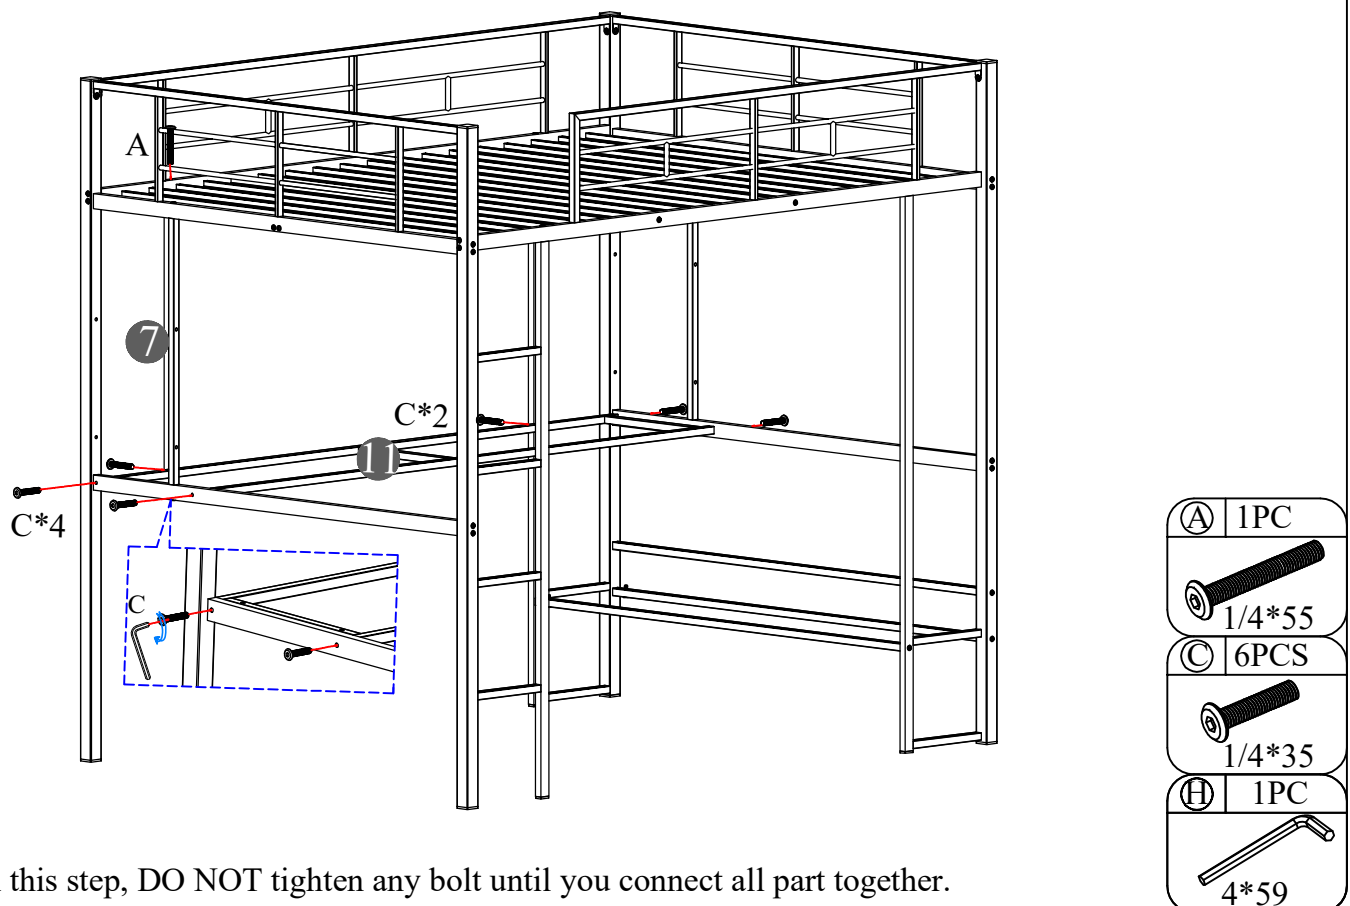
LOFT BED ASSEMBLY INSTRUCTIONS ITEM MF199509/199510

STEP 4 : Following below illustration Assembly Frame # 4.
Using hardware #A, #C, #E connect Frame #1 , Frame #2 with Frame #3, #16 to complete Frame #4.



NOTE:In this step, DO NOT tighten any bolt until you connect all part together.

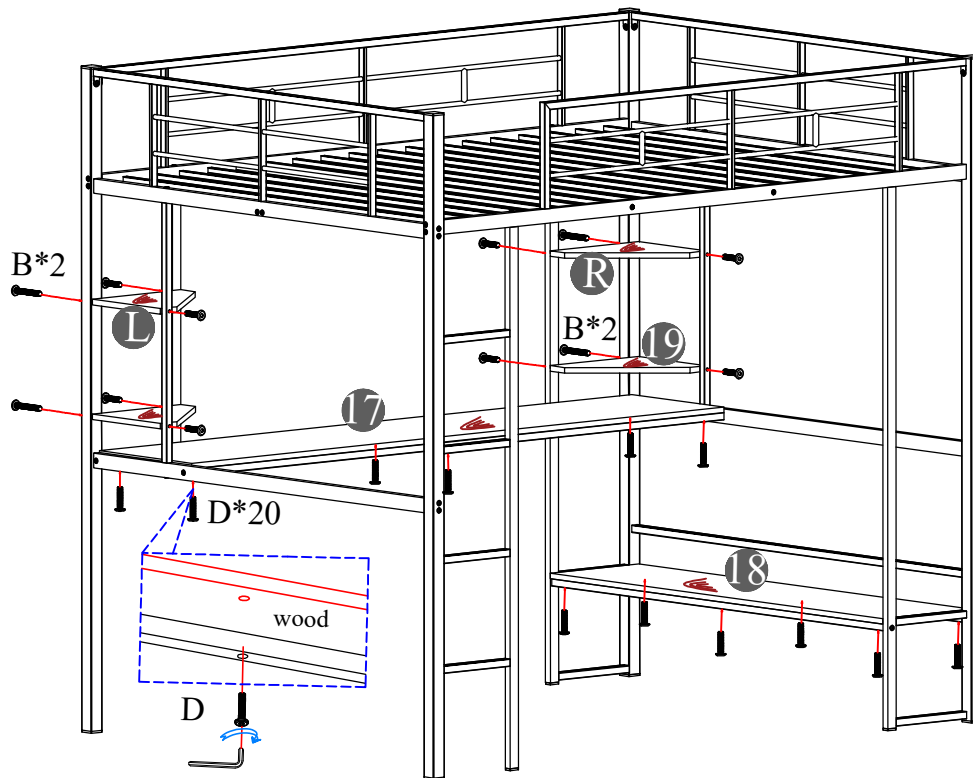
STEP 5 : Following below illustration Assembly Frame # 5.
Using hardware #A, #C connect Frame #4 with #7, #11 to complete Frame #5.






NOTE:In this step, DO NOT tighten any bolt until you connect all part together.

LOFT BED ASSEMBLY INSTRUCTIONS ITEM MF199509/199510

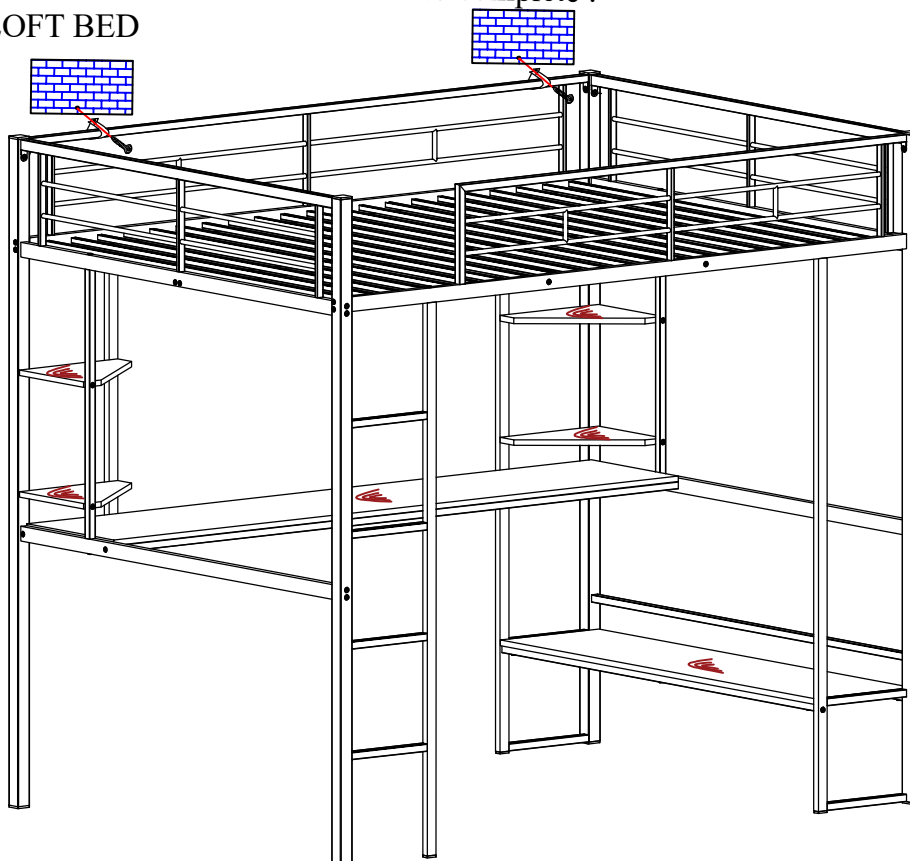
STEP 6 : Following below illustration Assembly Frame # 6.
Using hardware #B, #D connect Frame #5 with #17, #18, #19 to complete Frame #6.



(B)	4PCS
	 1/4*50
(D)	20PCS
	 1/4*30
(H)	1PC
	 4*59

NOTE: In this step, DO NOT tighten any bolt until you connect all part together.

STEP 7 : Following below illustration Assembly Frame # 7.
Using hardware #I connect Frame #6 with Wall to complete .
COMPLETED LOFT BED



(I)	2 SET
	
(H)	1PC
	 4*59

NOTE: Tighten all step before using. Thank you.