



ASSEMBLY INSTRUCTIONS

LOFT BED WITH DESK

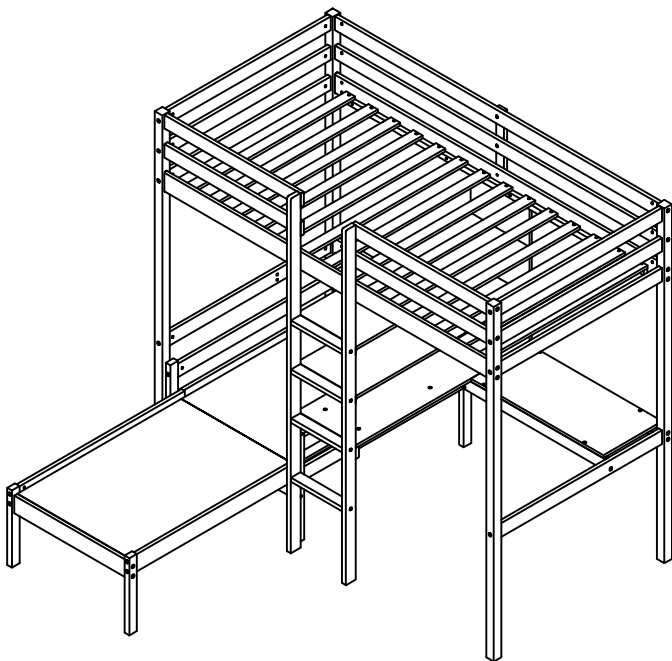

OR

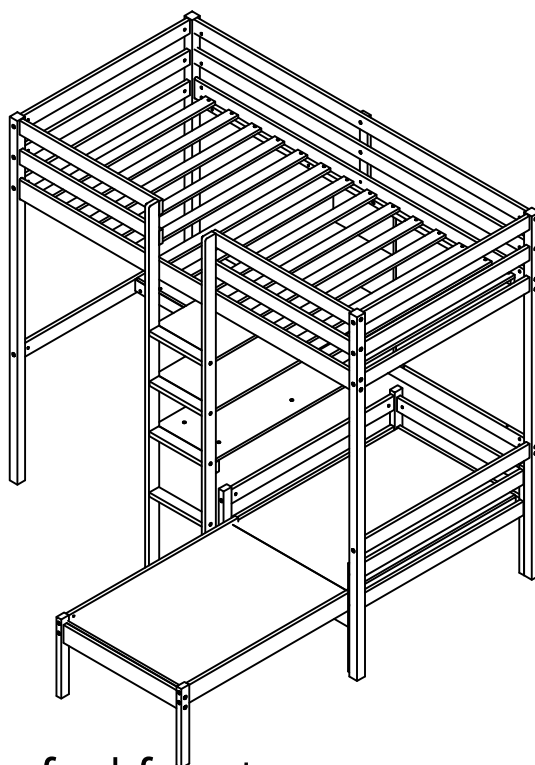

If you have any questions, please feel free to contact us.

Email: service@qualfurn.net

WF292907/WF292908

SAFETY WARNINGS AND GENERAL NOTES :

Follow the information on the warnings on the loft bed end structure and on the carton. Do not remove the warning label from the bed. Always use the recommended size mattress on mattress support, or both, to help prevent the likelihood of entrapment or falls.

The top surface of the mattress must be at least 5*inch (127mm) below the upper edge of the guardrail.

Do not allow children under 6 years of age to use the upper bunk.

Periodically check and ensure the guardrail, ladder and other components are in their proper position, free from damage, and all connectors are tight.

Do not allow horseplay on or under beds.

Always prohibit jumping on the bed.

Prohibit more than one person on upper bunk.

Always use the ladder for entering and leaving the upper bunk.

Do not use substitute parts. Contact the manufacturer or dealer for replacement parts.

Use of a night-tight may provide added safely precaution for a child using the upper bunk.

Always use guardrails on both long sides of the upper bunk.

If the loft bed will be placed next to a wall, the guardrail that runs the full length of the bed should be placed against the wall to prevent entrapment between the bed and the wall.

The use of water or sleep flotation mattresses is prohibited.

STRANGULATION HAZARD-Never attach or hang items to any part of the loft bed that are not designed for use with the bed.

Keep these instructions for future reference.

We recommend assembling your loft bed on the shipping carton to protect your floor or carpet.

Be certain all staples are out of the box before beginning assembly on the shipping carton.


USE ONLY MATTRESSES WHICH ARE 74"-75" LONG AND 38 1/2" WIDE ON UPPER AND ON LOWER BUNKS. ENSURE THICKNESS OF MATTRESS DOES NOT EXCEED 6".

SURFACE OF MATTRESS MUST BE AT LEAST 5" (127MM) BELOW THE UPPER EDGE OF GUARDRAILS.

Replacement Parts:










Replacement Parts, including additional guardrails, may be obtained from any of our (GIGACLOUD TECHNOLOGY (USA) INC. 18961 ARENTH AVENUE, CITY OF INDUSTRY , CA, 91748.) dealers

Detail View






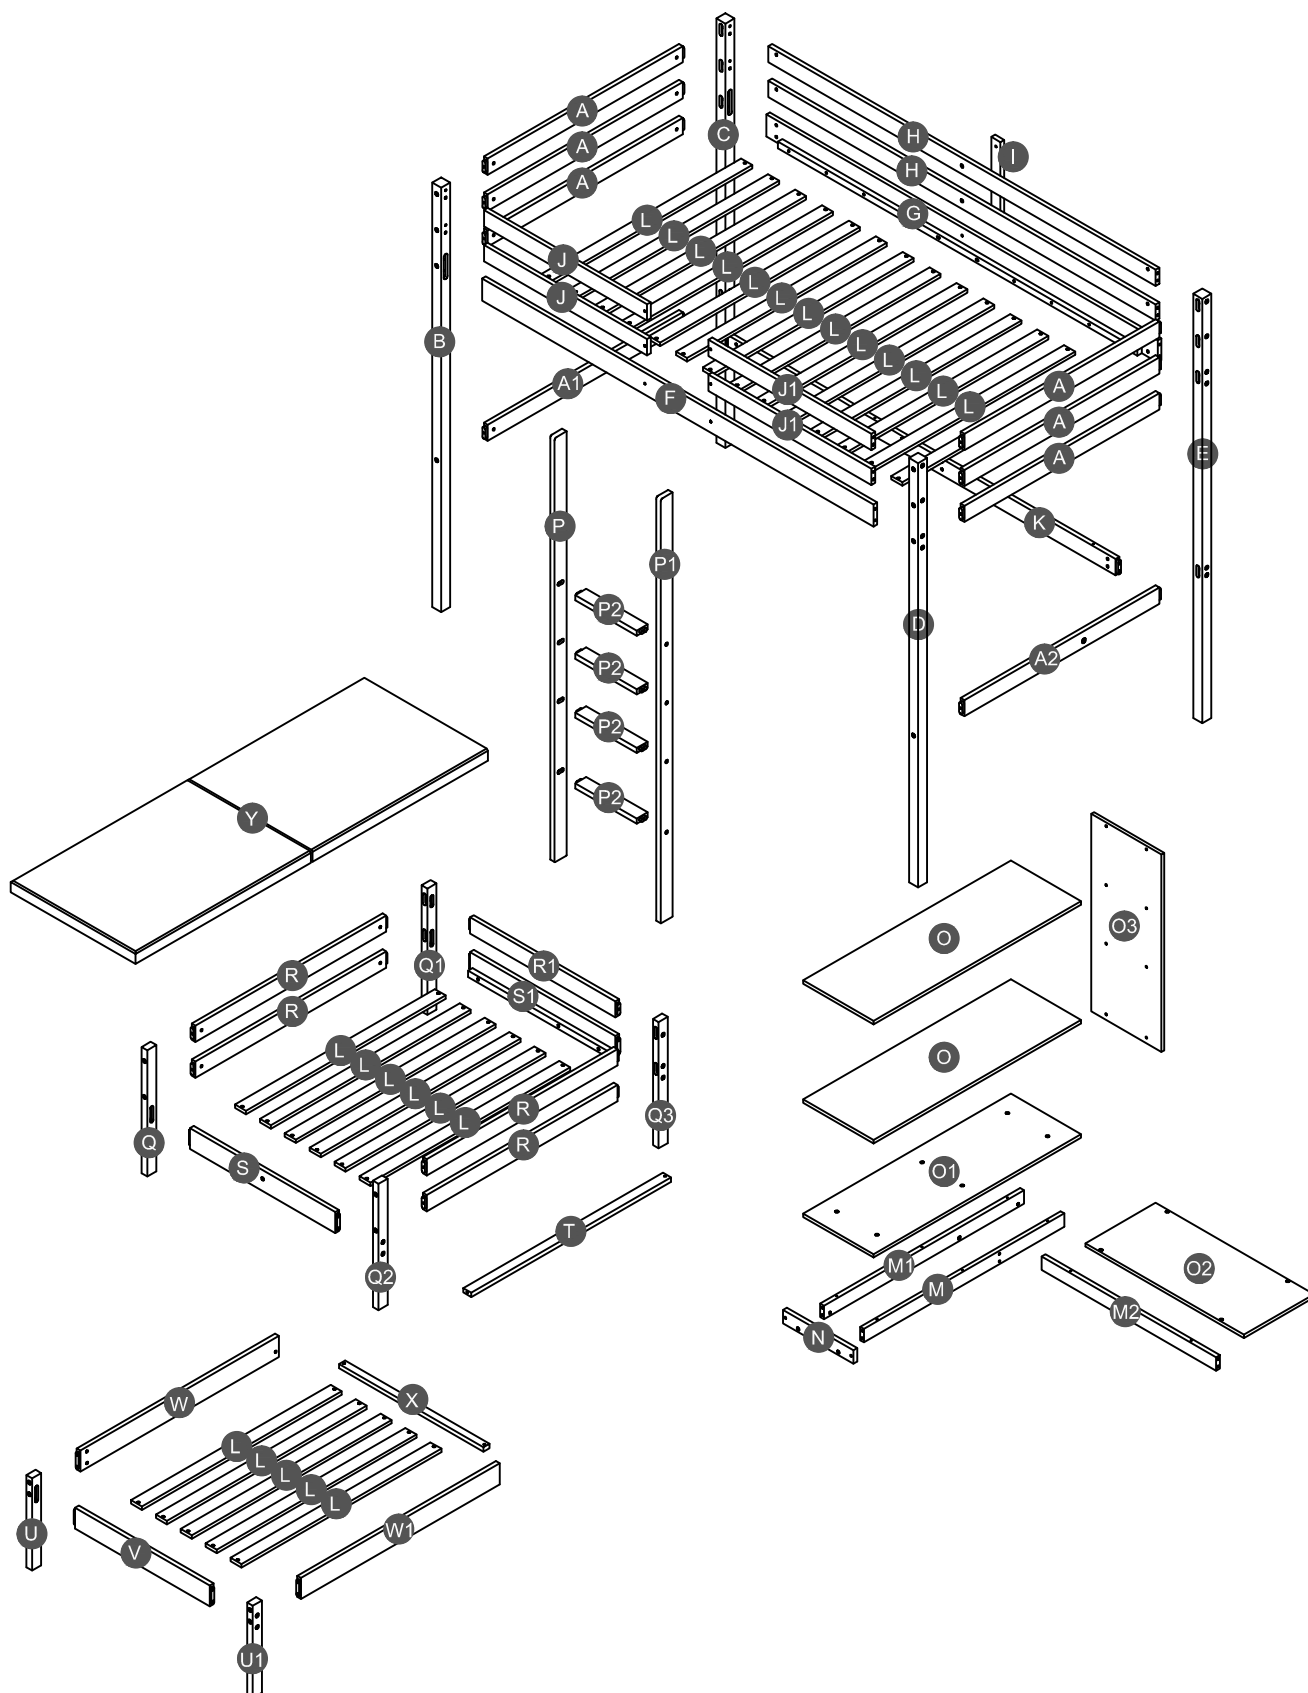


Part List

Hardware List WF292907









B  Leg (Left front) - 1pc	C  Leg (Left back) - 1pc	D  Leg (Right front) - 1pc
E  Leg (Right back) - 1pc	F  Side rail (front) - 1pc	G  Side rail (back) - 1pc
H  Long guard rail (back) - 2pcs	K  Lower horizontal bar (Back) - 1pc	L  Slat - 14pcs
P  Left side ladder - 1pc	P1  Right side ladder - 1pc	R  Horizontal bar - 4pcs

WF292908




A  Horizontal bar - 6pcs	A1  Lower horizontal bar (Left) - 1pc	A2  Lower horizontal bar (Right) - 1pc
I  Vertical guard rail - 1pc	J  Short guard rail (front-Left) - 2pcs	J1  Short guard rail (front-right) - 2pcs
L  Slat - 11pcs	M  Lower horizontal bar - 1pc	M1  Lower horizontal bar - 1pc
M2  Lower horizontal bar - 1pc	N  Horizontal bar (front) - 1pc	O  Shelf panel - 2pcs
O1  Top panel - 1pc	O2  Top panel - 1pc	O3  Back panel - 1pc

Part List


WF292908

P2  Step ladder - 4pcs	Q  Short Leg (Left front)- 1pc	Q1  Short Leg (Left back)- 1pc
Q2  Short Leg (Right front)- 1pc	Q3  Short Leg (Right back)- 1pc	R1  Horizontal bar - 1pc
S  Short side rail (Front) -1pc	S1  Short side rail (Back) -1pc	T  Lower horizontal bar - 1pc
U  Short Leg (Left front)- 1pc	U1  Short Leg (Left right)- 1pc	V  Side rail (front) -1pc
W  Horizontal bar (Left) - 1pc	W1  Horizontal bar (Right) - 1pc	X  Lower horizontal bar - 1pc
Y  Bottom mattress - 1pc		

Hardware List WF292907


1  Ø8*30mm Wood dowel (6pcs)	2  (Ø15)1/4"*100mm Hex-Head bolts (20pcs)	3  (Ø15)1/4"*80mm Hex-Head bolts (44pcs)
4  (Ø12)1/4"*60mm Hex-Head bolts (20pcs)	5  (Ø12)1/4"*40mm Hex-Head bolts (8pcs)	6  (Ø12)1/4"*30mm Hex-Head bolts (9pcs)
7  (Ø12)1/4"*40mm Hex-Head bolts (10pcs)	8  1/4"*15 (9.5mm) Horizontal-Hole bolts (84pcs)	9  30*18*18*2mm Metal bracket (4pcs)
10  (1/4")4.5*58mm Allen key (1pc)	11  Ø3.5*15mm Wood screws (4pcs)	12  Ø4*30mm Wood screws (50pcs)
13  Ø10*40mm Wood dowel (8pcs)		

ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)




PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWER TOOLS !

STEP 1:

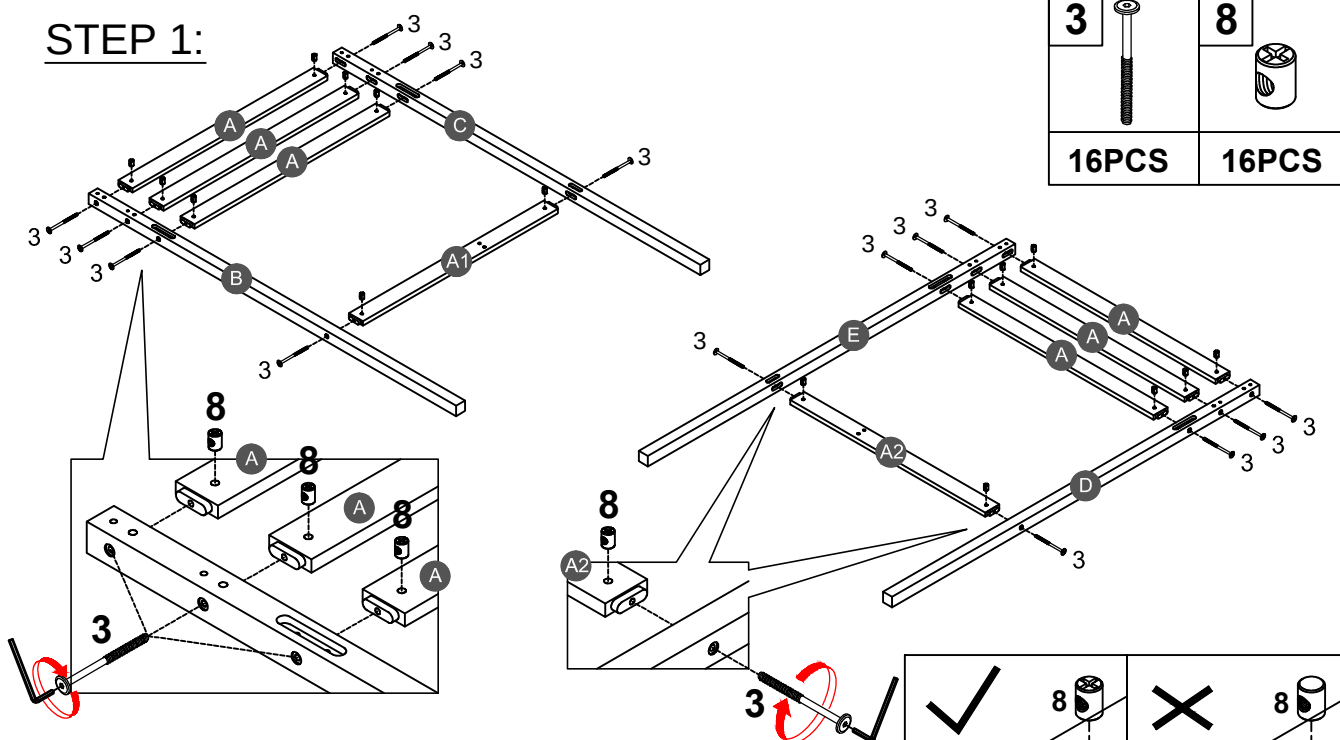


Note: Part 8 will face up with the "x" mark on it, otherwise it cannot be tightened

STEP 2:

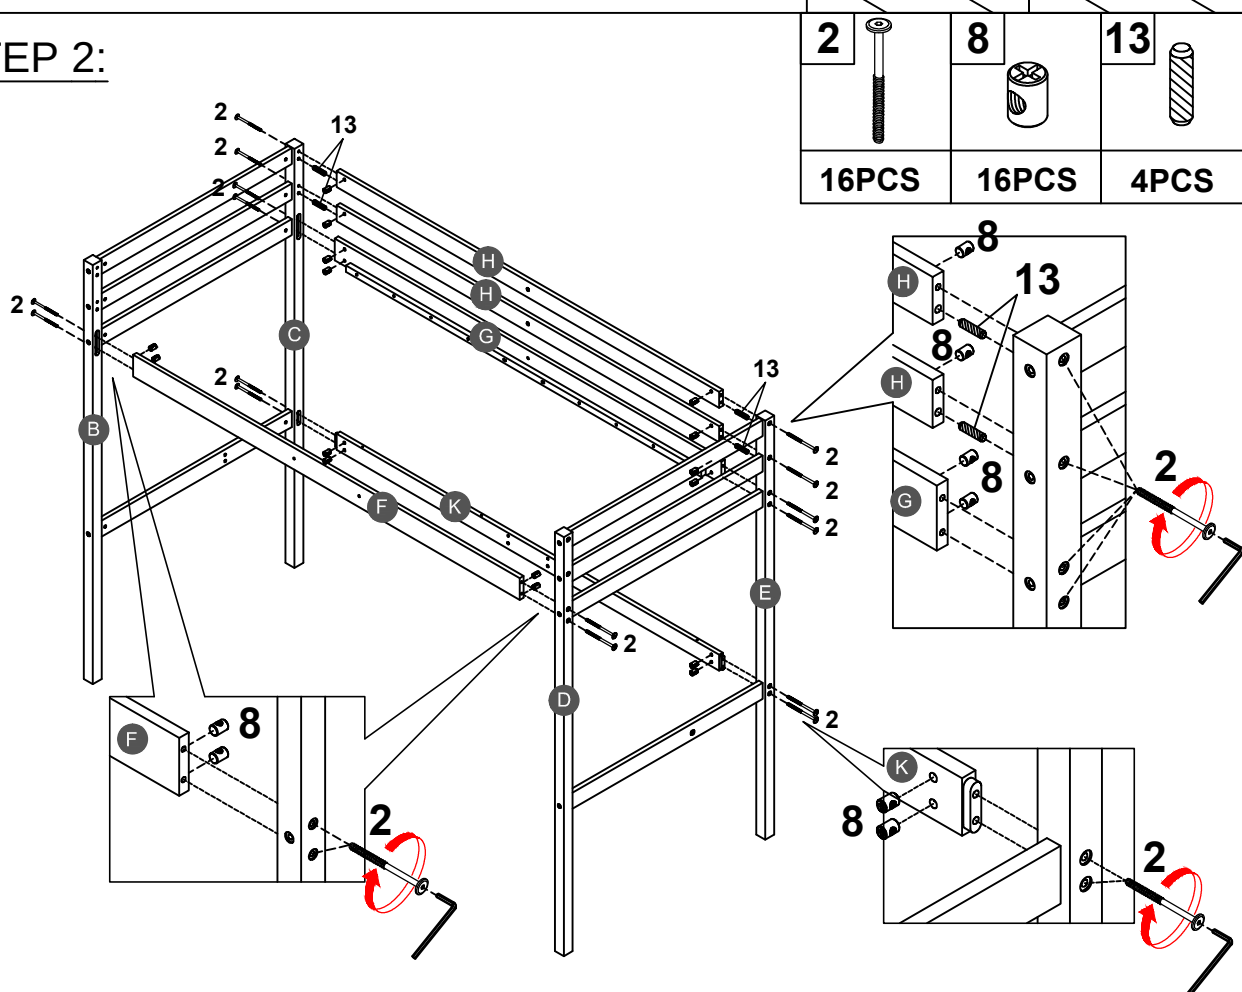


STEP 3:

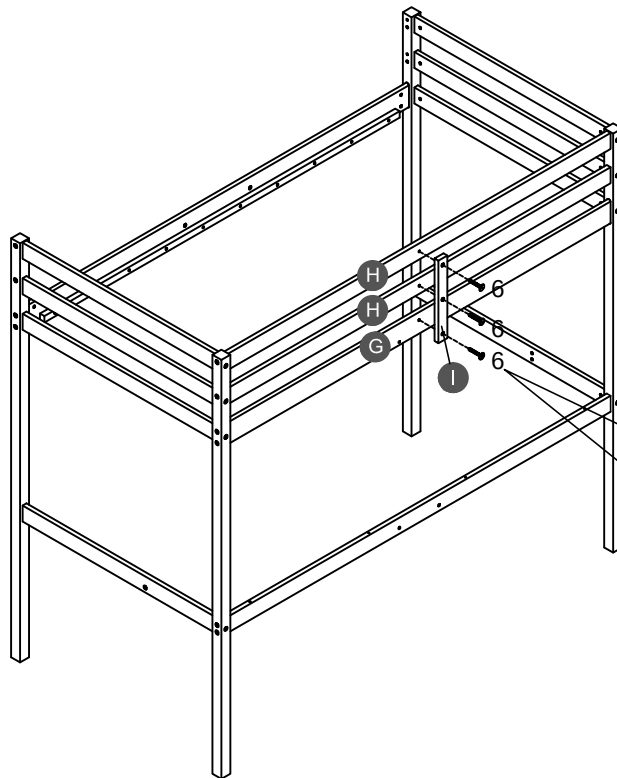


6



3PCS

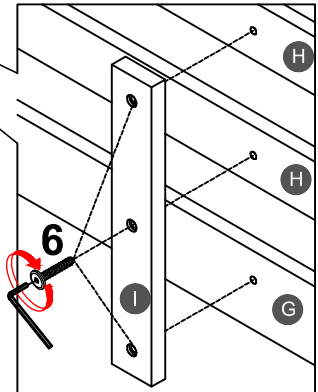

STEP 4:

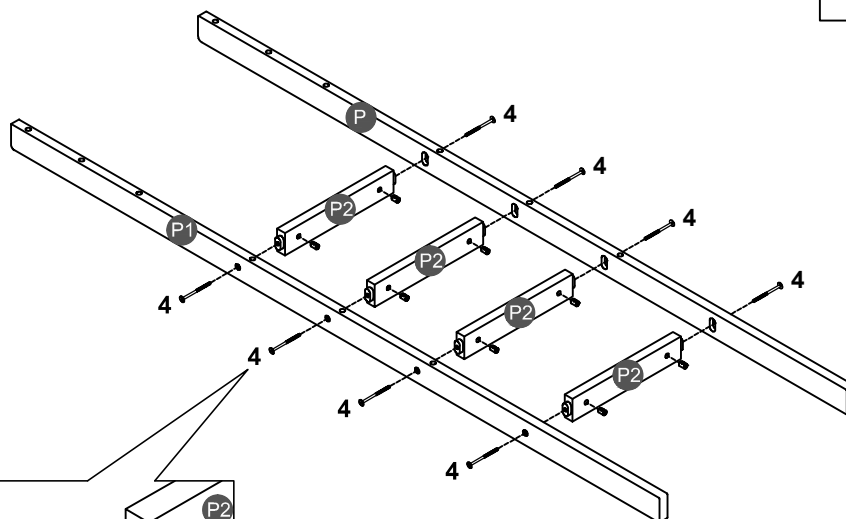

4




8PCS

8




8PCS

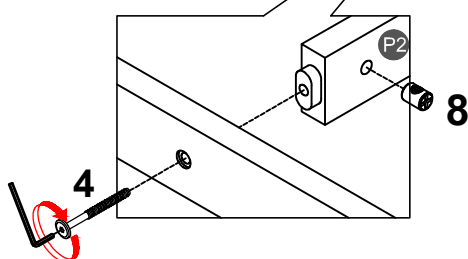


STEP 5:

5		6		9	
2PCS		4PCS		4PCS	

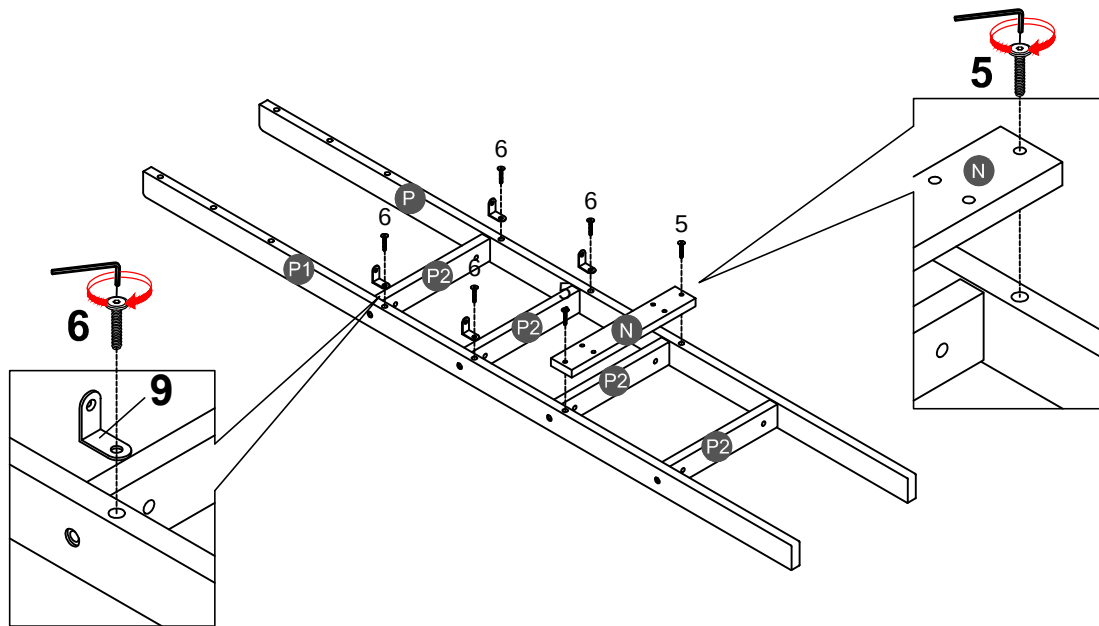


STEP 6:


2		5		8		13	
4PCS		6PCS		4PCS		4PCS	

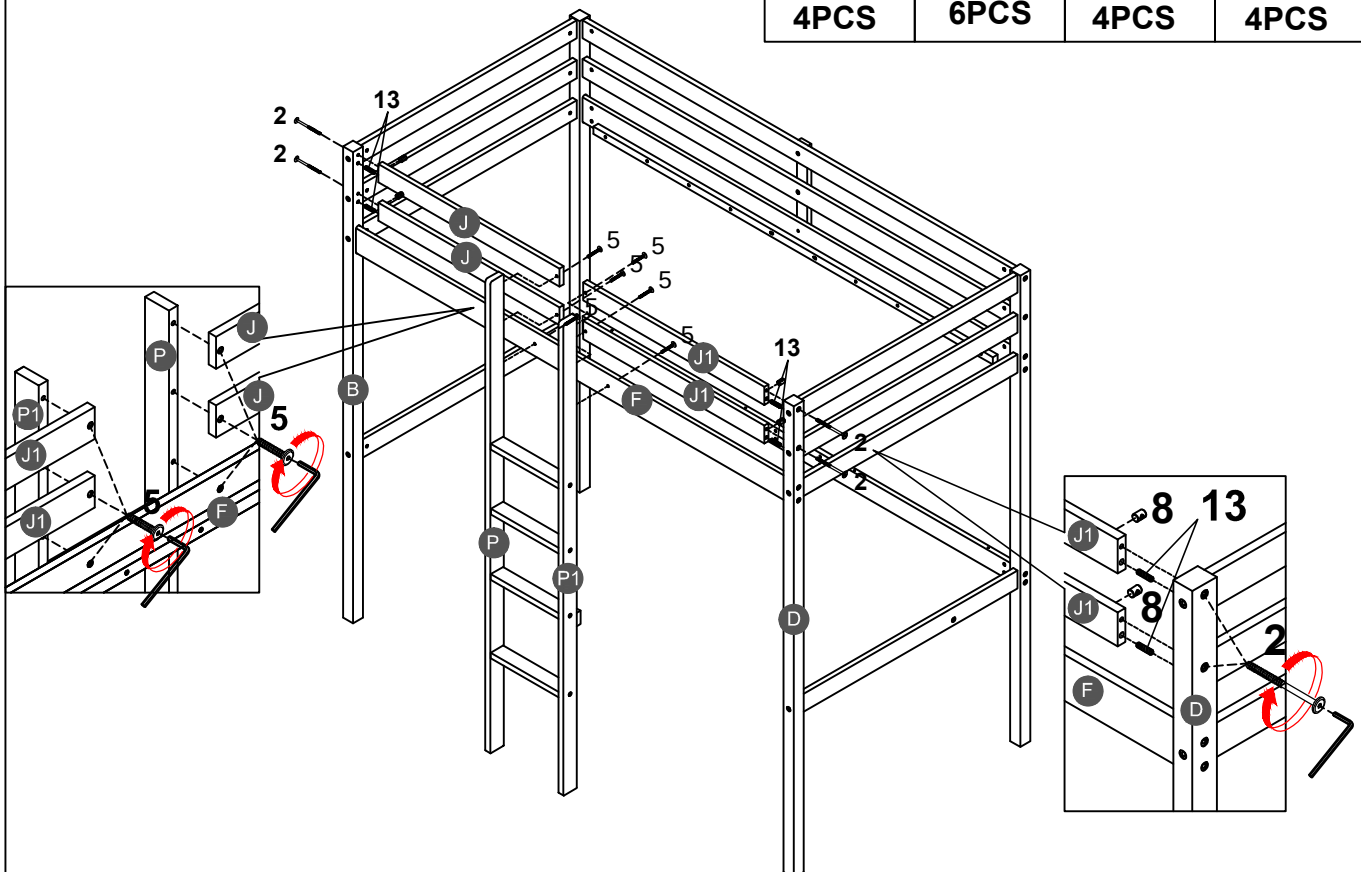


STEP 7:

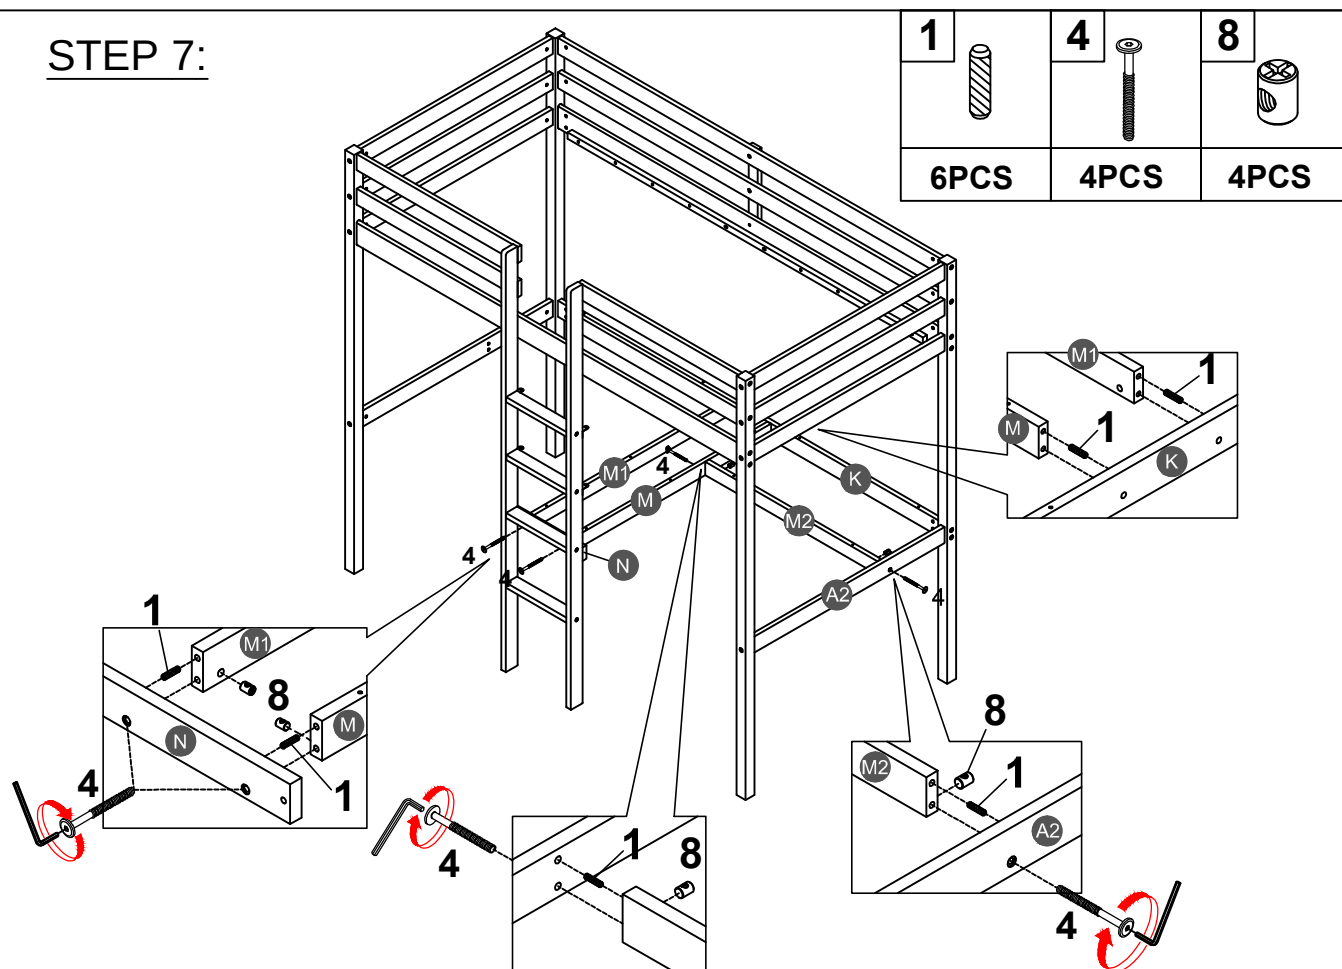

STEP 8:

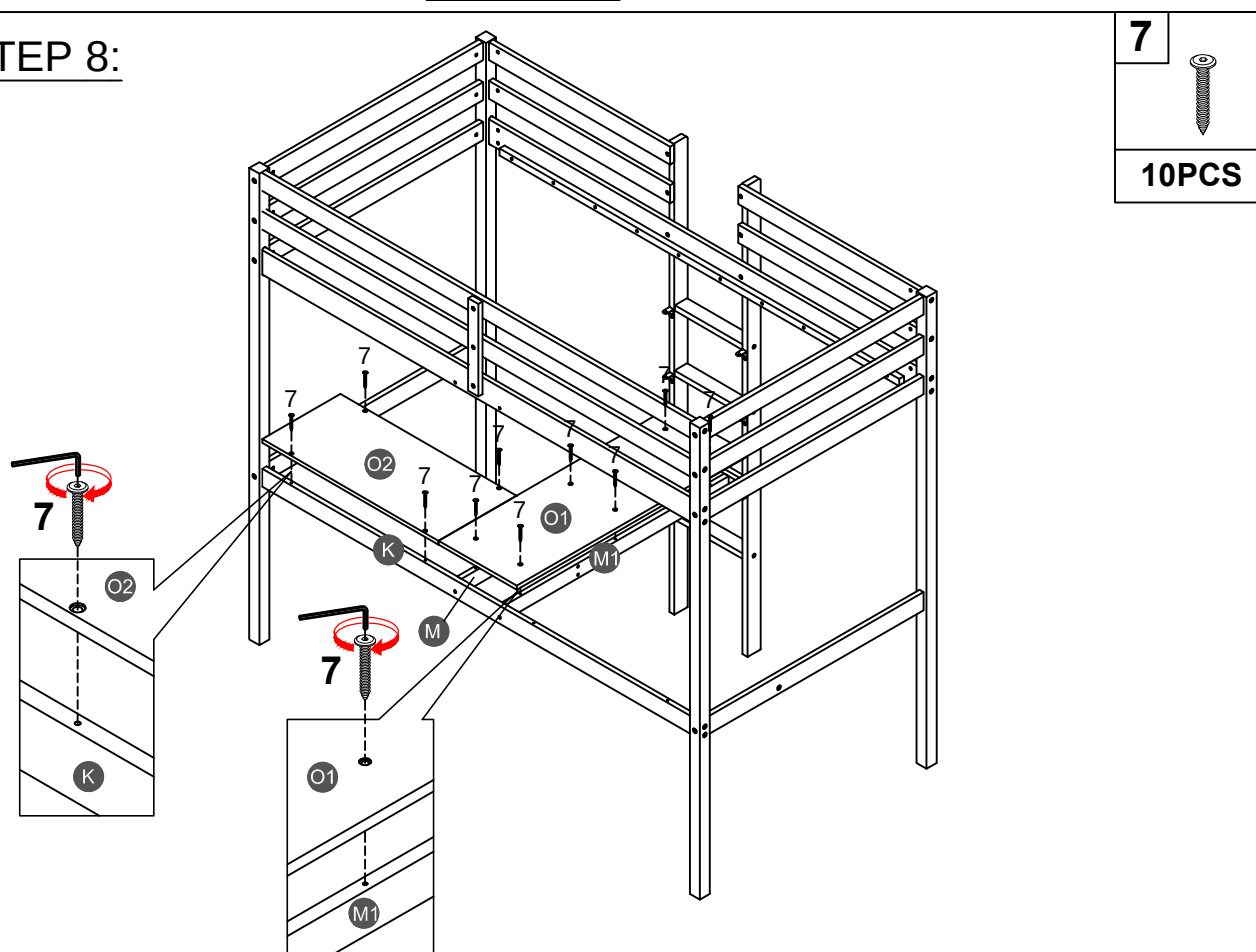


STEP 9:

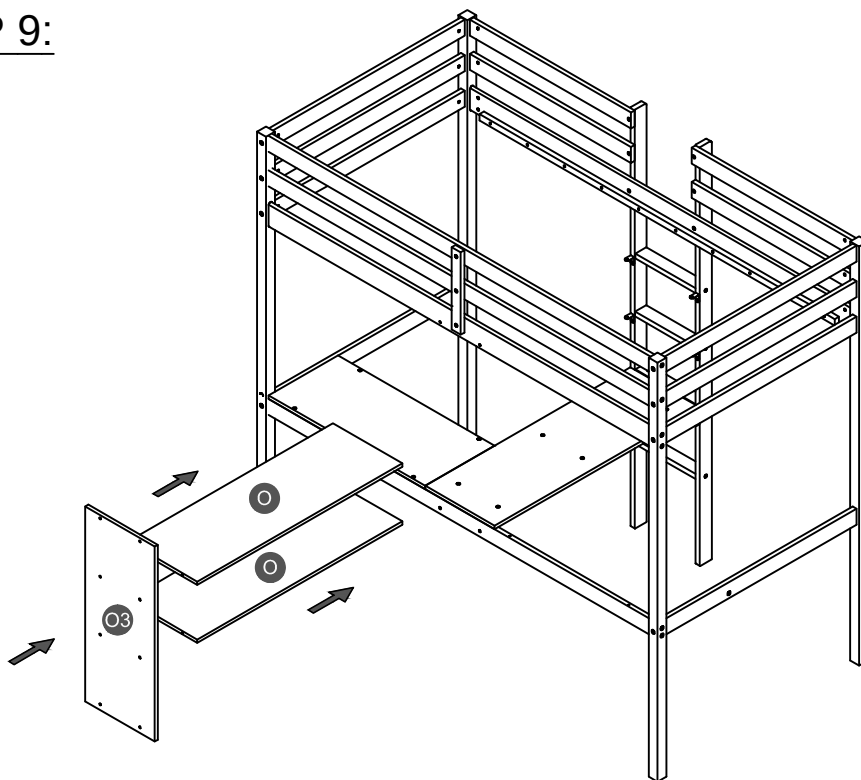

STEP 10:

3	4	6	8	9	11
					
2PCS	4PCS	2PCS	16PCS	4PCS	4PCS



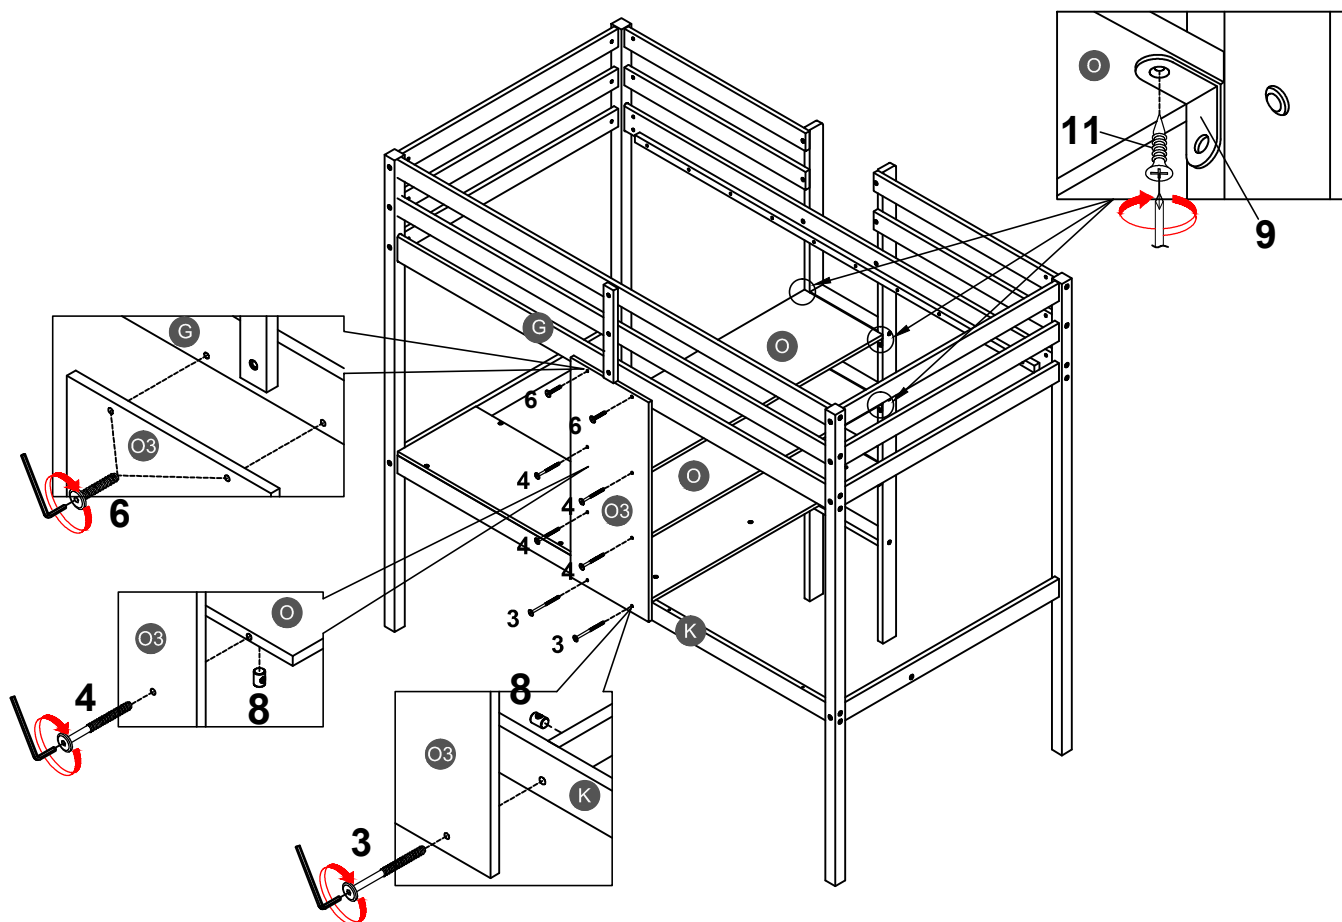


STEP 11:

12



28PCS

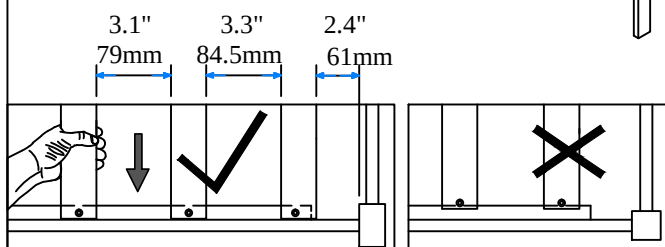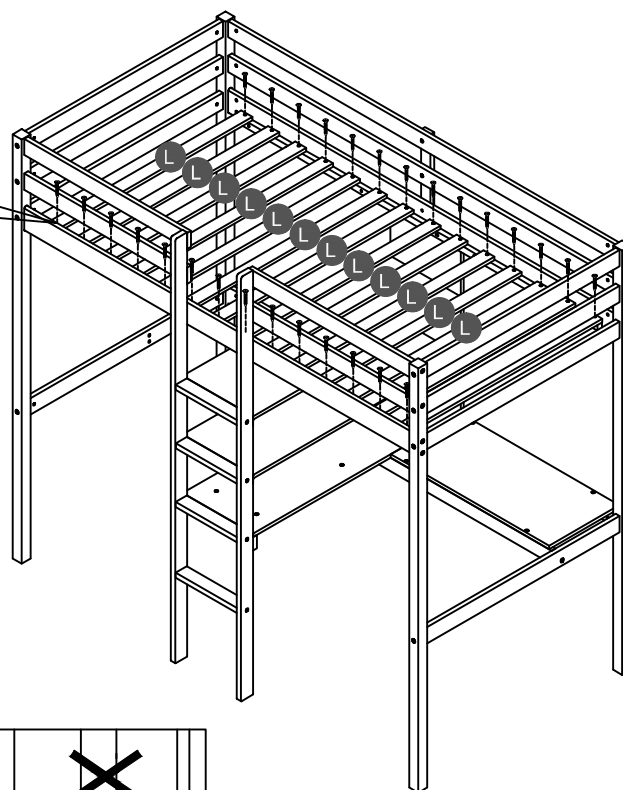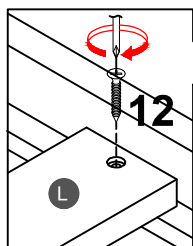

Note: Do not lock the screws of the bed slats to the outermost edge of the bed slats, you need to leave a certain space at the edges, otherwise it will cause the board to break.
Do not lock the bed slats on the edge of the wood, please hold firmly before screwing, hold it in place with one hand, then lock the screw.

STEP 12:

3





8PCS


8




8PCS

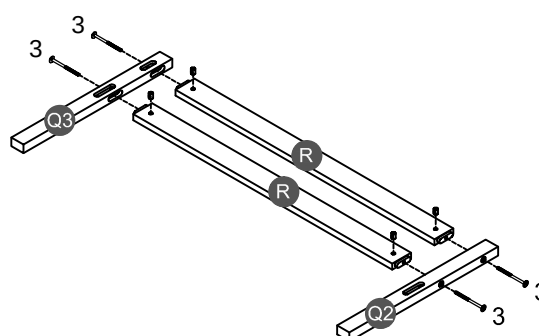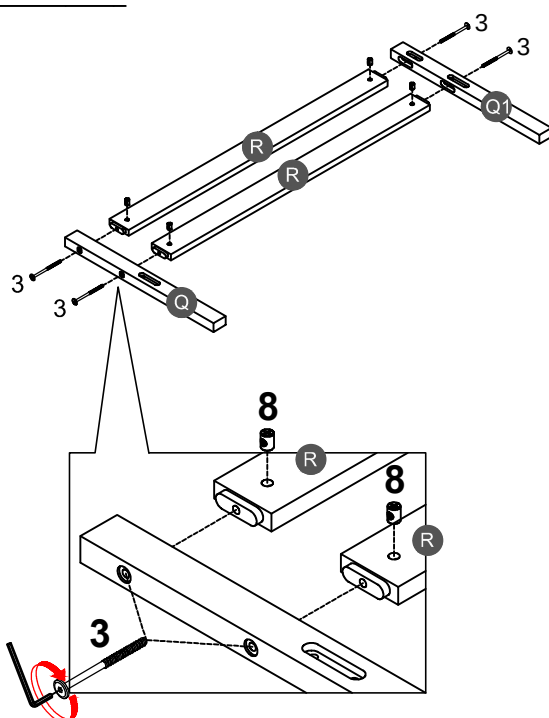


STEP 13:

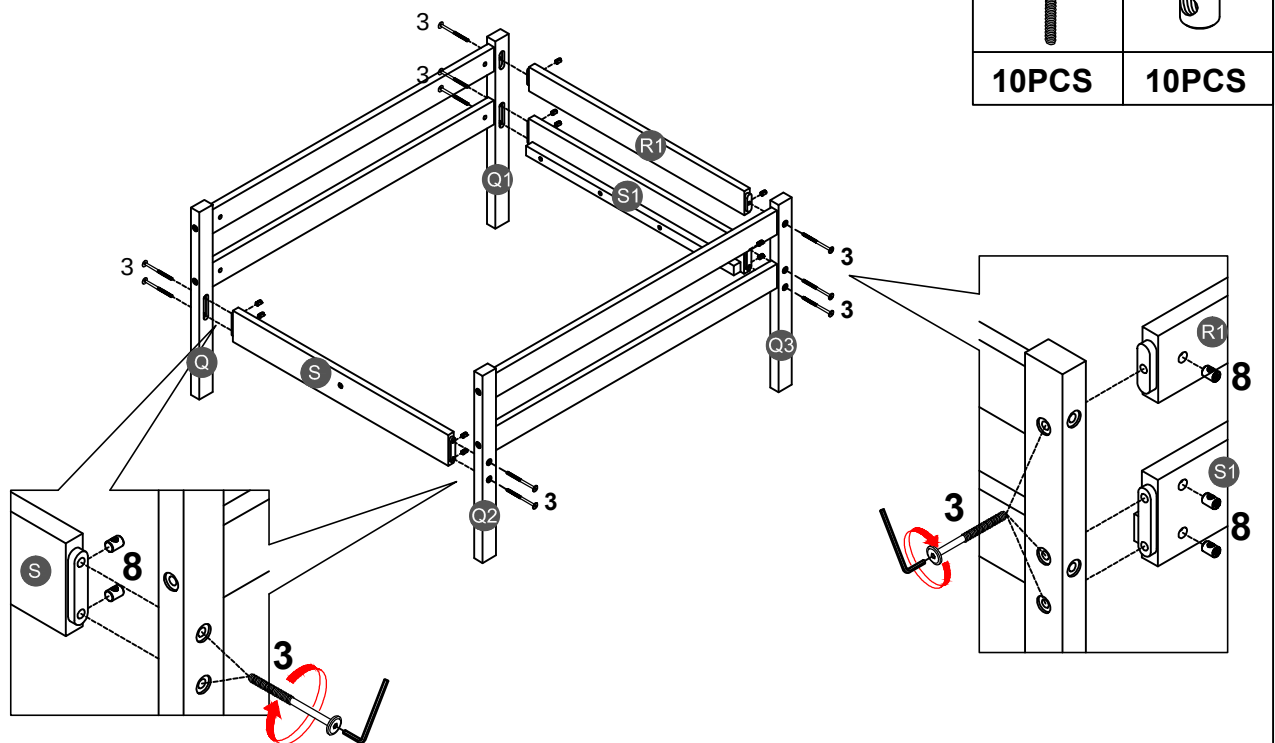

STEP 14:

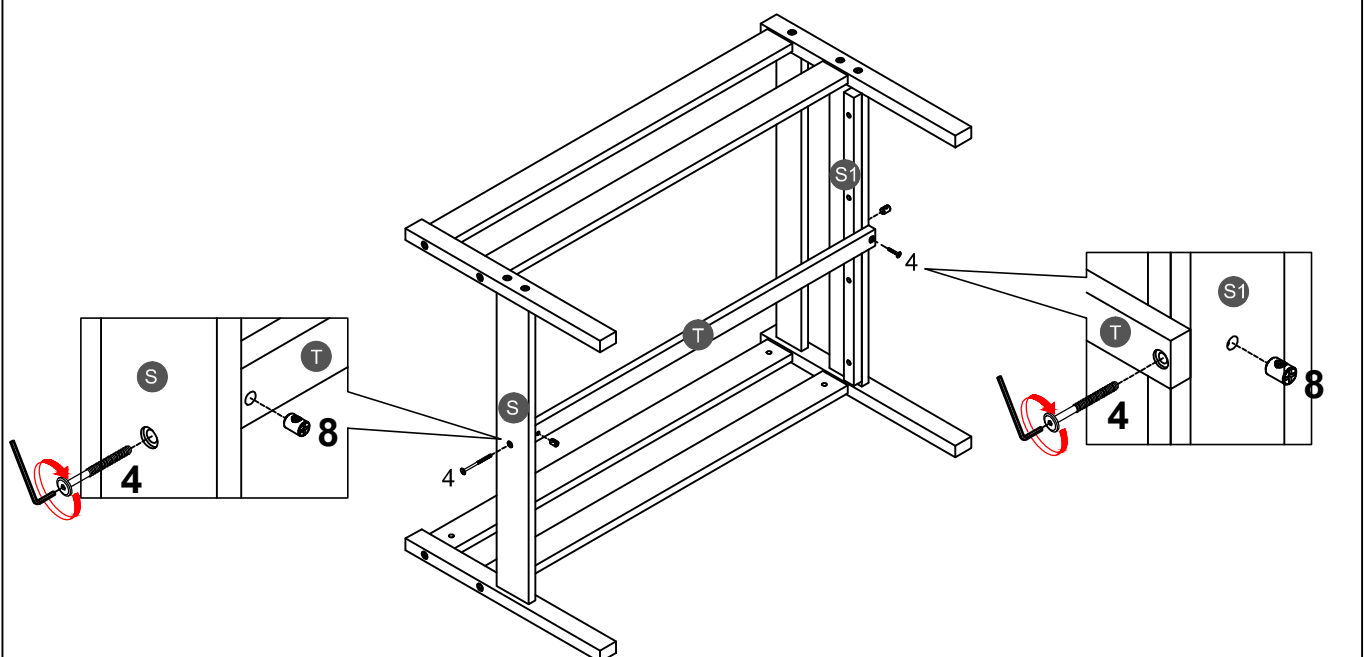


STEP 15:

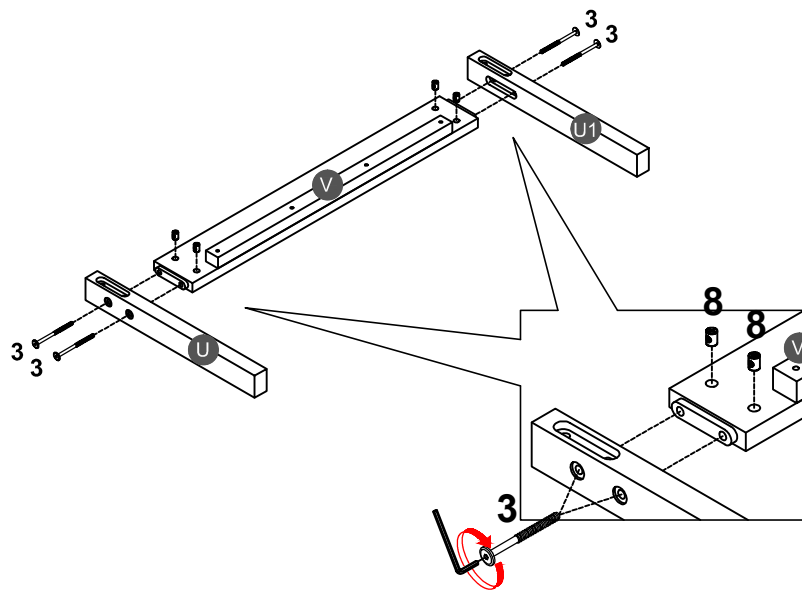


3		8	
4PCS		4PCS	

STEP 16:

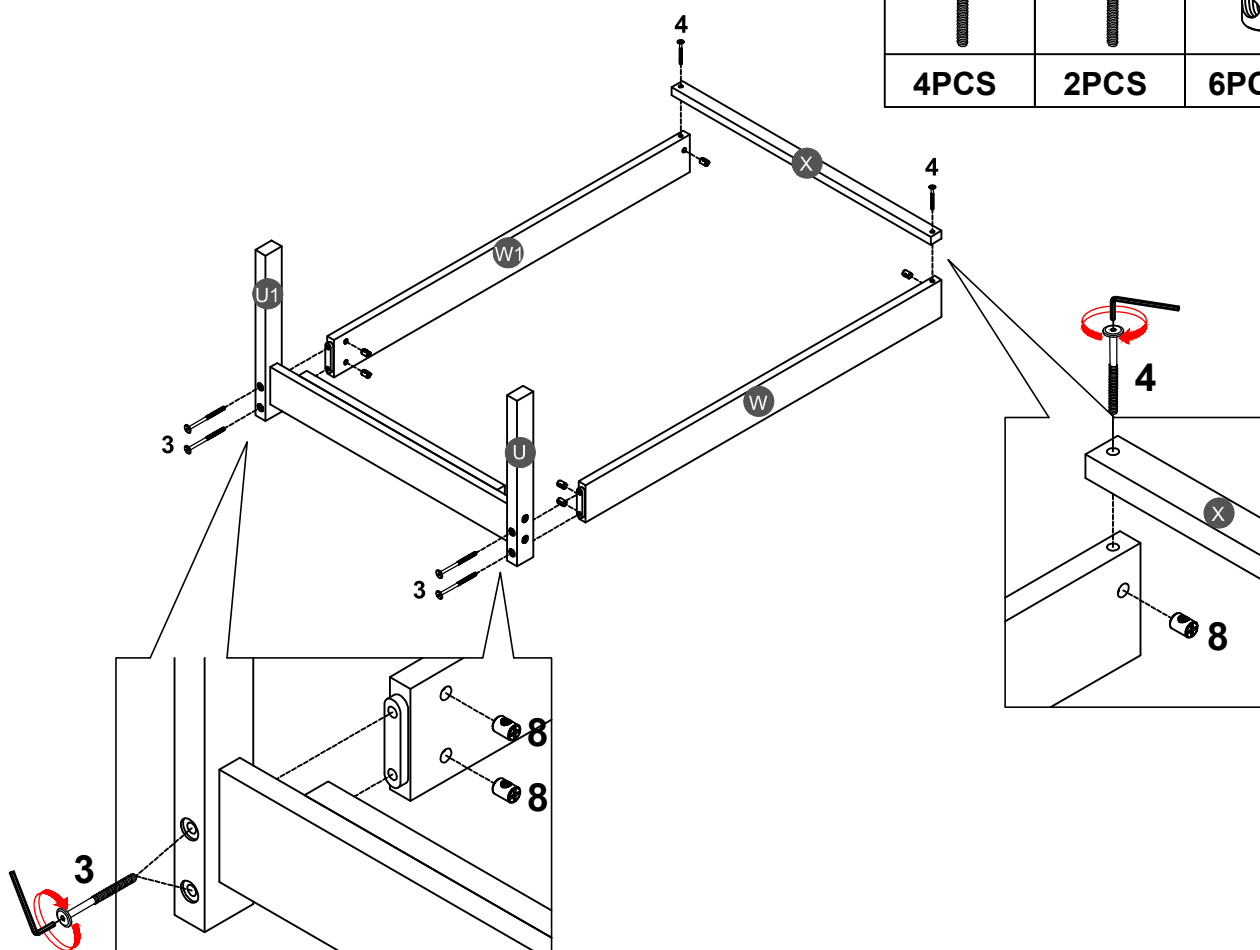


3		4		8	
4PCS		2PCS		6PCS	

STEP 17:

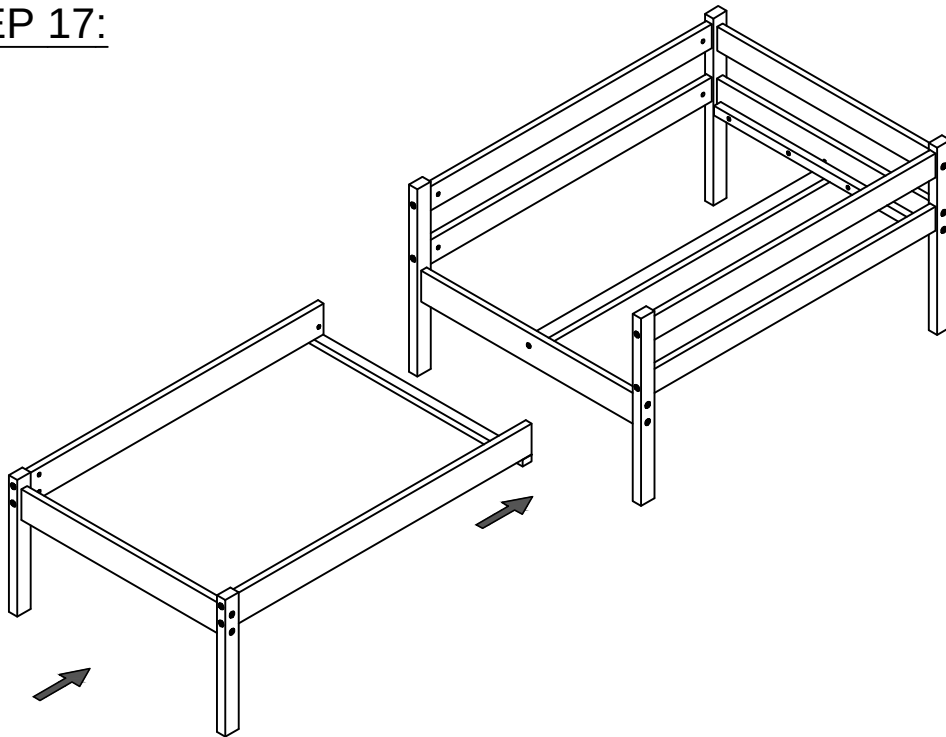


STEP 18:

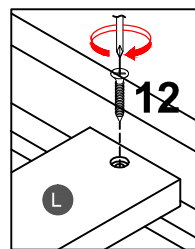


12



12PCS

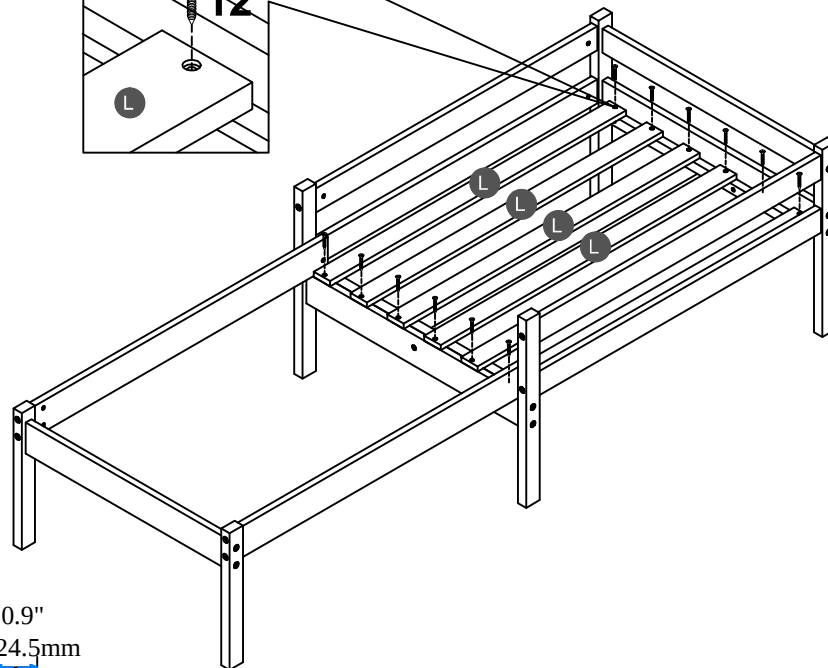

2.7" 69mm 2.7" 69mm 0.9" 24.5mm

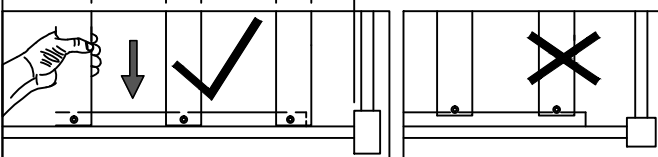




Note: Do not lock the screws of the bed slats to the outermost edge of the bed slats, you need to leave a certain space at the edges, otherwise it will cause the board to break. Do not lock the bed slats on the edge of the wood, please hold firmly before screwing, hold it in place with one hand, then lock the screw.

STEP 19:


12



10PCS

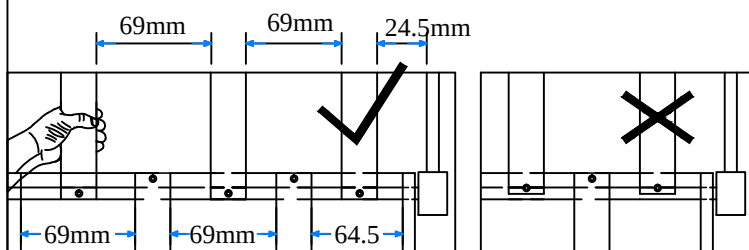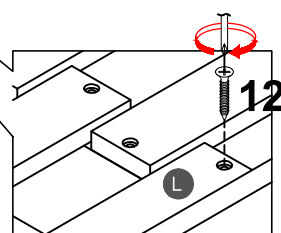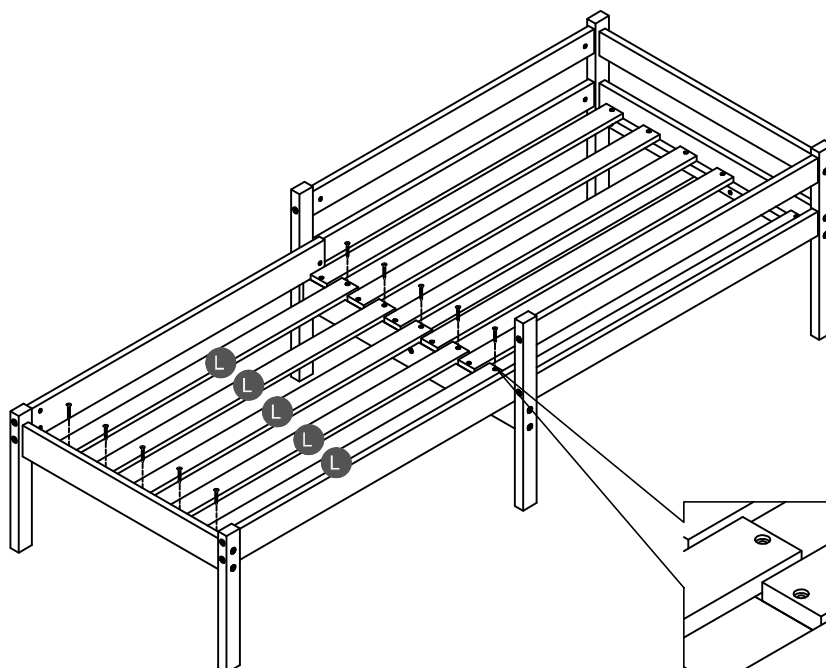

STEP 20:

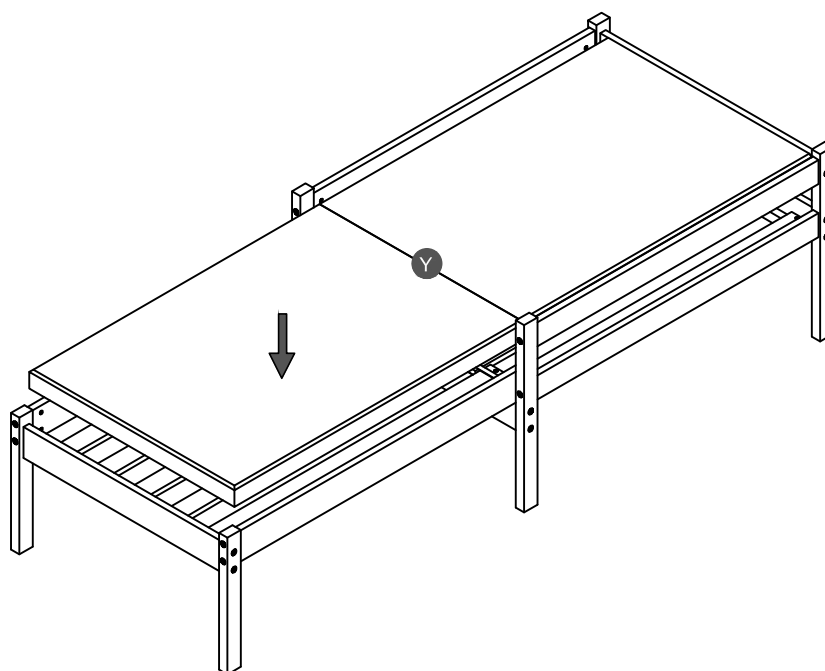

STEP 21:

