



Serial Number: MCV18-25  
R1.0

# Installation and Operating Manual

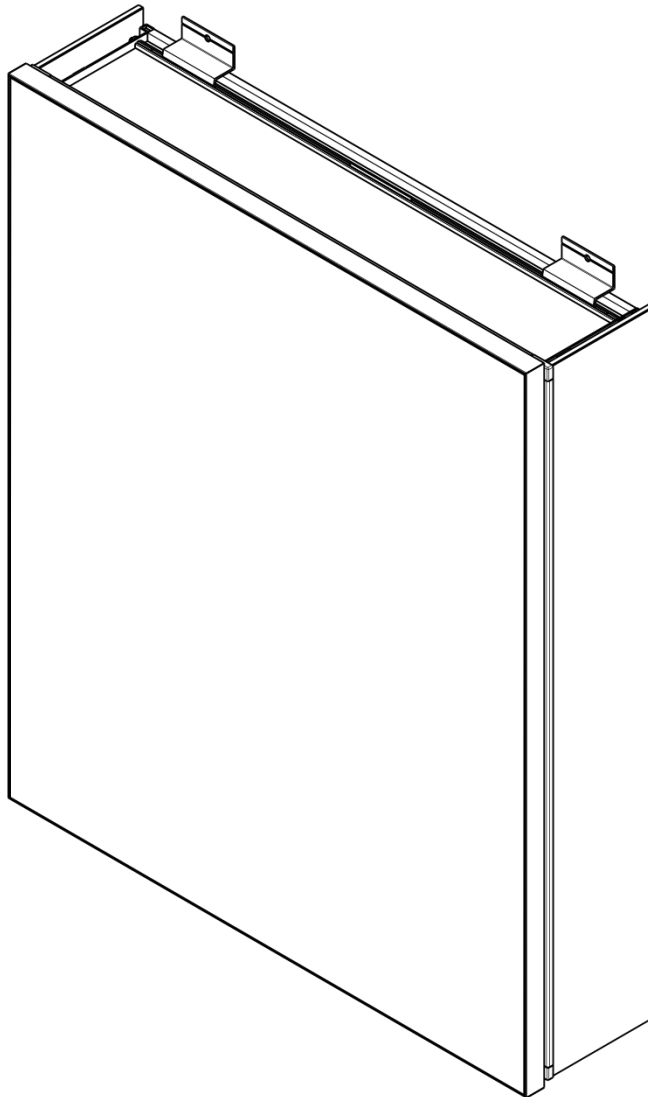

**For technical support or questions, please call  
us at + 1 302 336 8180**

## Model Specification

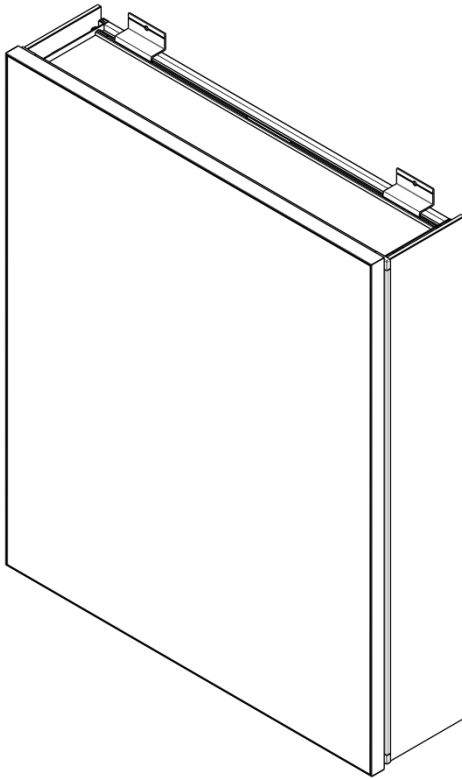

- Aluminum Frame
- Single Side Mirror
- Adjustable Shelves
- Quiet Hinge
- Recessed or surface mounting

No.	Dimension	Color	Door Type	Remark
1	16"×24"	Silver	Single door Left or Right	
2	20"×24"	Silver	Single door Left or Right	
3	24"×26"	Silver	Single door Left or Right	
4	30"×24"	Silver	Double Door	
5	36"×24"	Silver	Double Door	



**For easy and safe installation, please refer to the following:**

Read all instructions thoroughly before installing the enclosed product. Read and take note of all **Safety Precautions**, care and maintenance information.

**PLEASE KEEP THIS INSTRUCTION MANUAL FOR FUTURE REFERENCE  
DURING PRODUCT OPERATION AND MAINTENANCE.**



## WARNING AND SAFETY INSTRUCTIONS

Before installing your Medicine Cabinet, please make sure that you carefully read through this instructions sheet, refer back to them during installation to ensure your product is fitted safely and correctly. Keep the instruction for future use.

### WARNING

- Suitable for indoor use only. This product should be positioned well away from curtains and fabrics. Never cover the mirror.
- Regularly check any parts for damage, if any part is damaged the product should not be used.

### INSTALLATION SAFETY

- Inspect the product immediately upon receipt for any possible damage during transportation or missing parts. Handle the product with care and protect against knocks to all sides and edges of the glass.
- Ensure there are no hidden pipes or cables in the wall before drilling and sawing.
- Wear suitable safety glasses when drilling. Take care if drilling on tiled surfaces in case the drill slips.


### CAUTION

NOTE: The important safeguards and instructions that appear in this manual are not meant to cover all possible conditions and situations that may occur. It must be understood that common sense, caution and care are factors that can't be built into any product. These factors must be supplied by the person(s) caring for and operating the fixture. Do not install this fixture in hazardous locations.

## PARTS SUPPLIED

**Vertical Panels**


×2



①

**Horizontal Panels**


×2

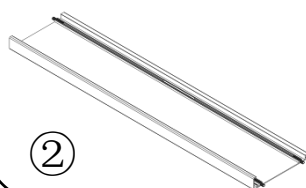

②

**Backboard**


×1

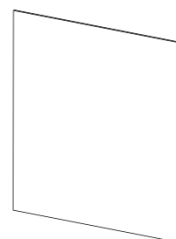

③

**Cabinet Connectors (L)**


×4

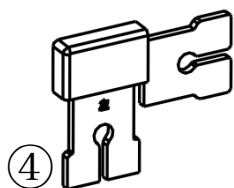

④

**Cabinet Connectors (R)**


×4

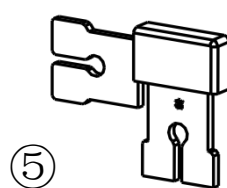

⑤

**Flange Nuts**


×10

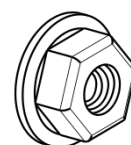

⑥

**Side Mirror Bracket**

×4

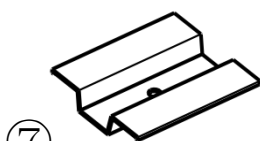

⑦

**Screws with base and decorative cover**

×4



⑧

**M4 Screws A**


×6



⑨

**Shelves**

×2

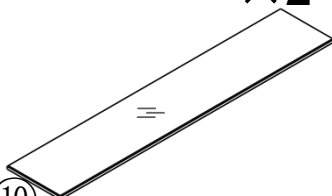

⑩

**Shelves support Clips**


×10



⑪

**Side panels with Mirror**

×2

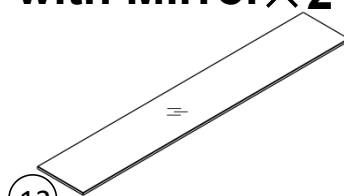

⑫


## PARTS SUPPLIED

**Bottom Mounting  
Bracket** ×1




(13)

**Upper Mounting  
Clips** ×2

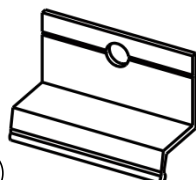


(14)

**Hinges**  
×2~4

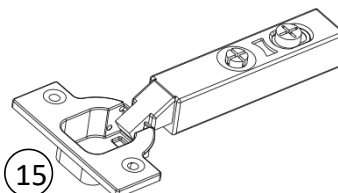


(15)

**Hexagonal  
socket wrench** ×1

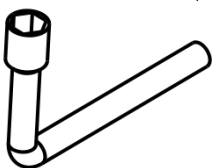


(16)

**M4 Screws  
B** ×6~10



(17)

**Door**  
×1~2

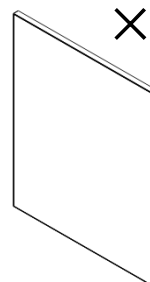


(18)

**Anchor Screws**  
×5~7



(19)

**Anchors**  
×5~7

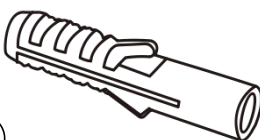


(20)

## TOOLS REQUIRED


**Electric hand  
Drill**




**Pencil**

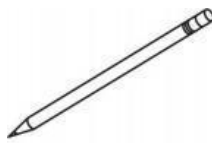

**Level**

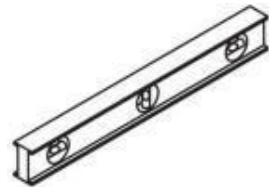


**Tape**

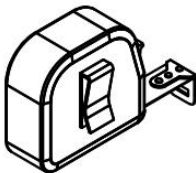

**Gloves**




**Safety Glasses**

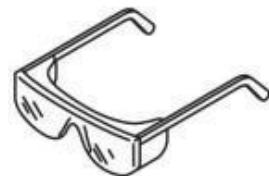


**Phillip  
Screw Driver**



**Drill Bit  
8mm(5/16")**

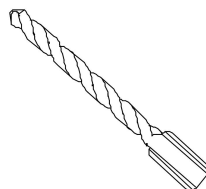

**Hammer**

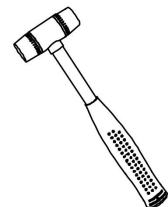

# Installation Instruction




The medicine cabinet supports two installation methods:  
**1.Surface Installation** and **2.Embedded Installation**.

Please choose the installation way as needed.




## Cabinet assembly

### STEP 1

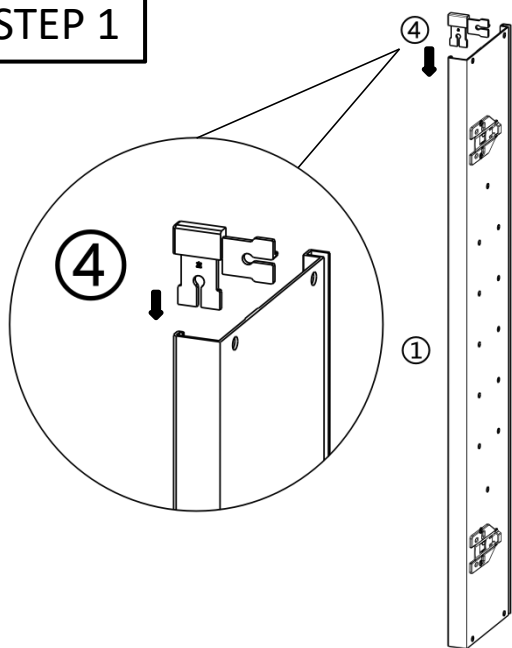


Insert the cabinet connectors (L) ④ into the upper end of the vertical **panel** ① as shown in the diagram

### STEP 2

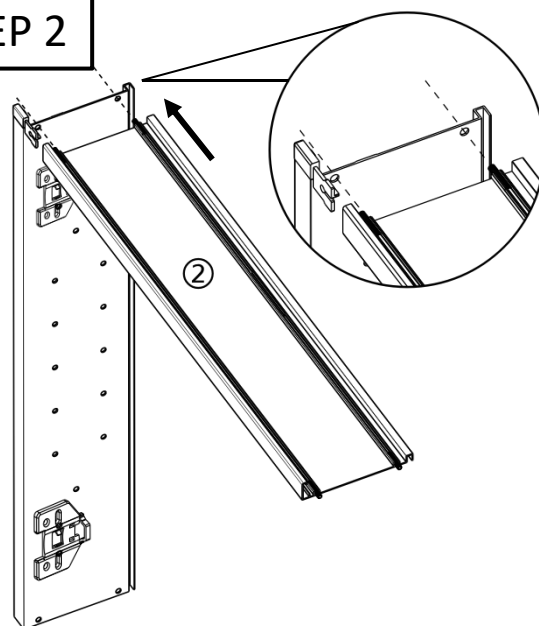


Insert the horizontal **panel** ② into the screw hole at the upper end of the vertical **panel** ① and the cabinet connectors (L) ④ according to the diagram

### STEP 3

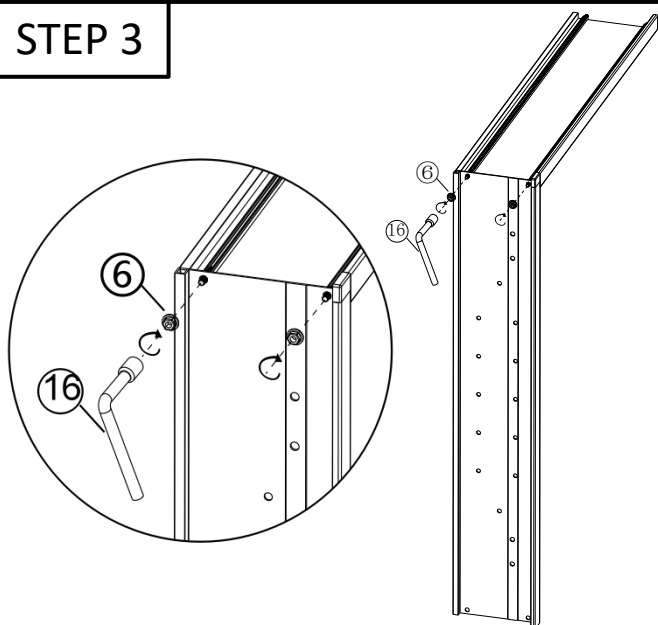

Use an inner hexagonal socket wrench ⑯ (included) to lock the flange nut ⑥ clockwise onto the screw on the horizontal wall ②


### STEP 4

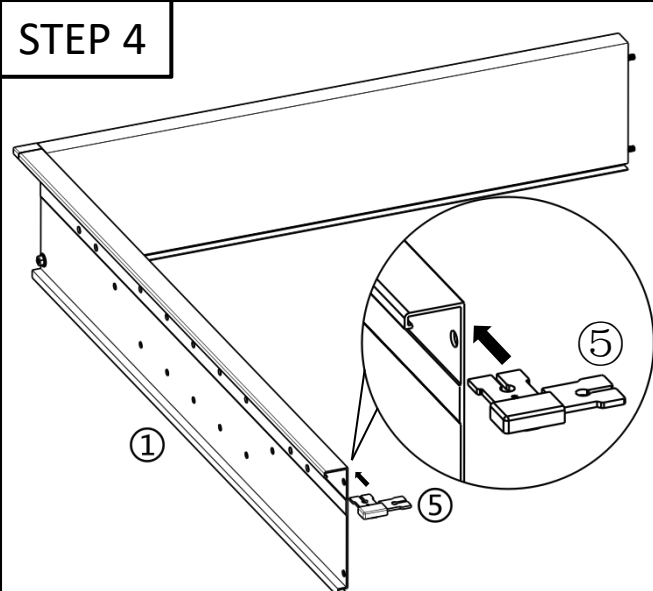

Insert the cabinet connector (R) ⑤ into the lower end of the vertical **panel** ① as shown in the diagram


## Cabinet assembly

### STEP 5

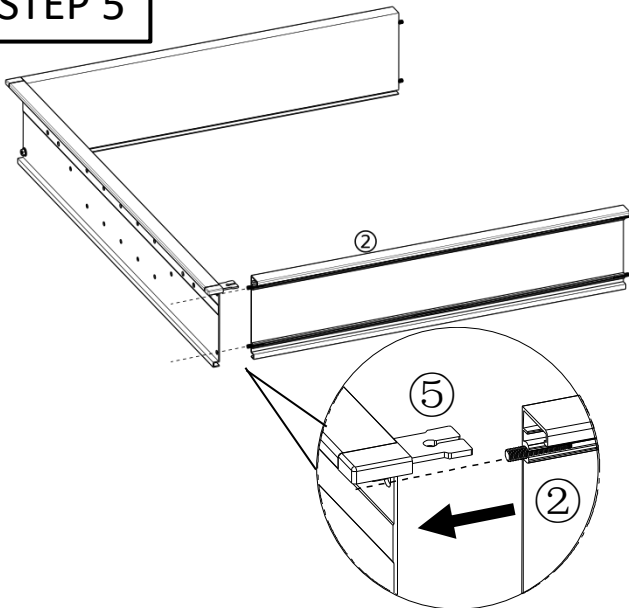


Insert the horizontal panel ② into the screw hole at the upper end of the vertical panel ① and the cabinet connectors (R) ⑤ according to the diagram

### STEP 6

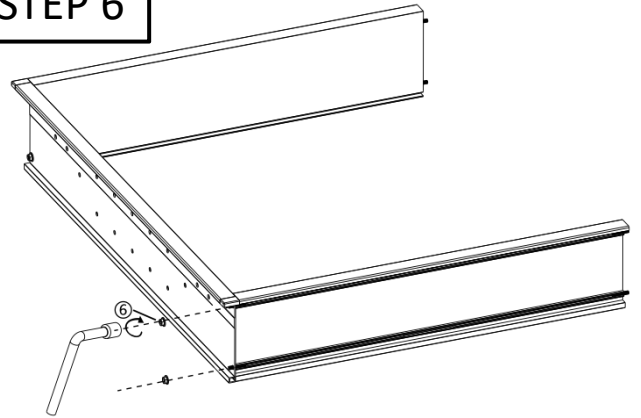


Refer to STEP 3 and tighten the horizontal panel ② with a flange nut ⑥

### STEP 7

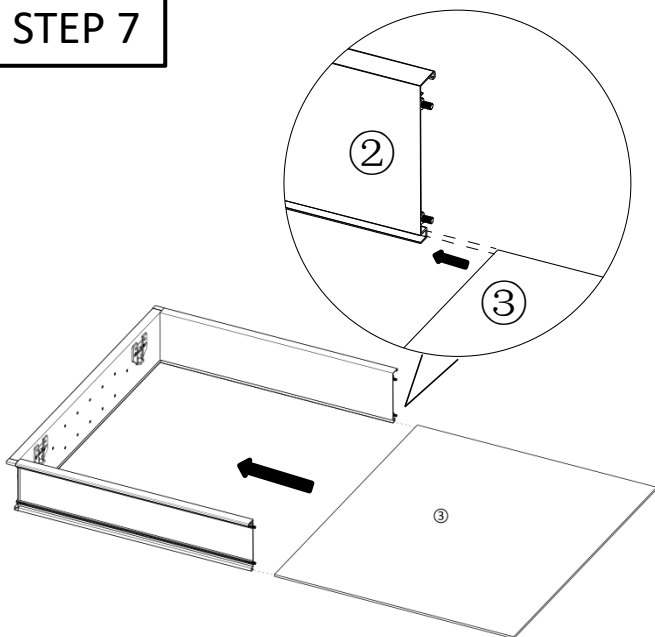

Insert the back panel ③ into the slot at the bottom of the horizontal panel ② and push it all the way in


### STEP 8

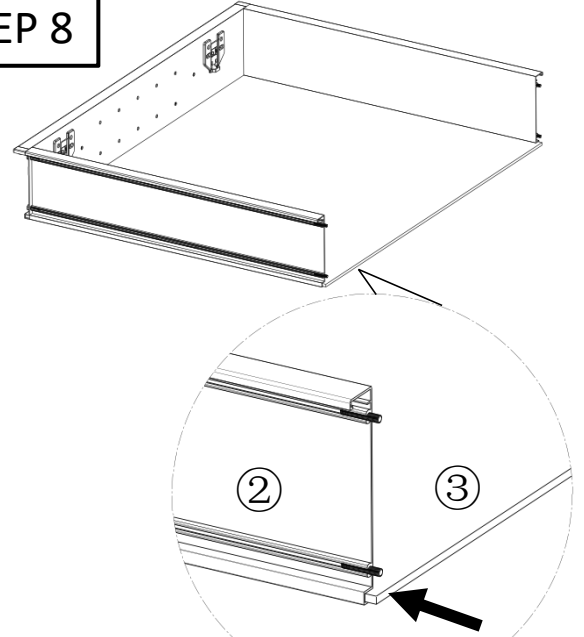

Once the back panel is installed completely it will protrude approximately 1/4 inch beyond the ② Horizontal panel.

## Cabinet assembly

### STEP 9

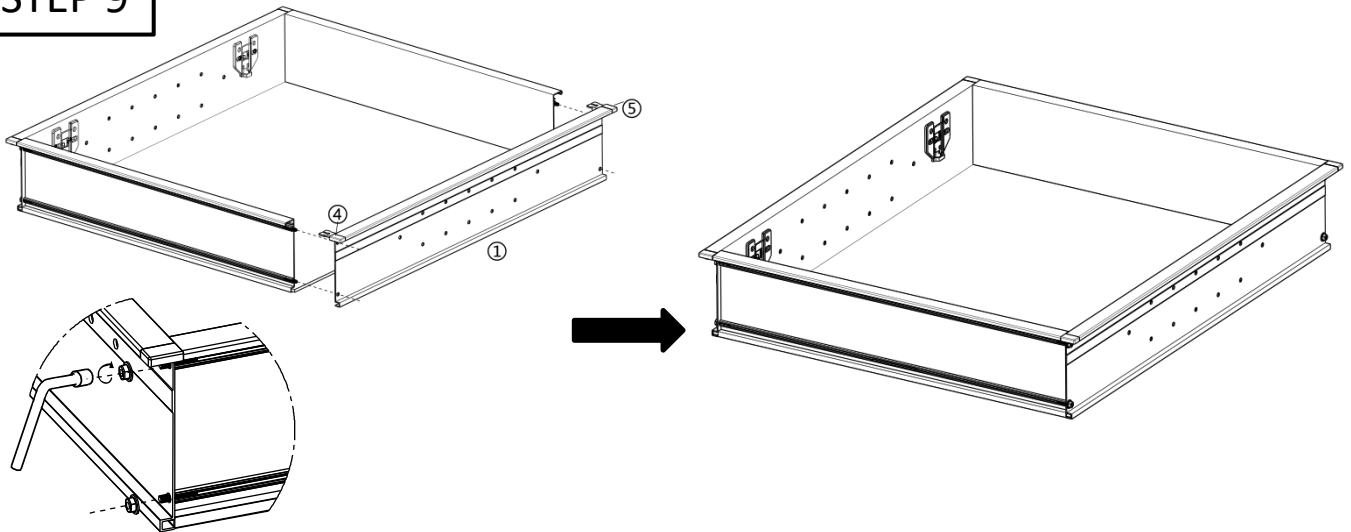


Refer to STEP 1 and STEP 3 to install cabinet connectors ④ and ⑤ onto vertical panel ①, and tighten them onto horizontal panel ② with flange nut ⑥

## Surface Installation Instruction

Place the medicine cabinet against the wall and mark the place of the cabinet. Draw a line on the wall with a level using a marker to indicate where the cabinet bottom is.

**Attention: Please hang the cabinet at least 3 inches above the faucet.**

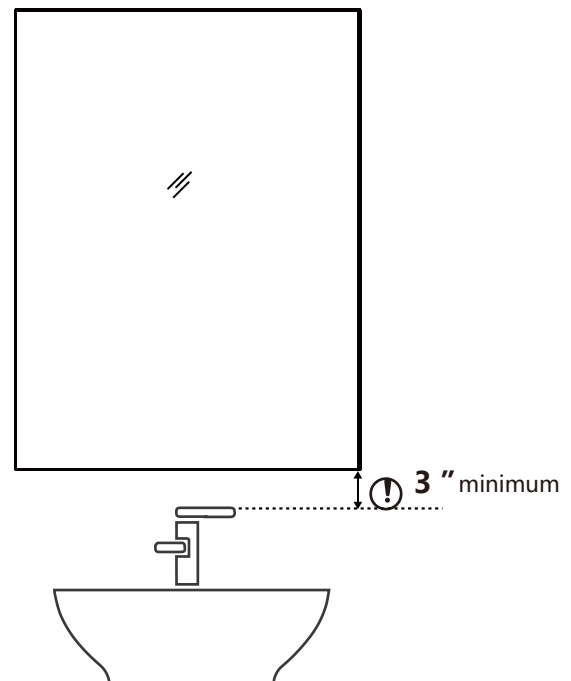


### STEP 1

## Surface Installation Instruction




Bottom mounting brackets (13) must be attached to furring strip/channel or wall studs

**Keep in mind that the studs are 16" center to center**

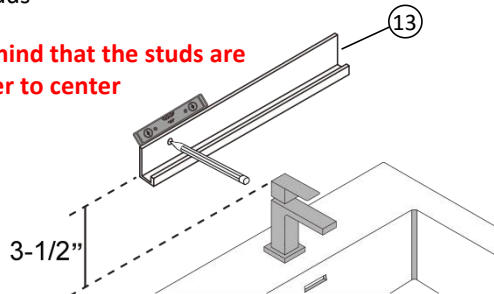

Mark spots for the bottom bracket.


STEP 2

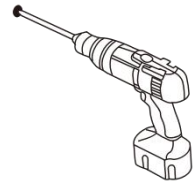

0


Drill holes in the wall.

STEP 3

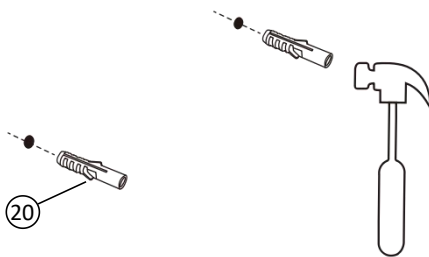


Plug the plastic anchors (20) into the holes. (If needed)

STEP 4

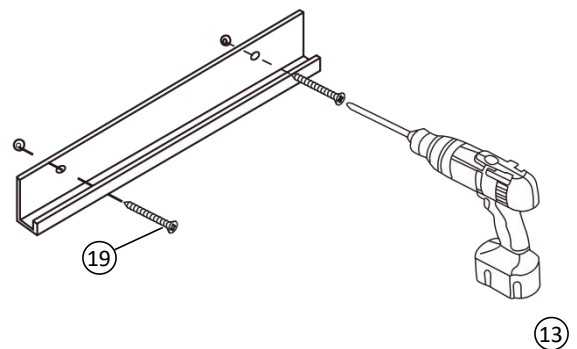


Fasten the mounting bracket to the wall.

STEP 5

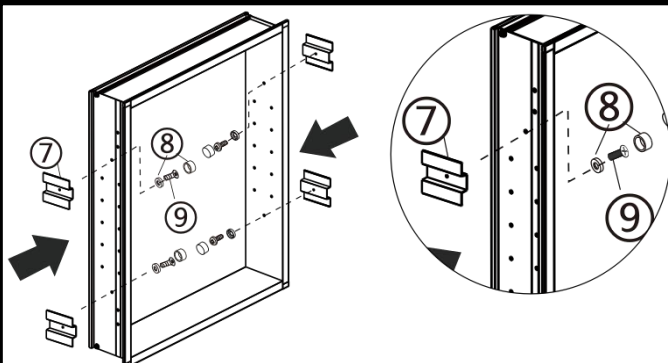

Install a screw base into an M4 screw A (8) (9), then connect it to the side mirror bracket (7) through the vertical wall and tighten it. Press in the screw decorative cover (9) on its base. Repeat this operation for all four (4) brackets.





STEP 6

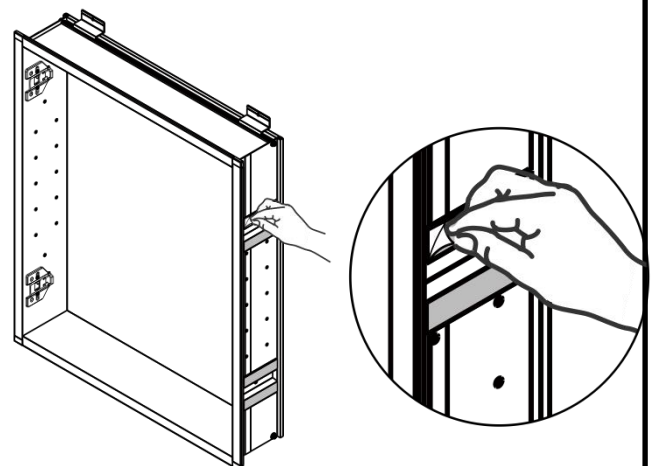

Remove the adhesive tape film on the side mirror brackets (7) on both sides of the cabinet


STEP 7

## Surface Installation Instruction

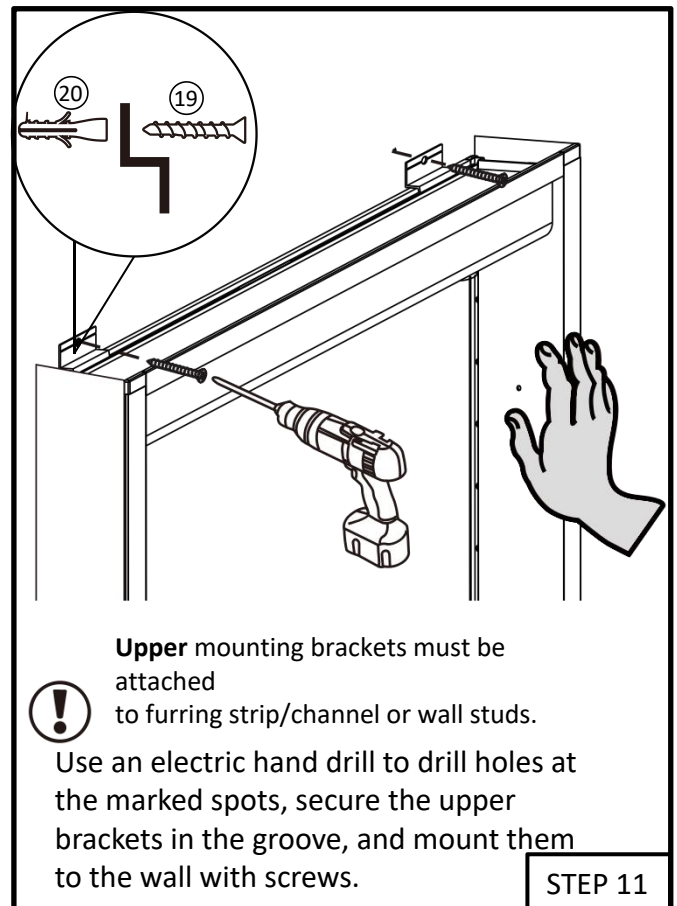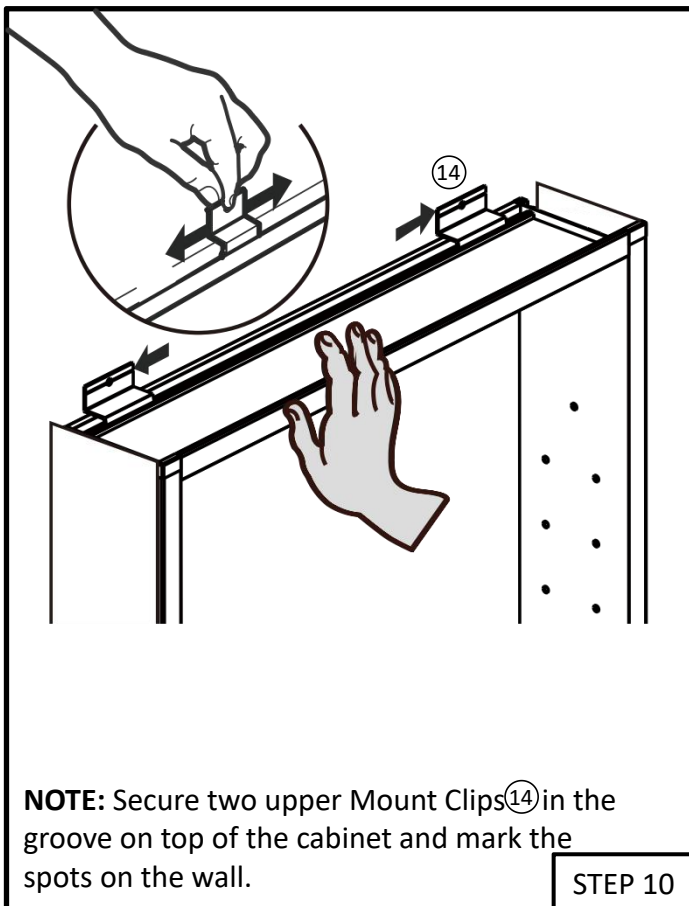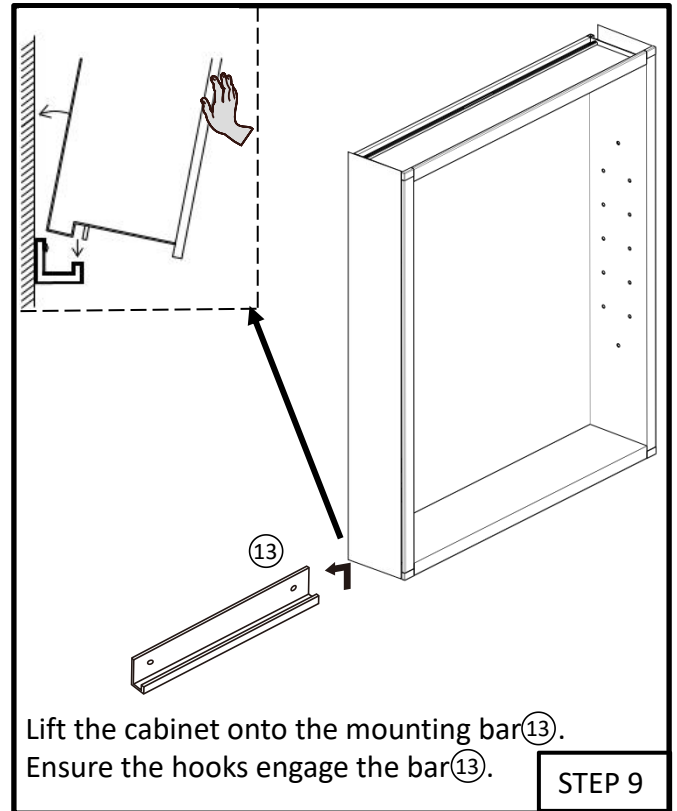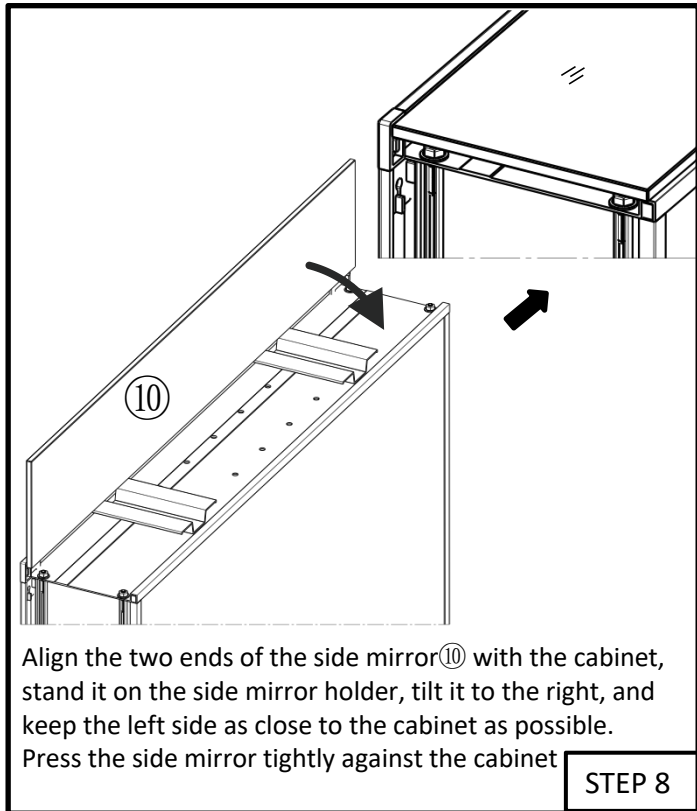


## Surface Installation Instruction

### STEP 12

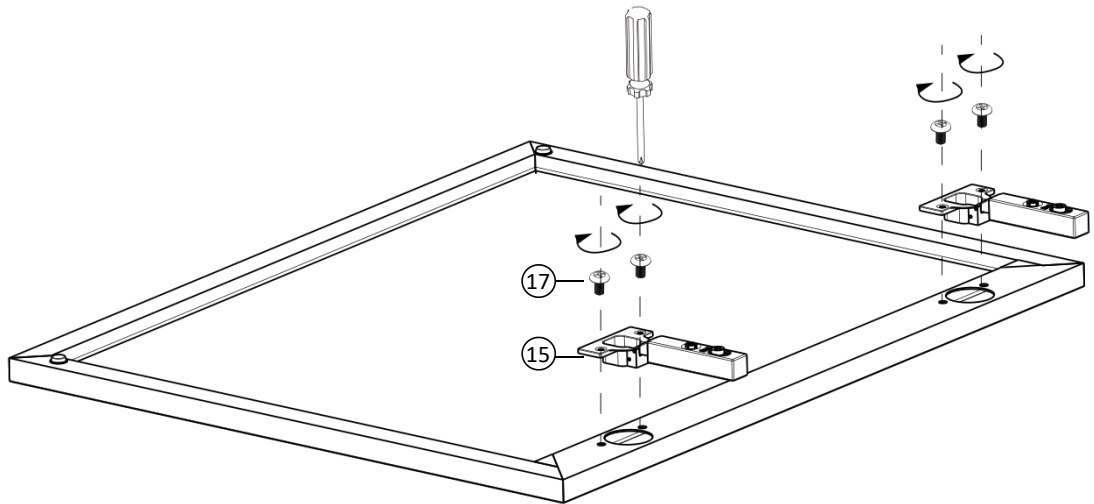

Install hinge ⑮ onto mirror door ⑱ with M4 screw B ⑱.

**Insert clear snap-in shelf clips into holes on the side panels of the cabinet.**

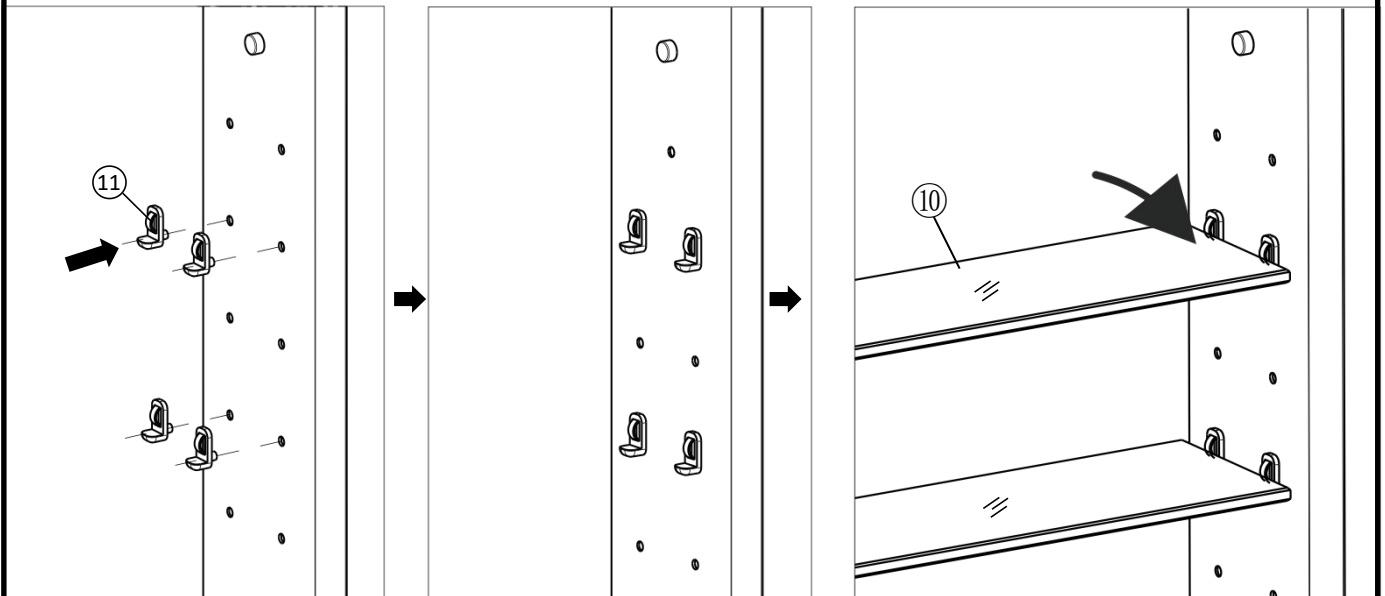


Insert the Shelf Clips ⑪ into the holes on both sides as shown in the diagram, then place one end of the Shelves ⑩ onto the left Shelf Clips ⑪ first, and then firmly press it down into the Shelf Clips ⑪ on the right side


### STEP 13

## Step14: Cabinet Door Installation

1.Insert the hinges to the base ,then connect the doors with the cabinet

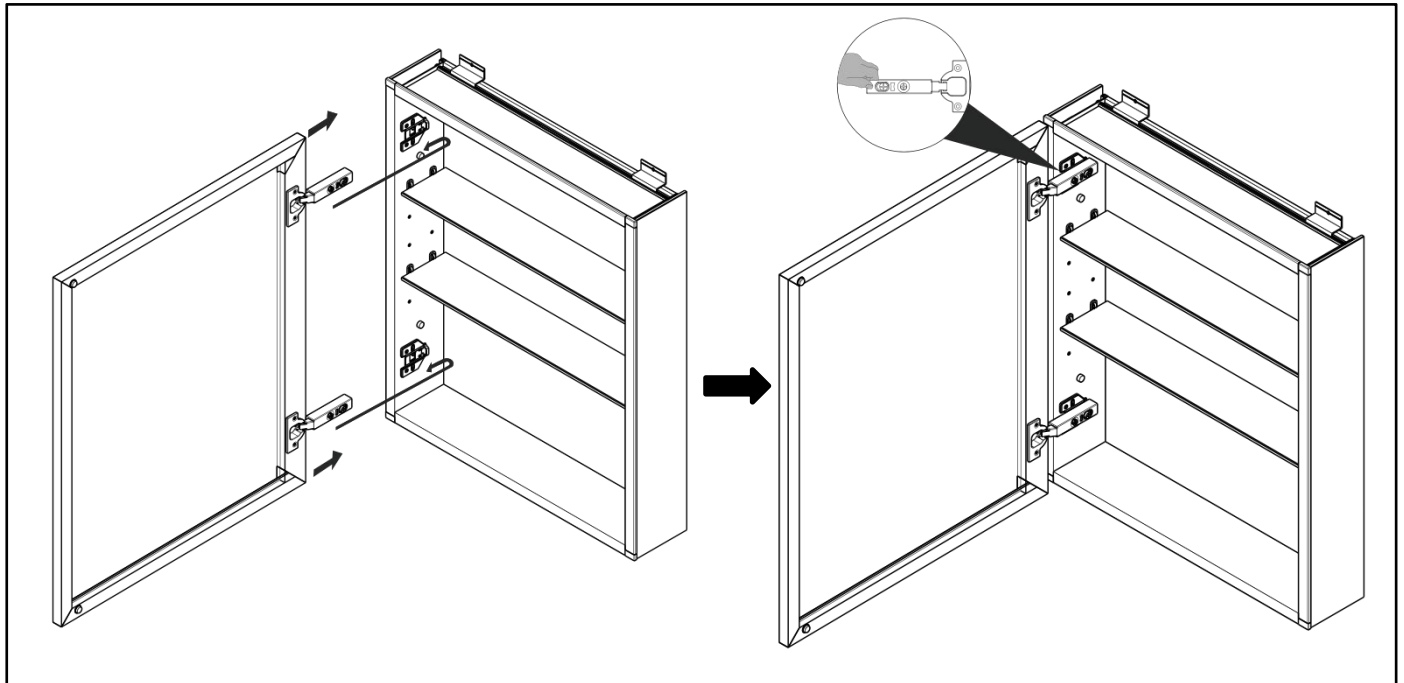


2. hinge adjustment

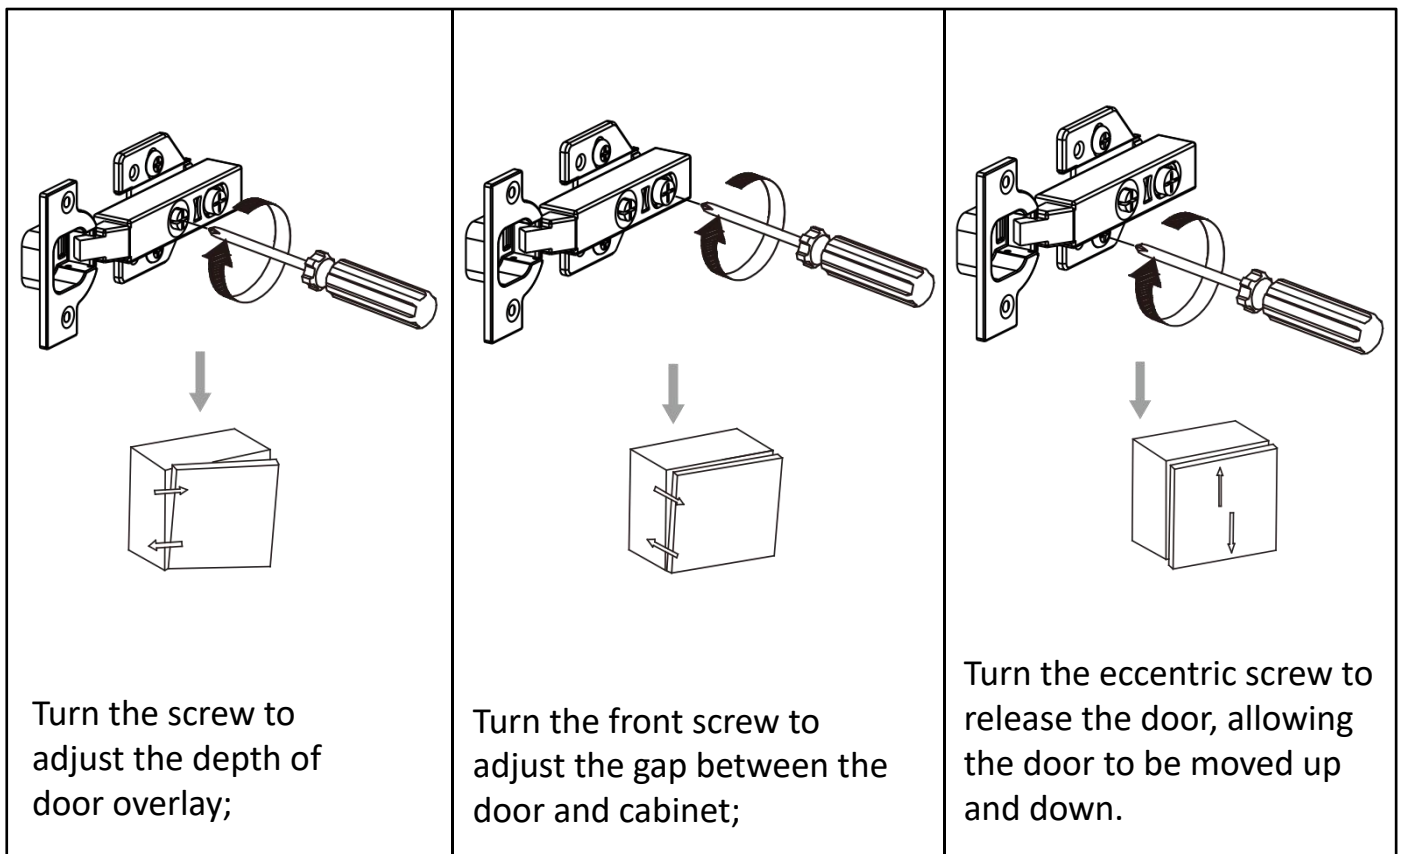



## Embedded Installation Instruction

Before installing, it is necessary to determine the opening size, which can be referred to in the table below.

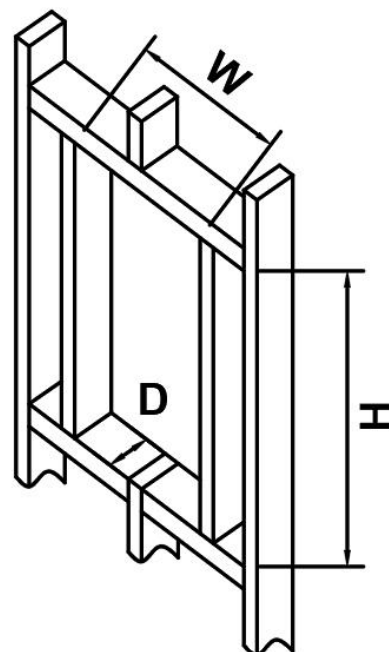


Actual cabinet		Wall opening dimensions for embedded installation all in Inches.		
No.	Dimensions	W (Width)	H (Height)	D (Depth)
1	16"×24"	15-1/4	22-7/8	4
2	20"×24"	19-1/4	22-7/8	4
3	24"×26"	23-1/4	24-7/8	4
4	30"×24"	29-1/4	22-7/8	4
5	36"×24"	35-1/4	22-7/8	4




## Embedded Installation Instruction

Determine the size of the opening

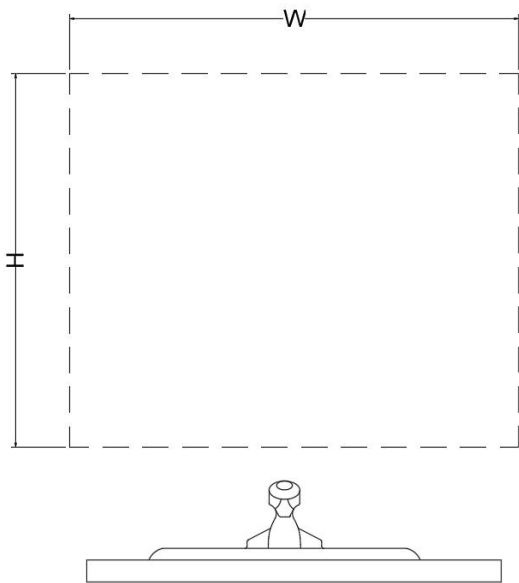


STEP 1

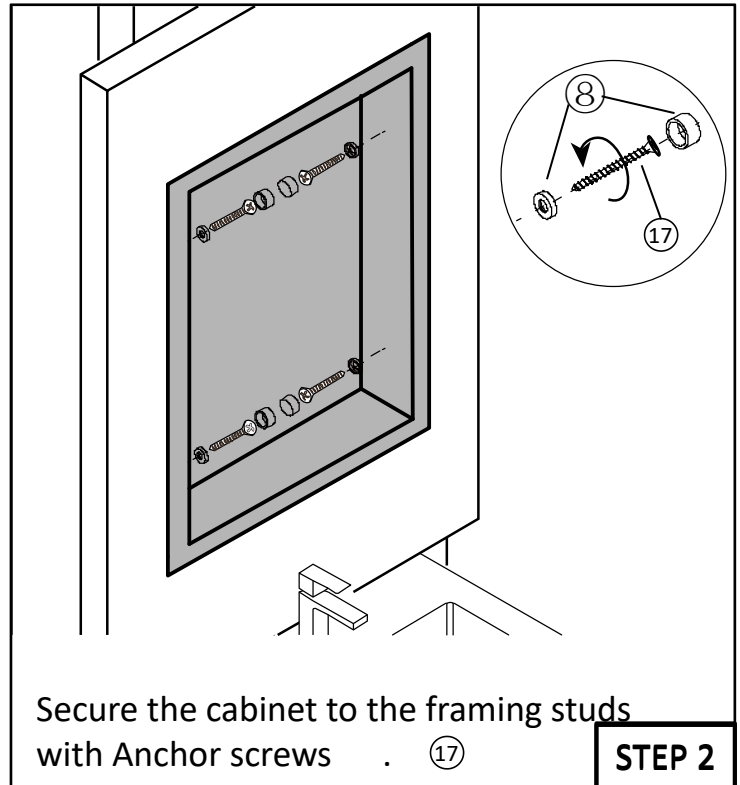

Secure the cabinet to the framing studs with Anchor screws (17)

STEP 2


STEP 3

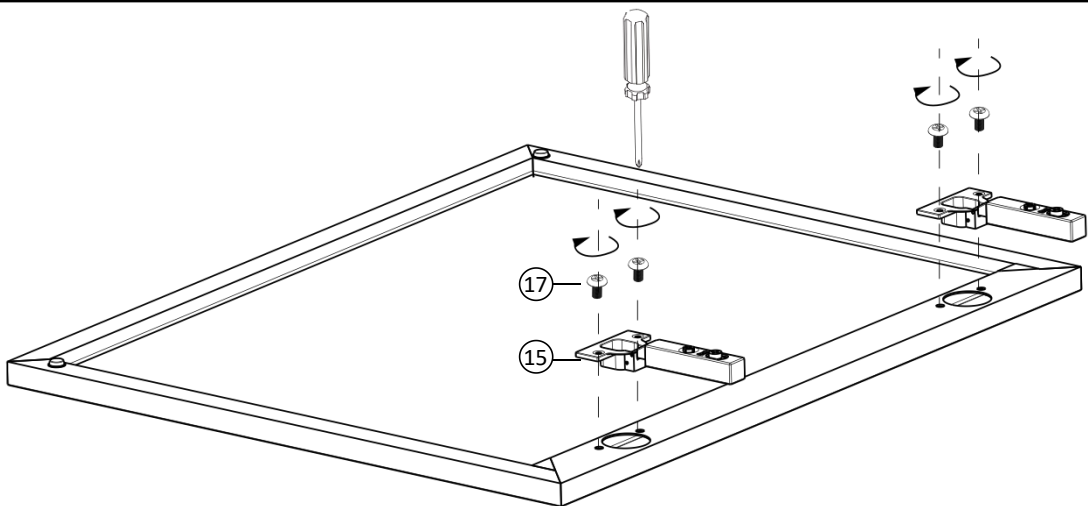

Install hinge (15) onto mirror door (18) with M4 screw B(18).

\*All diagrams are for reference only. All model dimensions and proportion position will vary.

**Insert clear snap-in shelf clips into holes on the sides of the cabinet.**

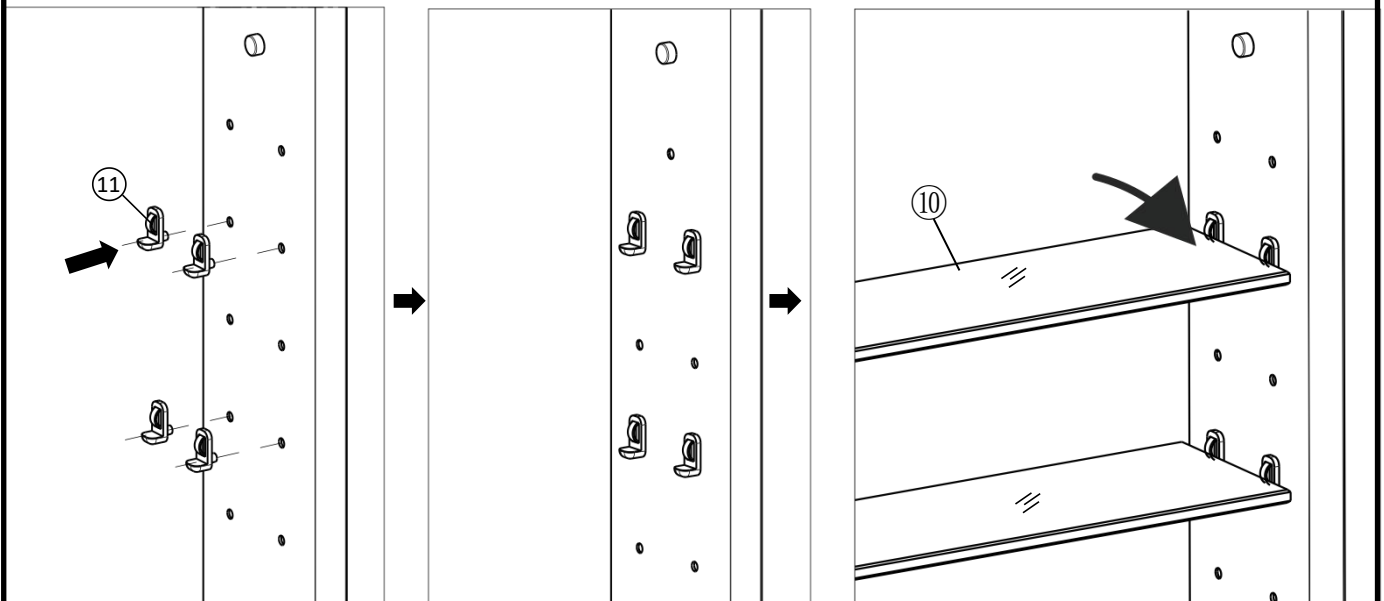


Insert the Shelf Clips ⑪ into the holes on both sides as shown in the diagram, then press one end of the Shelves ⑩ onto the left Shelf Clips ⑪ first, and then firmly press it down into the Shelf Clips ⑪ on the right side

STEP 4




## Step 5: Cabinet Door Installation

1. Insert the hinges to the base, then connect the doors with the cabinet

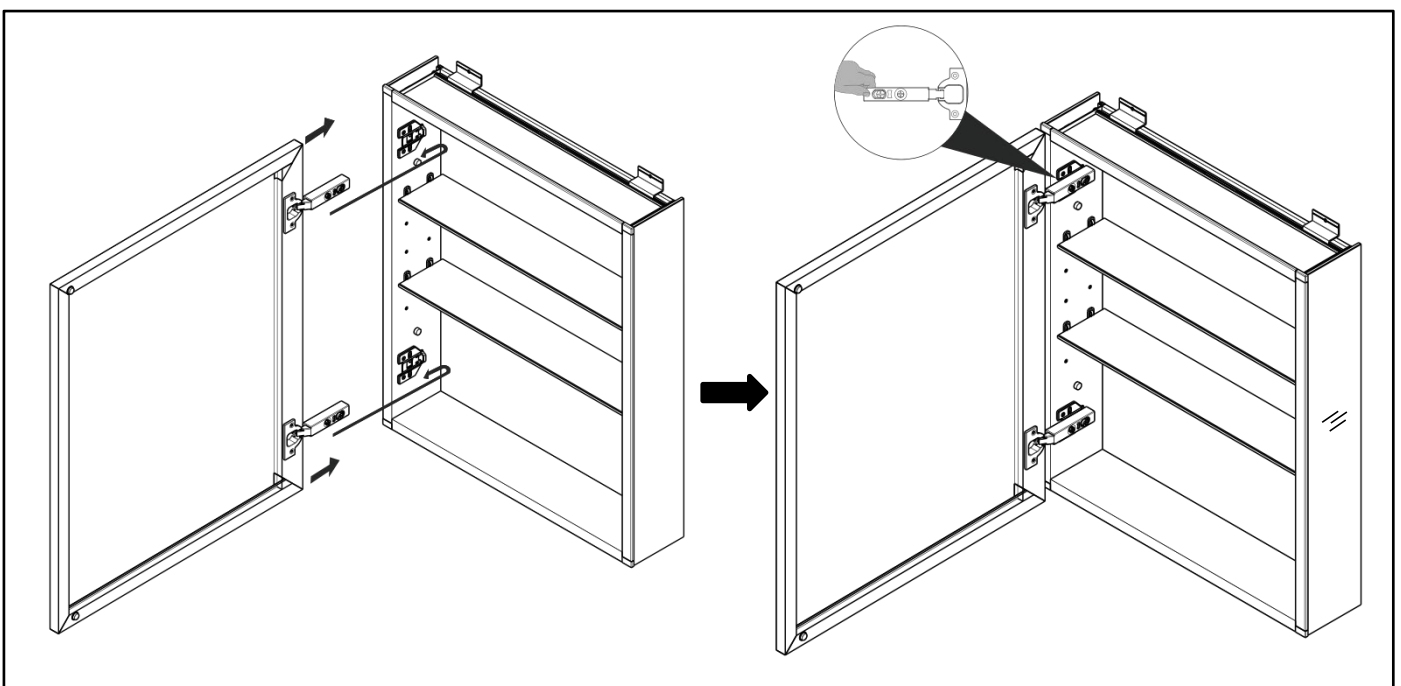

## Step 6: Cabinet Door Installation

### 2. hinge adjustment

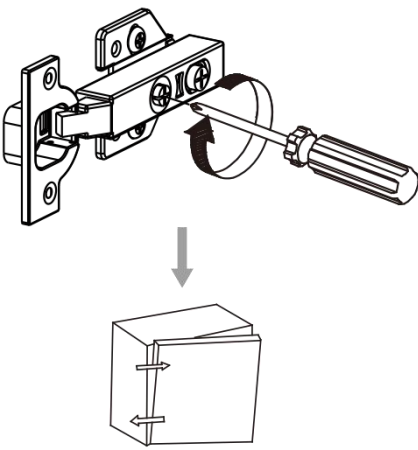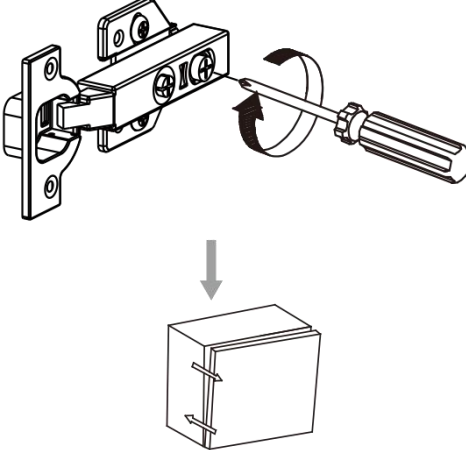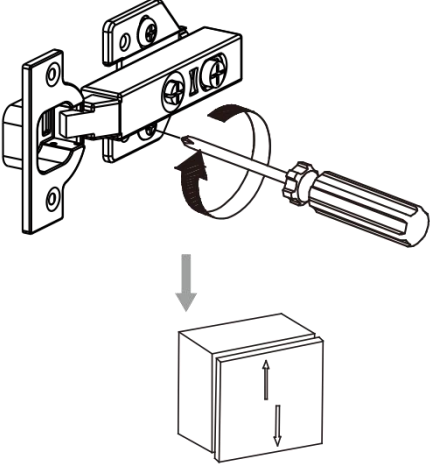 <p>Turn the screw to adjust the depth of door overlay;</p>	 <p>Turn the front screw to adjust the gap between the door and cabinet;</p>	 <p>Turn the eccentric screw to release the door, allowing the door to be moved up and down.</p>
--	--	---