


ILLUMINATE VINTAGE


WALL SCONCE INSTALLATION GUIDE

For any inquiries or additional help, please contact support@illuminatevintage.com


INCLUDED HARDWARE FOR SCONCES (CHANDELIERS, SEMI-FLUSH, AND PENDANTS ON THE REVERSE SIDE)

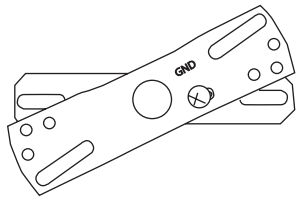


Swivel Crossbar

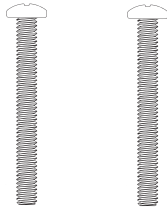

8-32 Crossbar Screws (2)

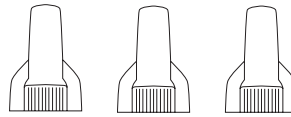

Wire Nuts (3)

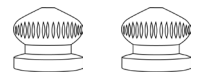


Acorn Nuts (2)

A SPECIAL NOTE ABOUT RAW BRASS

Our brass is raw and unlacquered. Brass is particularly susceptible to tarnishing with oils from our hands and chemicals like ammonia in Windex. Use gloves while installing these fixtures to prevent fingerprinting. If cleaning the brass is needed, we use Brasso. If you choose, you may clear coat the brass to prevent any tarnishing with a clear spray lacquer. After extensive testing, our favorite is Krylon ColorMaster CoverMax Clear Gloss.

INSTALLATION INSTRUCTIONS

Please note: It is always recommended that a licensed electrician install electrical fixtures. MAKE SURE THE ELECTRICITY IS OFF.

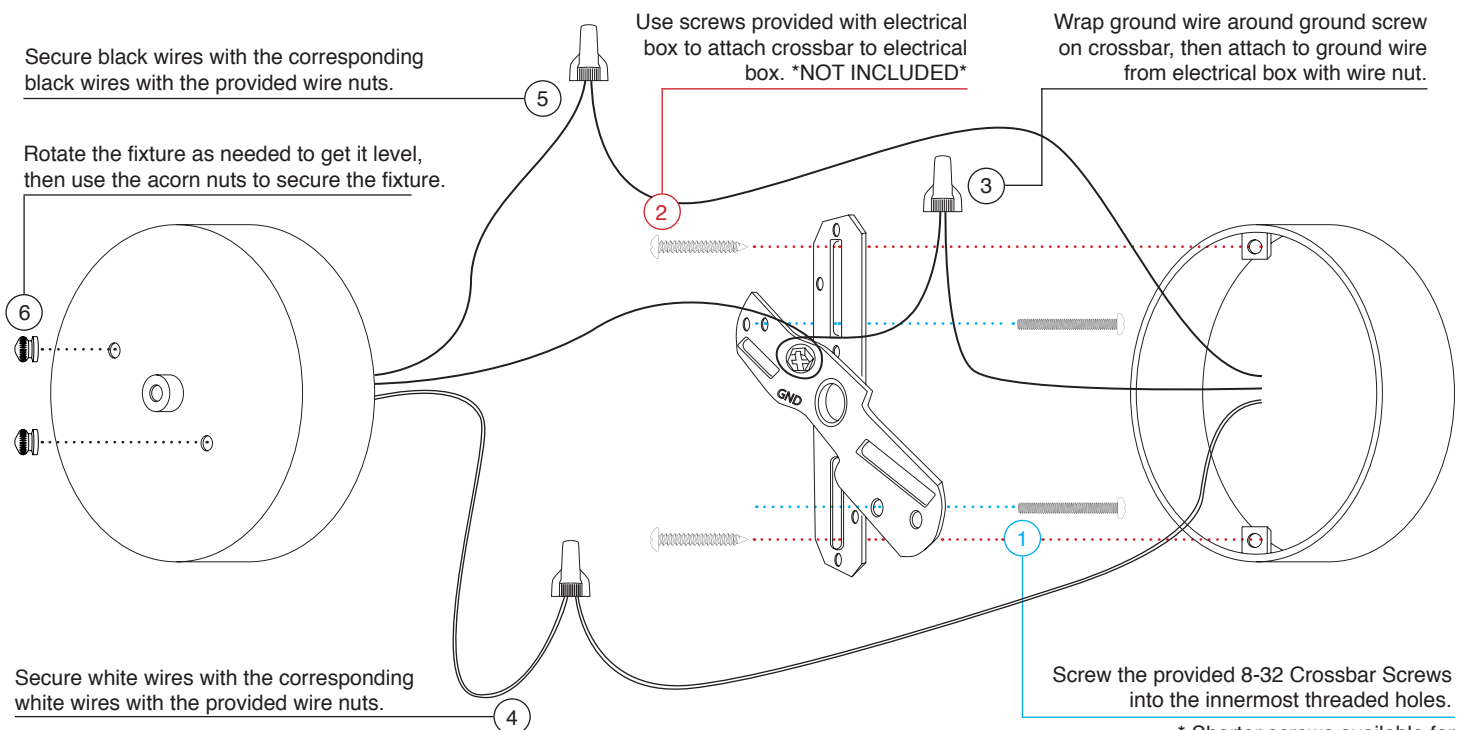


* Shorter screws available for no charge upon request *

ILLUMINATE VINTAGE


CHANDELIER, SEMI-FLUSH & PENDANT INSTALLATION GUIDE

For any inquiries or additional help, please contact support@illuminatevintage.com


INCLUDED HARDWARE (WALL SCONCES ON THE REVERSE SIDE)

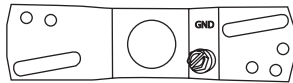


Fixed Crossbar

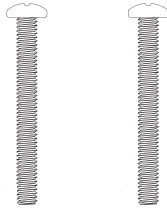

8-32 Crossbar Screws (2)

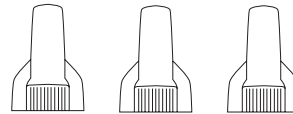

Wire Nuts (3)

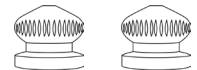

Acorn Nuts (2)

A SPECIAL NOTE ABOUT RAW BRASS

Our brass is raw and unlacquered. Brass is particularly susceptible to tarnishing with oils from our hands and chemicals like ammonia in Windex. Use gloves while installing these fixtures to prevent fingerprinting. If cleaning the brass is needed, we use Brasso. If you choose, you may clear coat the brass to prevent any tarnishing with a clear spray lacquer. After extensive testing, our favorite is Krylon ColorMaster CoverMax Clear Gloss.

INSTALLATION INSTRUCTIONS

Please note: It is always recommended that a licensed electrician install electrical fixtures. MAKE SURE THE ELECTRICITY IS OFF.

CHANDELIER/SEMI-FLUSH

Screw the provided 8-32 Crossbar Screws into the innermost threaded holes.

* Shorter screws available for no charge upon request *


Wrap ground wire around ground screw on crossbar, then attach to ground wire from electrical box with wire nut.

Use screws provided with electrical box to attach crossbar to electrical box. *NOT INCLUDED*

Secure white and black wires with the provided wire nuts.

Secure fixture using the acorn nuts.

Thread black & white wires through down rod then attach to canopy.

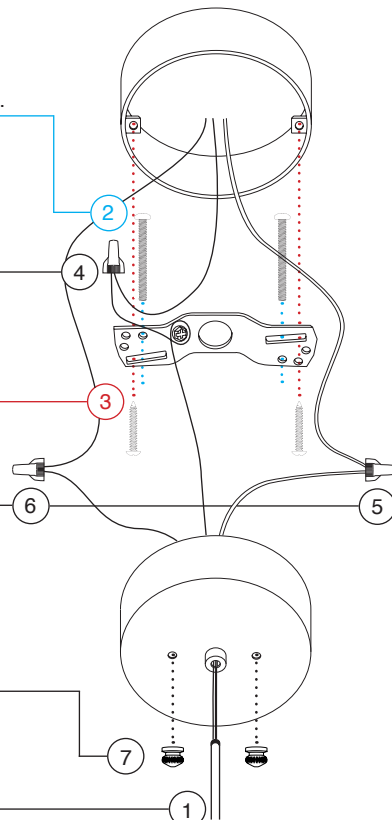

PENDANT

Pendant fixtures would follow the same installation instructions as the chandeliers, however you can adjust the wire length as needed for your installation.

