








Installation video

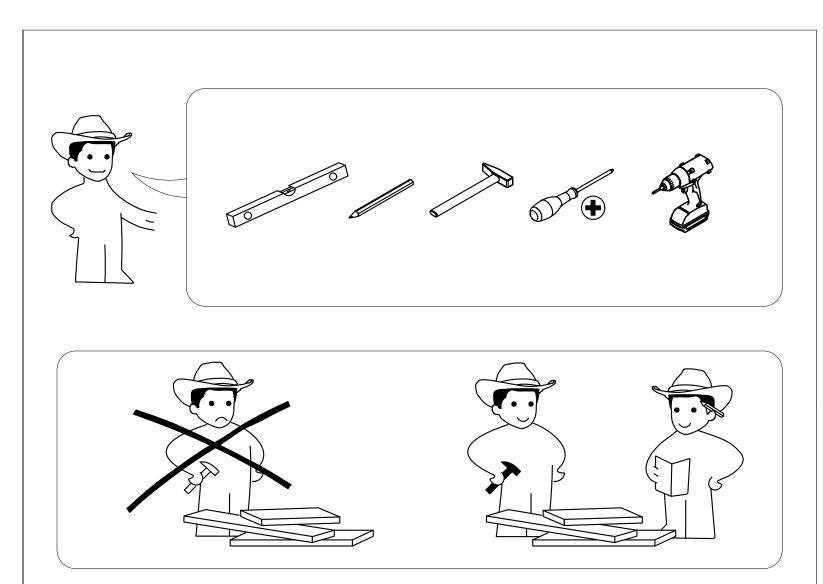


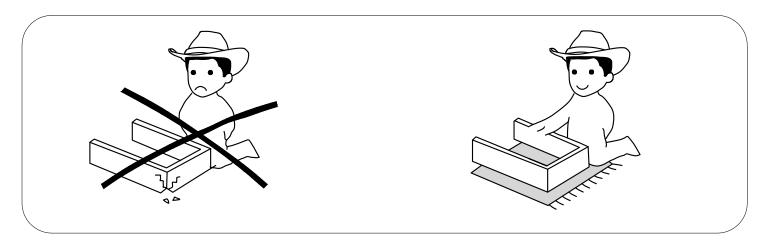


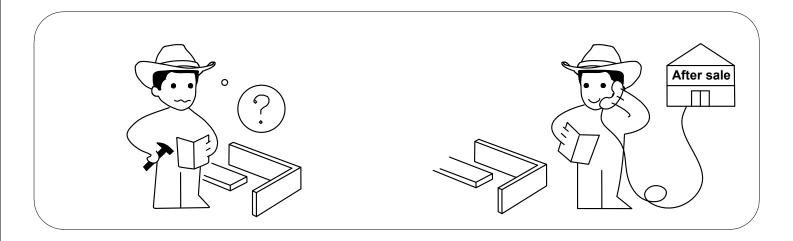

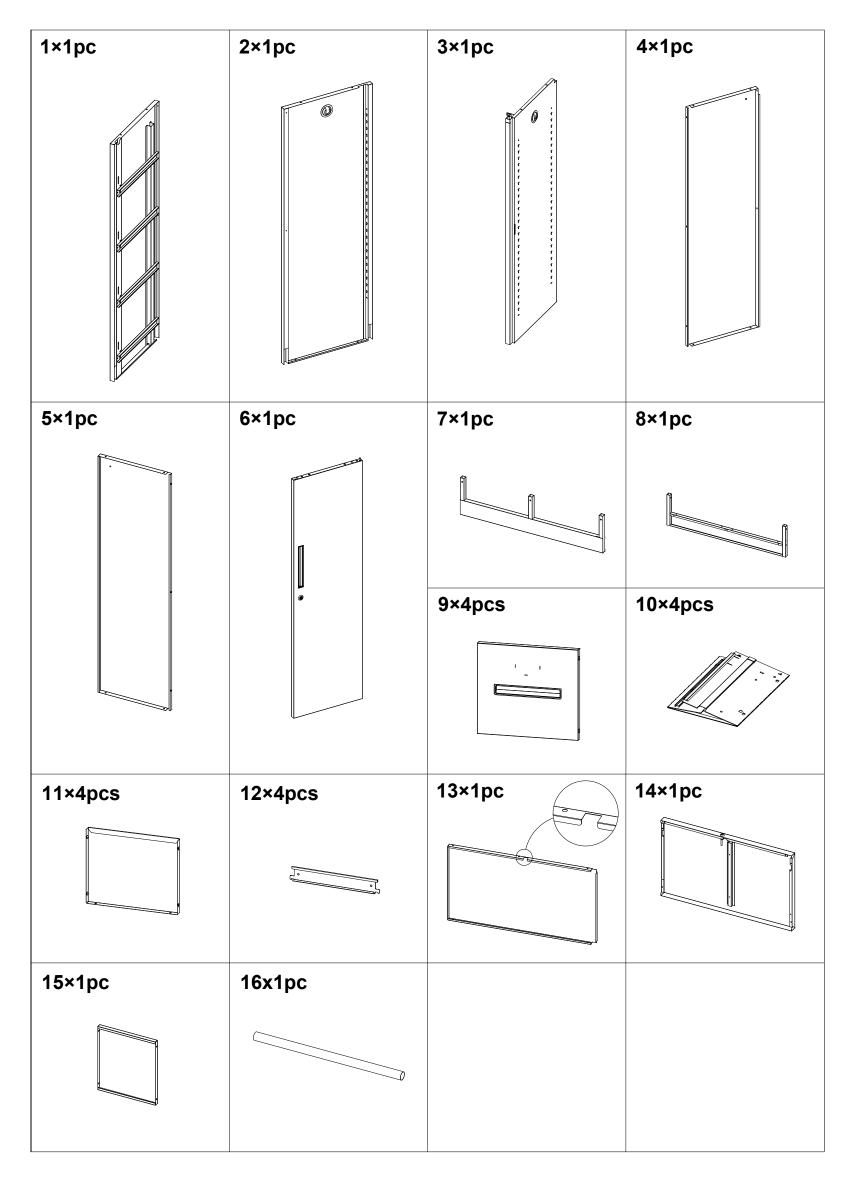


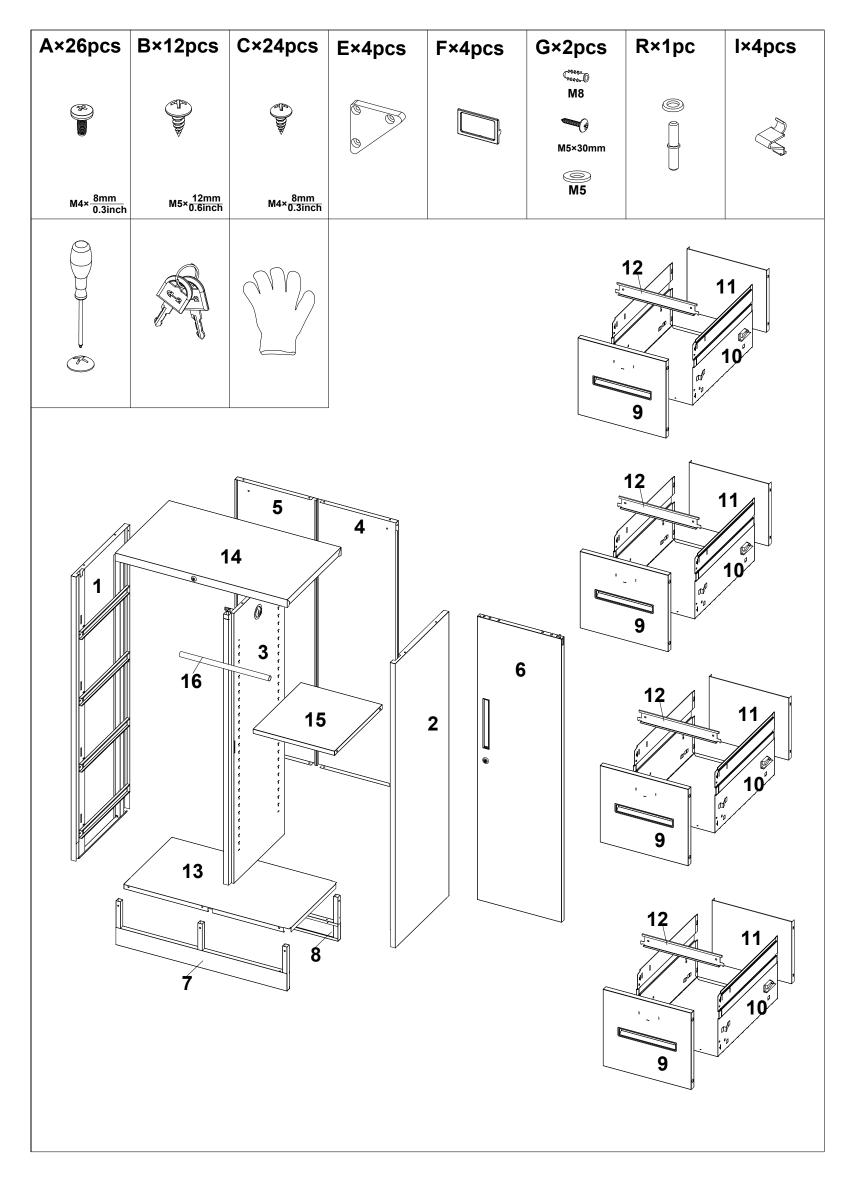


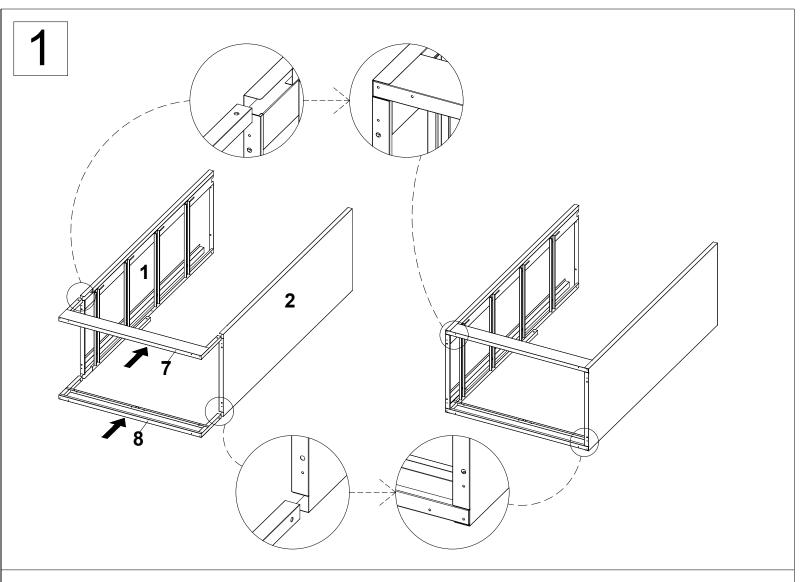


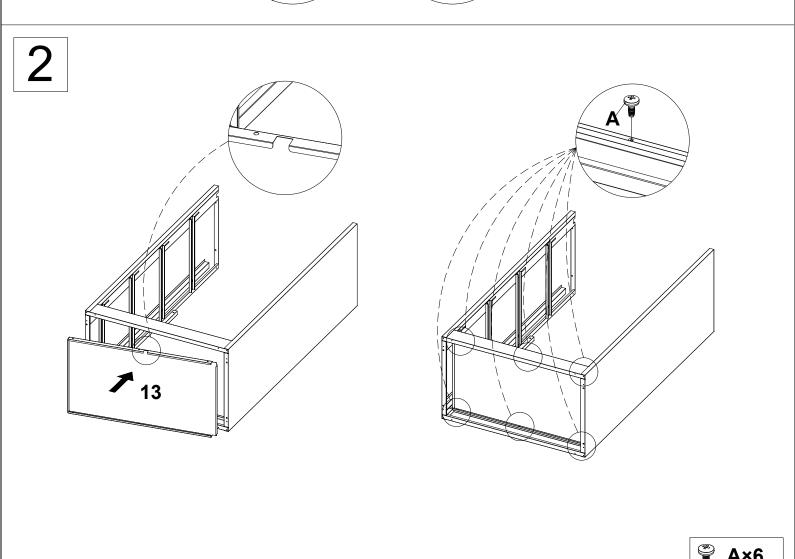




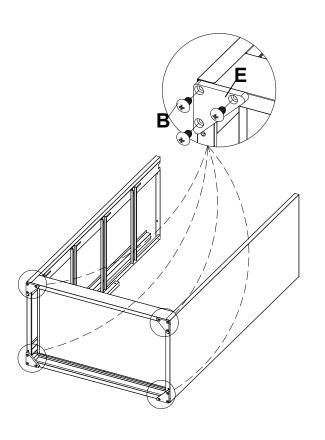


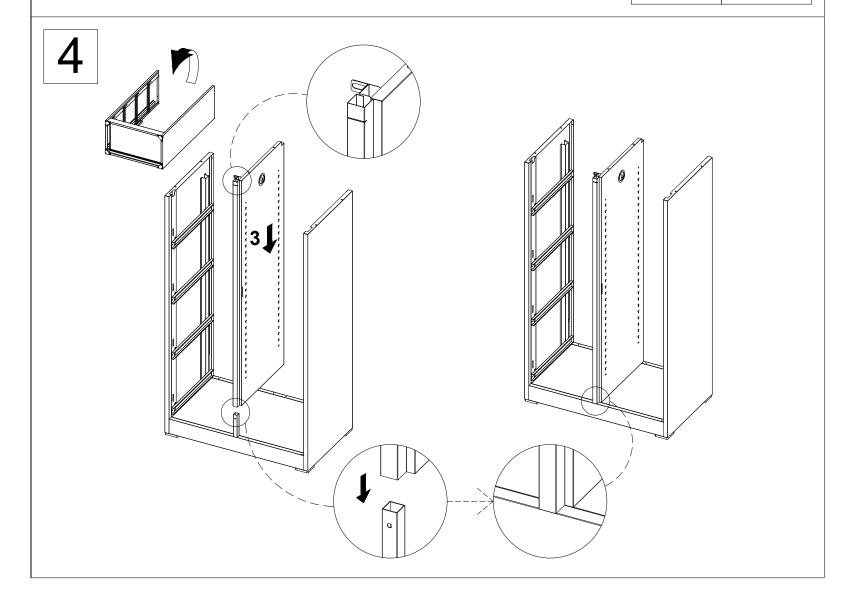

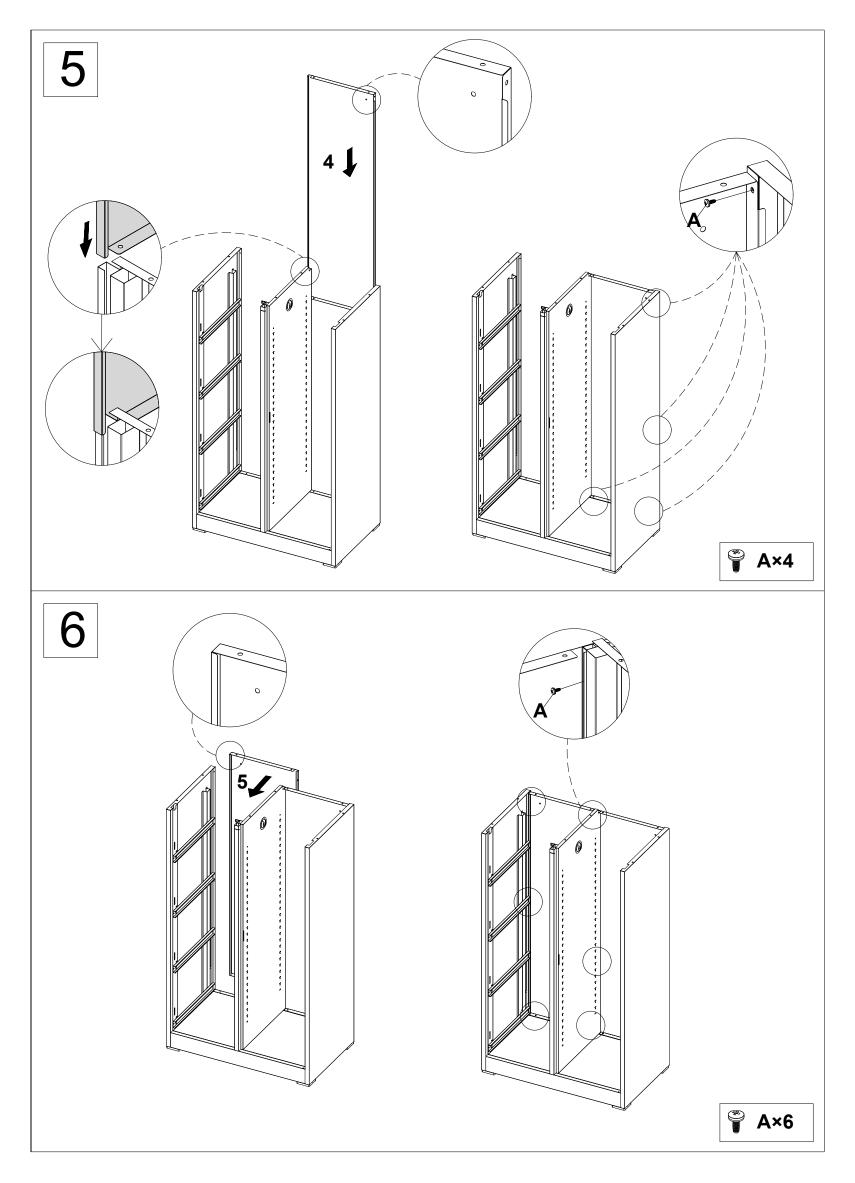


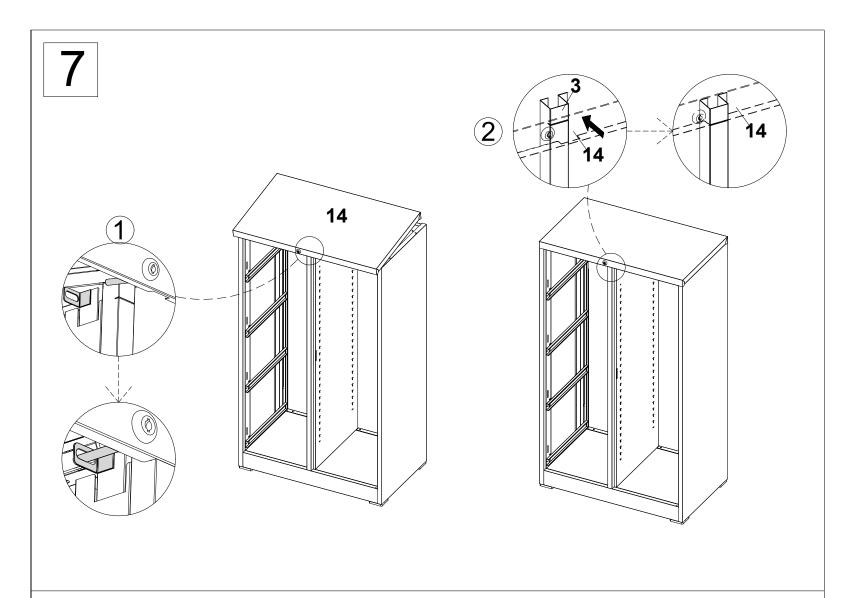




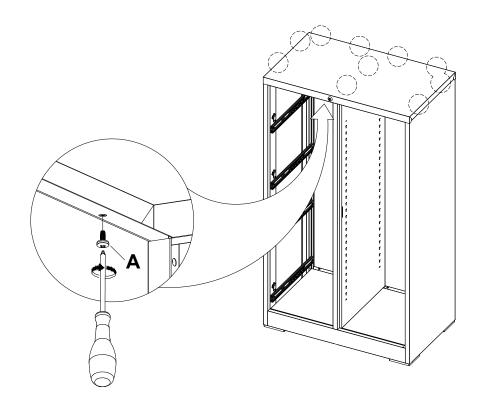





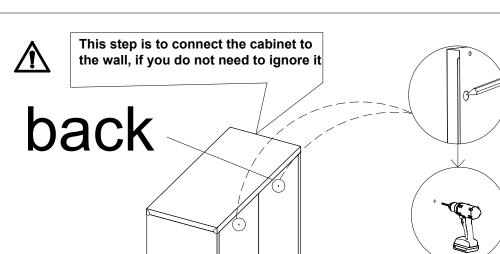

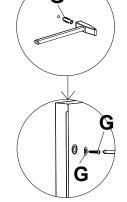



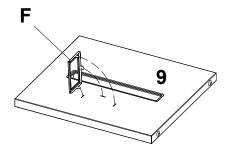

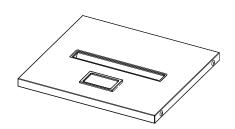


Place the part F according to the drawing $% \left(1\right) =\left(1\right) \left(1\right)$









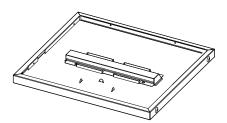


Flat the iron sheet with a screwdriver $\,$

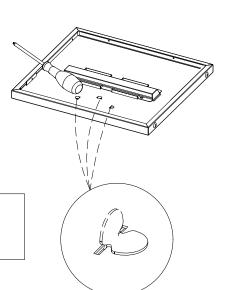


12

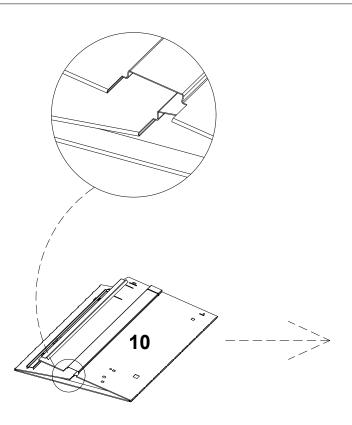


Bend the side walls of the drawer to vertical

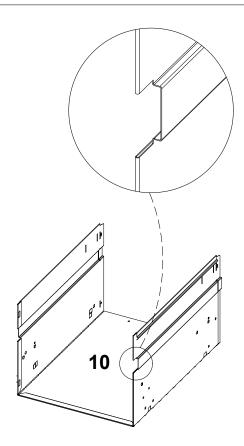

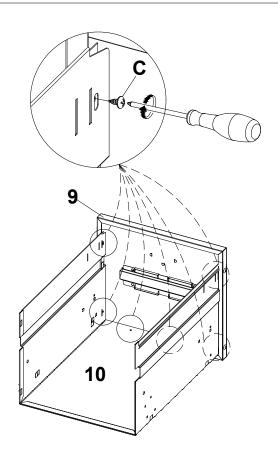

put six screws to hold part 10 into place.




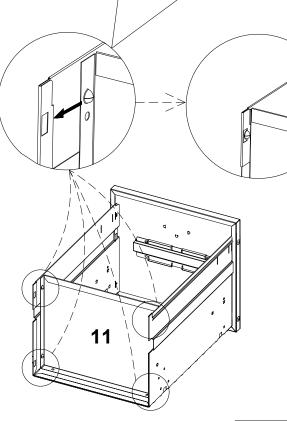



\$ C×24


14


the file hanging bar can be put inside

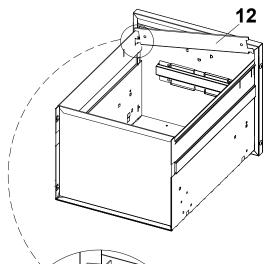


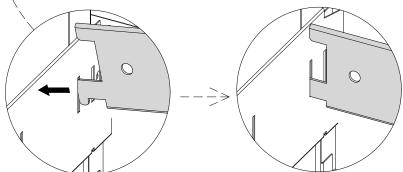

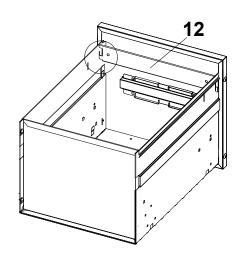

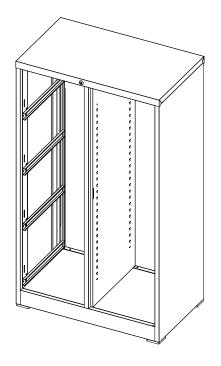


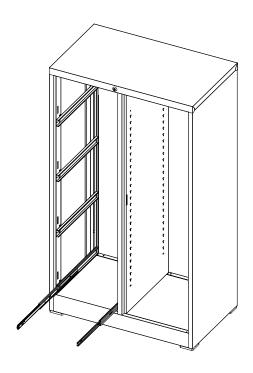

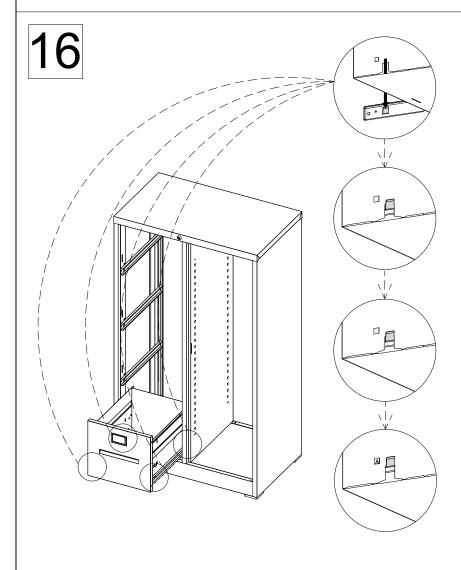

1.pill out the small rails in the slide rails on the side walls completely. with two people lifing each side of the drawer, align the four divots on the bottom with the two rail clips on the rails on each side and insert them into the rail clips.

2.After placing the drawer on the rail ,press the drawer base down hard enough, paying attention to check the position of the four clips inside until you hear a click four times, which means the drawer is in place

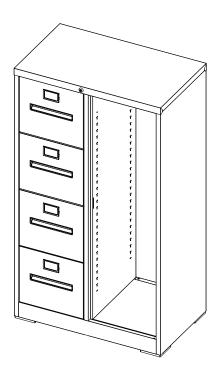

Install the door on one side by first installing the door shaft screw R,then by pressing the spring screw on the top of the door.

