

PREPARATION


Before beginning installation of product, make sure all parts are present. Compare parts with package contents list diagram above. If any part is missing or damaged, do not attempt to install the product.

Estimated Assembly Time: 10 minutes

Tools Required for Assembly (not included): Drill with 3/32 in. and 5/16 in. drill bits, Phillips screwdriver.

Helpful Tools (not included): Level, Pencil

TOOLS REQUIRED:

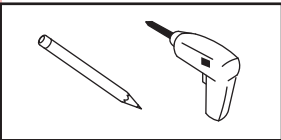

CARE AND MAINTENANCE

On an annual basis, it is recommended to double check all connections and re-tighten all screws and anchors. Clean with a lightly damp cloth or towel using water only to protect the durability of the finish on hooks and the rail.

TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	CORRECTIVE ACTION
Rail not level.	Original measurements are inaccurate.	Re-install starting with level marks.




STYLE SELECTIONS and logo design are trademarks or registered trademarks of LF, LLC. All rights reserved.

ITEM #6534494/6534503  
MODEL #46482/46525

5-HOOK RAIL

Español p. 4

ATTACH YOUR RECEIPT HERE

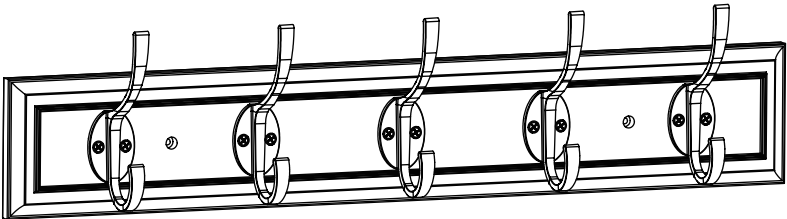


Thank you for purchasing this STYLE SELECTIONS product.  
Questions, problems or missing parts?  
Before returning, contact us on:  
**877-888-8225**, 8 a.m.-8 p.m., EST, Monday - Sunday or [ascs@lowes.com](mailto:ascs@lowes.com).

TABLE OF CONTENTS

Package Contents.....	2
Hardware Contents.....	2
Safety Information.....	2
Assembly or Installation Instructions.....	3
Preparation.....	4
Care and Maintenance .....	4
Troubleshooting.....	4

PACKAGE CONTENTS

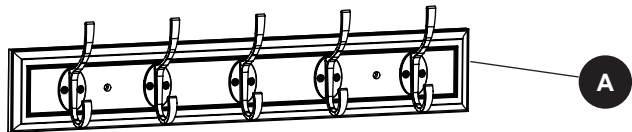

PART	DESCRIPTION	QUANTITY
A	5-Hook Rail	1


HARDWARE CONTENTS

AA



Screw  
Qty. 2

BB

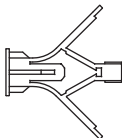

Anchor  
Qty. 2

CC



Hole cover  
Qty. 2

SAFETY INFORMATION


Please read and understand this entire manual before attempting to assemble, operate or install the product.

The maximum load for this decorative rail, regardless of mounting application, is 35 lbs.


When drilling into the wall, avoid any electrical wiring or plumbing that may be located behind the wall. Damaged electrical wiring can cause electrical shock and/or fire.

ASSEMBLY INSTRUCTIONS

1. Temporarily place rail (A) in desired location and mark mounting hole locations.

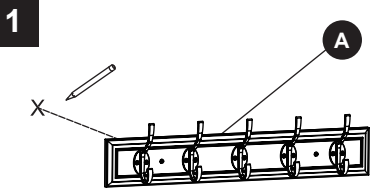

2a. For solid wood/wood stud installations, remove rail (A) and drill 3/32 in. pilot holes at marks.

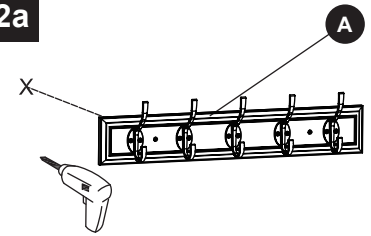


2b. For drywall installations, remove rail (A) and drill 5/16 in. pilot holes at marks. Place anchors (BB) into holes.

Hardware Used


BB

Anchor




x 2

2c. For all other installation types, note different hardware (not included) might be needed. Follow manufacturer's instructions.

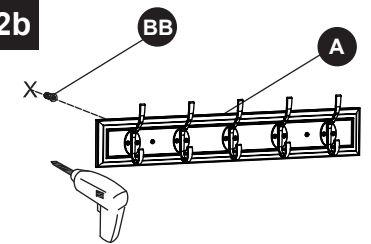

2c

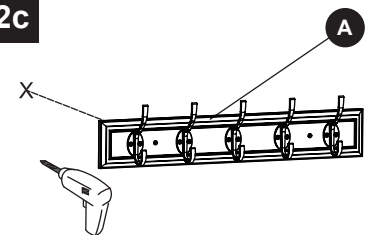

3. Secure rail (A) to mounting surface with screws (AA).  
Optional: Place hole covers (CC) into the screw holes on rail (A) to cover screw.

Hardware Used

AA

Screw



x 2

CC

Hole cover



x 2

3

