For Style 5626P6 Assembly Instruction Sheet #IS-5626P6

quivest Patriaid extendiner, Philips extendiner, pliess, who culture, who shippers, electrical laps, salely glasses, rest (1) 1207 LED "TW DAMAASLE (3000K)

I Assembly Time: 15-50 minutes


ration: Identify and Inspect all parts before beginning installation. Check peckage content list and diagrams below to be sure all parts are nt. If any parts are minsing or damaged, do not attempt to assemble, Install, or operats the ficture. Content customer services for replacement

Warnings and Cautions

Turn off electricity at oircuit breaker or main fuse box before installation. Consult a ficensed electrician if in doubt.

These instructions are provided for your safety. It is very important you read them completely before installing the fodure. We strongly recommend that a licensed, professional electrician perform the installation.

Disconnect fixture from power source before reptacing butbs. Make sure butbs are given sufficient time to cool before removal

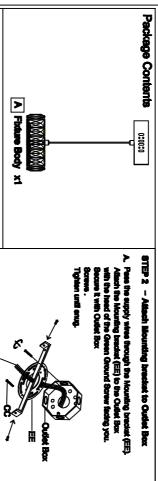

TTEP 3 — Fit Beckplate to Mounting bracket Assembly Supply Wires with Outlet Box Screws Ground Wire Figure 2

Hardware Contents

11111

A. Fit the beolopiate to Mounting Screws (DD) and ecoure with Decorative Cape (AA). Note: The backplate chould be enug against the ceiling and the Decorative Cape (AA). Mounting bracket (EE) until the correct length is achieved. Once the Ceiling Canopy is secure, remove the and Calling Campy and proceed to Step 4 Decorative Cape (AA) screwing Mounting ng Screws (DD) by (DD) in or out of the 0:00:0

A. Line up a set of holes on the

ing bracked(EE) and Holes Mounting Screws (DD)

The Indian on the ing bracket (EE). Pass Lock ers and thread Hex


0:00:0

tend lighten until enu

Figure 1

Figure 3

STEP 1 - Attach Mounting Serews, Lock Westers and Hex Nuts to Hounding bracket.

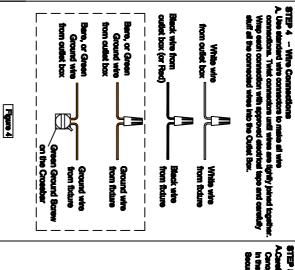

ACarefully tuck all wires into the outlet box and position the Calling Canopy of the Fixture Body (A) over the outlet box. Align the incise in the Calling Canopy with the Mounting Screwe (DD). STEP 5 — Inetail Ceiling Can y to Ceilling

