


HEADBOARD SET ASSEMBLY INSTRUCTION (TOTAL 1 BOX)

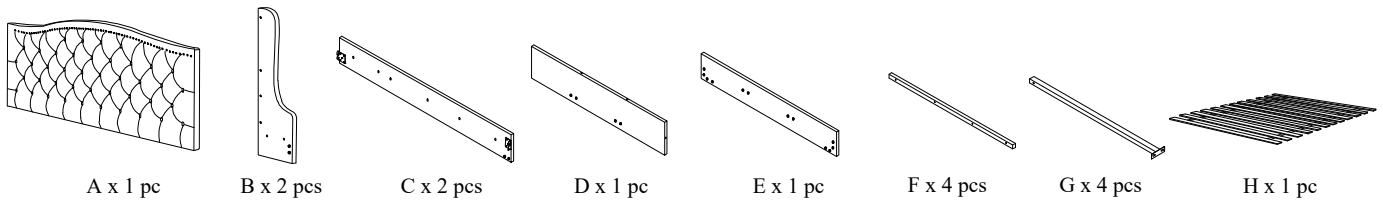


Please read over the instructions, it will be a time-saver in the long run.



Note: Before assembly, please be sure to work on a soft flat surface to avoid any damage to the finish.

Please leave bolts loosened until all bolts are placed before tightening completely.



Part#	Picture	Description	QTY	Location	Part#	Picture	Description	QTY	Location
I		Center leg	2	Wrapped in a non-woven bag	Q		Spring Washer Ø8	36	Hardware Pack
J		Triangle connection piece	2	Wrapped in a non-woven bag				24	Already in Place
K		Legs	2	Wrapped in a non-woven bag	R		Flat Washer Ø8x25mm	36	Hardware Pack
L		Screws 4x30mm	24	Hardware Pack				24	Already in Place
M		Bolt Ø8x30mm	24	Already in Place	S		Nut Ø8	6	Hardware Pack
N		Bolt Ø8x40mm	8	Hardware Pack	T		"L" Wrenches Ø5	1	Hardware Pack
O		Bolt Ø8x60mm	18	Hardware Pack	U		Spanner Ø14	1	Hardware Pack
P		Bolt Ø8x70mm	4	Hardware Pack					

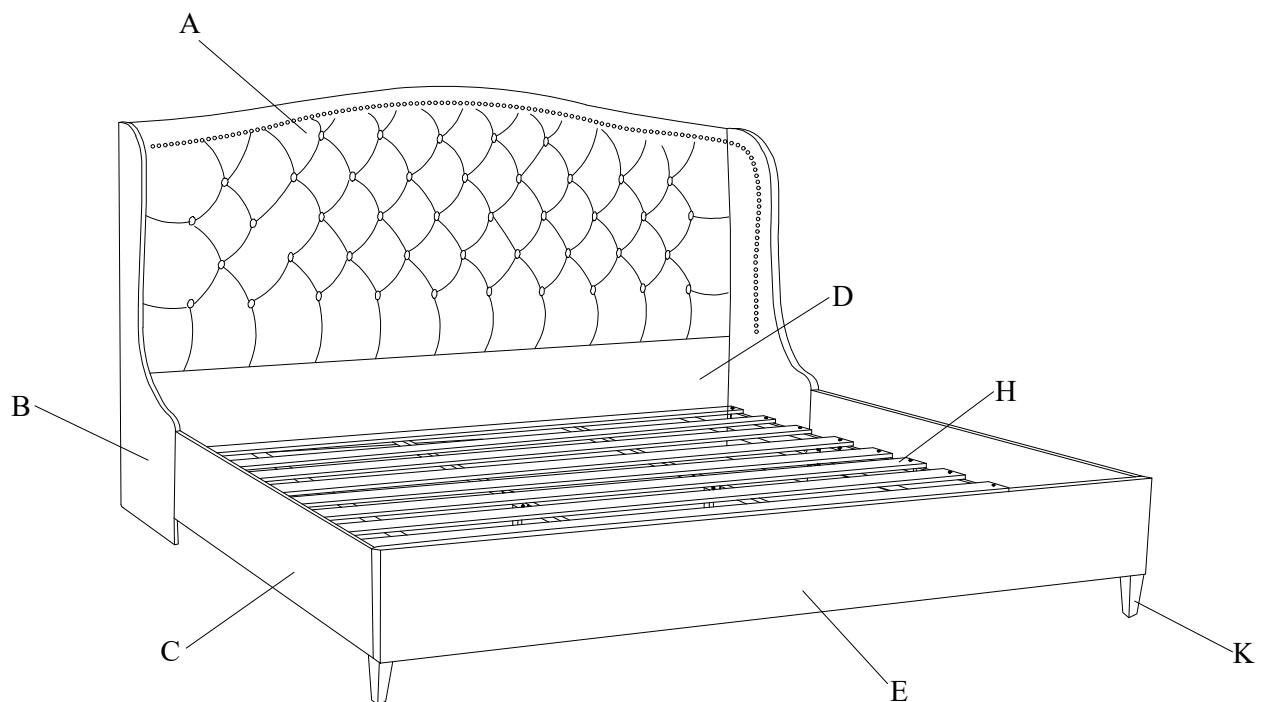



1

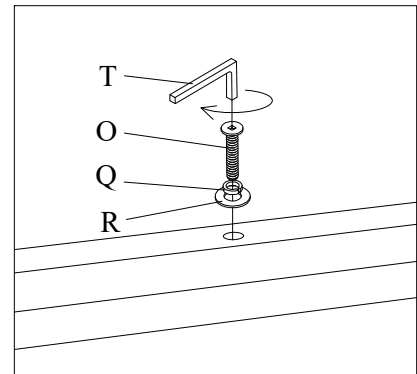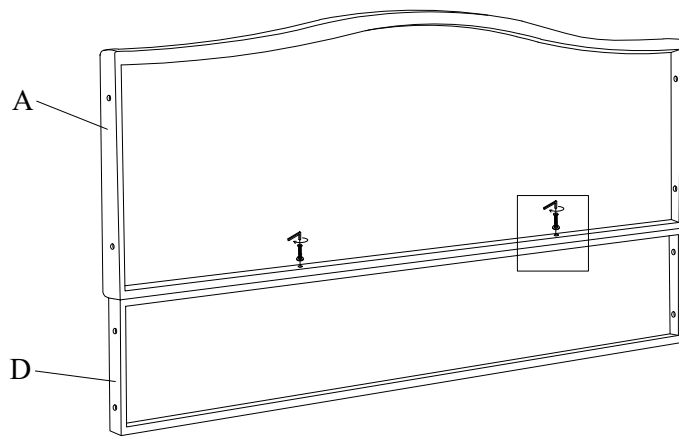


2

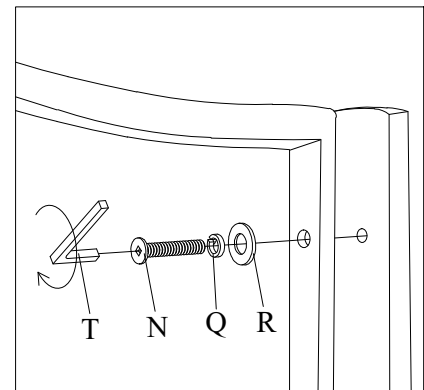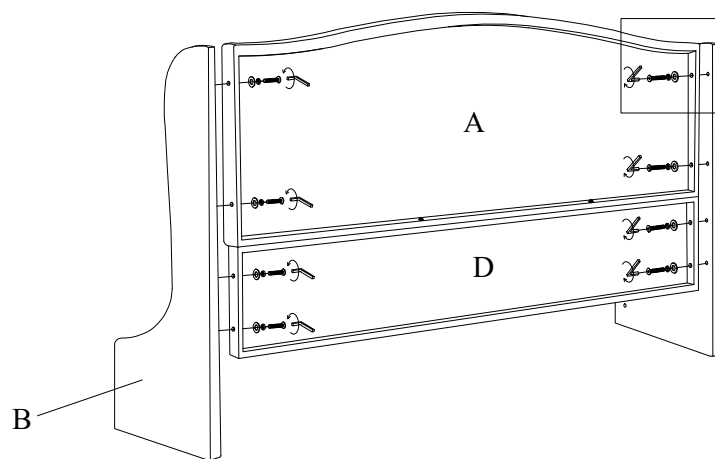


3

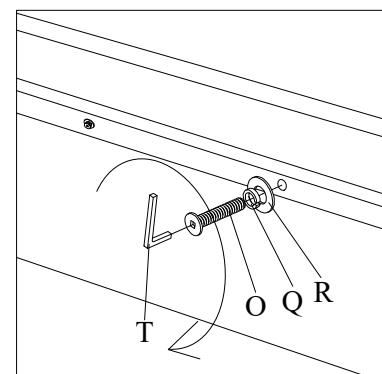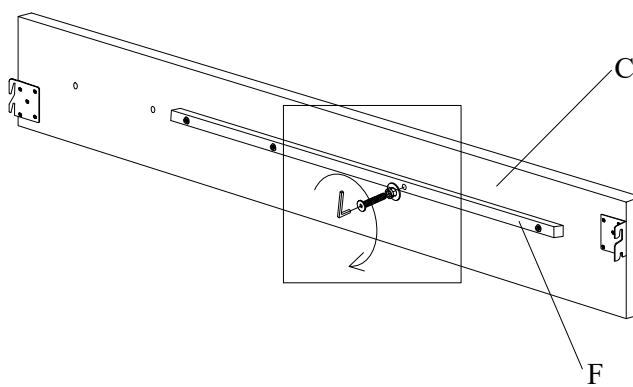


4

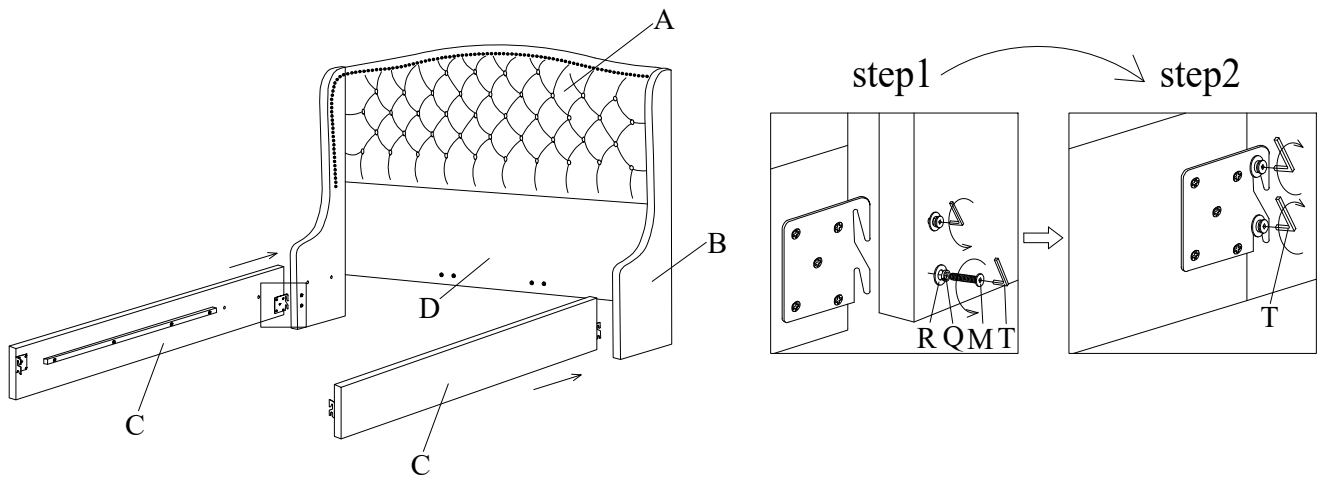


5

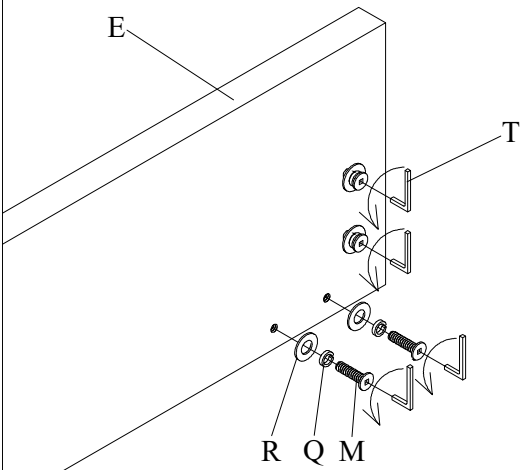


6

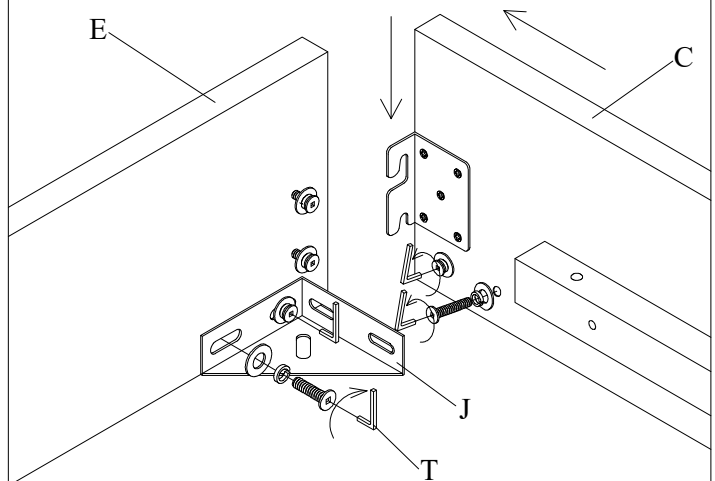



7

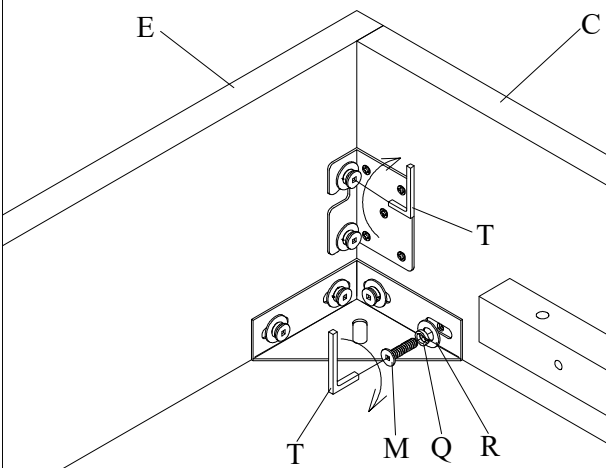


8

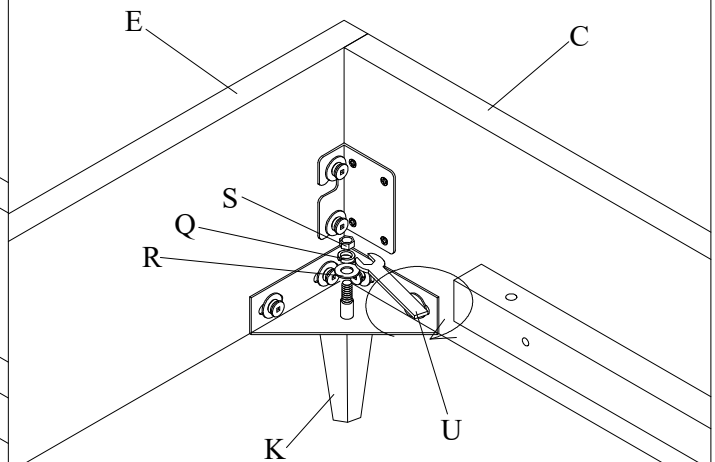




9

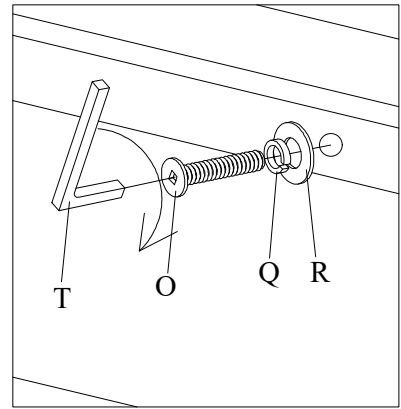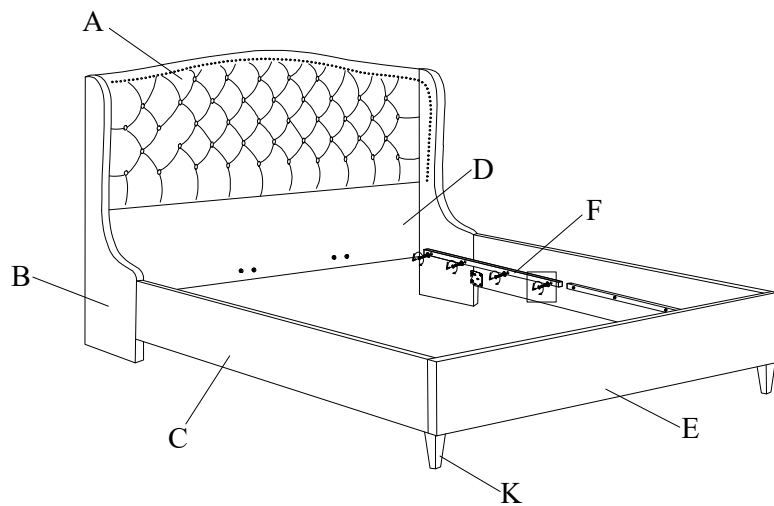



10

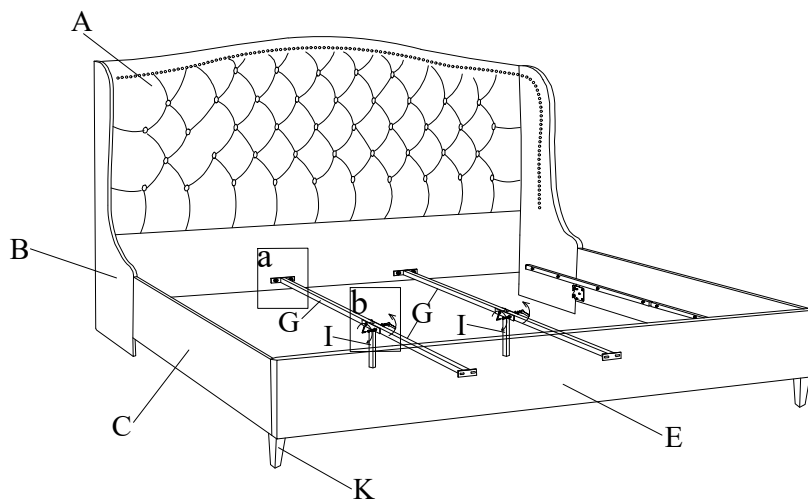

step1 → step2

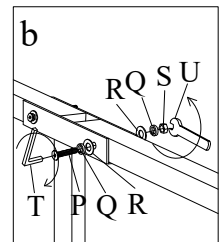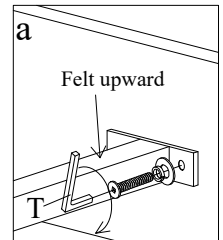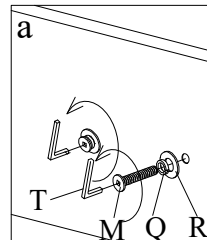

11

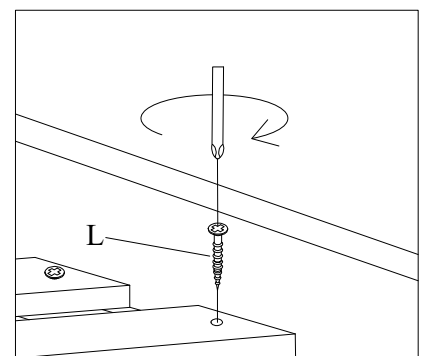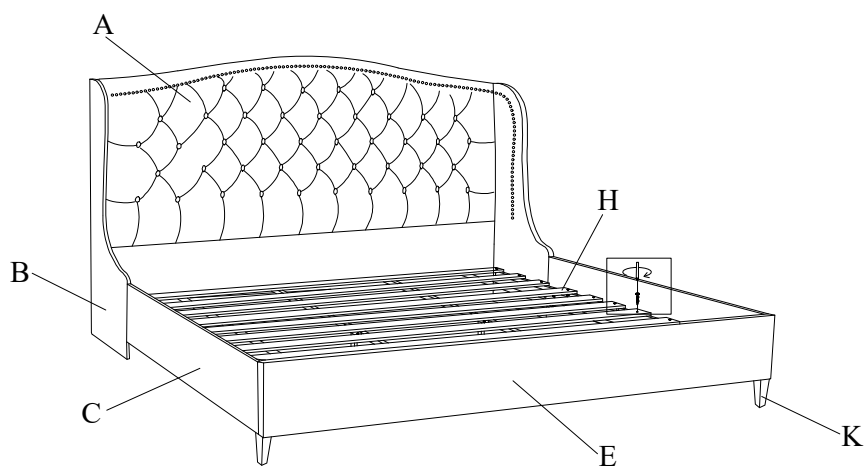

Screwdriver required, not included