



Ready-to-Assemble Vinyl Picket Gates - Without Cross Braces

INSTALLATION INSTRUCTIONS



Read all instructions prior to installing product.

Refer to manufacturers safety instructions when operating any tools.

To register your product, please visit:

freedomproduct.com

⚠ WARNING:


- Improper installation of this product can result in personal injury. Always wear safety goggles when cutting, drilling and assembling the product.
- Incorrect installation may cause harm to the gate or individual.
- Not pool code approved.

NOTICE:

- DO NOT attempt to assemble the kit if parts are missing or damaged.
- DO NOT return the product to the store, for assistance or replacement parts call: 1-800-336-2383.

BEFORE YOU BEGIN:

Vinyl gate posts require an internal support system for weight-bearing purposes therefore a post stiffener is required. Post stiffener needs to be purchased separately.

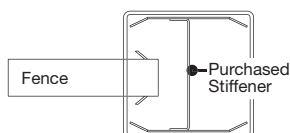

Top View of Routed Post


TOOLS/MATERIALS NEEDED:

	Phillips Screwdriver
	Safety Glasses
	Line Level
	Tape Measure
	Drill
	#2 Square Drive Bit
	Boerboel® Gate Hardware (Hinges/Latch)

NOTE: Components shown are for visual reference only and may not depict the exact style of your product. Please see product label for correct number of pieces.


Open Top 2-Rail Picket Gate
Component list:

Description
Pickets
Top Rail
Bottom Rail
Gate Uprights
Upright Inserts
Upright Caps
Screws
Vinyl Cement
Hinges
#2 Square Extender Bit

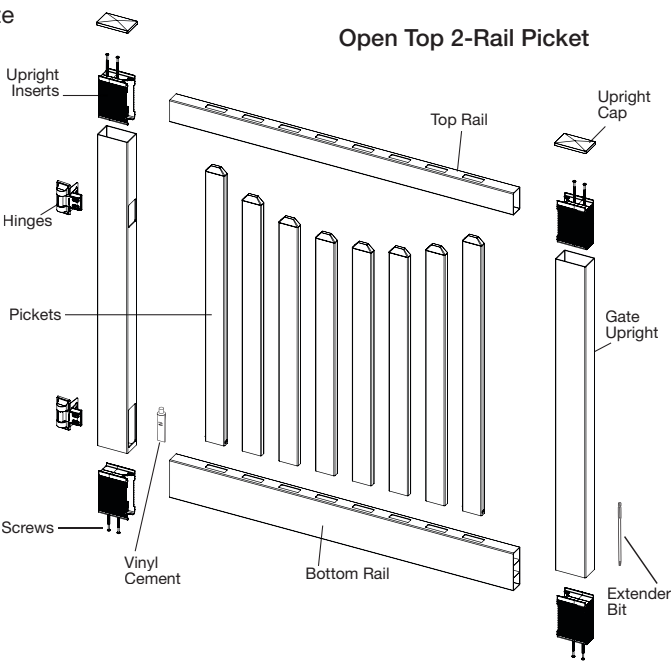

Closed Top 2-Rail Picket Gate
Component list:

Description
Pickets
Top Rail
Bottom Rail
Gate Uprights
Upright Inserts
Upright Caps
Screws
Vinyl Cement
Hinges
#2 Square Extender Bit

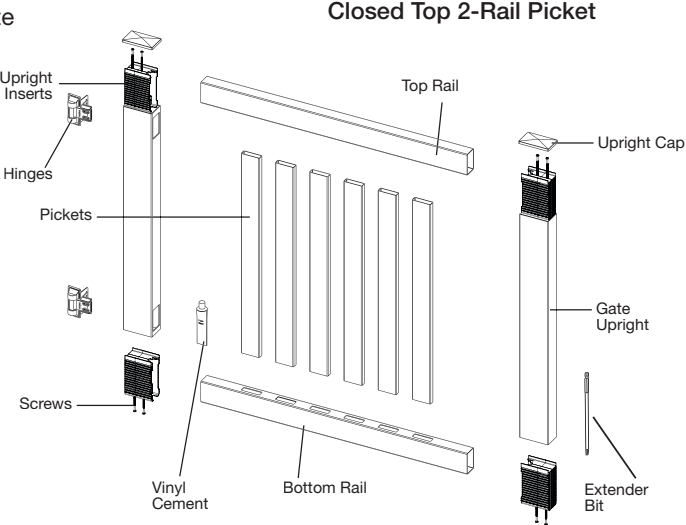

1

Lay gate components on a smooth, flat and clean surface. Begin by arranging the rails in the correct orientations.

2

For Styles With Two Rails:

- Slide the pickets into the bottom rail. If pickets are numbered, follow the sequence from left to right (Fig. 1).
- Slide the top rail over the pickets (Fig. 2).

For Styles With Three Rails:

- Slide the pickets into the bottom rail. If pickets are numbered, follow the sequence from left to right (Fig. 1).
- Slide the middle rail over the pickets.
- Slide the top rail over the pickets (Fig. 2).

3

- Apply provided vinyl cement to all inside surfaces of the uprights where the rails will be installed (Fig. 3).
- Attach uprights to rails (Fig. 4).

Fig. 1

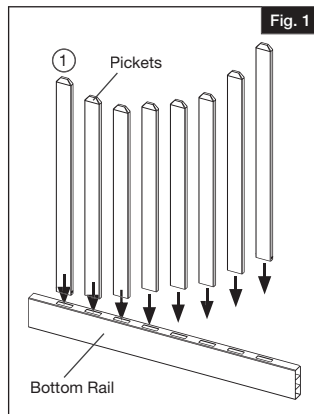


Fig. 2

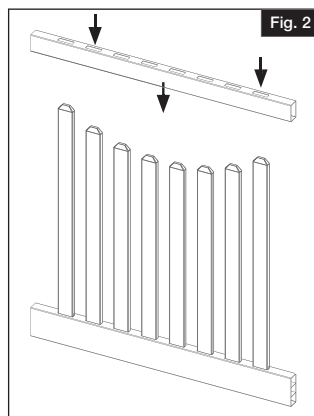


Fig. 3


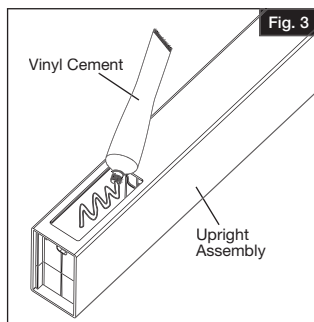


Fig. 4

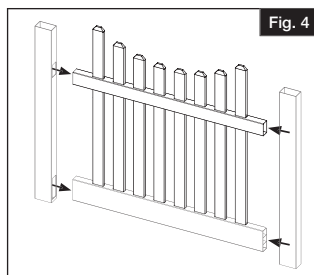

4

4

Ensure gate is square. Measure diagonally from top of left corner rail (A) to bottom of right corner rail (B) and note the length. Then, measure diagonally from top of right corner rail (C) to bottom of left corner rail (D). Note the length. Make sure both measurements are the same before installing screws into uprights (Fig. 5).

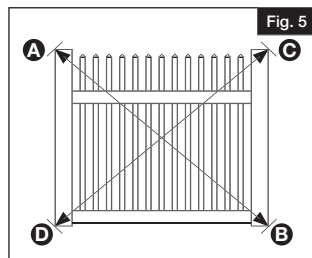


Fig. 5

5

Install two provided 6" screws through each upright insert and into the rail using the molded grooves on the insert as a guide (Fig. 6).

NOTE:

For some styles, the #2 square extender bit may be needed to reach the insert inside the upright.

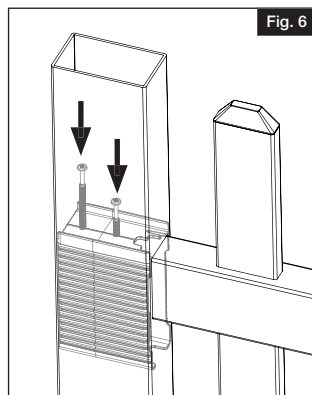


Fig. 6

6

Install upright caps onto the top of each upright with remaining vinyl cement (Fig. 7).

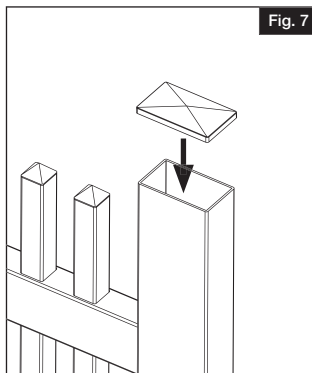


Fig. 7

7

Install Boerboel® hinges according to hardware instructions.