

Assembly Instructions



CAUTION

- Inspect the wire insulation for any cuts, abrasions, or exposed copper that may have resulted during shipping. If there is a defect in the wire, do not attempt installation.

- Before starting installation of this fixture or removal of a previous fixture, disconnect the power by turning off the circuit breaker or by removing the fuse at the fuse box.

TOOLS REQUIRED



Ladder



Safety glasses



Electrical tape




Phillips screwdriver



Flat blade screwdriver




Pliers




Wire strippers

HARDWARE INCLUDED

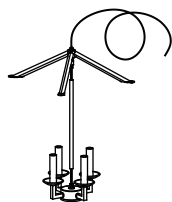


Fixture

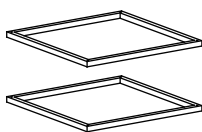


Iron Rack



Bracket




Decorative Screws




Screws



Stems



Canopy

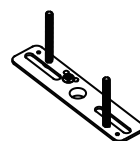

Mounting Unit



Ball Nuts



Mounting Screws




Wire Nuts

***PARTS SHOWN MAY DIFFER SLIGHTLY PER LIGHT FIXTURE**

INSTALLATION


STEP 1

Attach the **iron rack** and **bracket** onto **fixture** using **decorative screws** and **screws**.

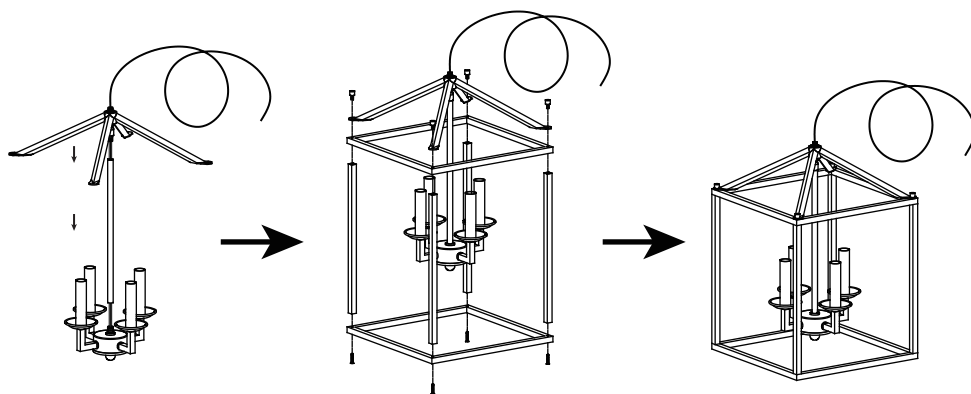


STEP 2

Unscrew the **ball nuts** from the **mounting unit**. Use the **mounting screws** to attach the **mounting unit** to the junction box.

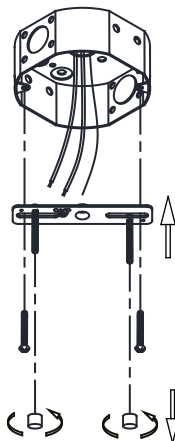

STEP 3

Install **stems** based on the desired length of the item, adding **canopy** once finished.

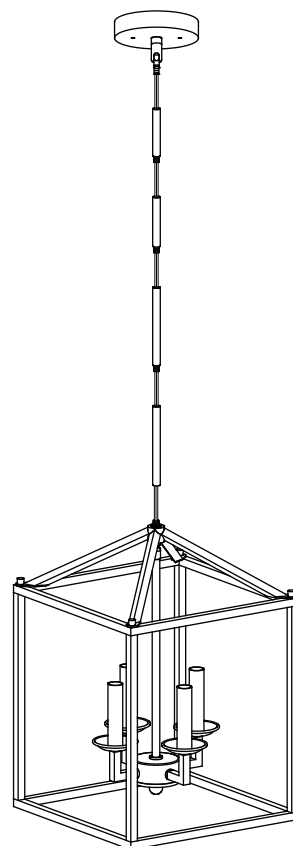

INSTALLATION

STEP 4



Make the electrical connection from the junction box to the **fixture**. Connect the ground wire to the **mounting unit** using the preinstalled green ground screw. Then, connect the positive, negative and ground wires with the supplied **wire nuts**. Secure with electrical tape.

Connect Clear, Brown, Gold or Black Parallel Wire without tracer (round & smooth) or Black Fixture Wire to:

Black or Red Supply Wire or Insulated Wire (other than green) with copper conductor.


Connect Clear, Brown, Gold or Black *Parallel Wire with tracer (square & ridged) or White Fixture Wire to:

White Supply Wire or Insulated Wire (other than green) with silver conductor

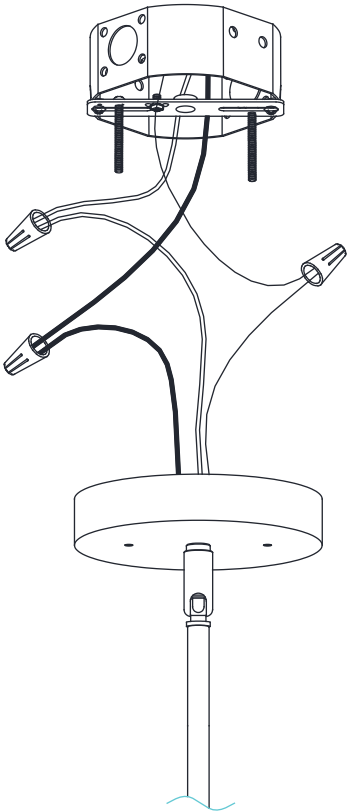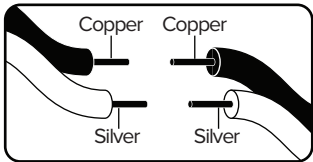

STEP 5

Secure the **canopy** to the **mounting unit** with the **ball nuts**.

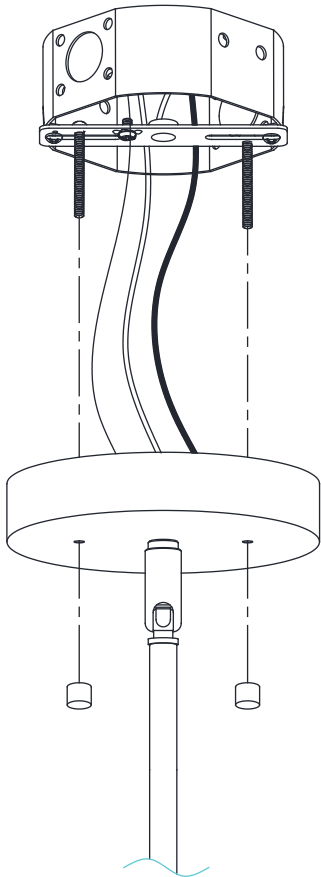

STEP 6

Install bulbs (not included)

