




### DumaWall Trim and Last Piece in Row Installation

If you are using corner and/or L-trims for a DumaWall shower kit installation, this guide will show how to install the last, short tile at the end of a row. Read and follow this guide if your project looks like this:



Short tile piece needed to finish row on an inside corner

The challenge is to place the remaining tile section into the edge trim while also getting the interlocking tile edges locked together.

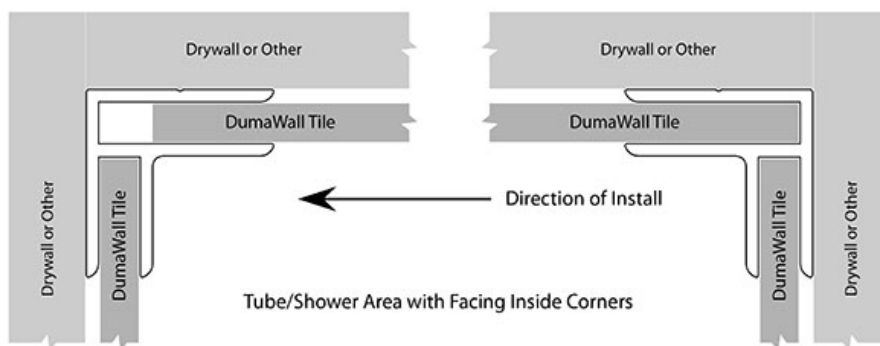

First, install the inside corner trims into each corner using adhesive. Allow 24 hours for the adhesive to cure. Make sure the corner trims are oriented as in the image below. Each inside corner trim piece has a full and a partial channel. The full channel will be against the back wall.



Next, determine the length of the tile section. Measure from the inside lip of the previously installed tile to the inside edge of the pre-installed trim. See *image at left for details*. In this case, the length to cut the final tile in the row is 4-3/4-inches.

After cutting tile to length, apply adhesive to the substrate, *as shown*. Spray a squirt or two of water onto the substrate and adhesive, *as shown*. This will lubricate the substrate allowing for easier movement.



Insert the cut tile edge into the L-trim while holding the interlocking joint-edge away from its mating tile.



Insert cut end into edge trim channel while holding other edge up.

Push the tile into the edge trim while laying the tile down toward the substrate. When pushed into the trim entirely, the interlocking edges will be exposed.



Push tile into corner trim channel until it can lay flat on the substrate.

Apply DAP® Kwik Seal Ultra (sealant) to the interlocking edges if this installation is for a wet environment.

The tile can now be manually pulled into place. Pull the tile toward the interlocking joint. If necessary, rubber gloves can be used to increase grip friction with the surface of the tile. *See image below.* Keep pulling until the interlocking joint is tight.



Pull tile into interlocking joints.



Interlocking joints at tile's right and bottom are tight.

Use a damp rag or paper towel to clean off any sealant or adhesive that may have been squeezed onto the tile surface.