


ASSEMBLY INSTRUCTIONS


If you have any questions, please feel free to contact us.
Email: lowes.team@qualfurn.net

BED WITH 3 DRAWER








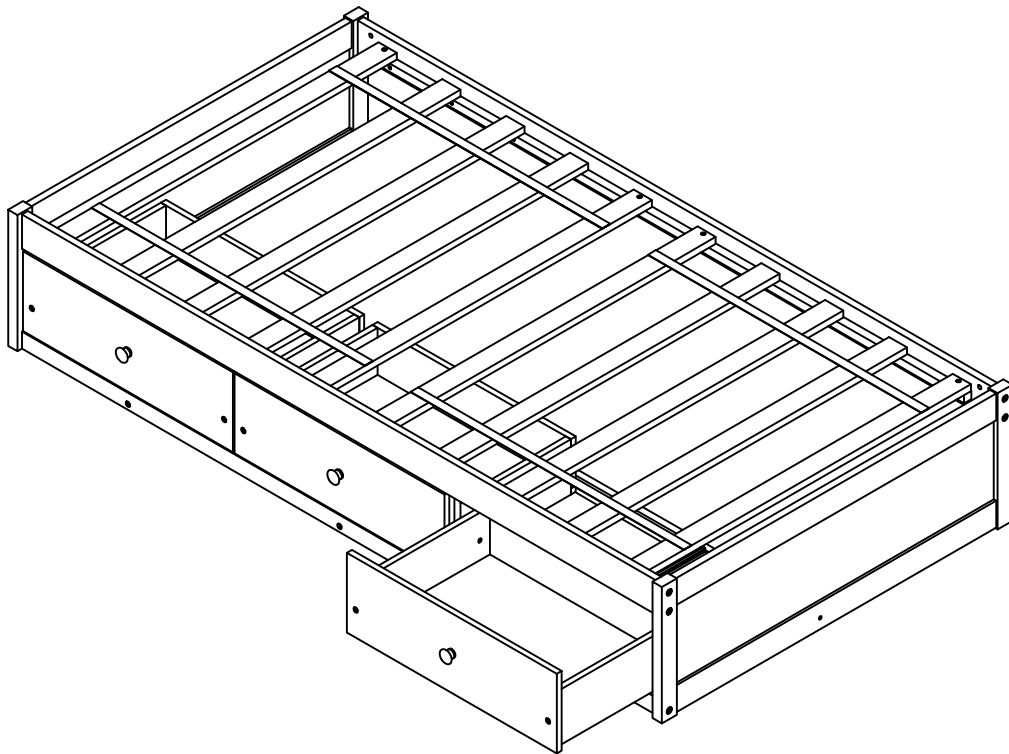


WF193634



Detail View

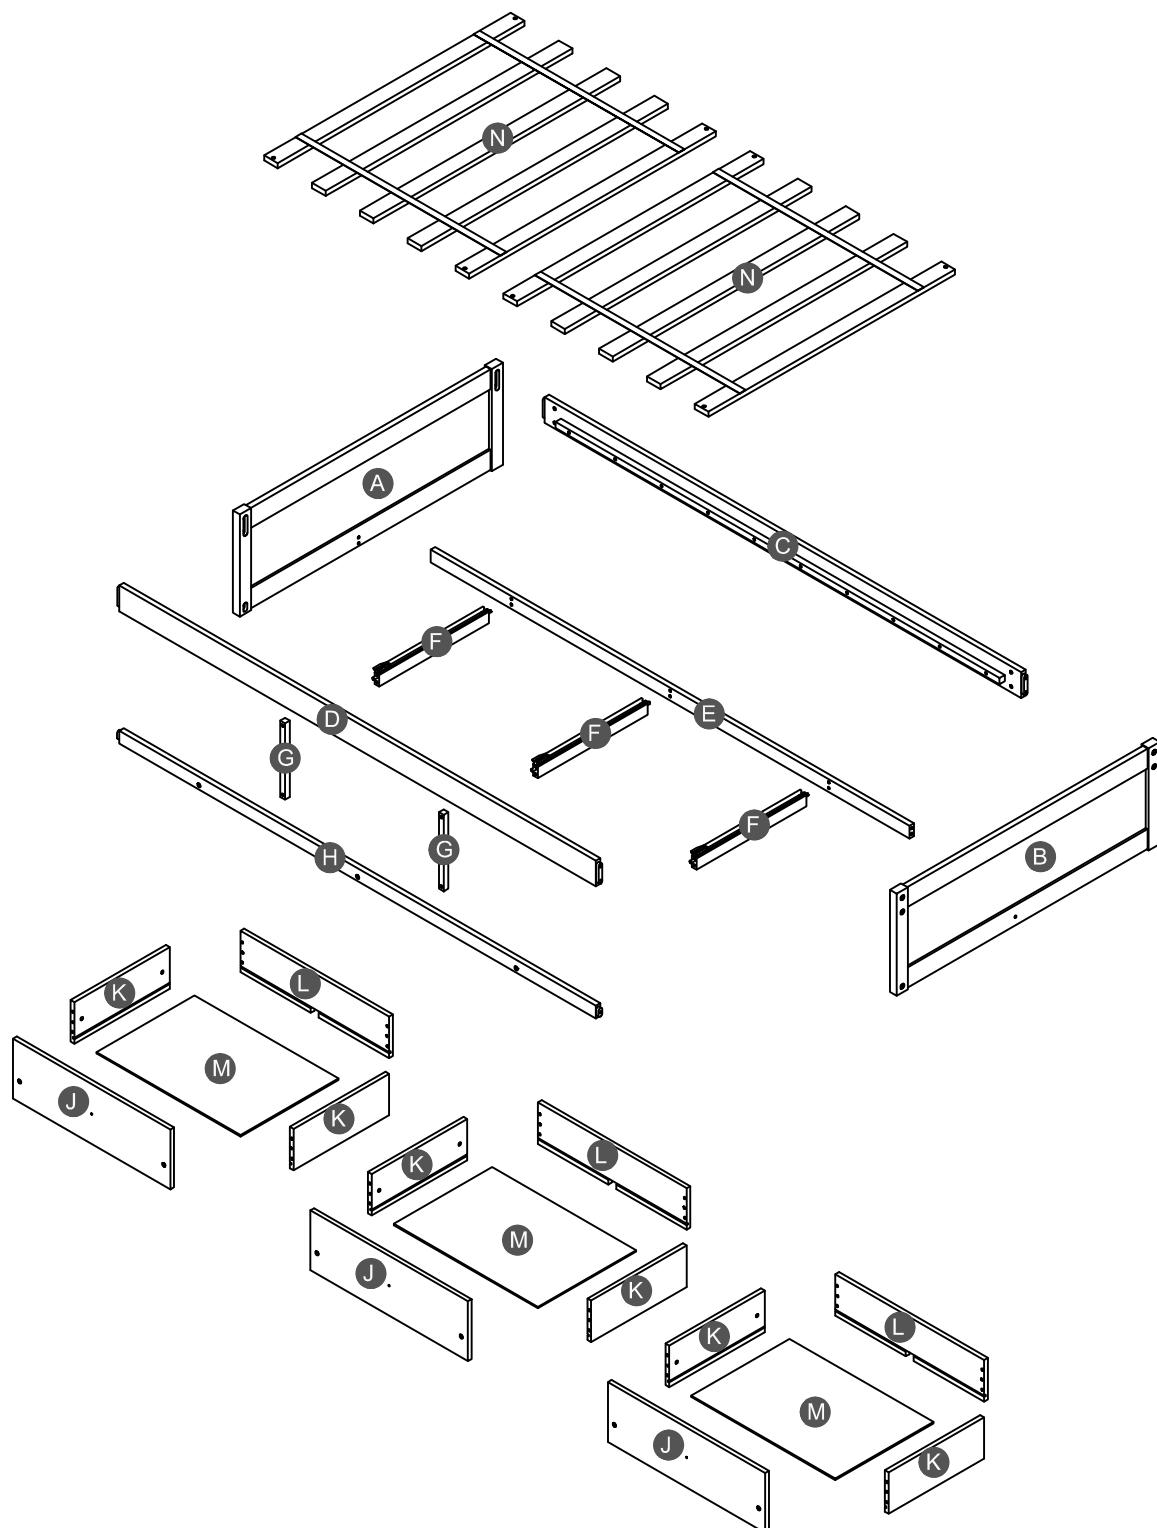



Part List

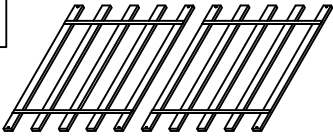A  Headboard - 1pc	B  Footboard - 1pc	C  Side Rail (Back) - 1pc
D  Side Rail (Front) - 1pc	E  Support Rail - 1pc	F  Support Drawer - 3pcs
G  Support - 2pcs	H  Drawer Side Rail - 1pc	N  Slats -2set (5pcs/set)
J  Drawer Front - 3pcs	K  Drawer Left/Right - 6pcs	L  Drawer Back - 3pcs
M  Drawer Bottom - 3pcs		

Hardware List

1  Ø8*30mm Wood dowel (26pcs)	2  (Ø15)1/4"*70mm Hex-Head bolts (10pcs)	3  1/4"*15 (9.5mm) Horizontal-Hole bolts(30pcs)
4  (Ø12)1/4"*60mm Hex-Head bolts (20pcs)	5  Ø38*31mm Pine Knob (3pcs)	6  3/16"*25mm Ph zinc(Knob) (3pcs)
7  Ø4*30mm Wood screws (8pcs)	8  490*30mm Drawer slide (3pcs)	9  Ø4*15mm Wood screws (9pcs)
10  (Ø12)1/4"*30mm Hex-Head bolts (4pcs)	12  (1/4")4.5*58mm Allen key (1pc)	


ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)

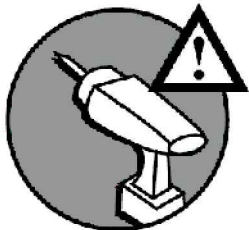

DO NOT USE POWER TOOLS TO ASSEMBLE THIS PRODUCT !


STEP 1:

3		4	
6PCS		6PCS	

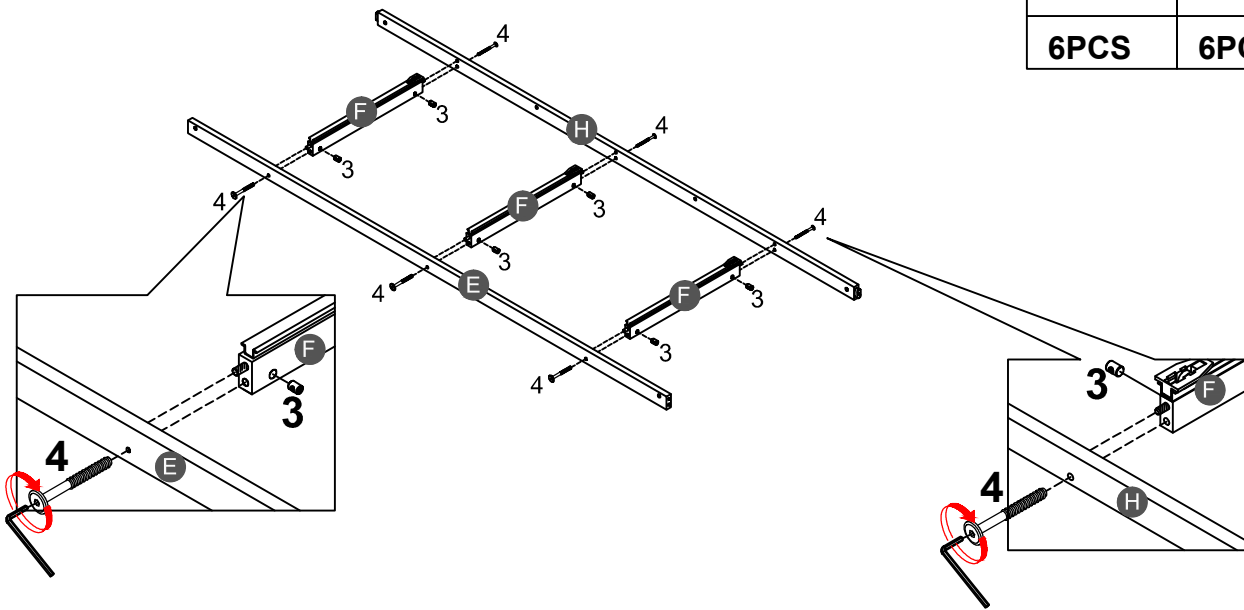

STEP 2:

1		2		3		4	
2PCS		10PCS		12PCS		2PCS	

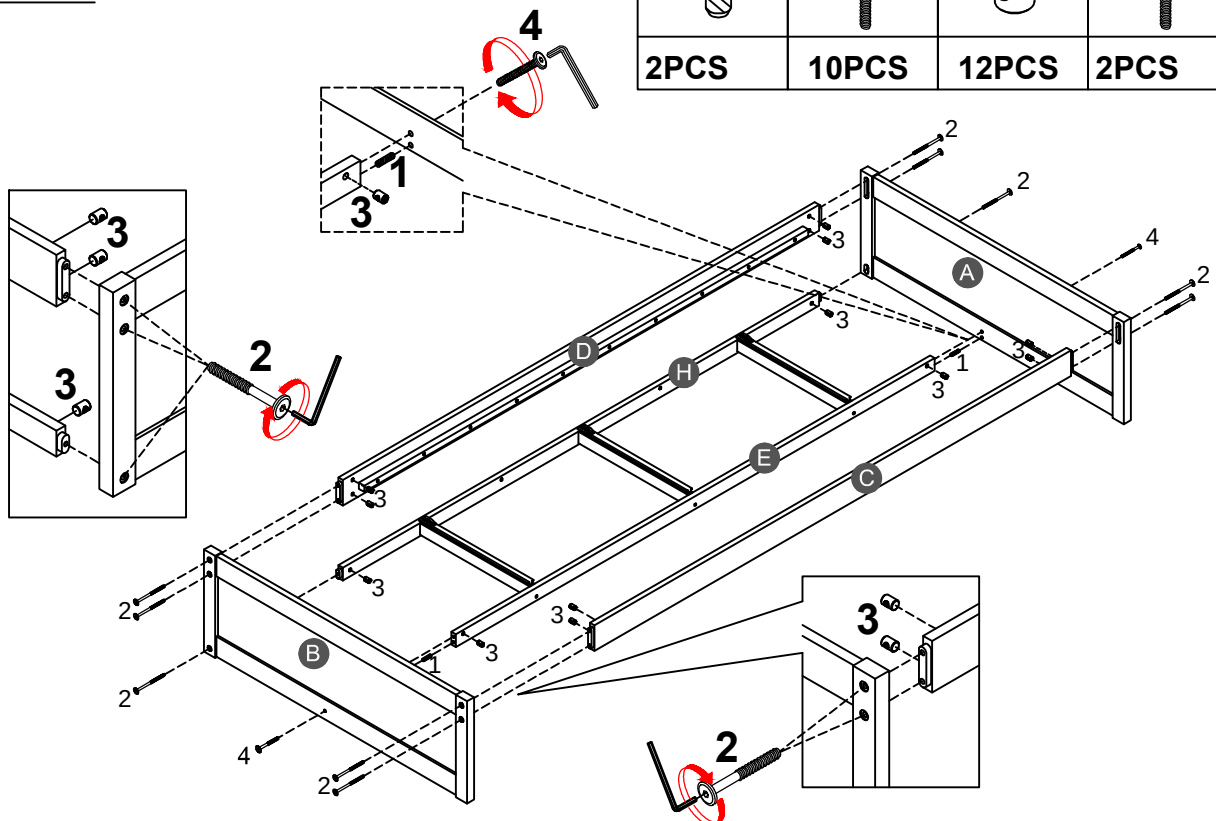


STEP 3:

10



4PCS

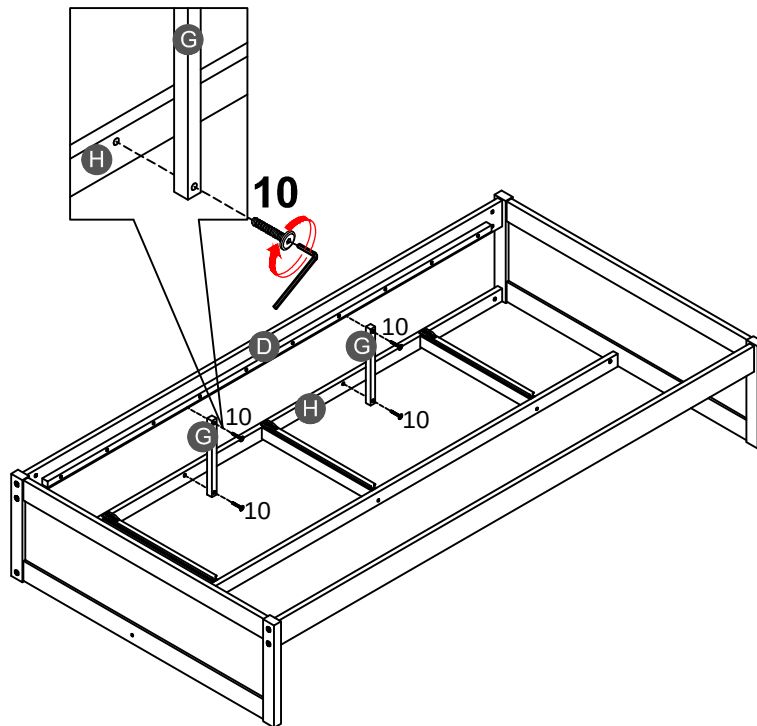


STEP 4:


7



8PCS

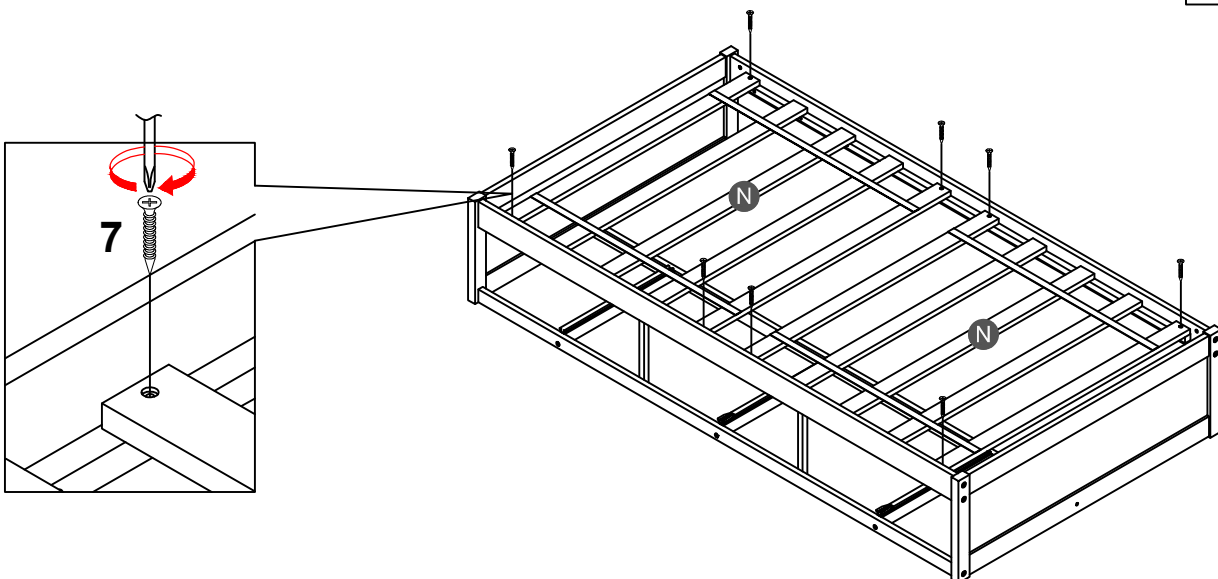


STEP 5:

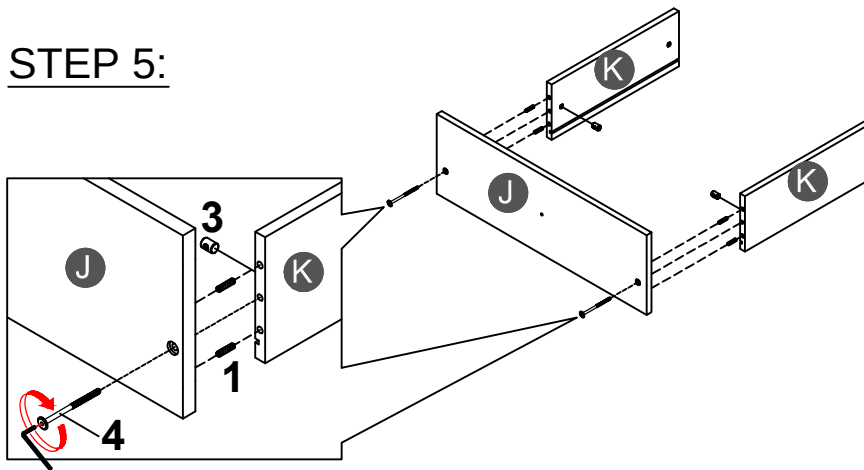

3pcs

1		3	
12PCS		6PCS	
		4	
		6PCS	


STEP 6:

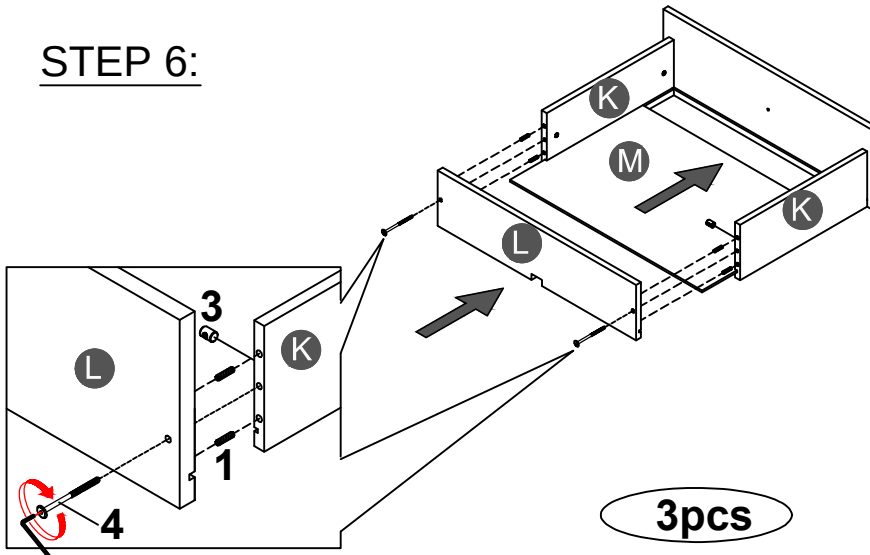

3pcs

1		3	
12PCS		6PCS	
		4	
		6PCS	

STEP 7:

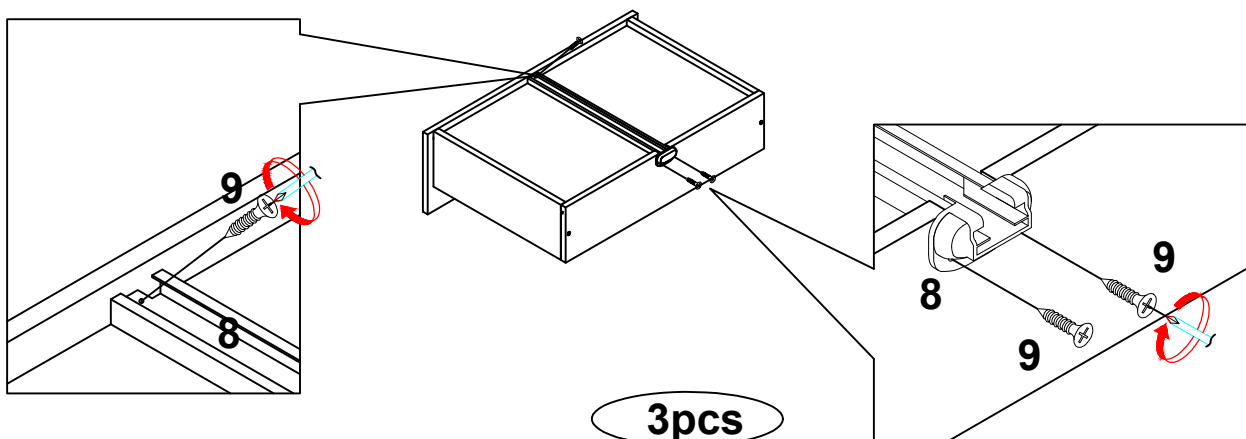

3pcs

8		9	
3PCS		9PCS	

P 9:

Diagram illustrating the assembly of the bed base. The diagram shows the slatted base being placed over the drawers, which are positioned under the bottom of the bed frame.

Lower under the bottom of Bed.