

FAN BACK BALCONY GLIDER CHAIR

Assembly Instructions Fan Back Balcony Glider Chair

4" BOLTS 3" BOLTS 2" BOLTS



WASHERS



NUTS

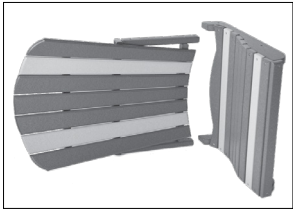


FIGURE 1
Lay chair back and chair seat on their side as shown.

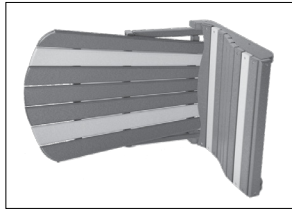


FIGURE 2
Align predrilled holes.

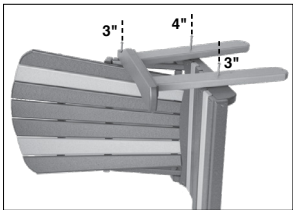


FIGURE 3
Place arm assembly aligning predrilled holes (as shown). Insert bolts.

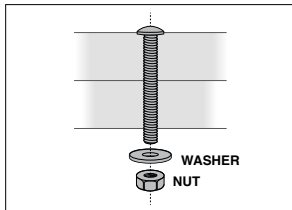


FIGURE 3-1
Add washer and 5/16" nuts to back side of seat back and seat. Tighten thoroughly.

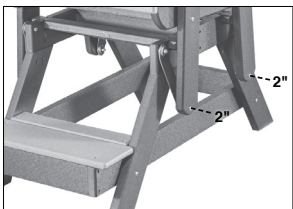


FIGURE 5
Attach base with 2" bolts by inserting bolts from outside of chair arms. (See Fig. 5-1 for assembly detail.)

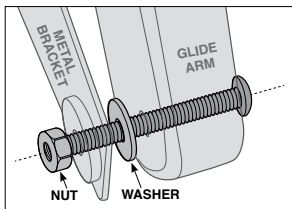


FIGURE 5-1
IMPORTANT: Put washer between glide arm and pre-attached metal glide base bracket. Tighten thoroughly.

TOOLS NEEDED


- 1/2" open end wrench
- 3/16" Allen wrench

PARTS LIST

- 1 – chair back
- 1 – chair seat
- 2 – arm rests and assemblies
- 1 – swivel base assembly
- 2 – 4" bolts
- 4 – 3" bolts
- 4 – 2" bolts
- 10 – 5/16" nuts
- 10 – washers

Assembly Instructions Balcony Glider Base

GLIDERS

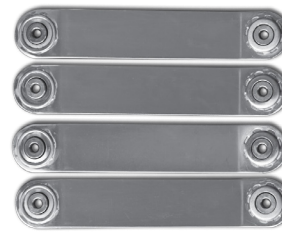

WASHERS




NUTS



2" BOLTS



2 3/4" BOLTS

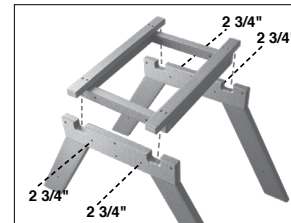

STEP 1
Set top cross piece in slot on top of legs (as shown). Align predrilled holes. Insert 4 – 2 3/4" bolts.



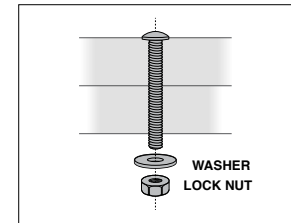


FIGURE 1-A
Add washer and lock nuts to back side. Tighten thoroughly.

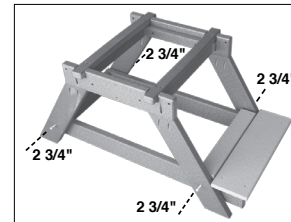

STEP 2
Mount bottom brace and foot plate using 4 – 2 3/4" bolts, washers and lock nuts.

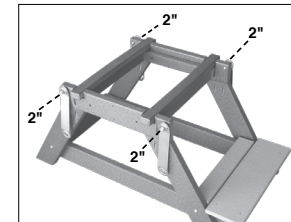

STEP 3
Mount 4 gliders to base frame using 4 – 2" bolts, washers and lock nuts. (See Figure 3-A for assembly detail.)

TOOLS NEEDED

- 1/2" open end wrench
- 3/16" Allen wrench

PARTS LIST

- 2 – legs
- 1 – top piece
- 1 – bottom base and foot plate
- 4 – gliders
- 8 – 2 3/4" bolts
- 4 – 2" bolts
- 12 – lock nuts
- 12 – washers

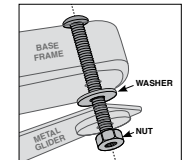


FIGURE 3-A
IMPORTANT: Put washer between base and metal glider bracket. Tighten lock nut thoroughly.

STEP 4
Set fully assembled chair into base frame and mount as shown in chair assembly instructions.