

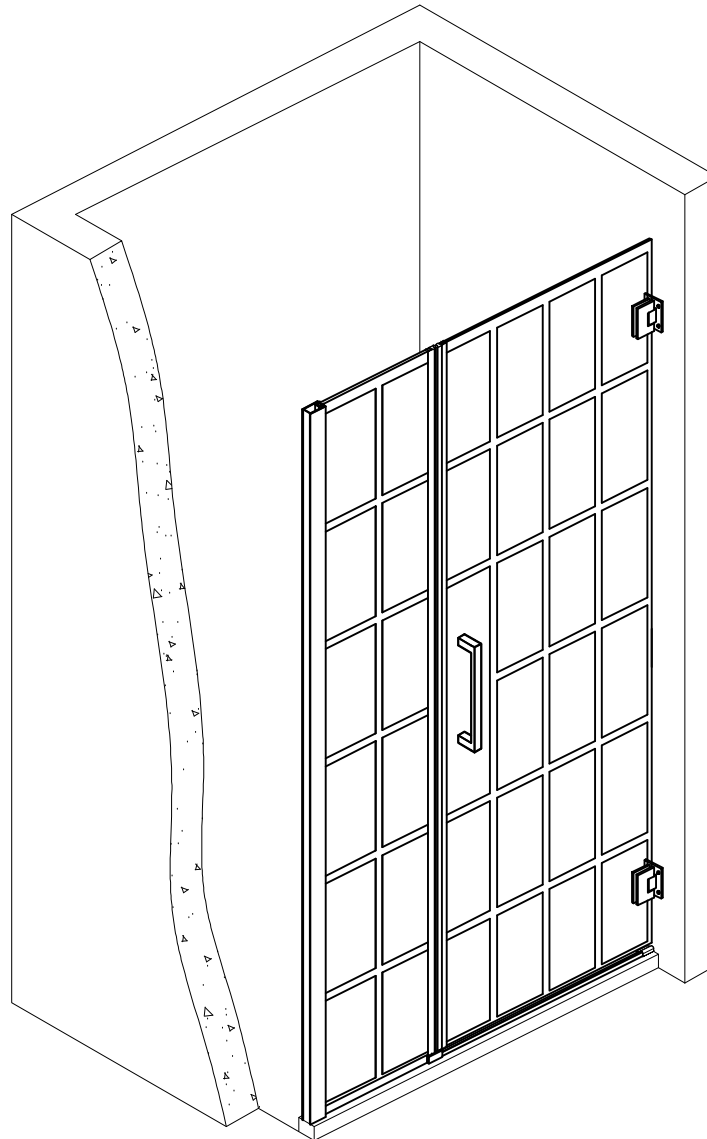
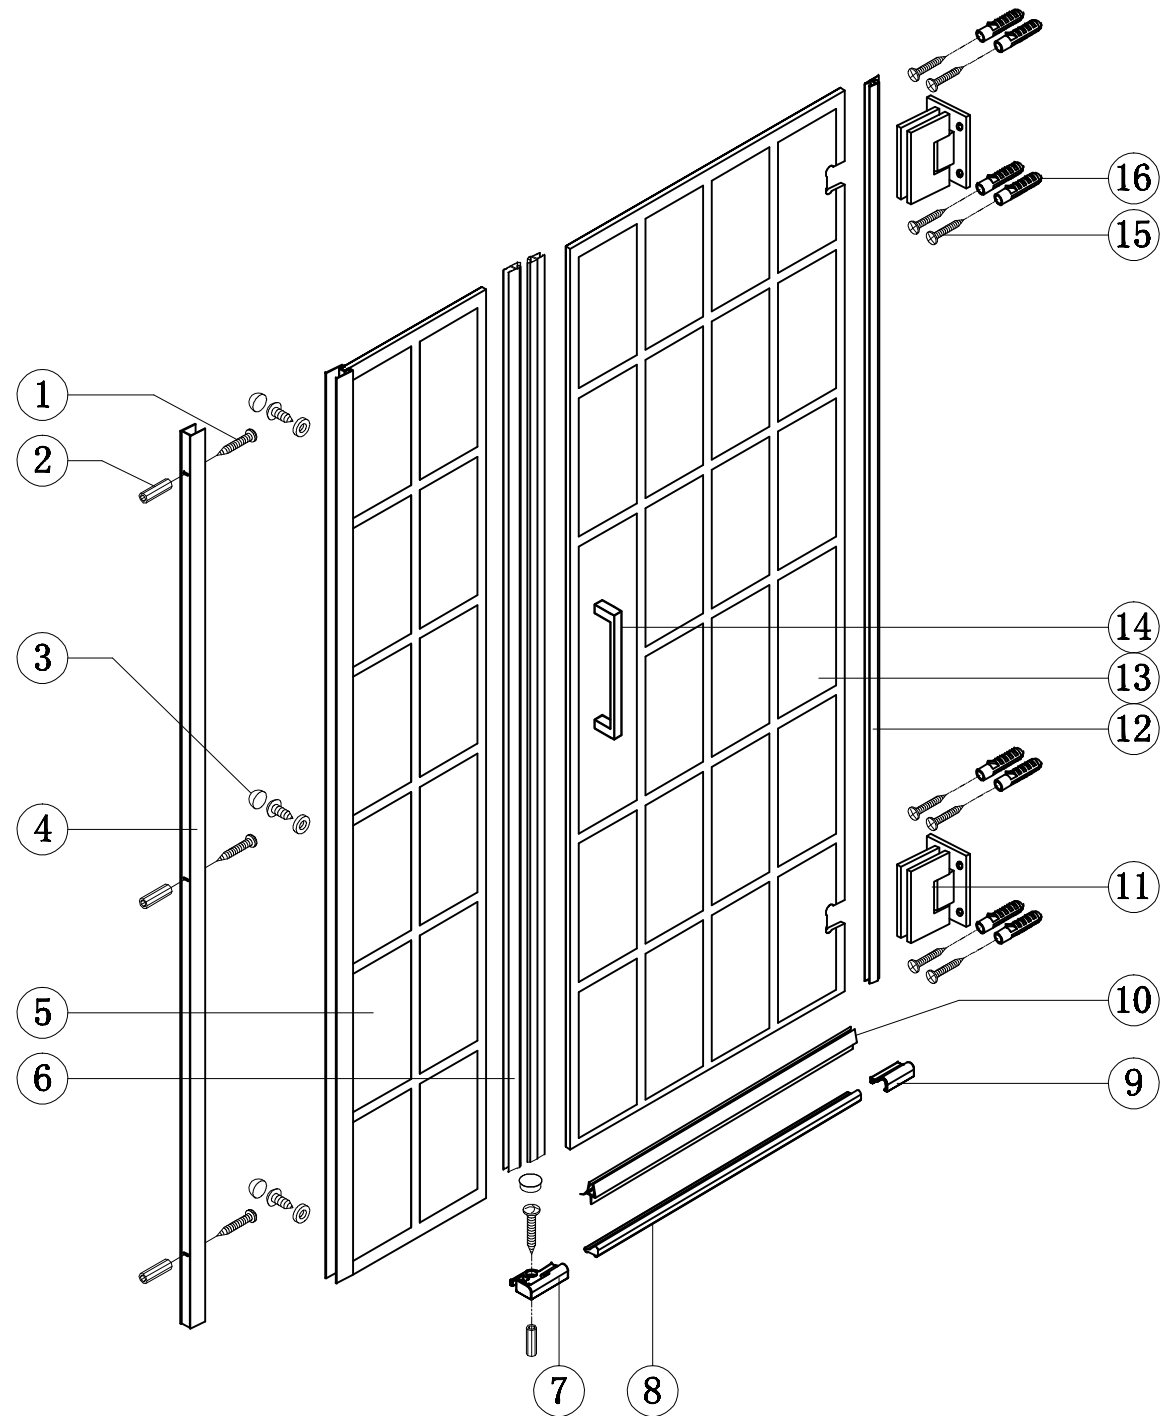




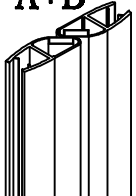


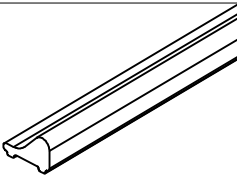

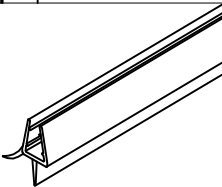
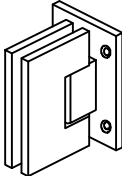


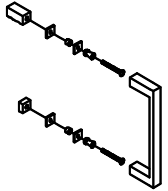



BRJ6B21

INSTALLATION MANUAL





1  ST4x30  4Pcs	2  Ø6x30  4Pcs	3  ST4x12  3Pairs	4  1Pc	5  1Pc	6  1825mm A+B 1Pair
7  L R  1Pair	8  1Pc	9  1Pc	10  1Pc	11  2Pcs	12  1Pc
13  1Pc	14  1Pc	15  ST5*35  8Pcs	16  Ø8x35  8Pcs	Tools:	

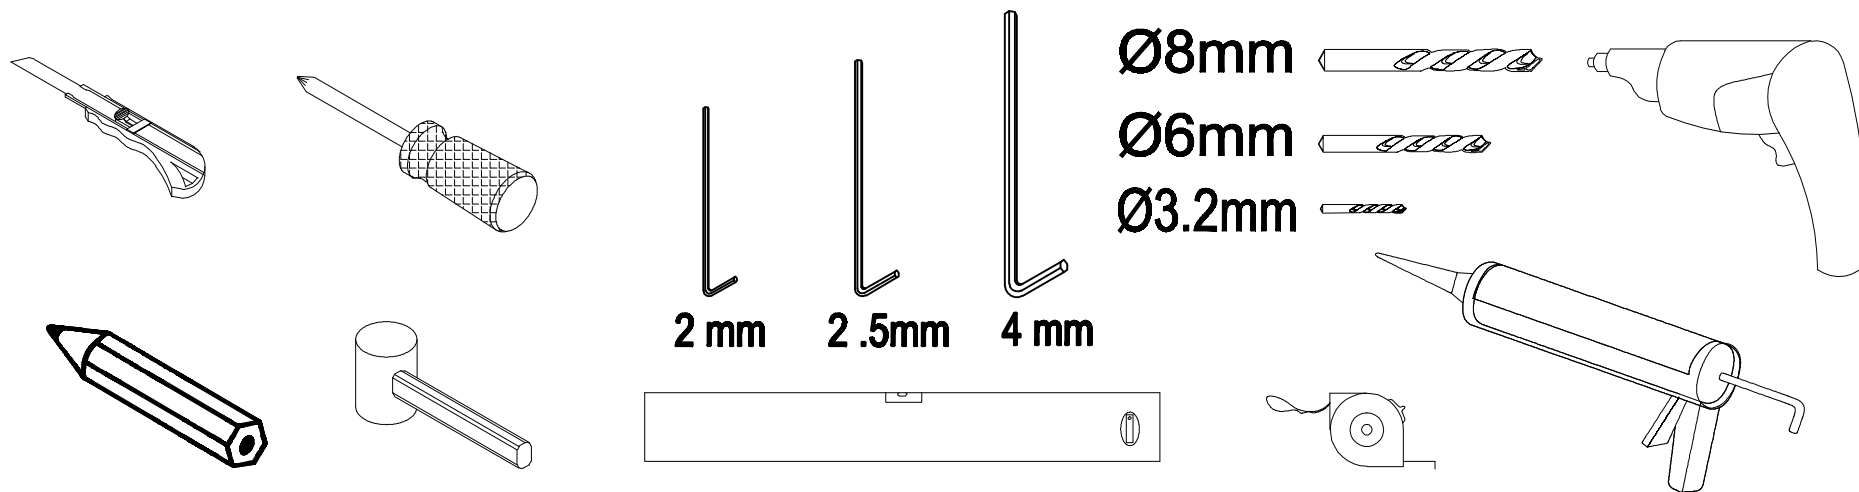

1

	L
865	845 - 865
1016	996 - 1016

1-1

Ø8x40mm 1-2

16x8 1-3

15x8 1-4

1830

22 25

22 25

the wood

2

2-1 ④x1

2-2 Ø6X40mm

2-3 ②x3

2-4 ①x3

2-5 ⑤x1



Inside Outside

2-6


20

20




3

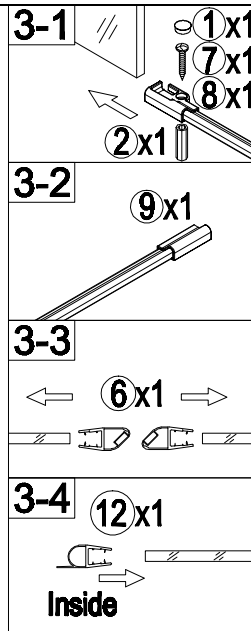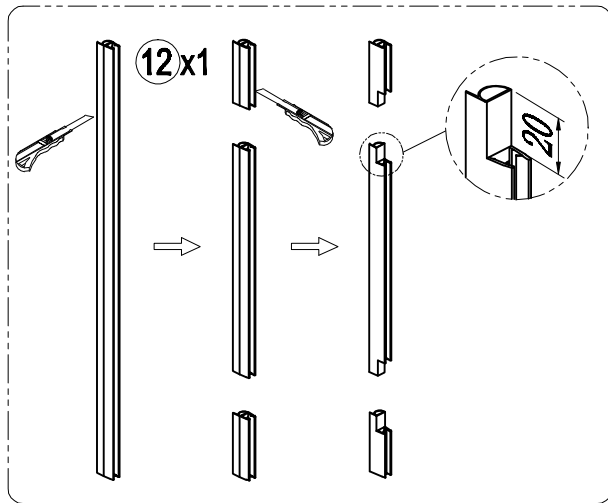



4

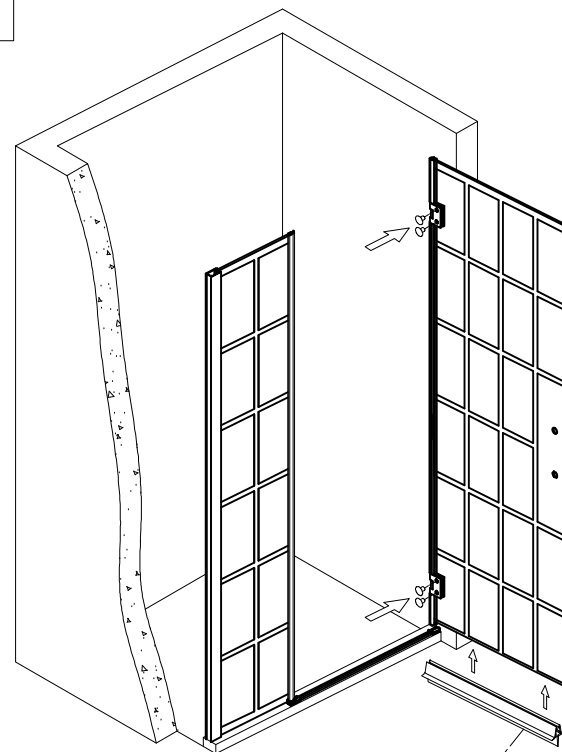

IT IS VERY IMPORTANT
TO HAVE THE BOTTOM
OF THE GLASS PARALLEL
TO THE TRAY TOP FACE,
IT MUST HAVE A 22mm EVEN
GAP ALL THE WAYALONG.

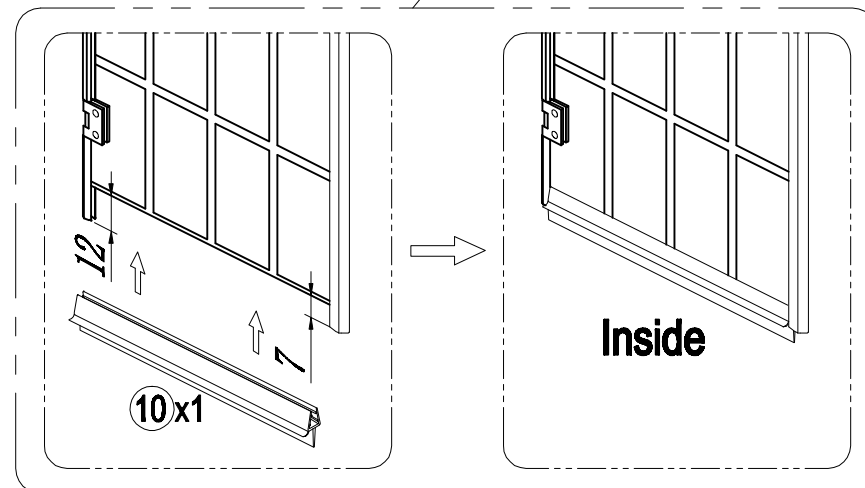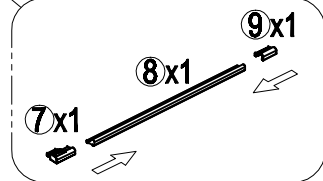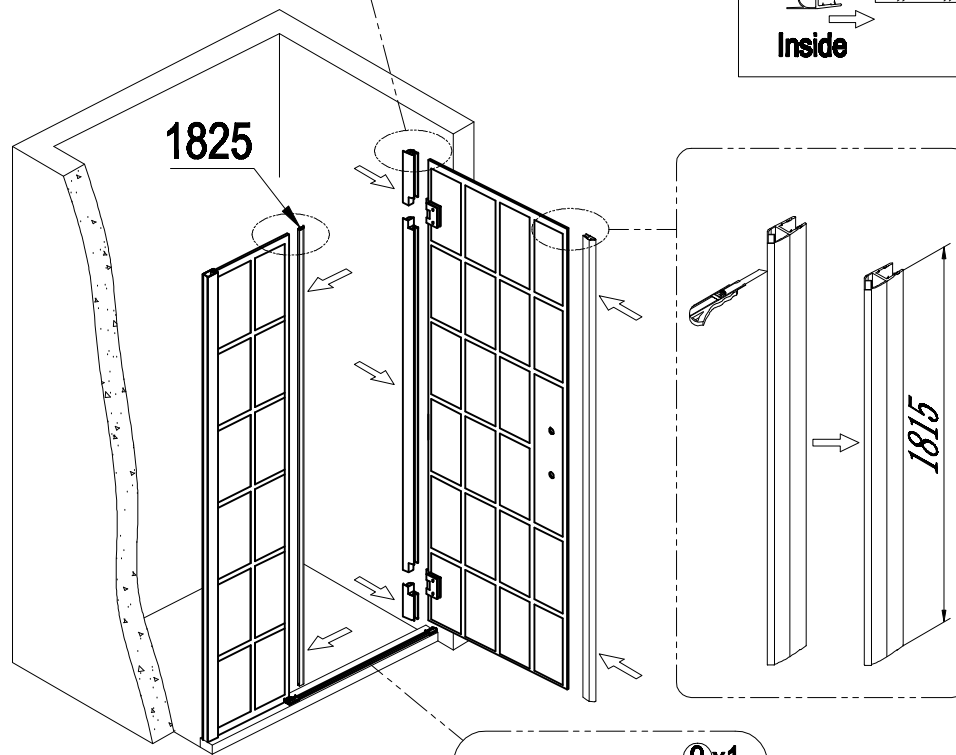

5

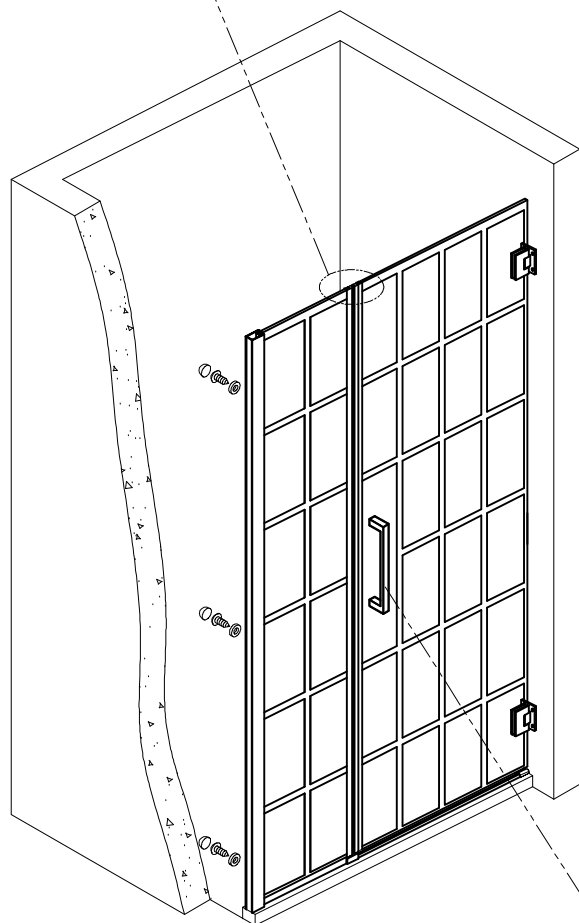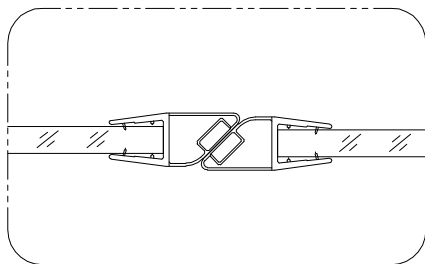

5-1


Ø3.2mm

0-20

5-2

3x3

5-3

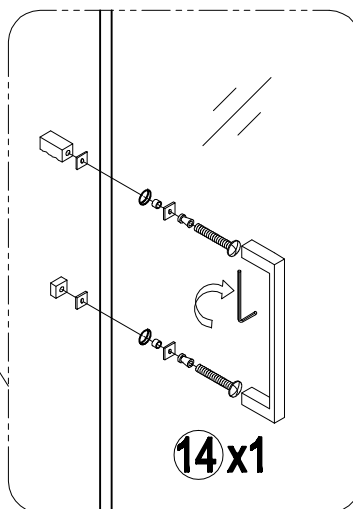

14x1

6

Care Instructions:

Do not use your shower enclosure within 24 hours of assembly .
Do not use caustic cleaning products or abrasive material when cleaning your shower enclosure.

