


STANDARD HARDWOOD STAIR TREAD

package contents

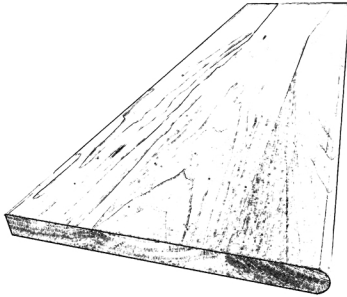

hardwood stair tread

materials needed

- construction adhesive
- paint or stain of your choice
- circular saw, miter saw, or table saw

NOTE: the instructions are for installing your new hardwood stair treads. You would need to remove any existing flooring for your stairs before installing your new stair treads.

Your new hardwood stair tread comes pre-sanded to 120 grit. The treads are ready to accept paint, but if you would like to stain your new stair treads, then follow the instructions from your stain manufacturer.

1 You may want to pre-finish your new stair tread either by painting or staining. Don't forget the risers.

2 Your new hardwood stair tread comes in a standard 36" or 48" width, but not all staircases are square.

Start with the first stair tread and scribe a line on the left and right sides of your stair tread using the walls as your guide.

Trim the sides to fit your stair tread between the walls.

3 Your new stair tread comes in a 12" depth, but all staircases are slightly different.

Measure the depth of your staircase on the left and right sides.

Measure the same distances from the front (bullnose) to the back and make your marks.

These marks will let you know if you need to trim the back of your stair tread or not.

4 To install your first stair tread using the construction adhesive.

To help the stair tread stay in place while the adhesive cures simply nail the back of the tread. Make sure the riser can hide the nail holes.

Repeat steps 2 - 4 for the next stair treads until it's complete.

We value your opinion. Please send feedback or questions to info@emarkathome.com

