


Hall tree

Assembly Instructions - Please keep for future reference

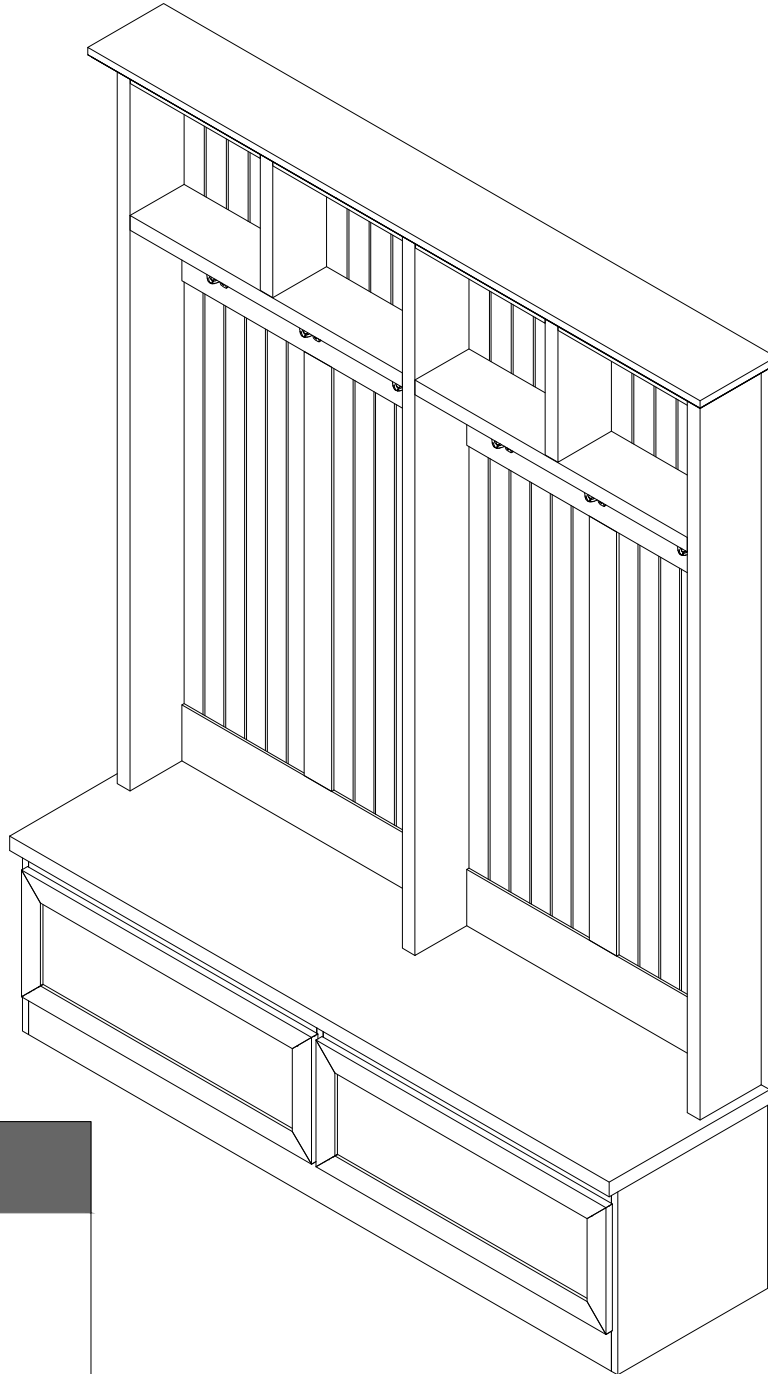

Dimensions

Width-55.9inch

Depth-15inch

Height-75.6inch

Important-Please read these instructions fully before starting assembly



Safety and Care Advice

Important – Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



power drill is set on a low torque setting.

- To reduce the likelihood of damaging your product please ensure that your

Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- Regularly check and ensure That all bolts and fittings are tightend properly.











WARNING
In order to help prevent overturning –
please follow these instructions

To help prevent product toppling over please follow the below steps:-

Use the anti tip stap or wall fixing method provided (if applicable)
Do not allow children to climb or hang on the furniture
Do not open more than one drawer at a time
Do not place heavy items in the top drawers
Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose

Components - Fittinas
















Please check you have all the panels listed below

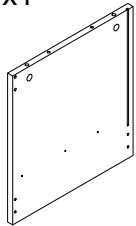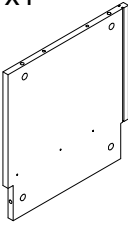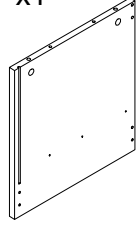① x1  1450x180x35mm	② x1  1495x145x30mm	③ x1  1495x145x30mm	④ x1  1495x145x30mm	⑤ x2  645x145x30mm	⑥ x2  315x144x30mm
⑦ x2  645x165x15mm	⑧ x4  307x45x15mm	⑨ x2  870x65x15mm	⑩ x2  645x115x15mm	⑪ x4  322x314x2.5mm	⑫ x4  877x297x2.5mm
⑬ x1  1420x380x30mm	⑭ x1  380x355x15mm	⑮ x1  380x355x15mm	⑯ x1  380x355x15mm	⑰ x1  1380x90x15mm	⑱ x1  1380x90x15mm
⑲ x2  682x45x15mm	⑳ x2  689x297x2.5mm	㉑ x2  687x260x15mm	㉒ x2  300x165x12mm	㉓ x2  300x165x12mm	㉔ x2  634x165x12mm
㉕ x2  641x295x2.5mm	㉖ x2  287x45x12mm				


Components - Fittinas

Please check you have all the panels listed below

Note : The quantitie below are the correct amount to complete the assembly . In some cases more fittings may be supplied than are required.

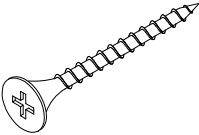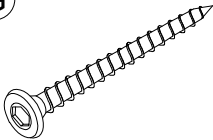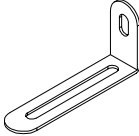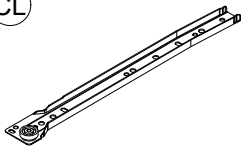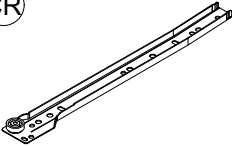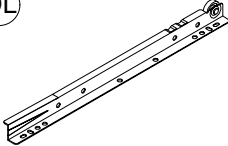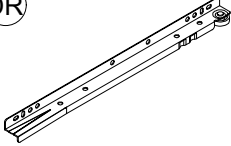 Ø6*35mm Cam Bolt x 58+1	 Ø15*9mm Cam lock x 58+1	 4*40mm Screw x 12+1	 6*30mm Dowel x 56+2	 3*12mm Screw x 24+1
 6*50mm Dowel x 2	 5*50mm Screw x 20+1	 Clothes-Hook x 6	 3.5*12mm Screw x 12+1	 3*14mm Screw x 32+2
 Plastic Nail x 32+1	 30*15mm Non-Slip mat x 6	 4*12mm Screw x 4	 6*30mm Wall Anchor x 2	 Iron sheet x 2
 wrench x 1	 300mm Runner x 2	 300mm Runner x 2	 300mm Runner x 2	 300mm Runner x 2

Tools required

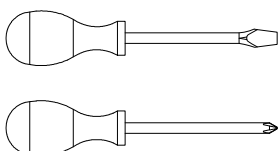

Phillips screwdriver
(medium large)


Using Camlocks

Step 1

Connect the male camlock as directed in the assembly instructions using a screwdriver.

1


DO NOT OVER TIGHTEN.
NE PAS SERRER EXCESSIVEMENT.

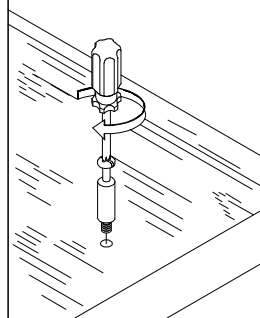

Step 2

Push the male camlock into the entry hole.

2

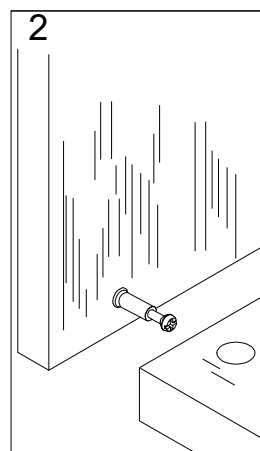


Step 3

Insert the female camlock as shown in the instruction.

Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

3

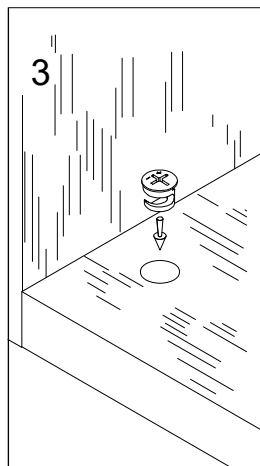


Step 4

Turn the female camlock clockwise with a screwdriver.


You should feel a click when the camlock is locked in place.

The joint is now secure.

4



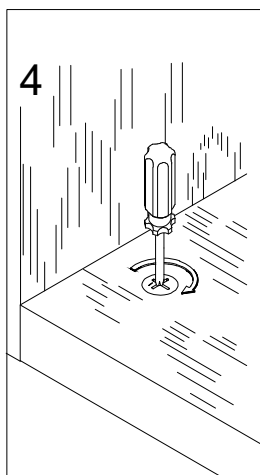




Assembly Instructions

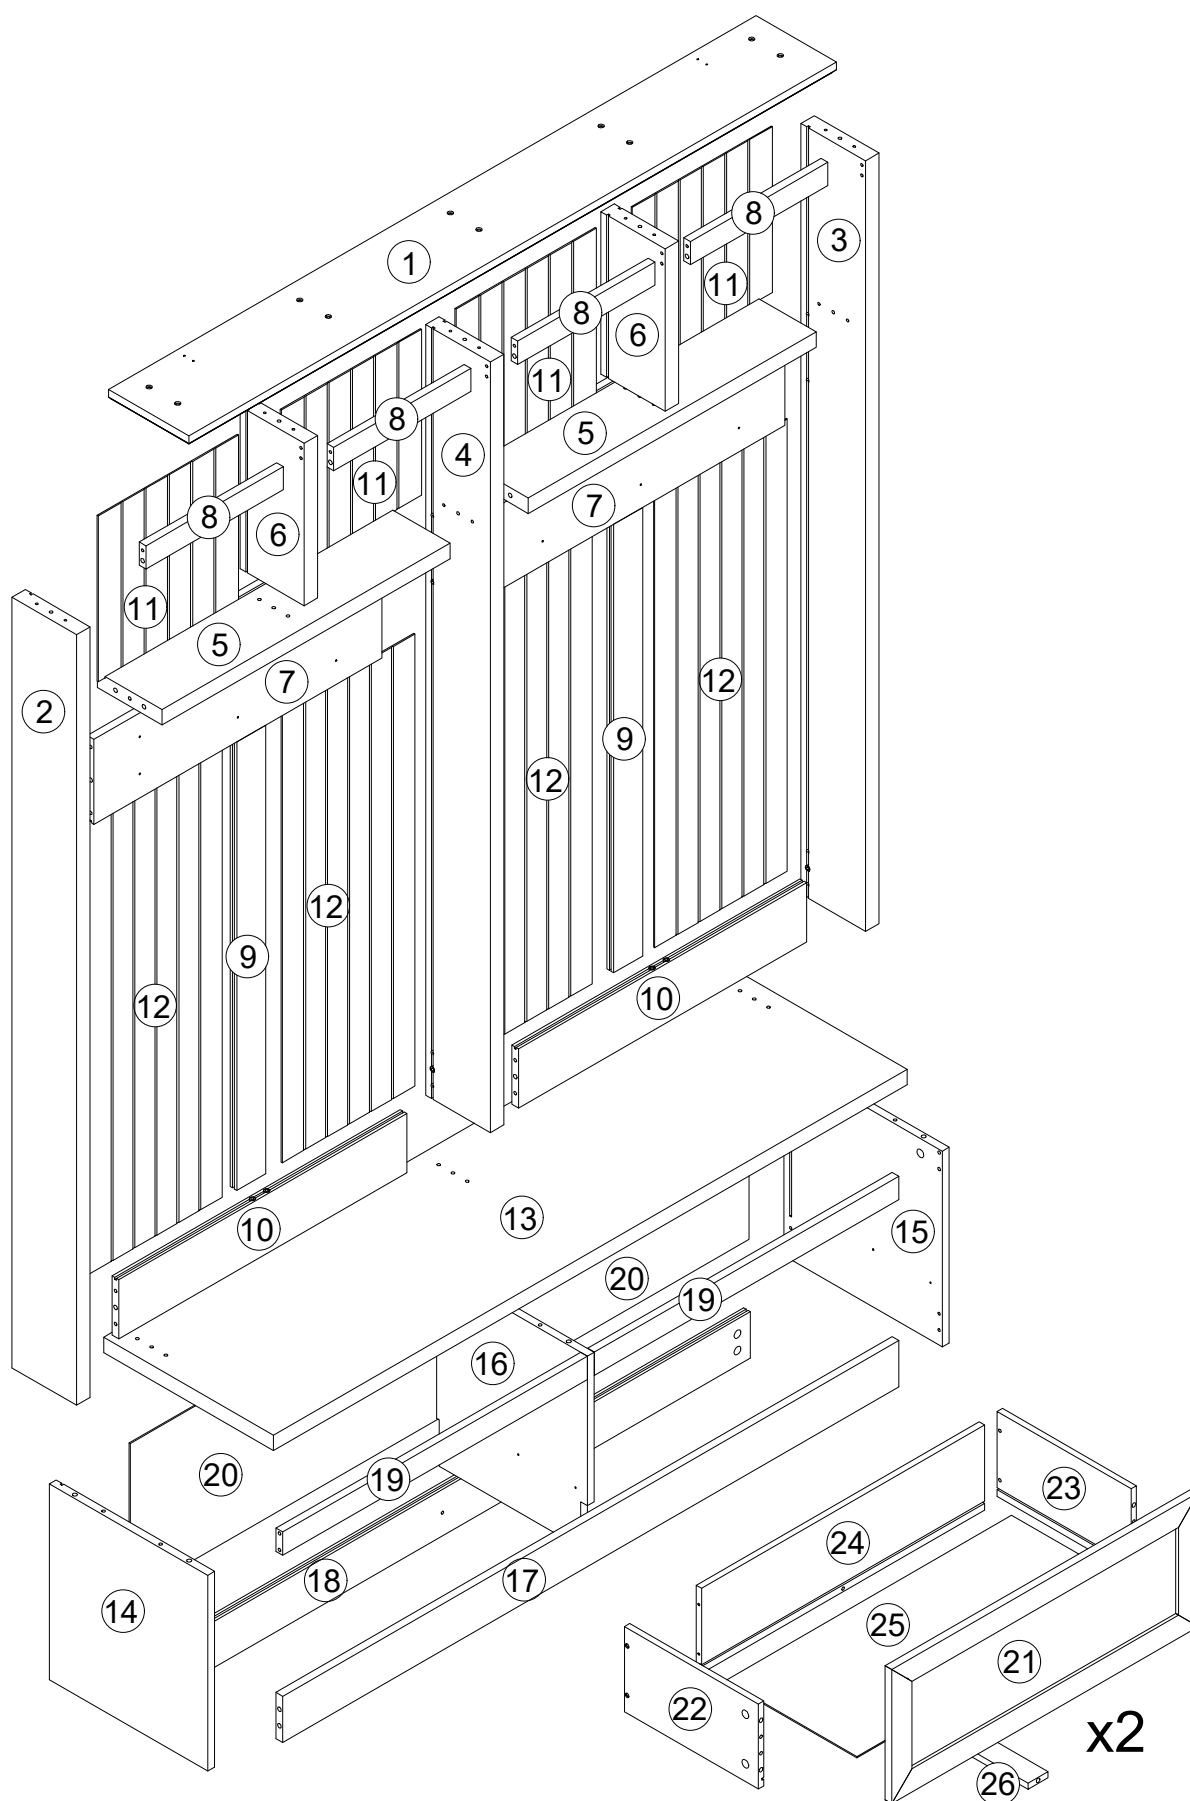


Assembly Instructions

step 1

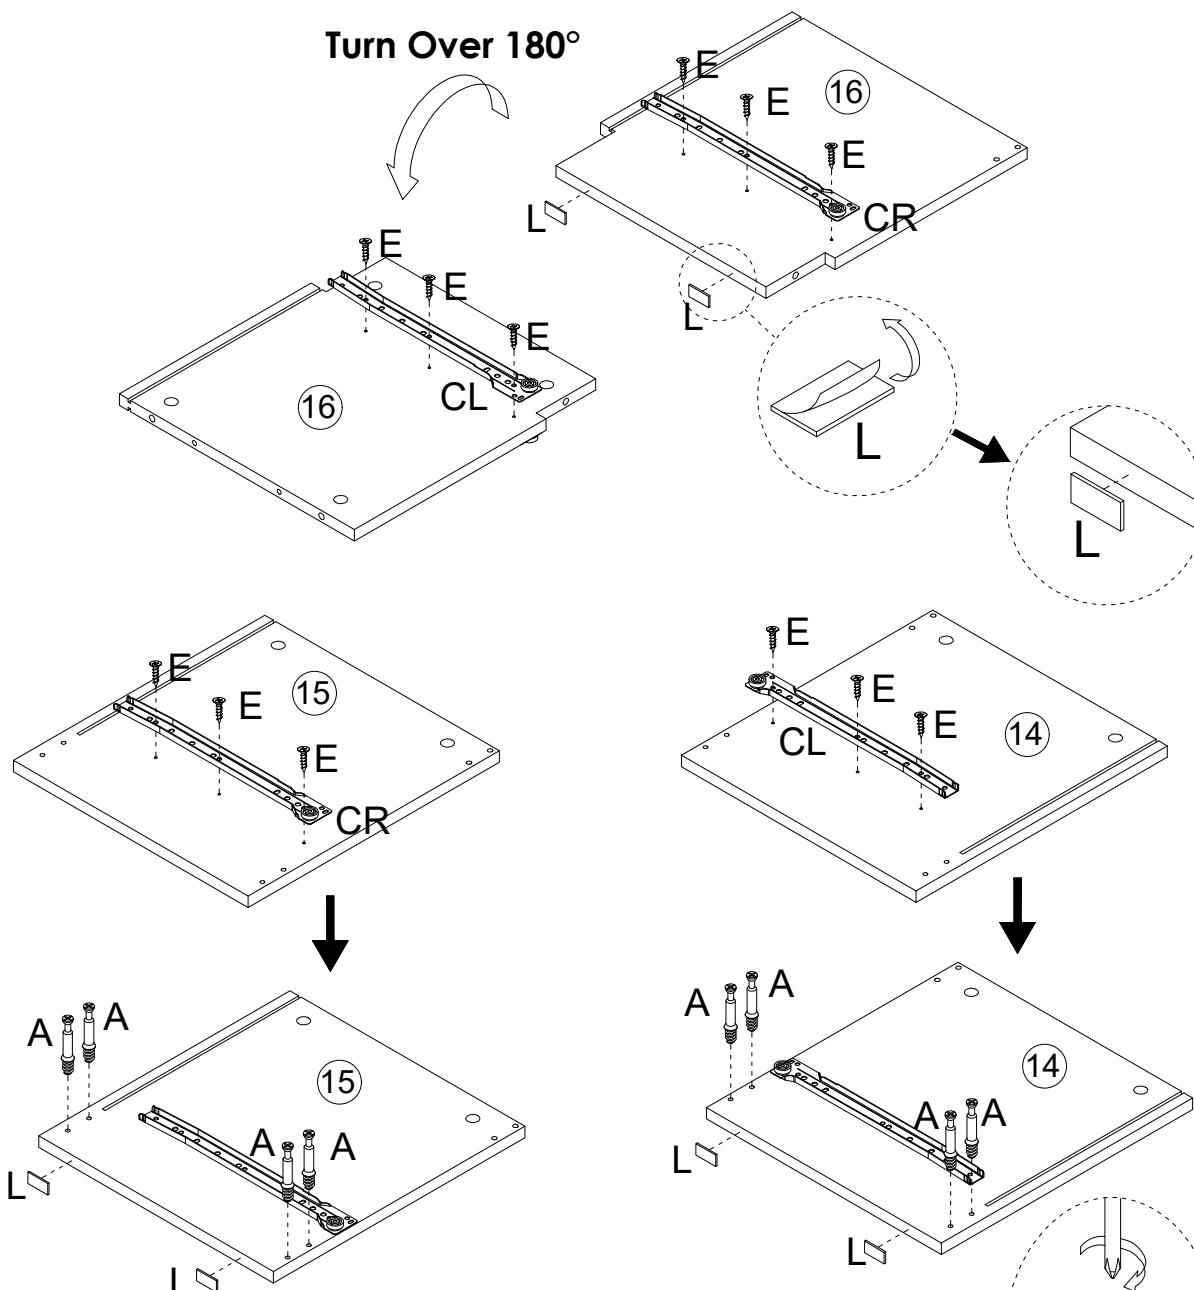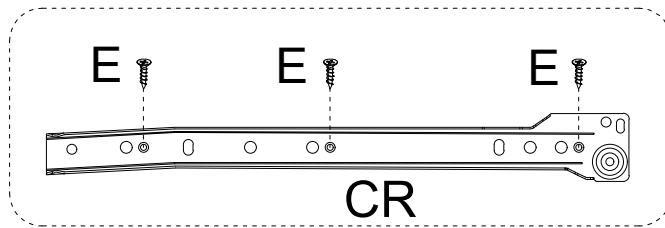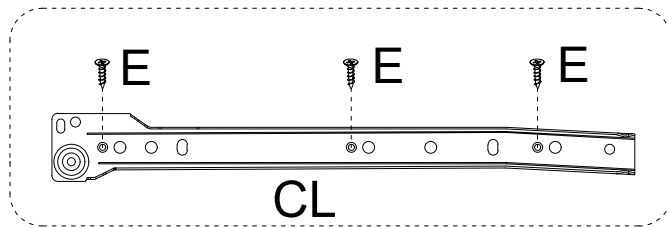


(A)  Ø6*35mm Cam Bolt x 8	(E)  3*12mm Screw x 12	(L)  30*15mm Non-Slip mat x 6	(CL)  300mm Runner x 2	(CR)  300mm Runner x 2
--	---	--	---	--

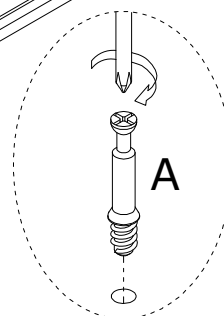


Assembly Instructions

step 2

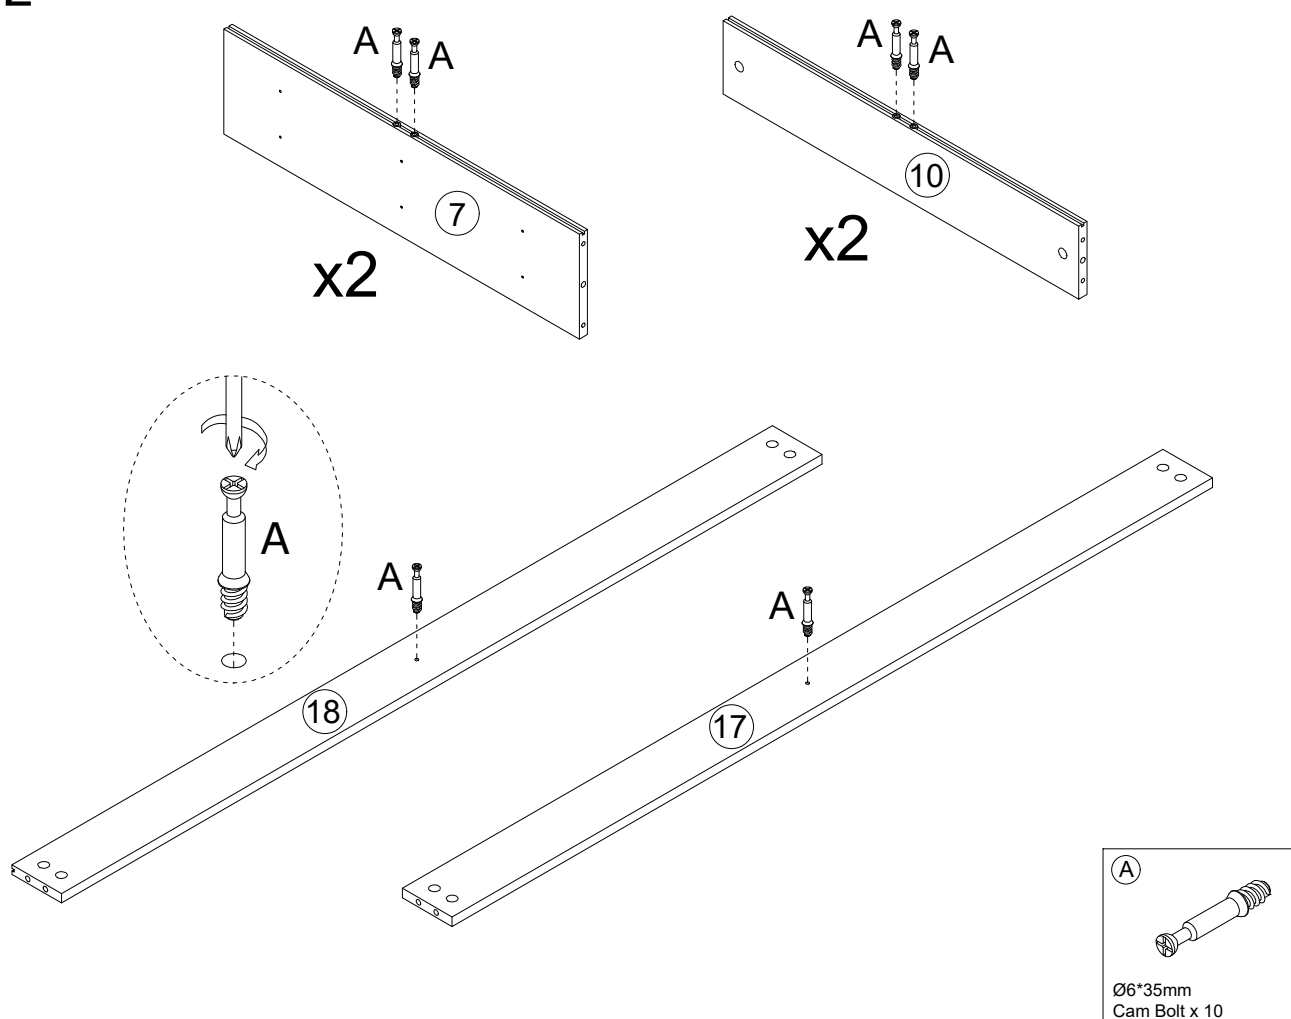


step 3

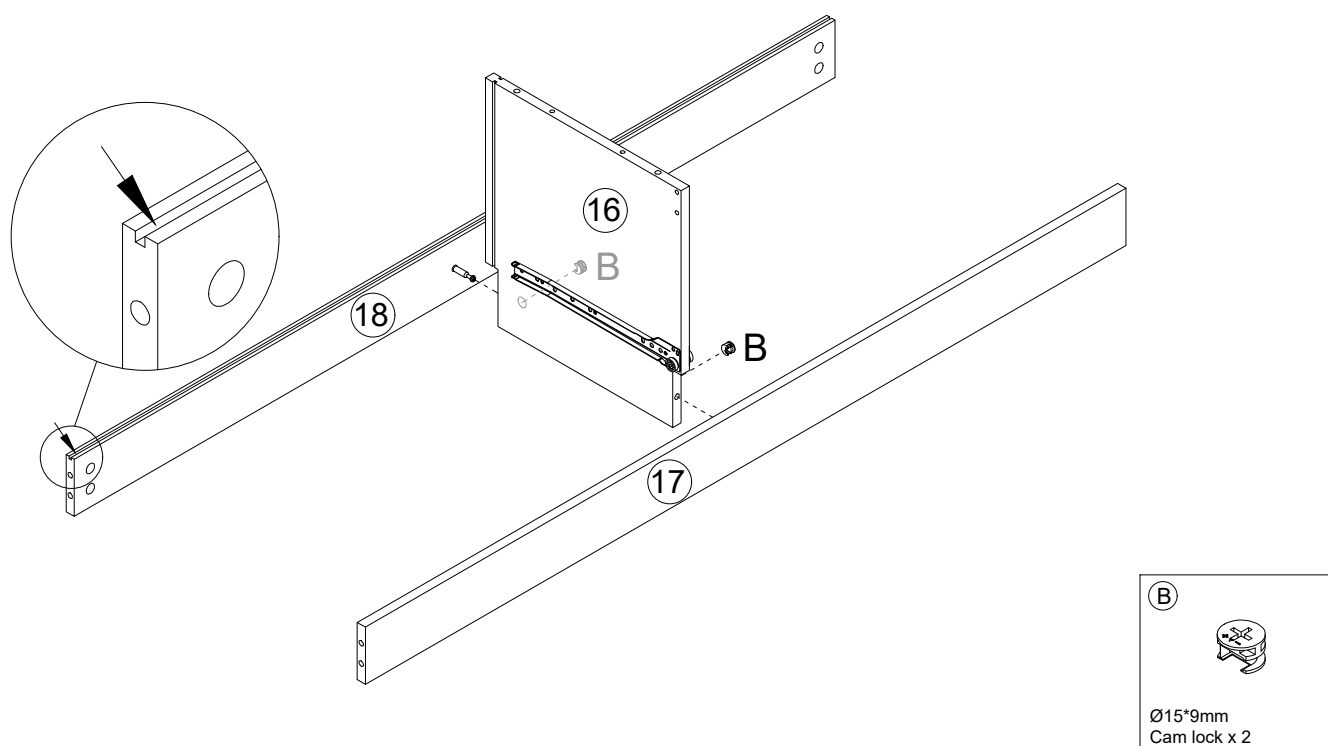


Assembly Instructions

step 4

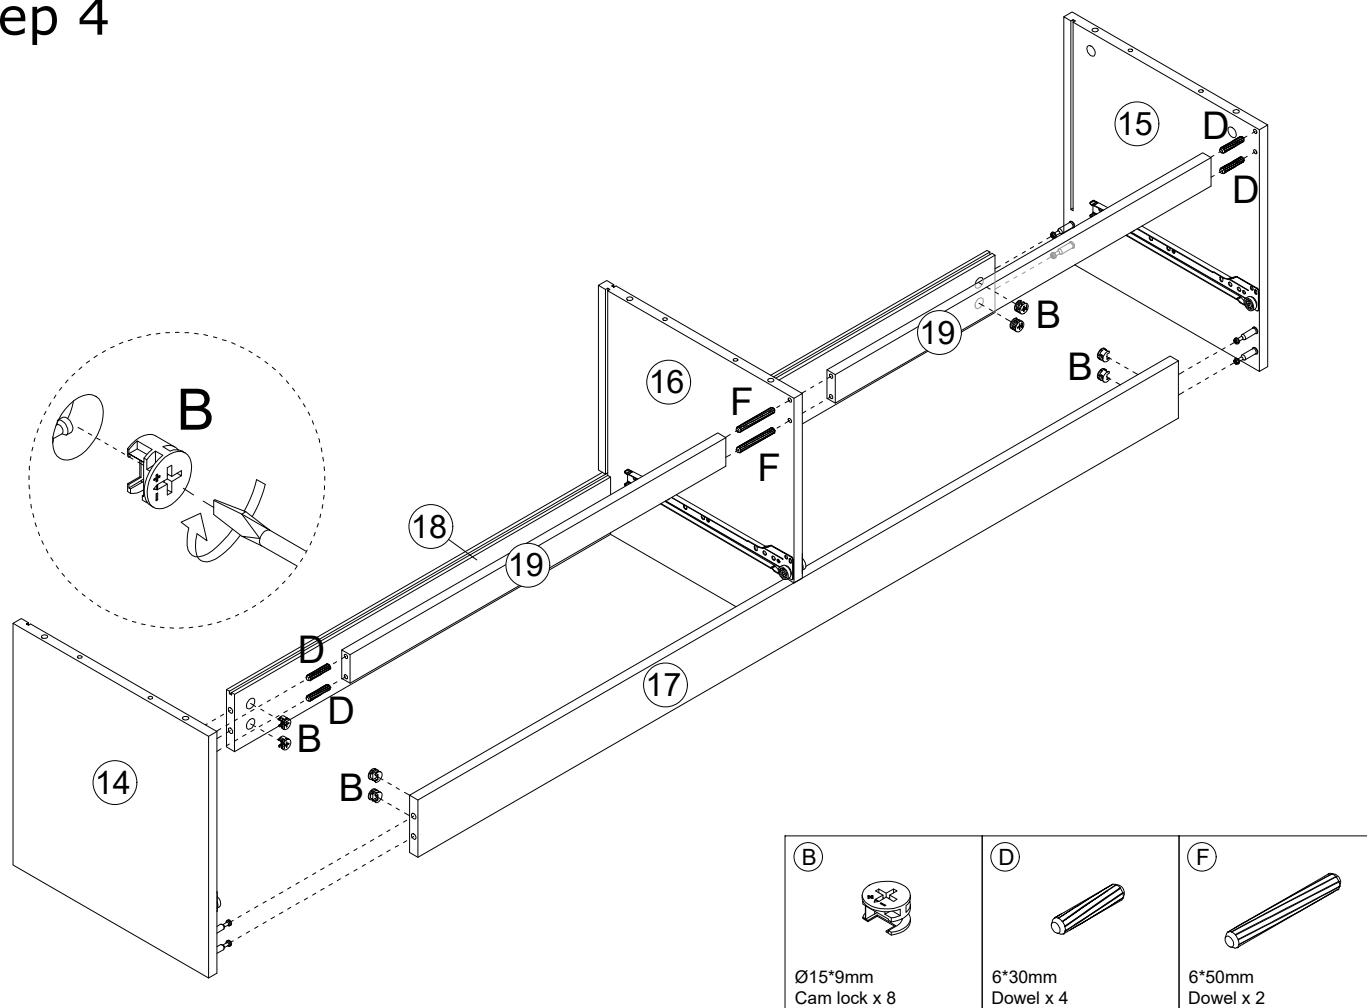


step 5

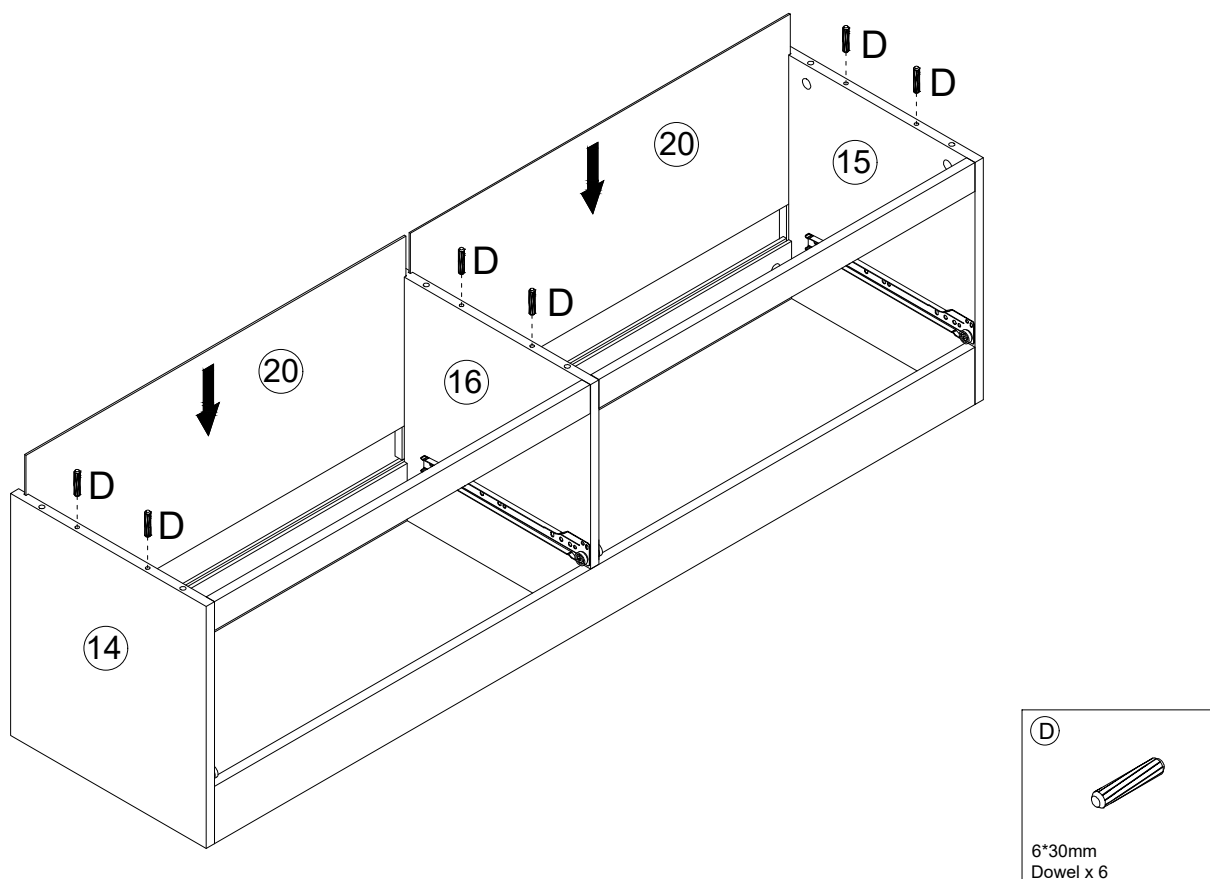


Assembly Instructions

step 6

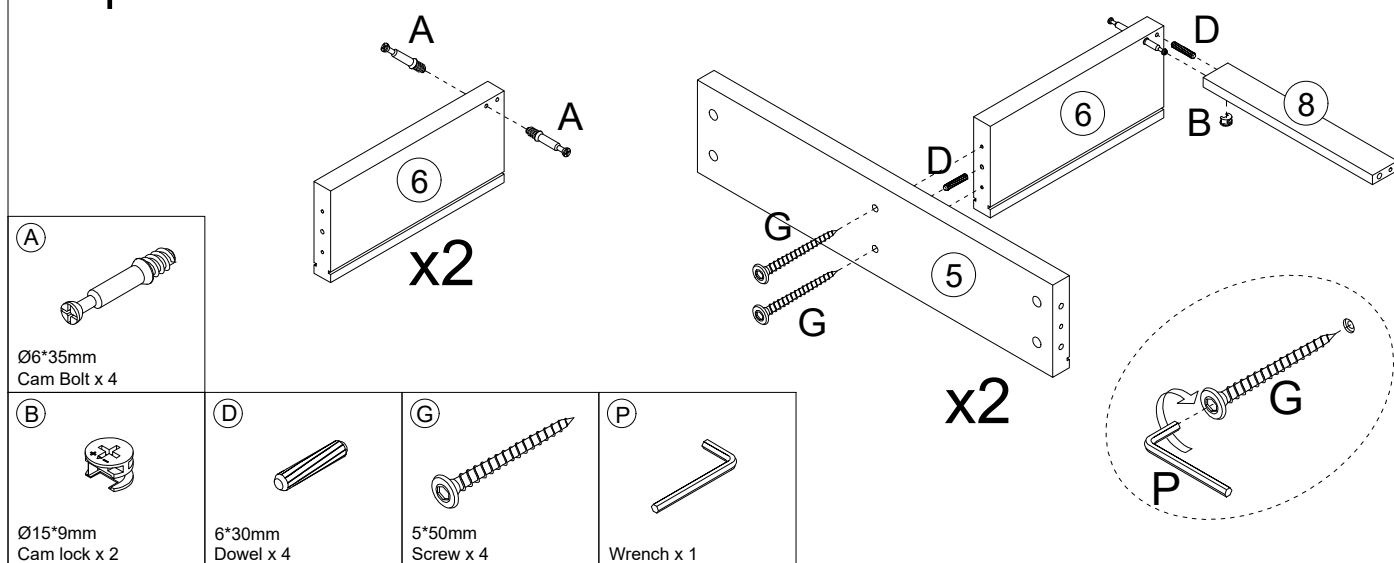



step 7

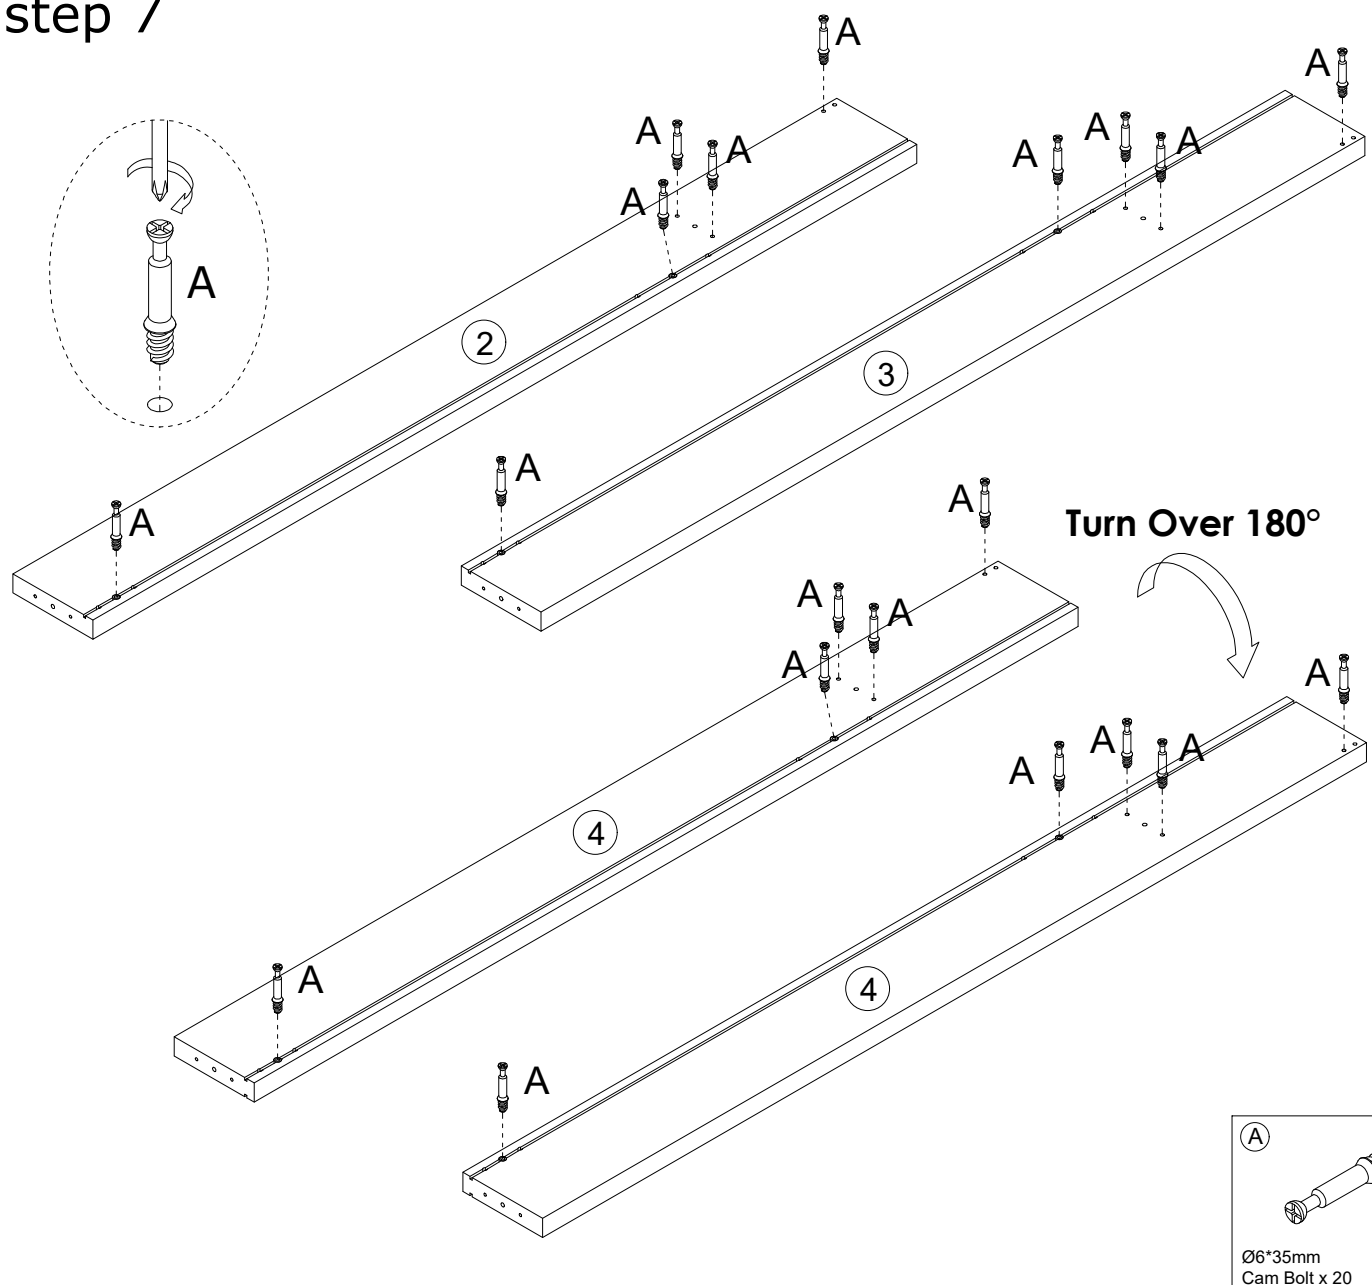

Assembly Instructions


step 8

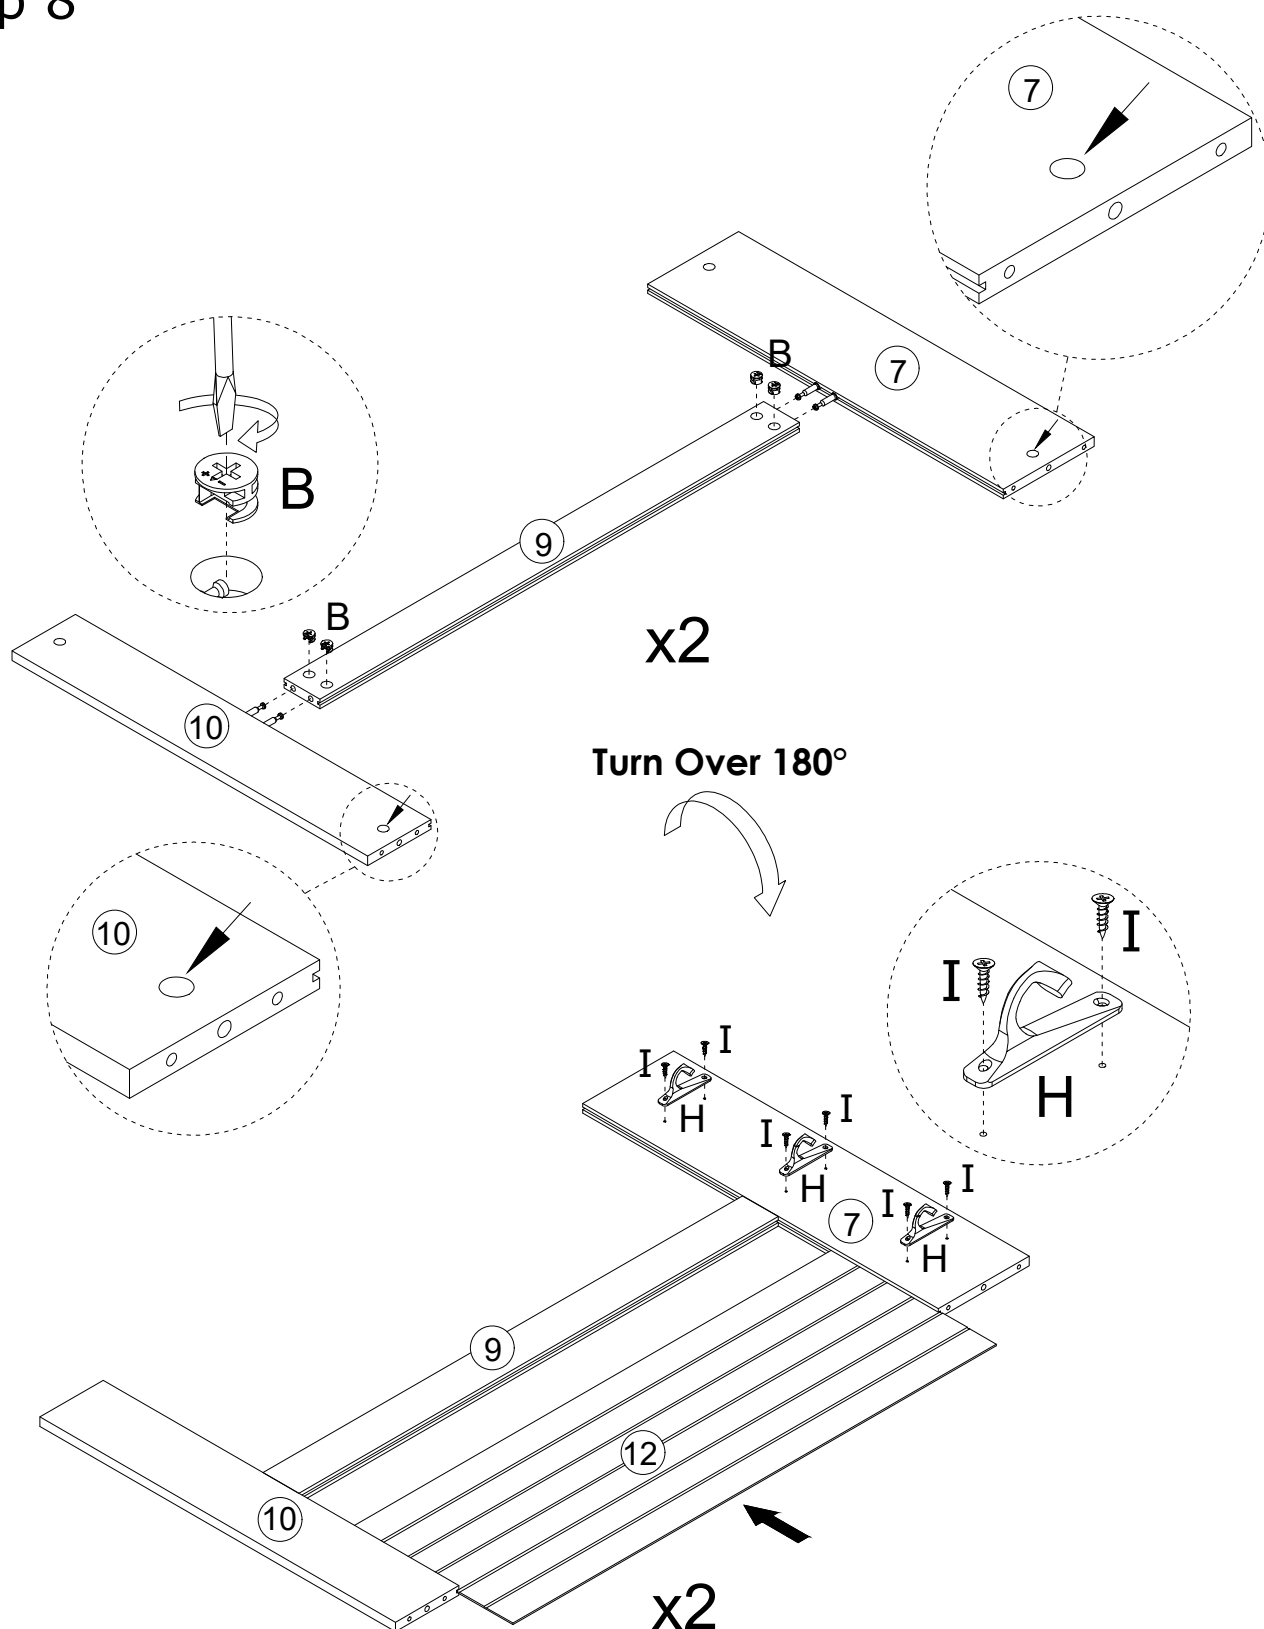

(B)  Ø15*9mm Cam lock x 8	(H)  Clothes-Hook x 6	(I)  3.5*12mm Screw x 12
---	--	---


Assembly Instructions

step 9

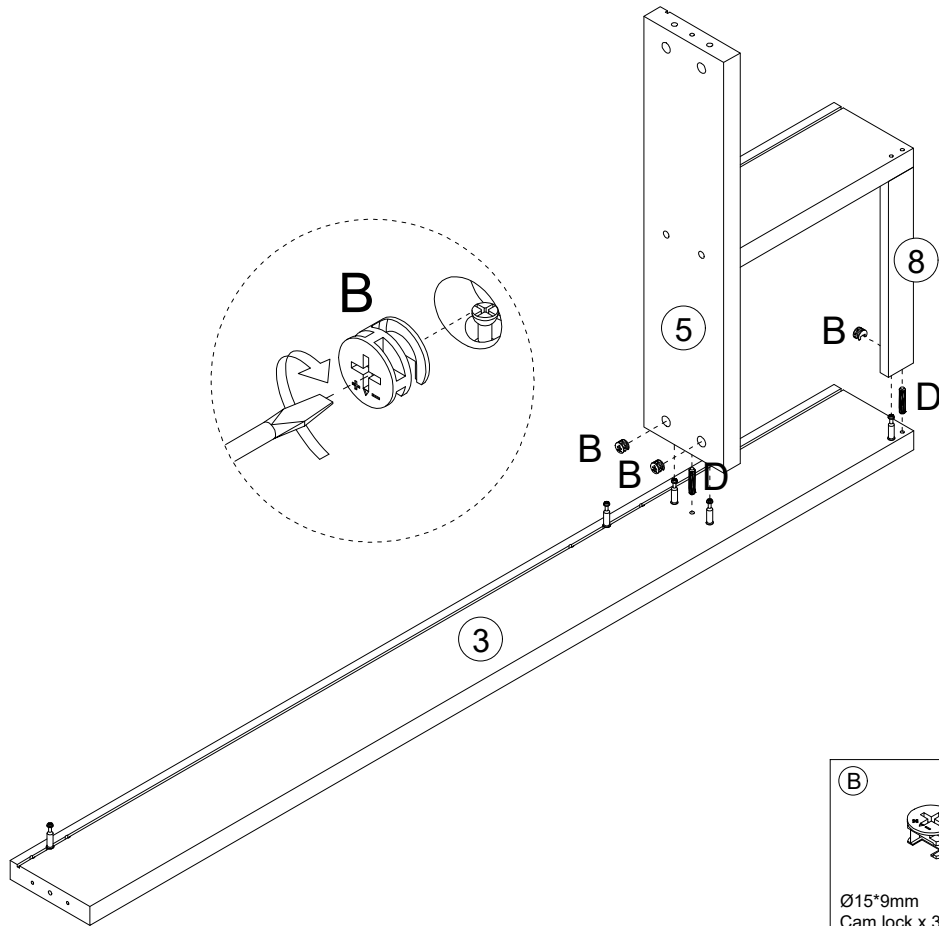

(B)	(D)
Ø15*9mm Cam lock x 3	6*30mm Dowel x 2


step 10

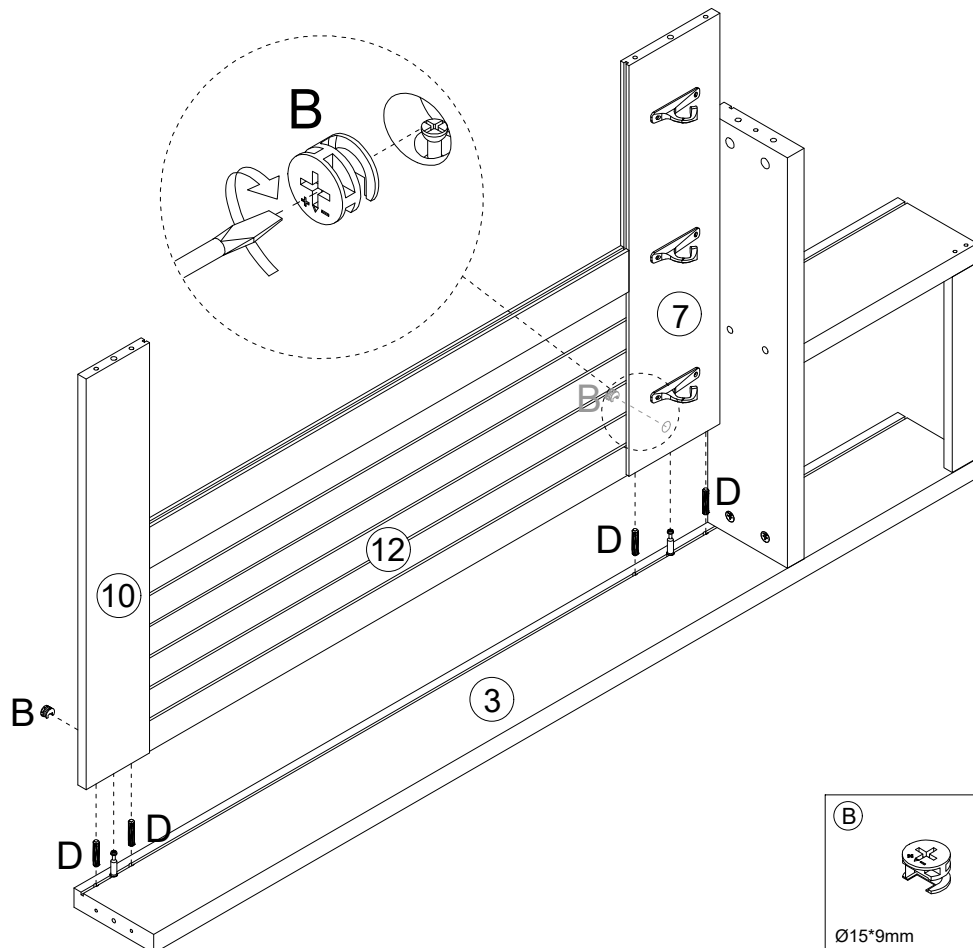

(B)	(D)
Ø15*9mm Cam lock x 2	6*30mm Dowel x 4


Assembly Instructions

step 11

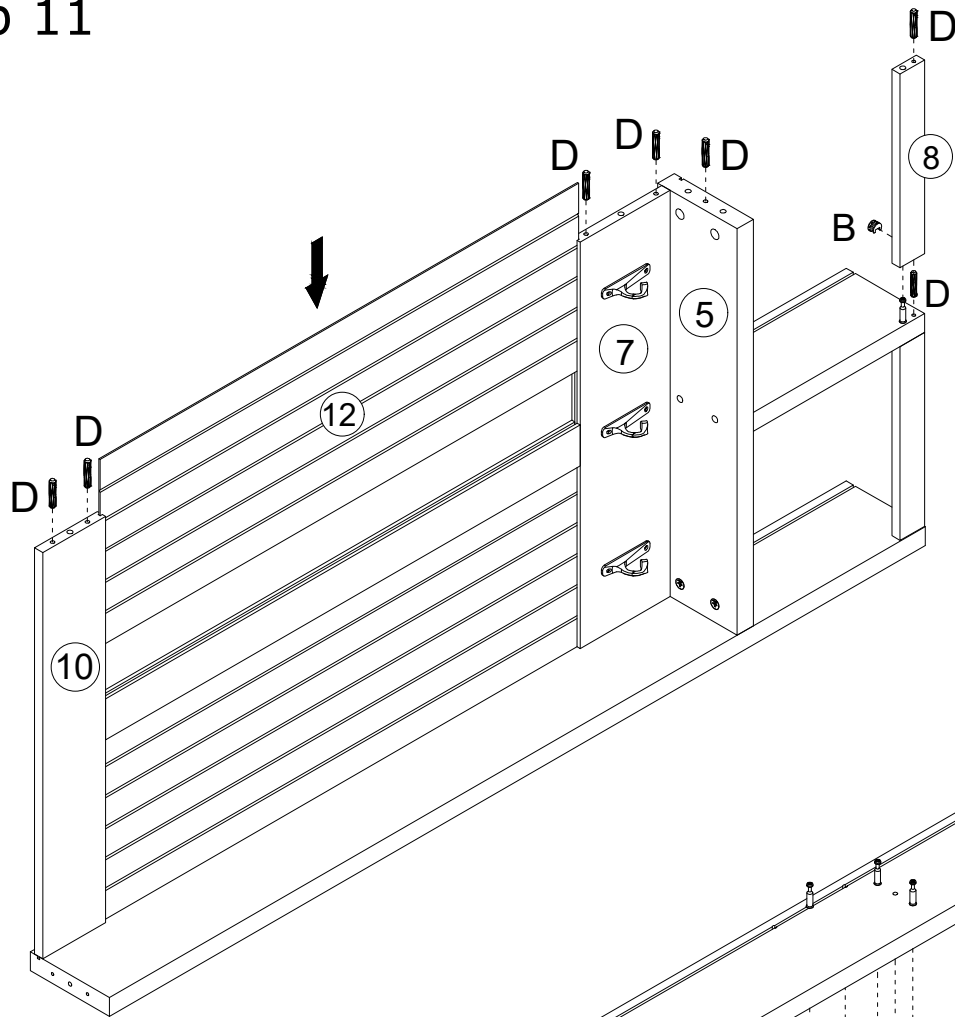

(B)	
Ø15*9mm Cam lock x 1	
(D)	
6*30mm Dowel x 7	


step 12

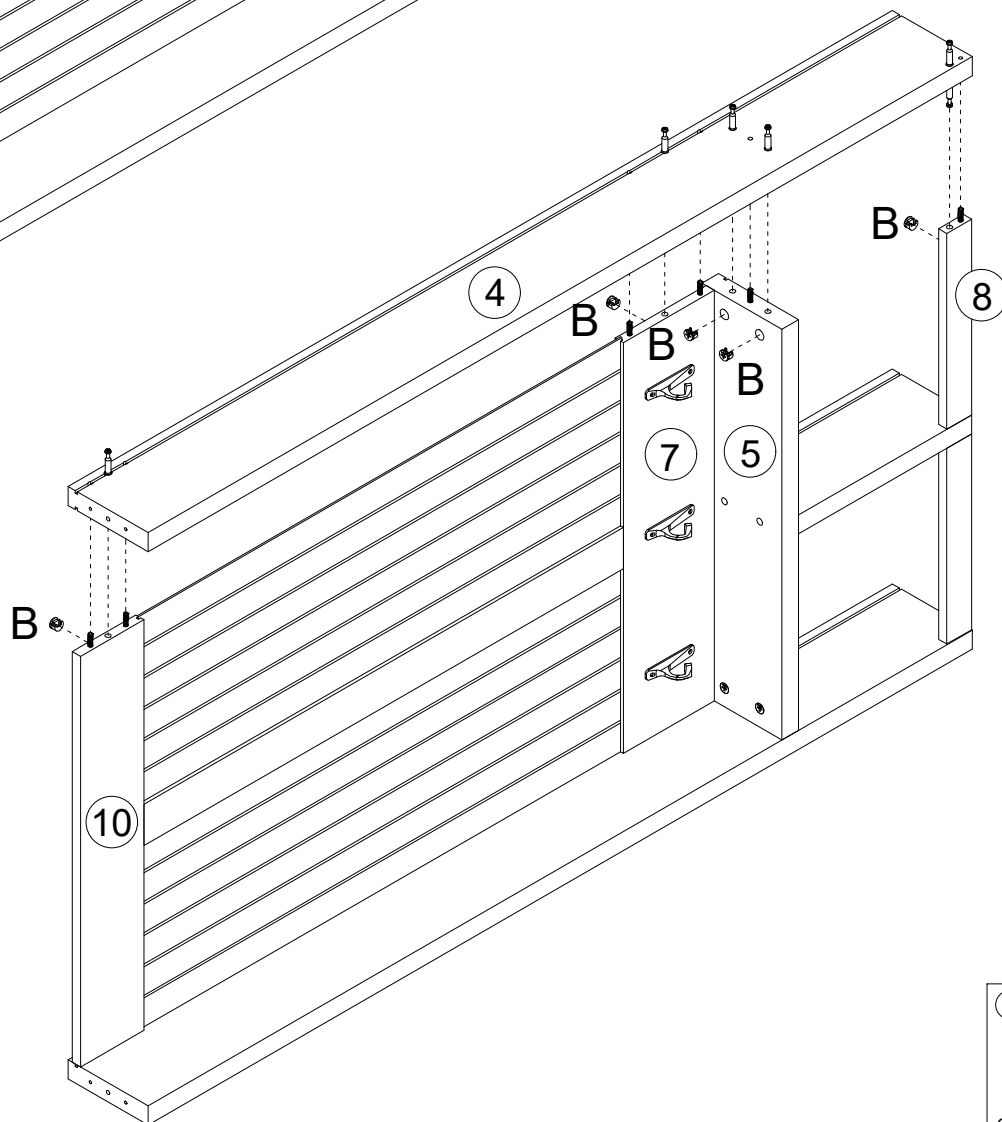

(B)	
Ø15*9mm Cam lock x 5	

Assembly Instructions

step 13

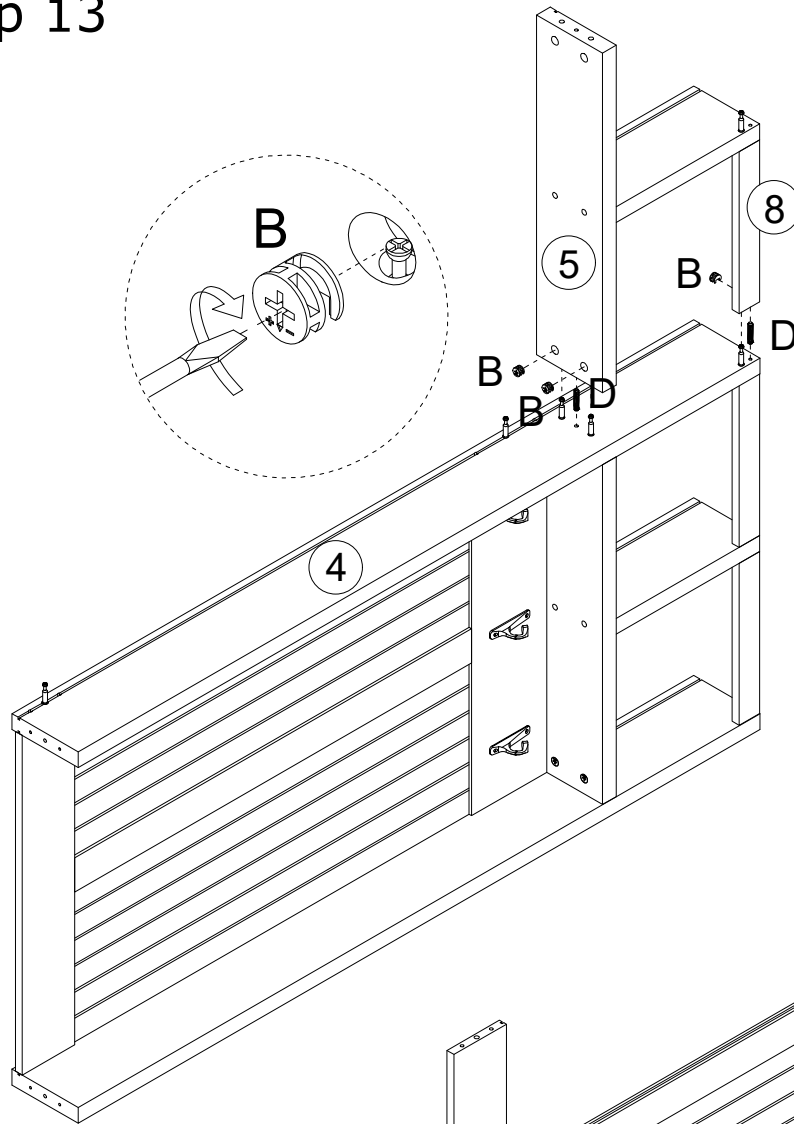


(B)

Ø15*9mm
Cam lock x 3

(D)

6*30mm
Dowel x 2

step 14

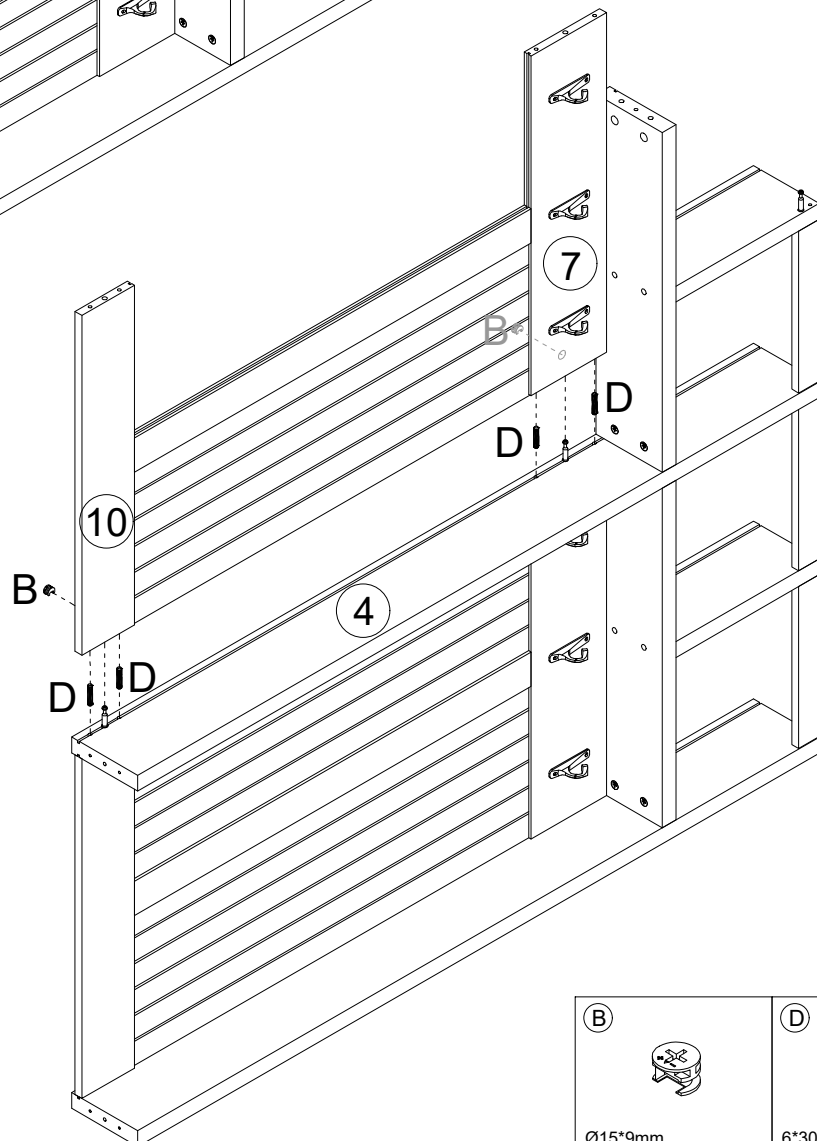

(B)


Ø15*9mm
Cam lock x 2

(D)

6*30mm
Dowel x 4

Assembly Instructions

step 15

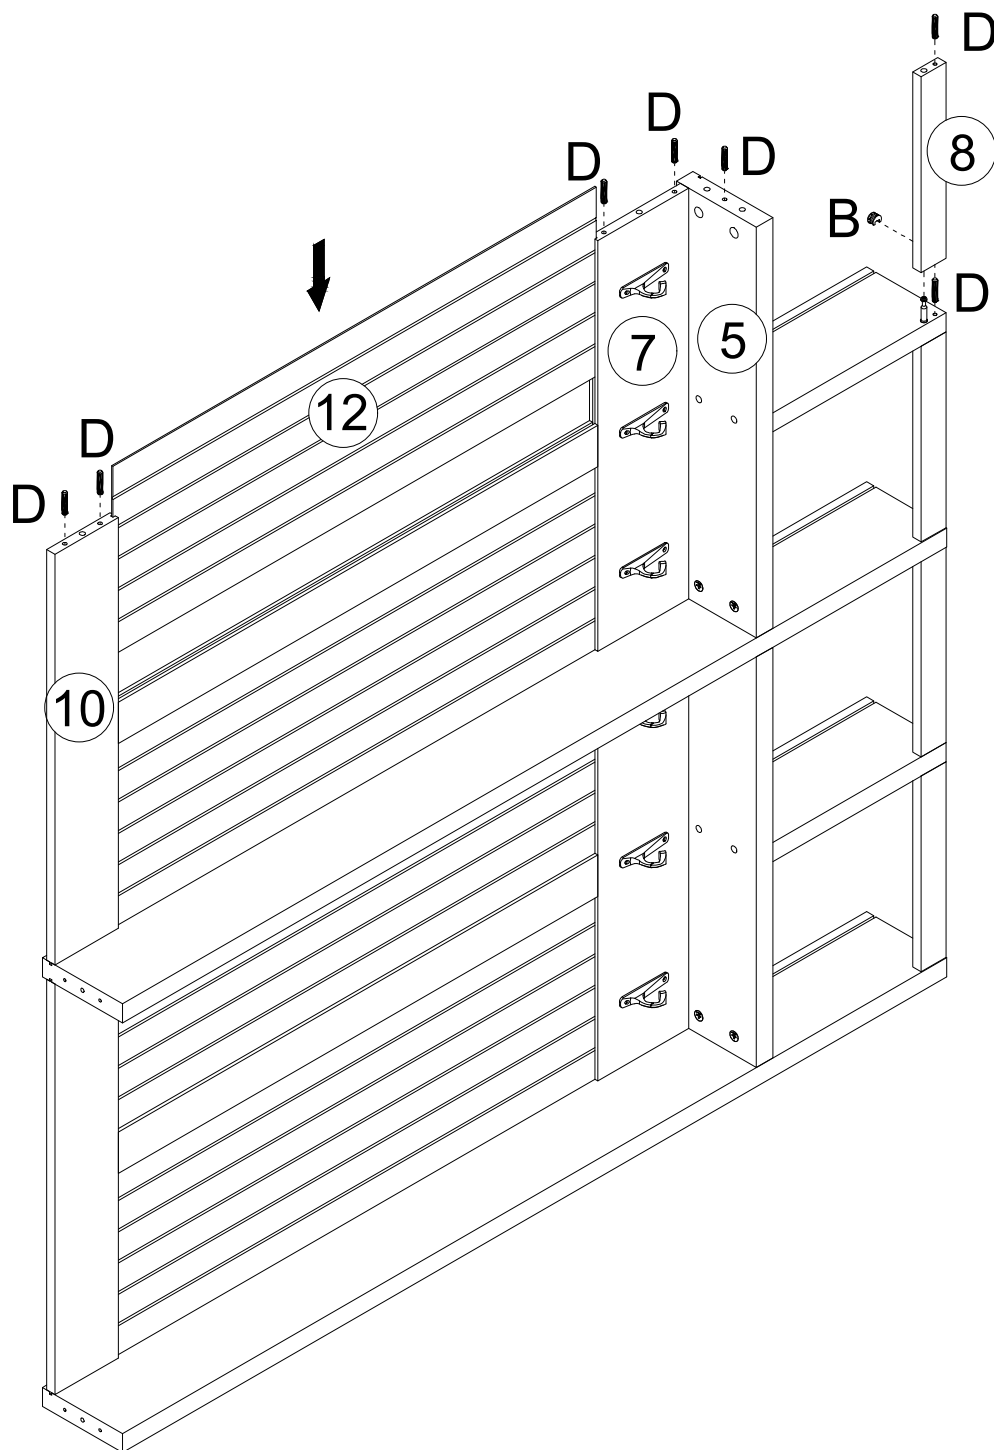

(B)



Ø15*9mm
Cam lock x 1


(D)



6*30mm
Dowel x 7

Assembly Instructions

step 16


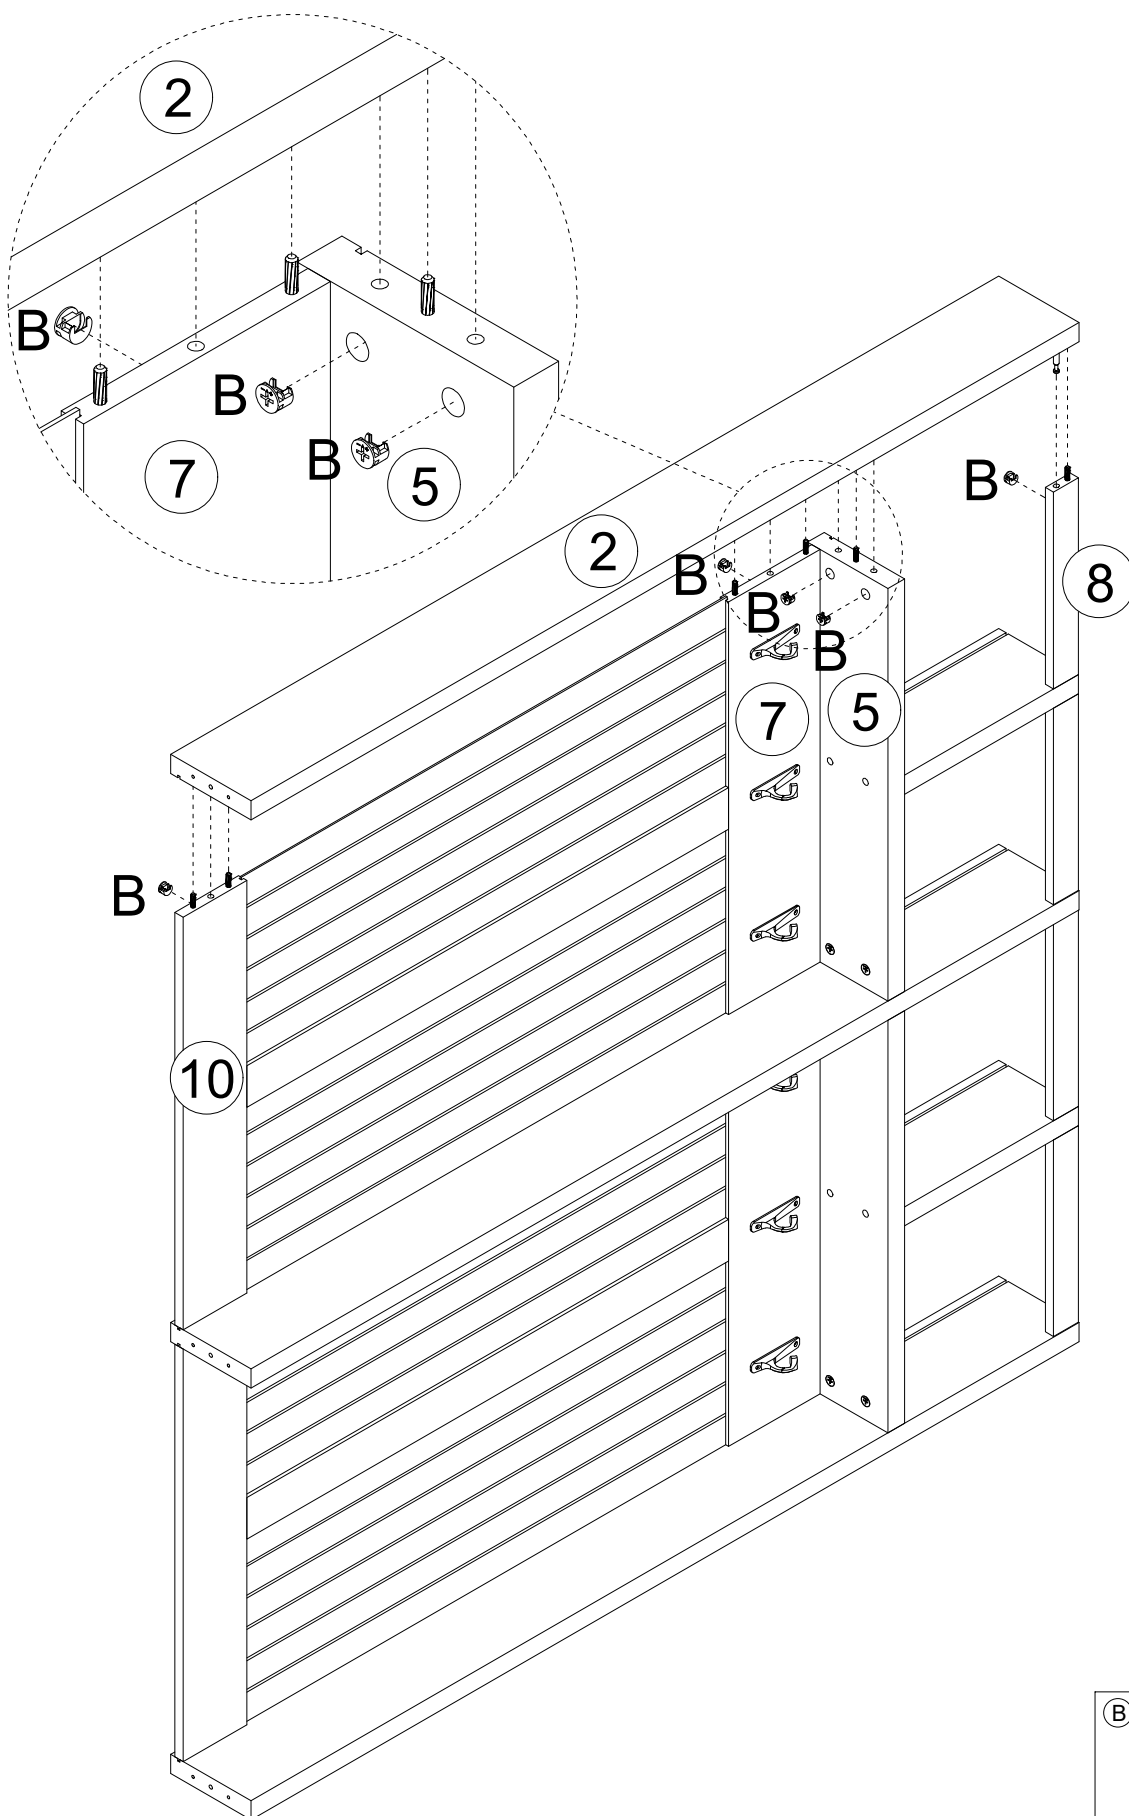


(B)



Ø15*9mm
Cam lock x 5

Assembly Instructions

step 17

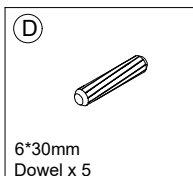
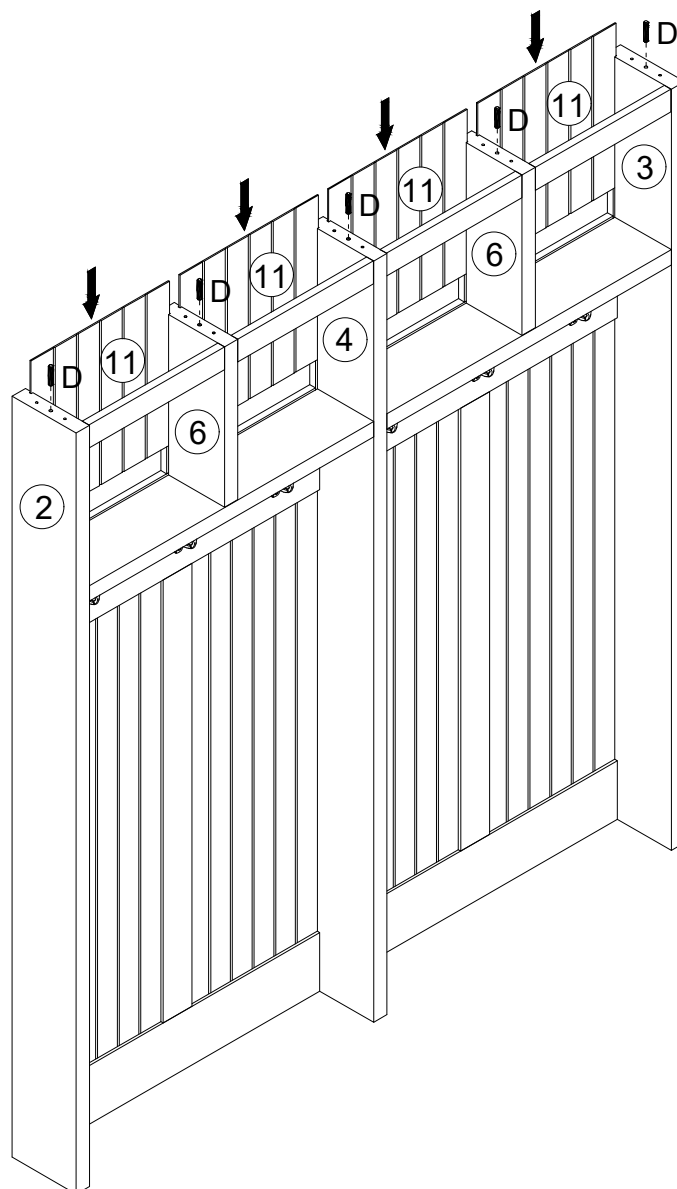


step 18

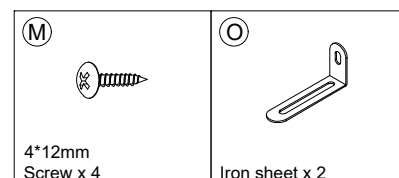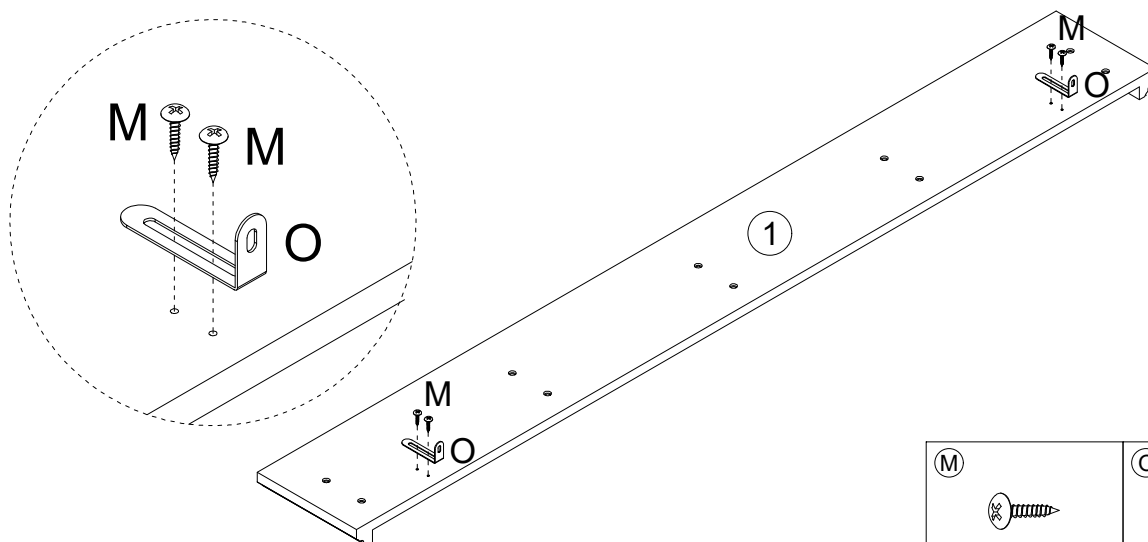


Assembly Instructions



step 19

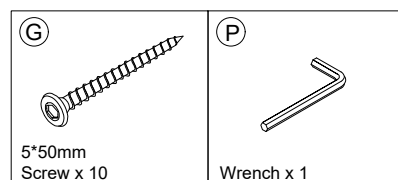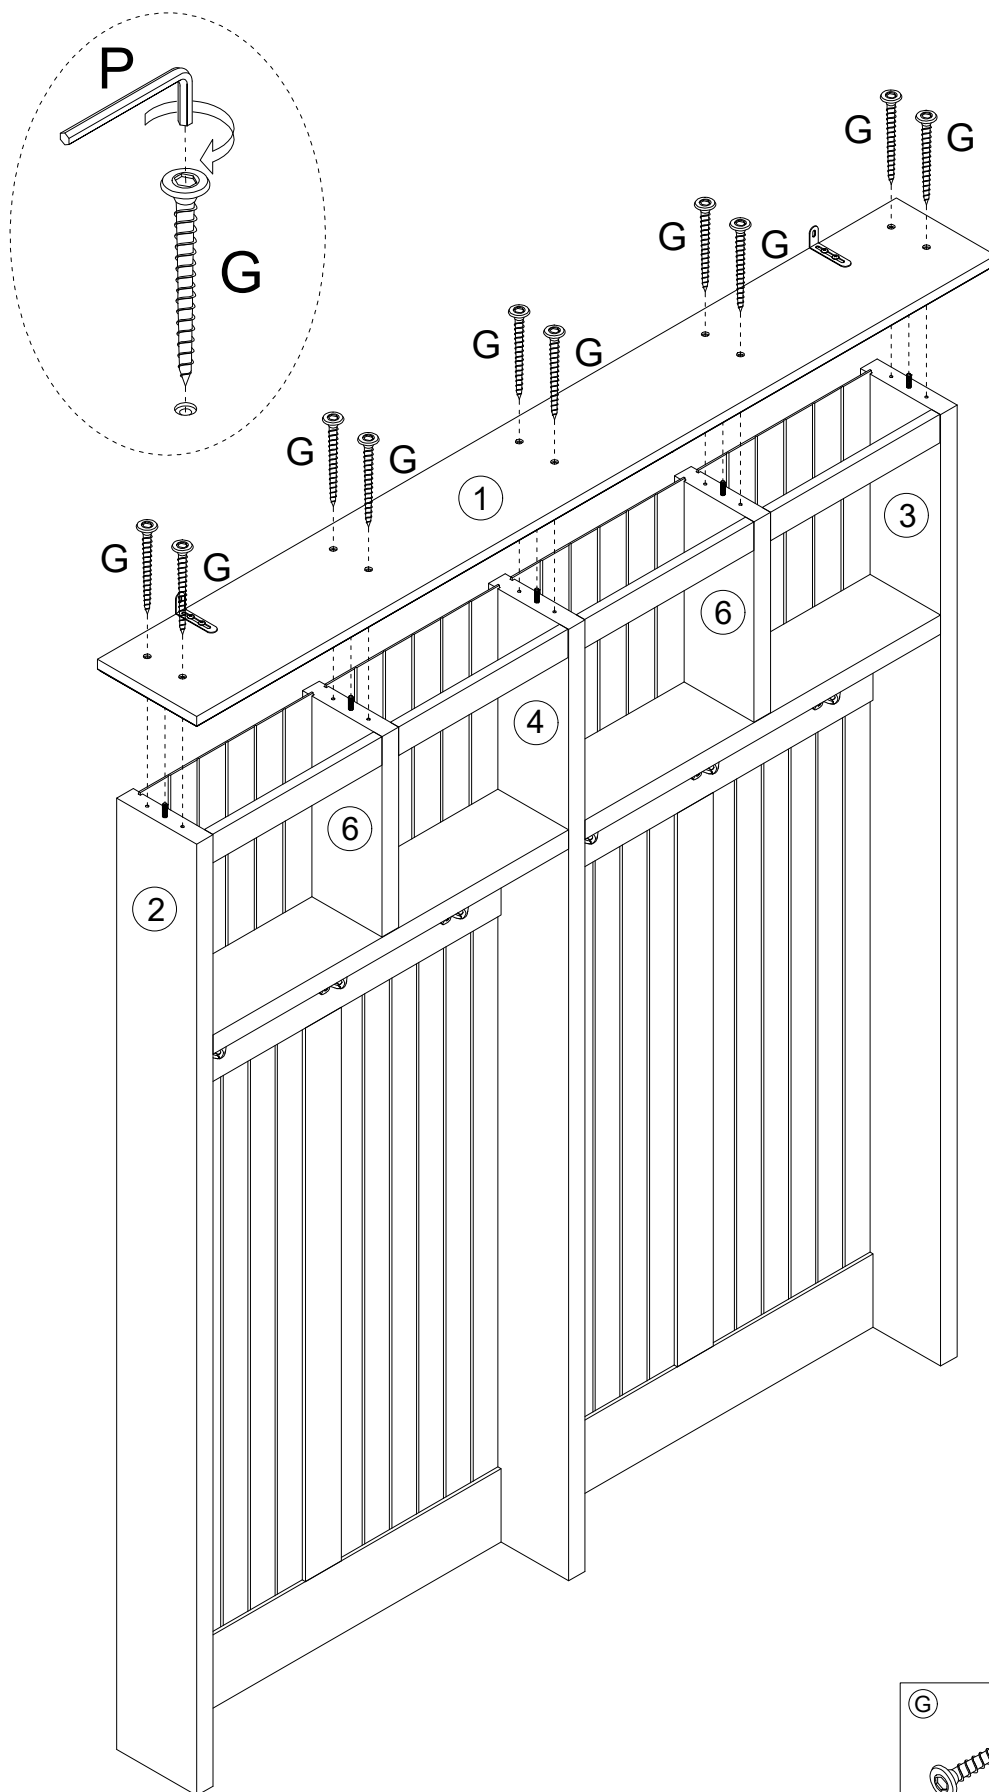

Assembly Instructions



step 20

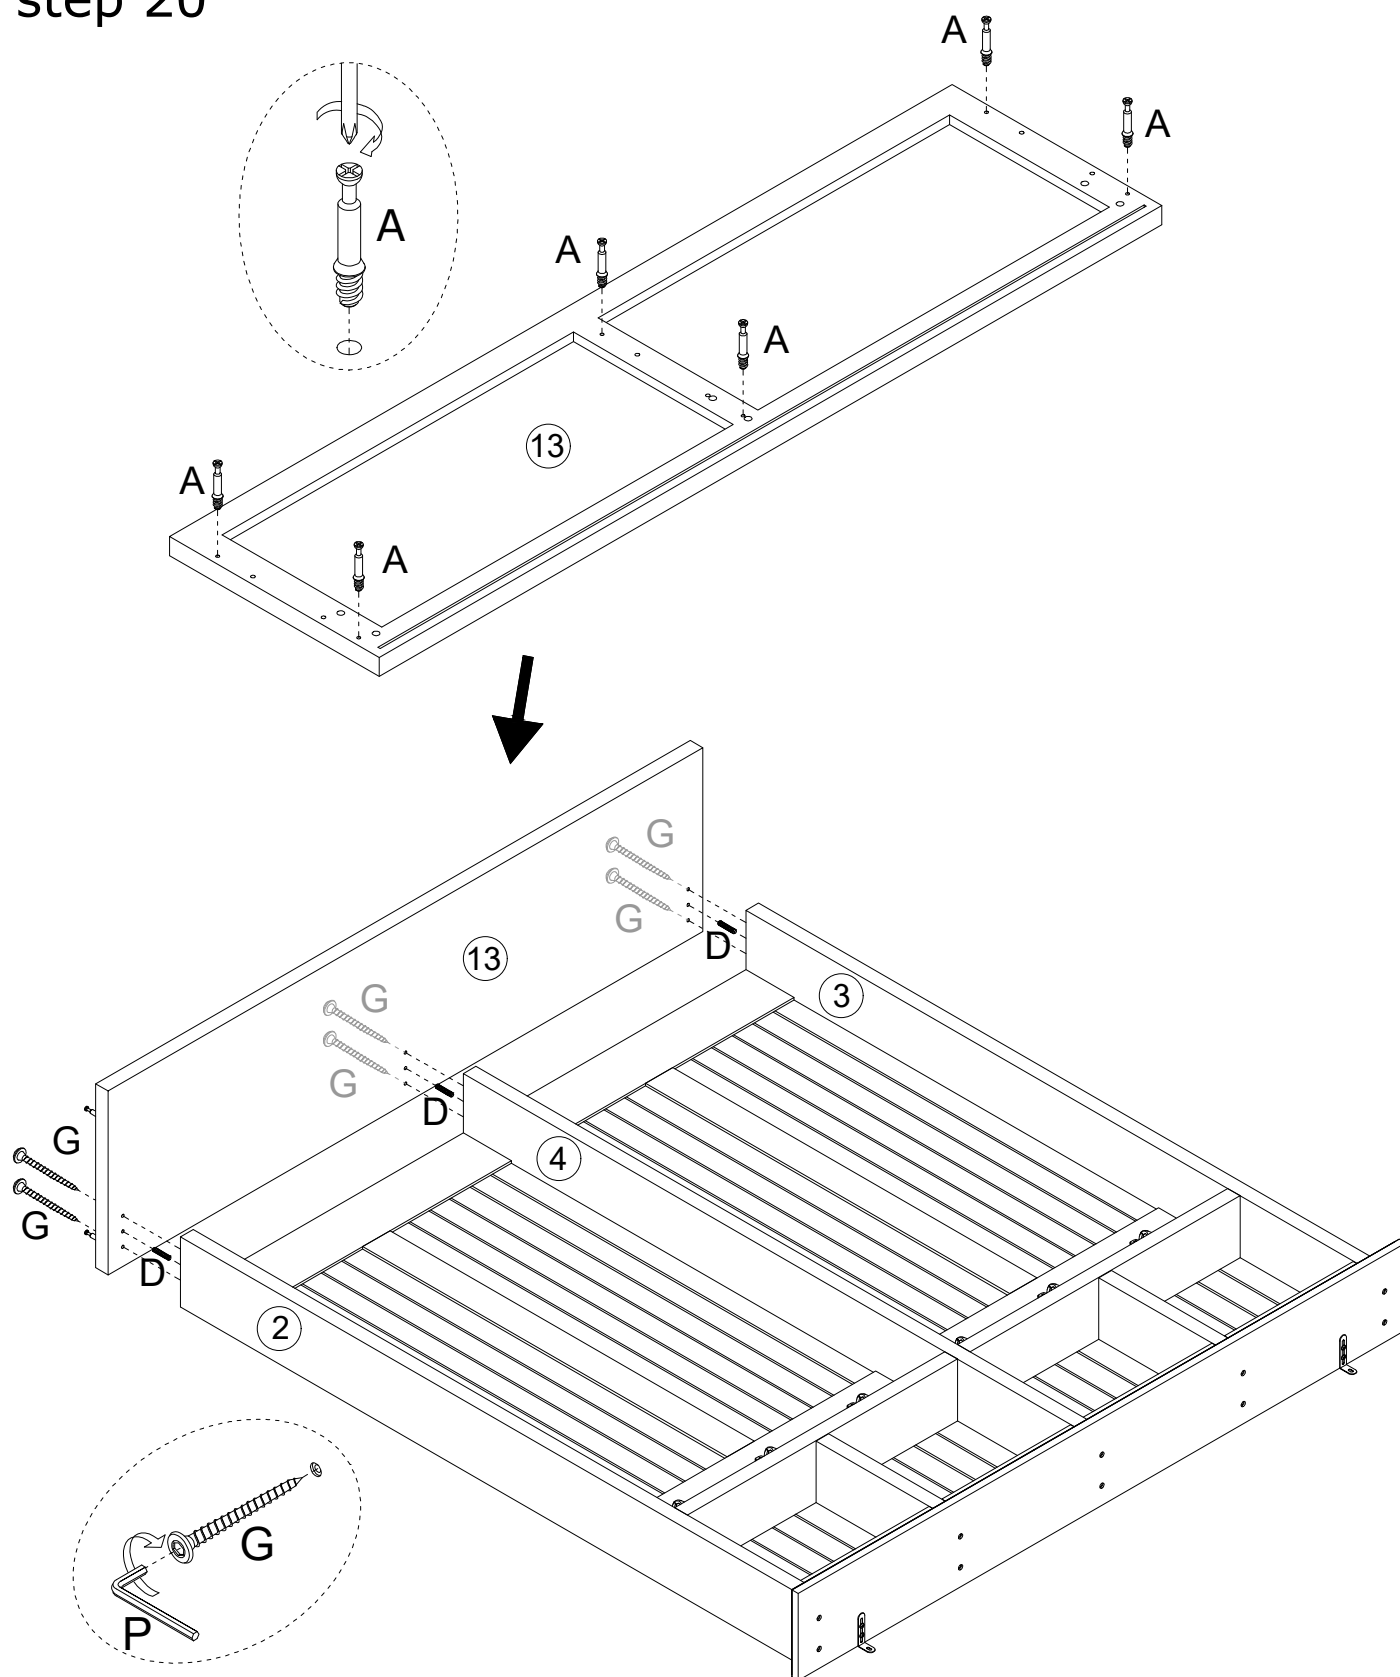

			
Ø6*35mm Cam Bolt x 6	6*30mm Dowel x 3	5*50mm Screw x 6	Wrench x 1

Assembly Instructions

step 21

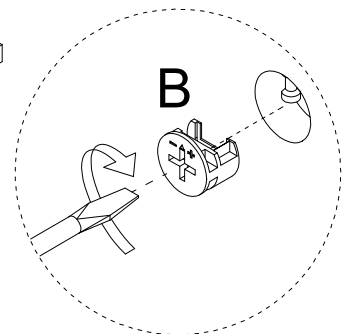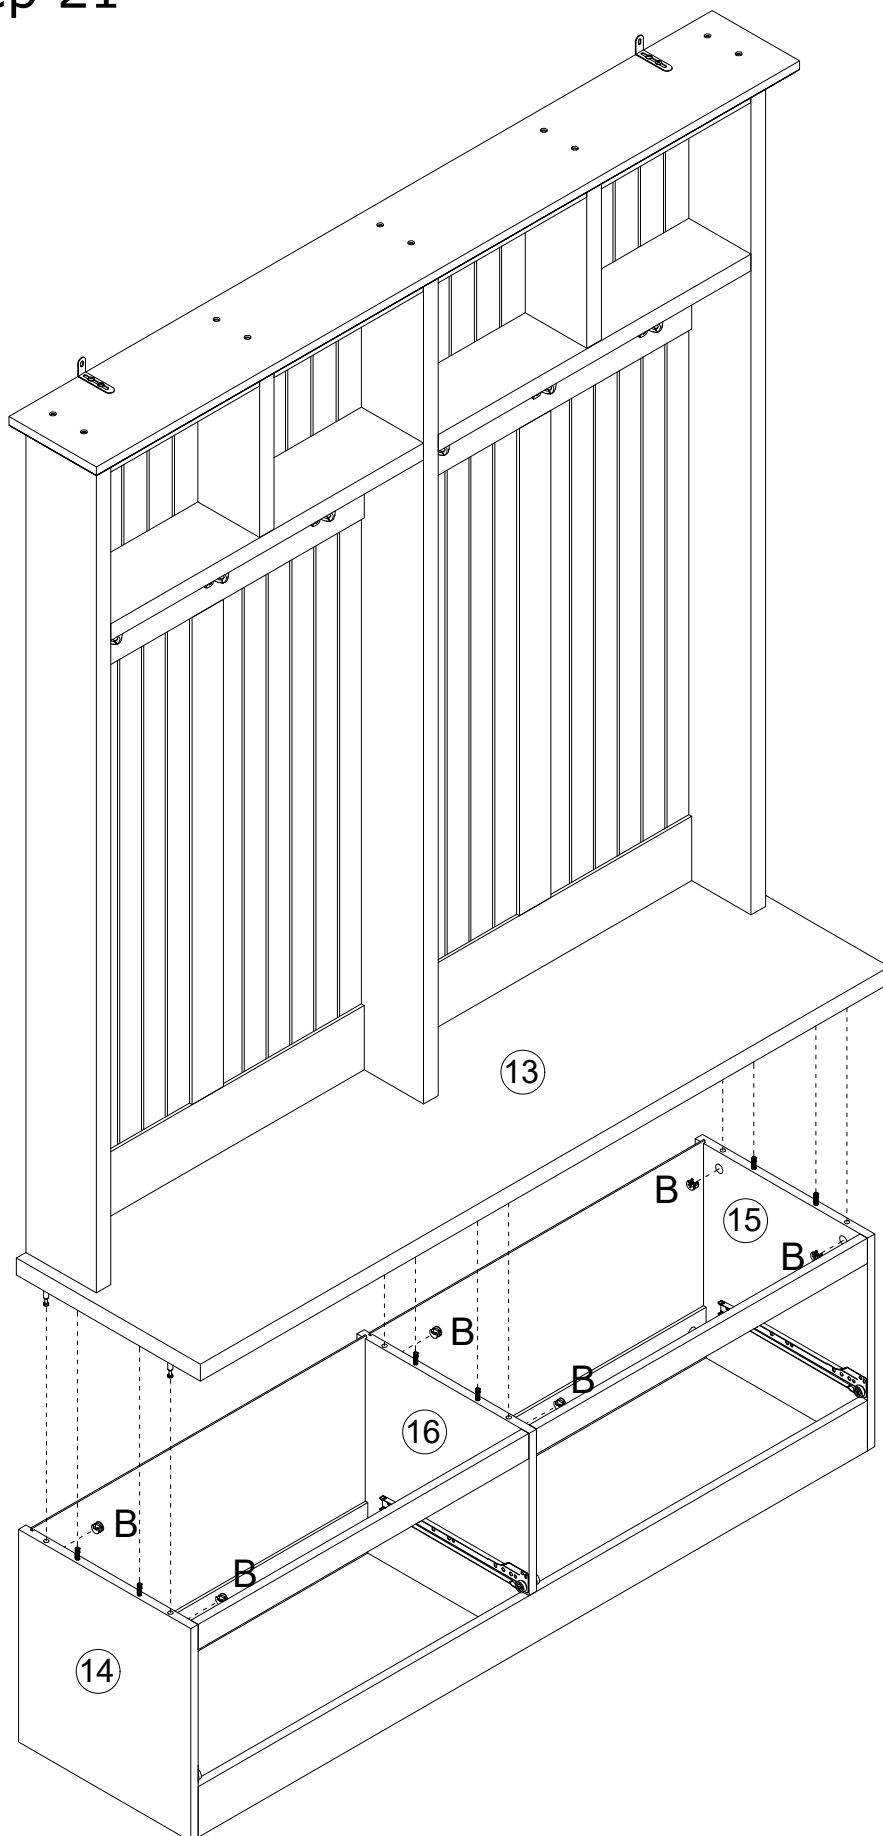


(B)



Ø15*9mm
Cam lock x 6

Assembly Instructions





step 22

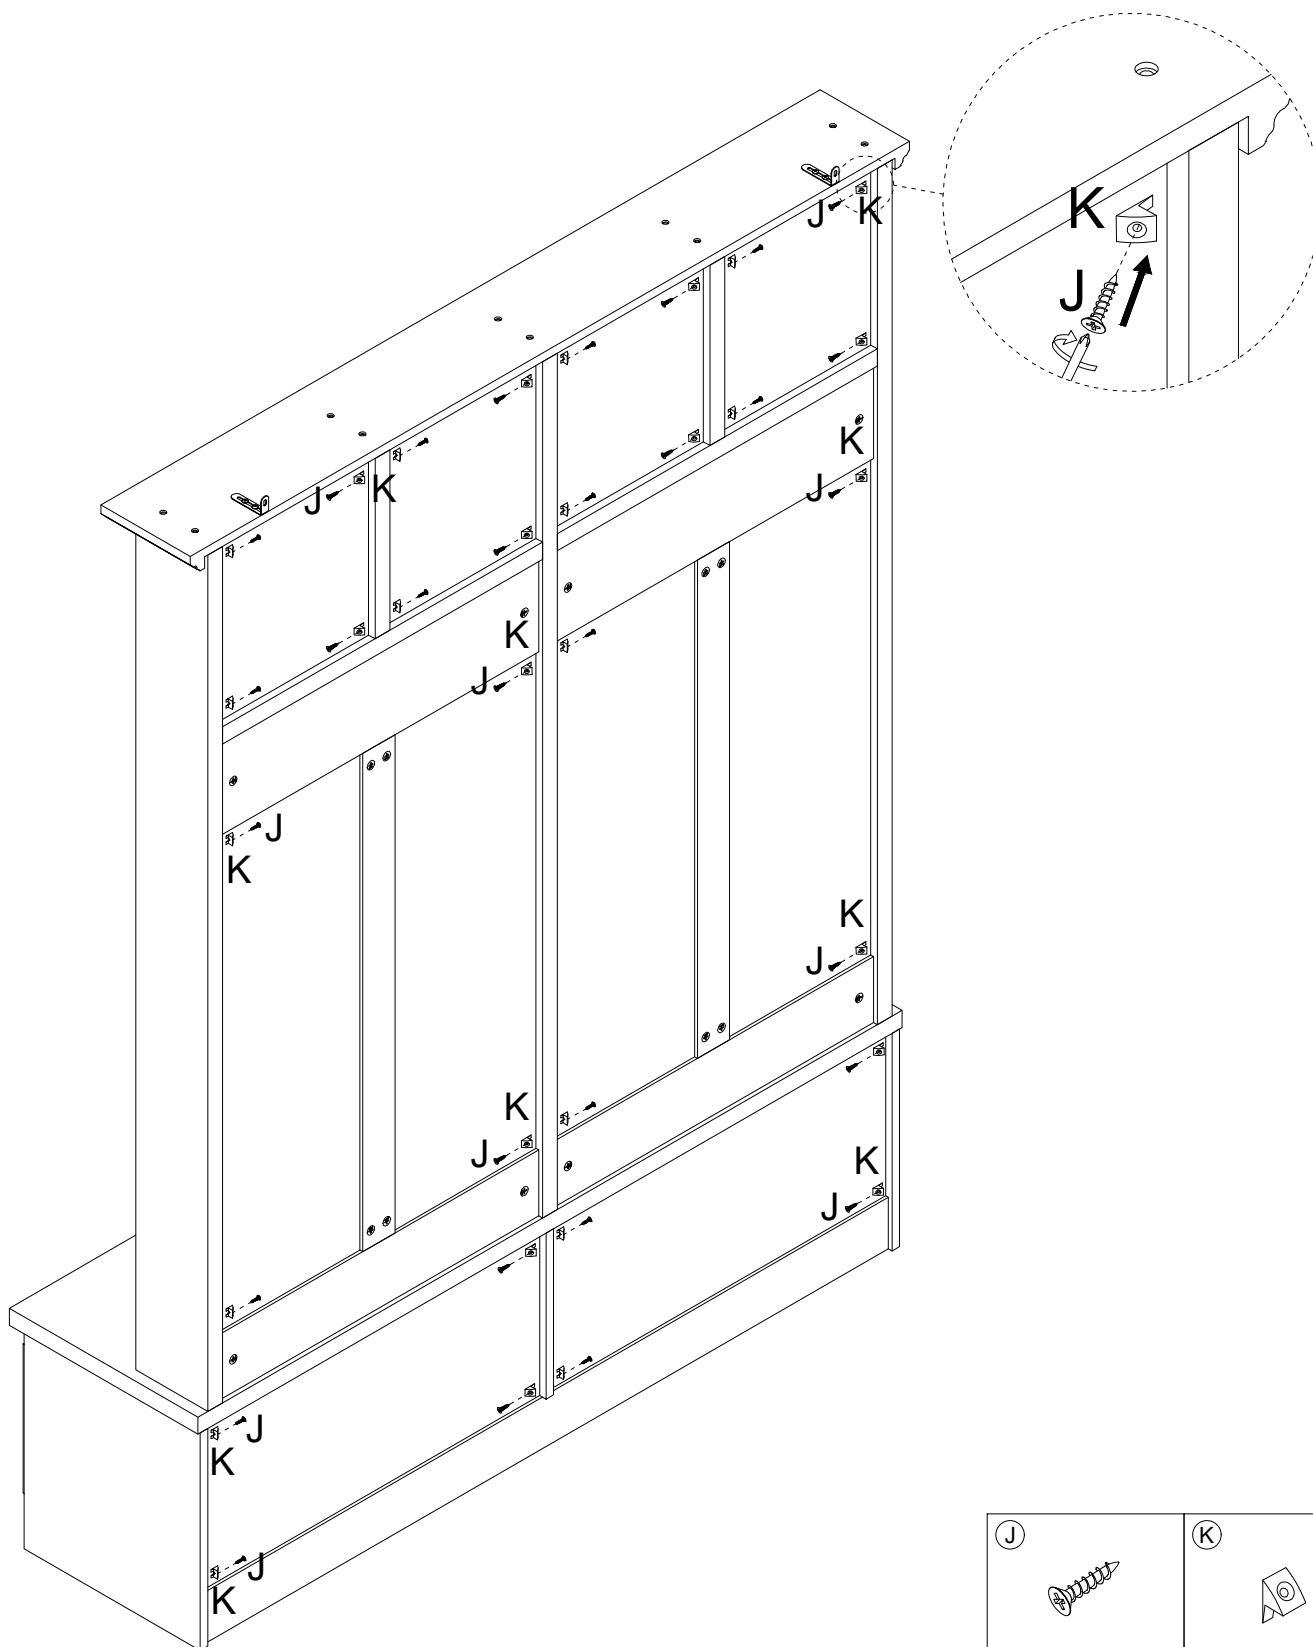

	
3*14mm Screw x 32	Plastic Nail x 32

Assembly Instructions



step 23

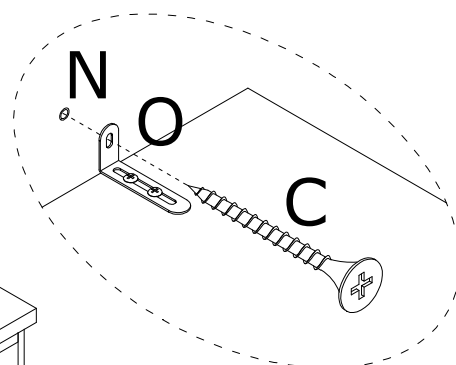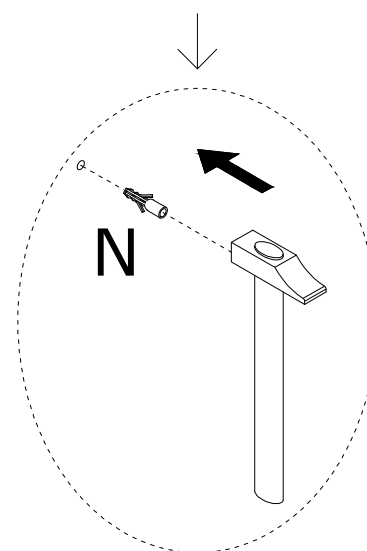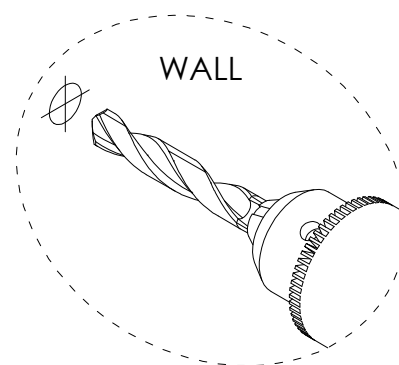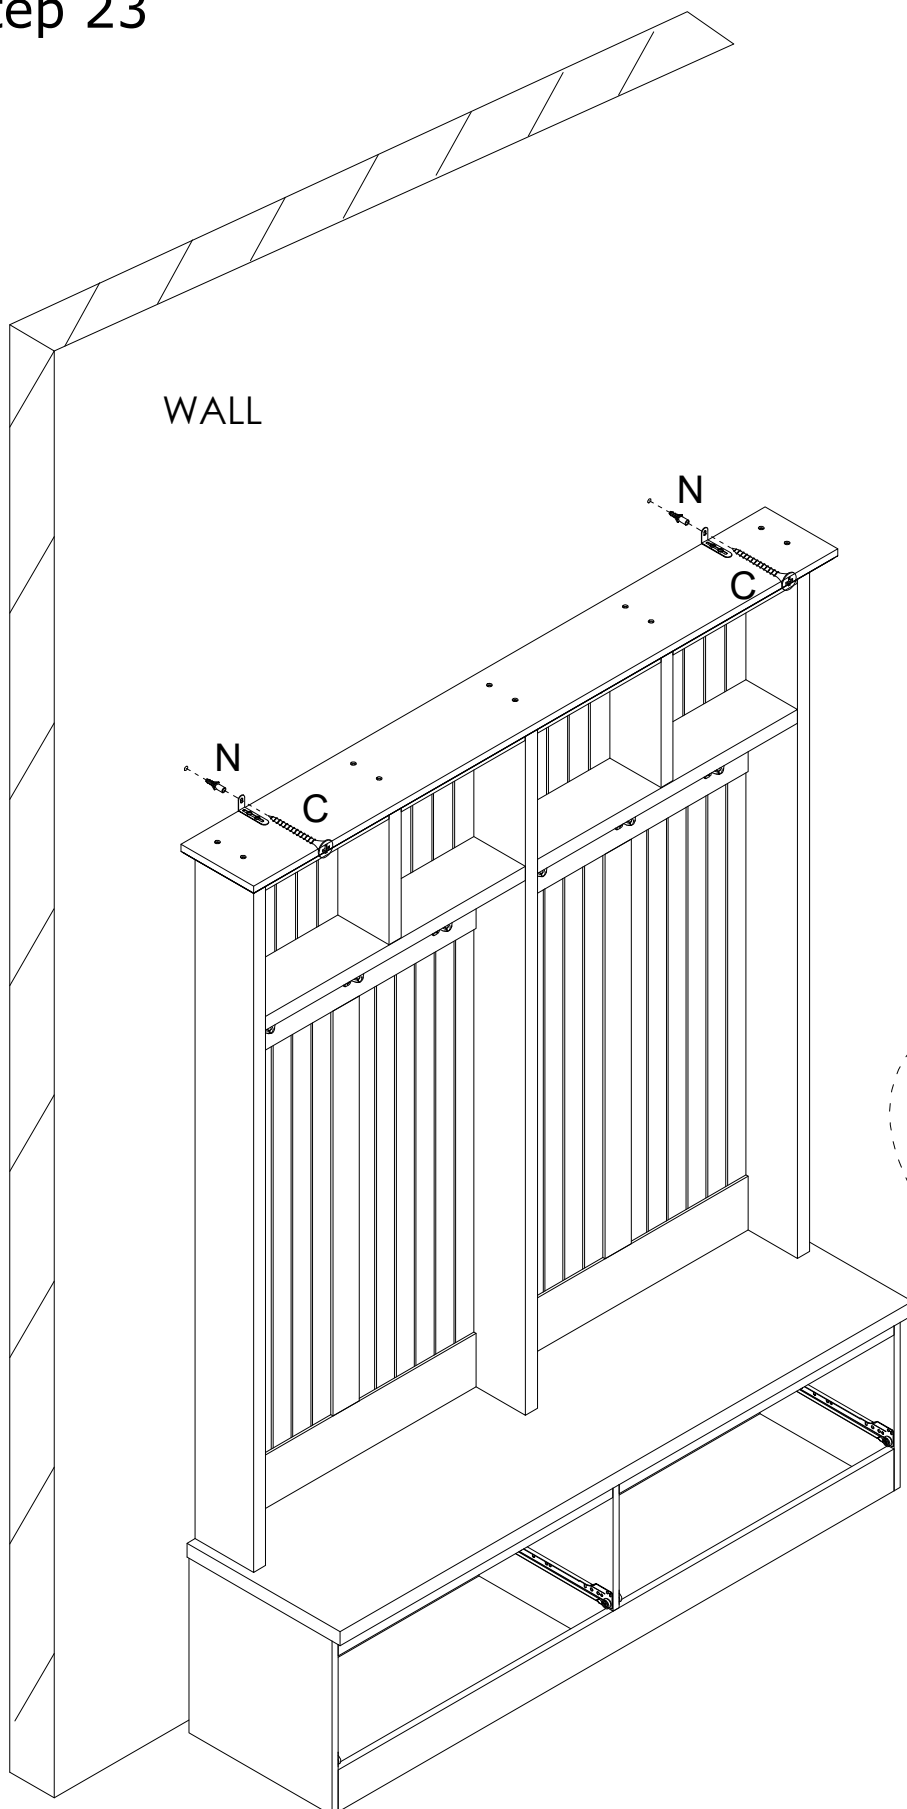



 C	 N
4*40mm Screw x 2	6*30mm Wall Anchor x 2

Assembly Instructions



step 24

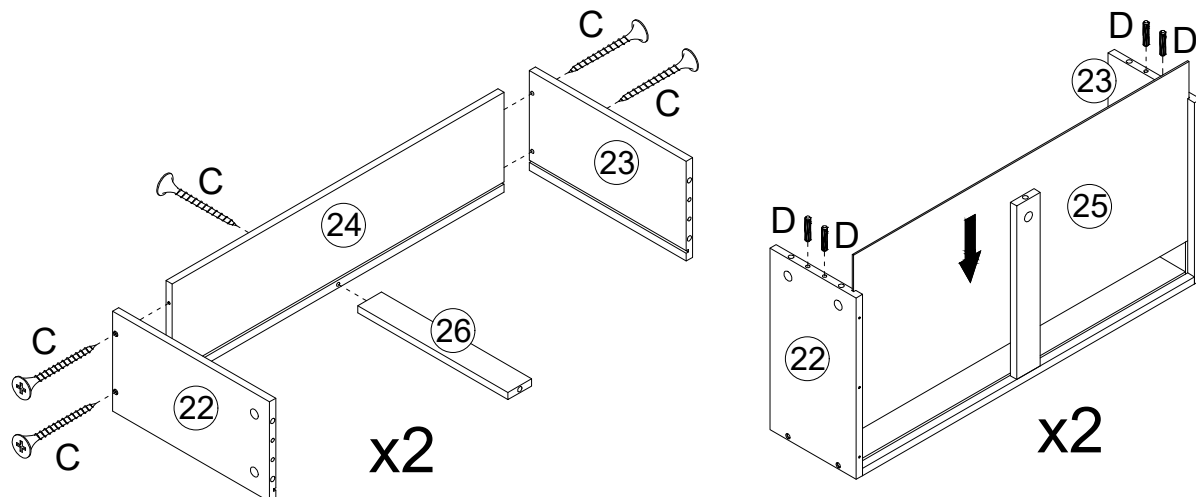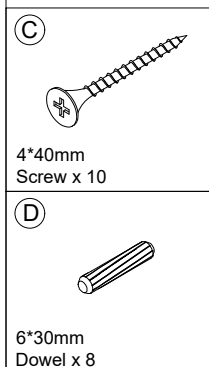

step 25

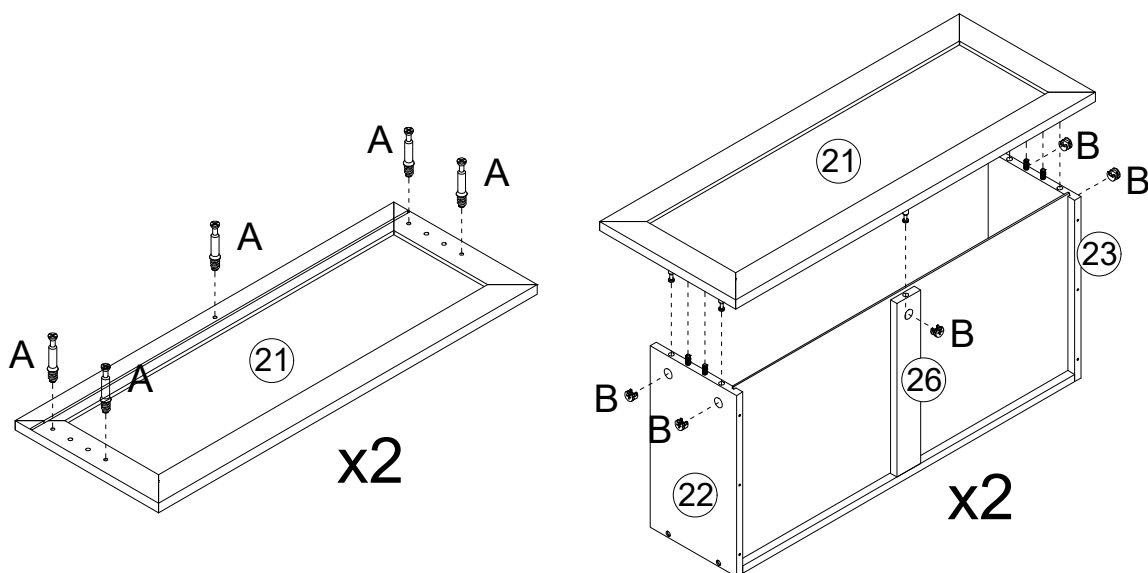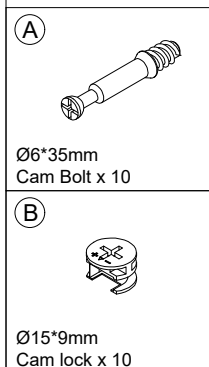


step 26

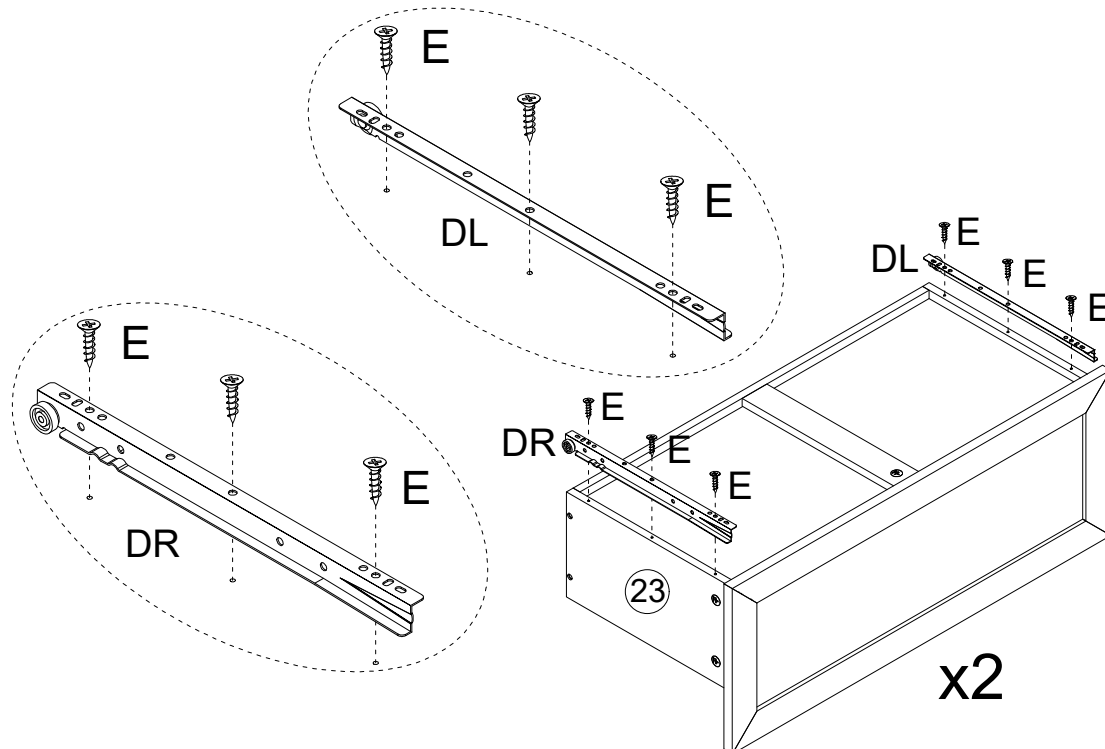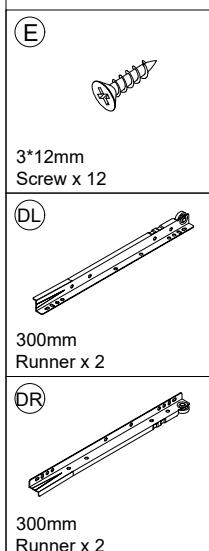

Assembly Instructions

step 27

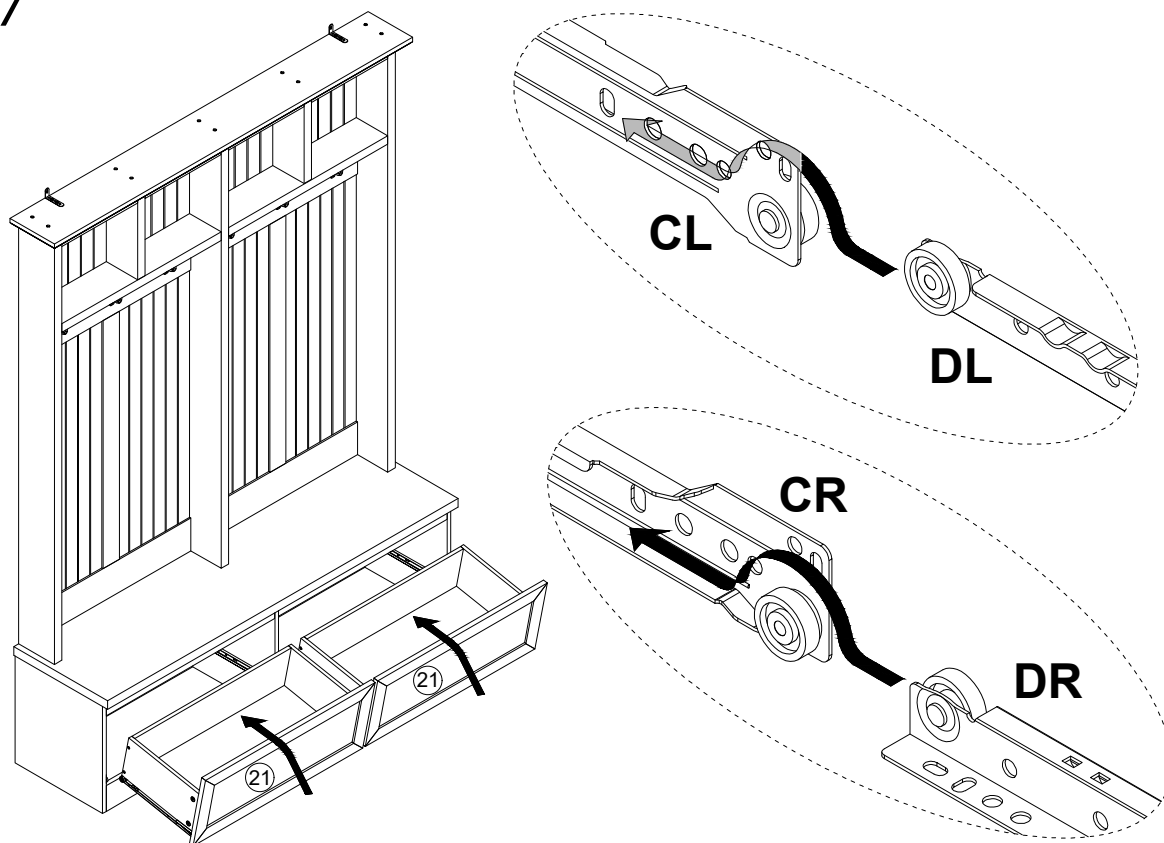

step 28

