

If you have any questions, please feel free to contact us. Email: lowesteam@aminalife.com

# **User's Manual**

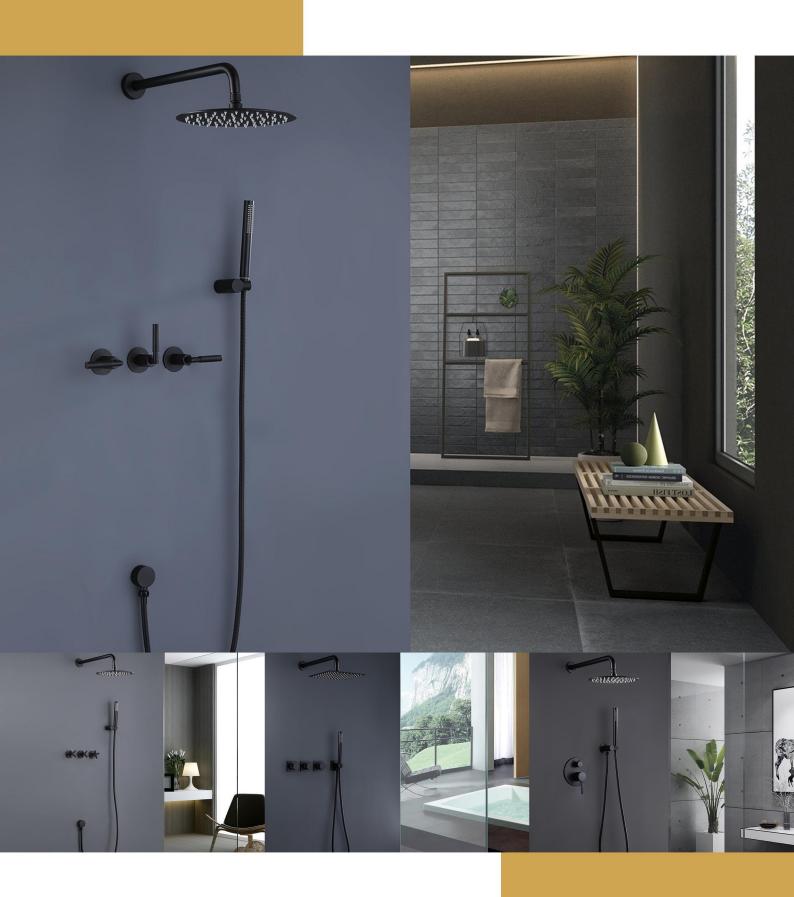

# **INSTALLATION INSTRUCTIONS**

# **Installation Manual**

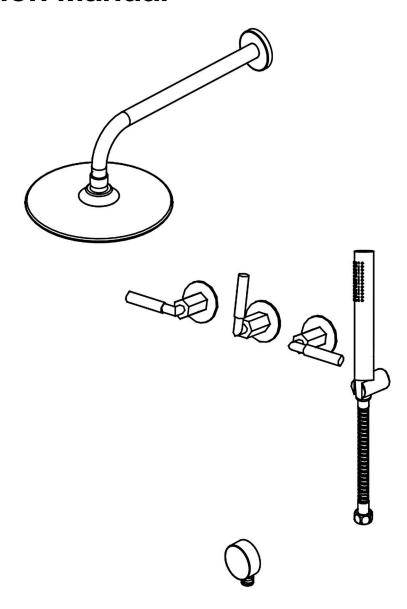

#### IAPMO RESEARCH AND TESTING, INC.











#### IAPMO RESEARCH AND TESTING, INC.













#### IAPMO RESEARCH AND TESTING, INC.














# **BEFORE INSTALLATION**


# ▶ Notes before installation

- 1. Confirm whether the inlet pipe and corner valve have been properly installed before installation.
- 2. Before installation, be sure to clean the dust, sand and other foreign bodies in the water supply pipe to ensure that the inlet pipe is free of sundries, so as not to shadow sound water outlet function.
- 3. Inlet water pressure of 0.05Mpa  $\leq$  inlet water pressure  $\leq$  0.75Mpa, if the water pressure is lower than 0.05Mpa, it may cause poor effect for the water outlet.
- 4. The cold and hot water piping should not be mismatched, and the heating pipes should not use steam.


### Recommend Tools And Materials

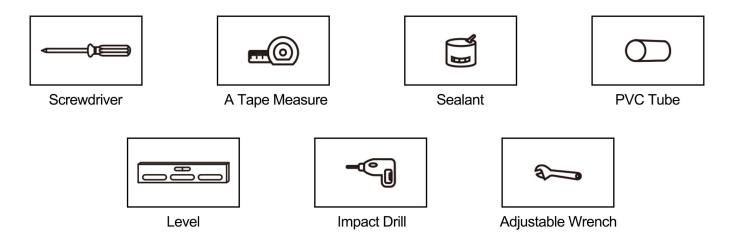


## ► Installation Dimension

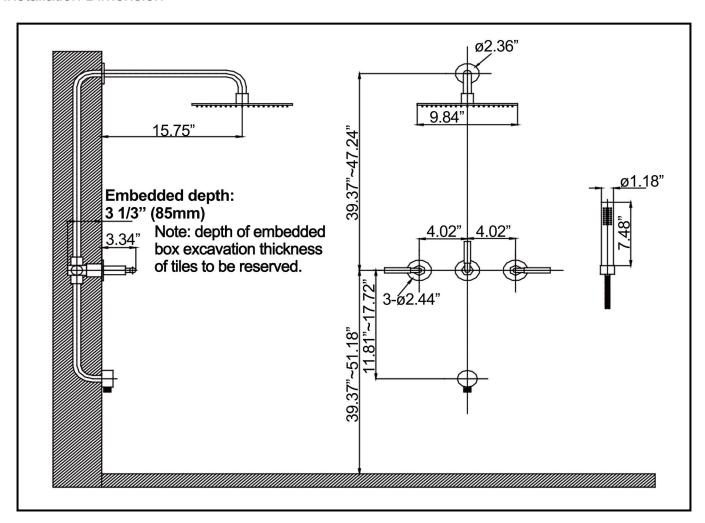

This product has been inspected and debugged by the factory to the best condition. Please do not disassemble and assemble it yourself.




Before installing the product, please be sure to remove sundries and sludge from the water pipe to prevent sundries from blocking the product.




1

1. Embed the main body into the wall and fix it with cement and bolts. Then connect the cold and hot water inlet pipes as shown in the figure.

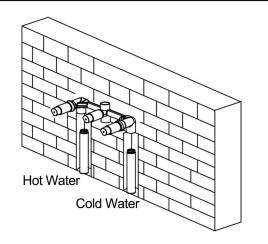


2

2. Pre-embed the pipe for linking the rain shower and the hand shower. To test whether each connection part leaks or not by blocking each connector with a plug. Then opening the water inlet valve. After that, filling the gap between the inlet pipe and the component part in the wall with cement. Pay attention to the size of the hose on the tile as shown on the dimensions. The surface of the tile should be on the same level as the label on the rough-in valve.

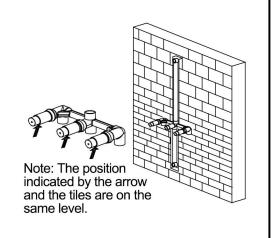

3


3. After the tiles layed out, taking out the protective cover of the there valves. Then connect the shower arm and the hand shower bracket.

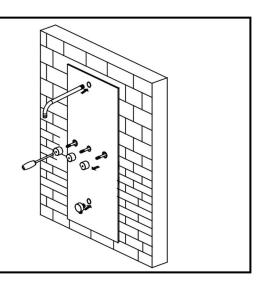

# **INSTALLATION STEPS**

4

4. Install the handle as the figure and pay attention to the installation direction. Then install the rain shower and hand shower. After that, open the cold and hot water switches to test the leakage and the effect of water diverter.

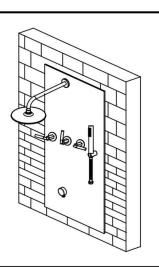

# **CLEANING CARE**

In order to keep the appearance of product clean, bright and good performance, please take care of the product as follows;

- 1. Rinse with water only and dry with soff cotton cloth;
- 2.Use mild liquid and colorless glass cleaner to remove surface dirt and scale film, or use polish without abrasive effect;
- 3.Do not use abrasive deterfgent, polish, emery cloth, paper towel or scraper, etc;
- 4.Do not use acid cleaner, or cleaner and soap with insoluble gran etc;
- 5.In the process of use, mud my accumulate in the bubbler and make the water flow show, The bubbler can be unscrewed, rinsed with water, and then installed back in place.





