



INSTALLATION INSTRUCTIONS

Installation Manual

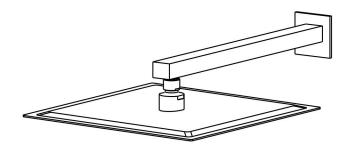








IAPMO RESEARCH AND TESTING, INC.











CERTIFICATE OF LISTING

Plumbing Fixture Fittings

File No. 8737









IAPMO RESEARCH AND TESTING, INC.







CERTIFICATE OF LISTING







IAPMO RESEARCH AND TESTING, INC.











BEFORE INSTALLATION

| NO. | Item | Qty | | |
|-----|---------------------------|-----|---------|-------------|
| 1 | Upper outlet pipe | 1 | | |
| 2 | Top shower head | 1 | | |
| 3 | Hand-held shower head | 1 | | |
| 4 | Hand shower bracket | 1 | . 8 | |
| 5 | Shower hose | 1 | | ~ (2 |
| 6 | Main body | 1 | | |
| 7 | Panel | 1 | | |
| 8 | Water diversion handwheel | 1 | | 3 |
| 9 | Handle | 1 | | |
| 10 | Lower outlet pipe | 1 | | |
| 11 | Accessory bag | 1 | (8) (7) | _ |
| , | | | | 5 |

Check accessories

Standard List of Accessories:

When you open the product packaging, please check whether the objects in it are consistent with the main body and accessories you purchased. If there is any inconsistency, please contact our company or our distributor.


Note: 1.Accessories are subject to change without prior notice if the change does

not affect usage;


2. The appearance of the product is subject to the physical objects you receive, and the schematic diagram is only for reference.

INSTALLATION STEPS


This product has been inspected and debugged by the factory to the best condition. Please do not disassemble and assemble it yourself.




1. Dig pipe grooves for pre-burying pipes. Unit:inch

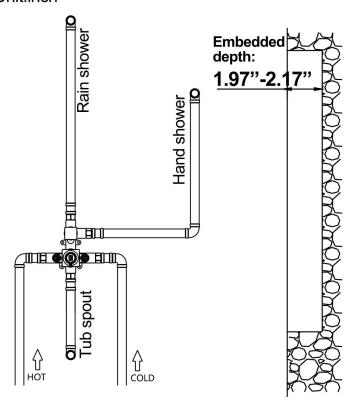


5. Install the upper outlet pipe and the top shower head.
(wrap the PTFE tape on the thread)

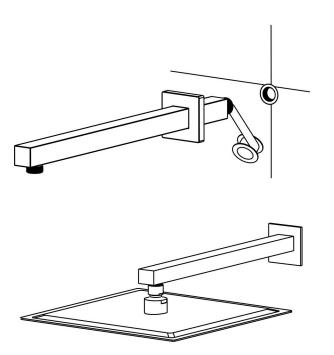


Before installing the faucet, please be sure to remove sundries and sludge from the water pipe to prevent sundries from blocking the faucet.




2. Install the main body and water inlet

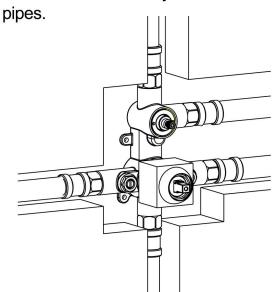

3. Attach the tiles (refer to Figure 4 for important dimensions).

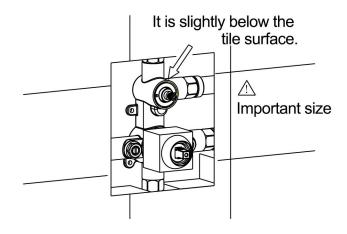


4. The water outlet of the hand shower is slightly lower than the tile surface.

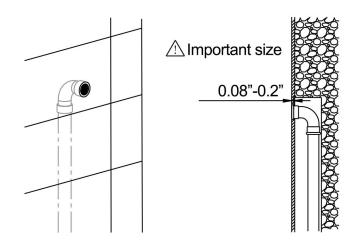


INSTALLATION STEPS


6. Install the panel and handle.

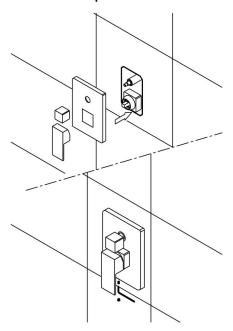


7. Install the hand shower seat.

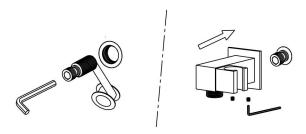

8. Install the lower water pipe.

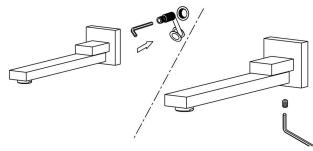

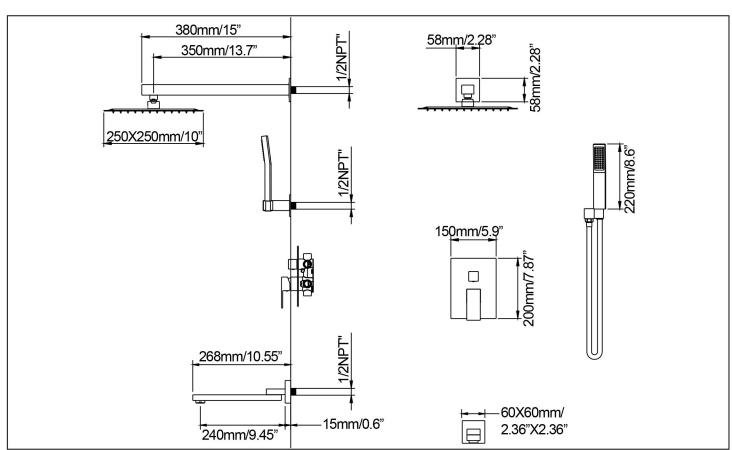

CLEANING CARE

In order to keep the appearance of faucet clean, bright and good performance, please take care of the faucet as follows;

- 1. Rinse with water only and dry with soff cotton cloth;
- 2.Use mild liquid and colorless glass cleaner to remove surface dirt and scale film, or use polish without abrasive effect;
- 3.Do not use abrasive deterfgent, polish, emery cloth, paper towel or scraper, etc.;
- 4.Do not use acid cleaner, or cleaner and soap with insoluble gran etc.;
- 5.In the process of use, mud my accumulate in the bubbler and make the water flow show, The bubbler can be unscrewed, rinsed with water, and then installed back in place.

Please feel free to contact us if you have any questions. We will help to solve the issue together with you. OUR EMAIL: services@rbrohant.com

